

# LOW-COST LoRA IoT DEVICE: A STEP-BY-STEP TUTORIAL



PROF. CONG DUC PHAM  
[HTTP://WWW.UNIV-PAU.FR/~CPHAM](http://WWW.UNIV-PAU.FR/~CPHAM)  
UNIVERSITÉ DE PAU, FRANCE




# CONTENTS




---

- ❑ We will show how to build a low-cost IoT device for sensing surveillance applications using LoRa radio technology
- ❑ The gateway part will be shown in a separate tutorial
- ❑ The target hardware platform is an Arduino Pro Mini in its 3.3v, 8MHz version: the original from Sparkfun or a clone from various providers
- ❑ Let's get started...

# ASSEMBLING THE HARDWARE

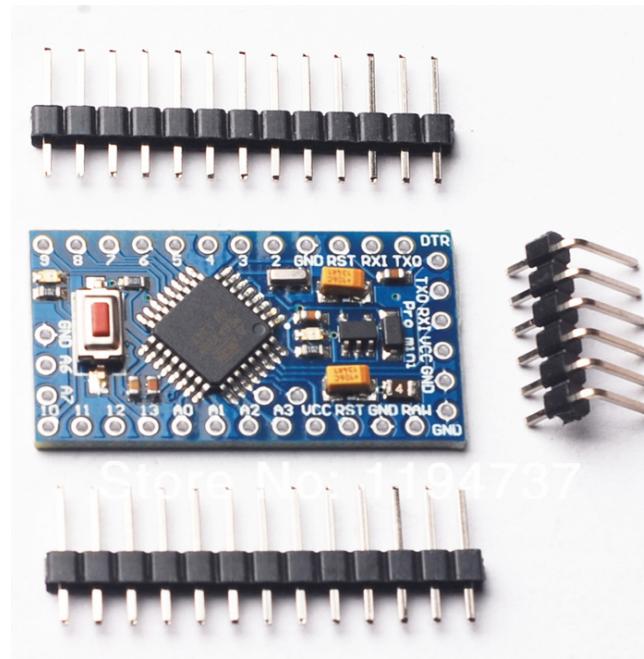

# GET THE ARDUINO BOARD

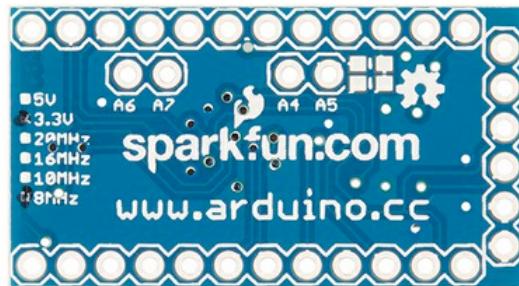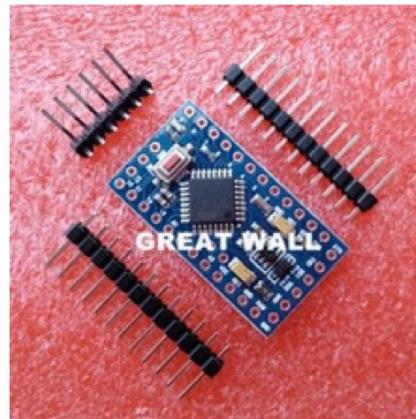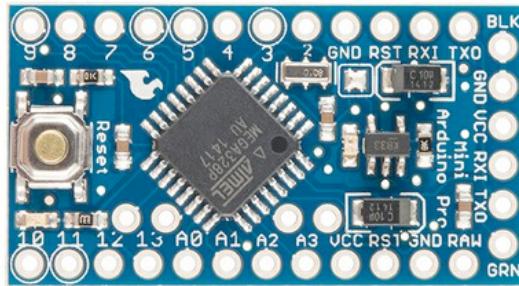

With the bootloader 1pcs **pro mini atmega328 Pro Mini 328 Mini ATMEGA328 3.3V/8MHz for Arduino**




 GREAT WALL Electronics Co., Ltd.

 Chat now!

Be sure to get the 3.3v and 8MHz version



You can get the original board designed by Sparkfun or get one of the various clones available mainly from Chinese manufacturer. The last solution is very cost-effective as the Pro Mini board can be obtained for less than 2€ a piece. Some boards may not be working as reported by some people but in my own experience, all the boards I got from Chinese manufacturers have been working great.

# PREPARE THE BOARD (1)

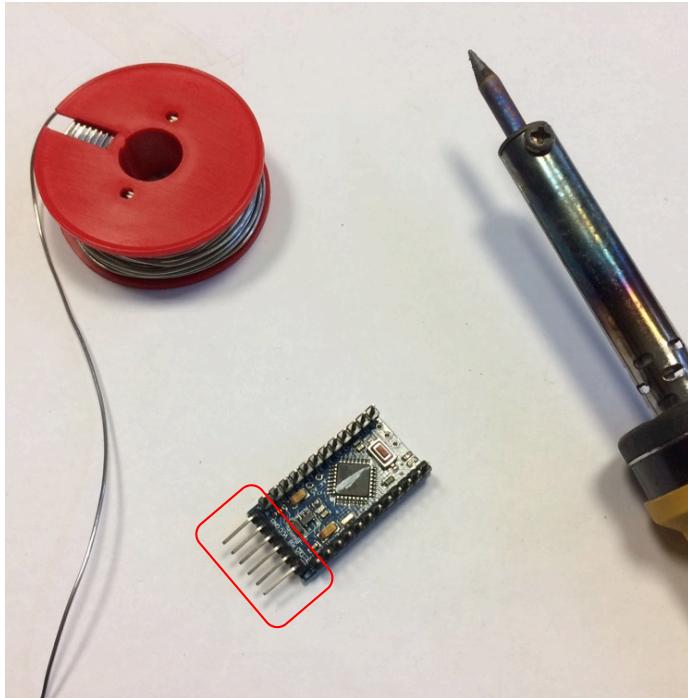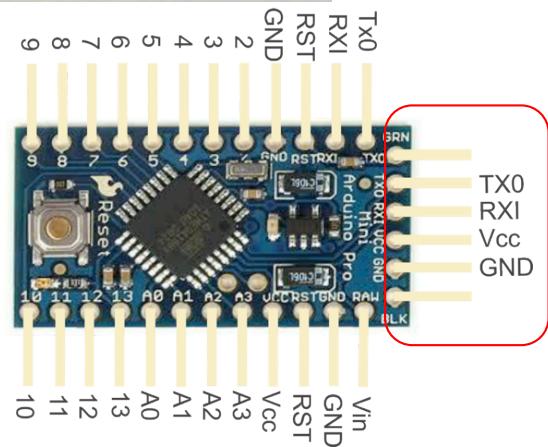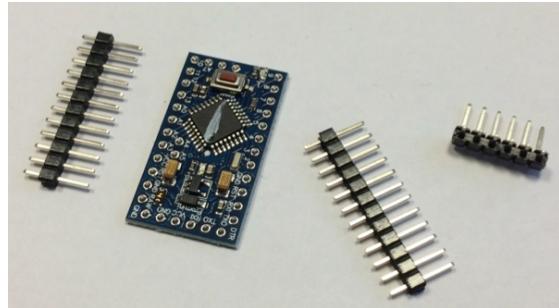


When you receive the board, it will probably come with the appropriate header pins that must be soldered to the board. Just use a regular soldering station to solder the header pins to the board. The 6-pin header on one side of the board (see red rectangle) will be used to connect an FTDI cable to program the board. This will be explained in the « software » section.

# PREPARE THE BOARD (2)

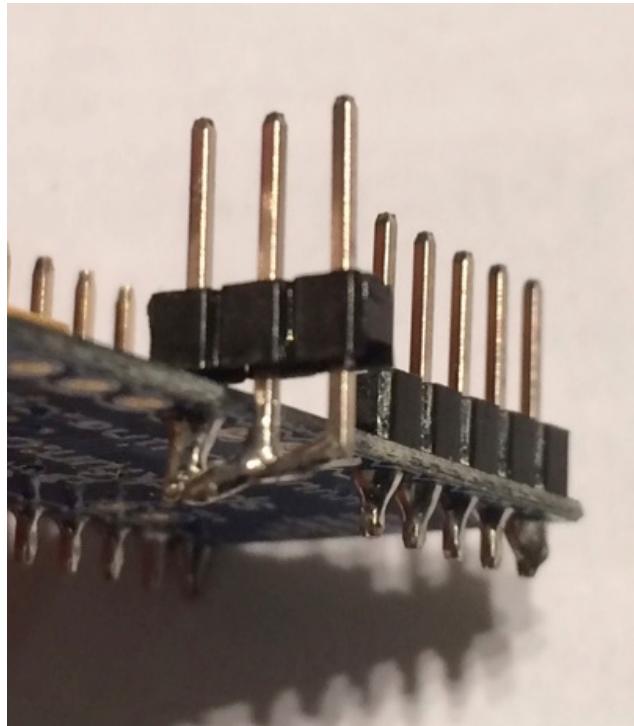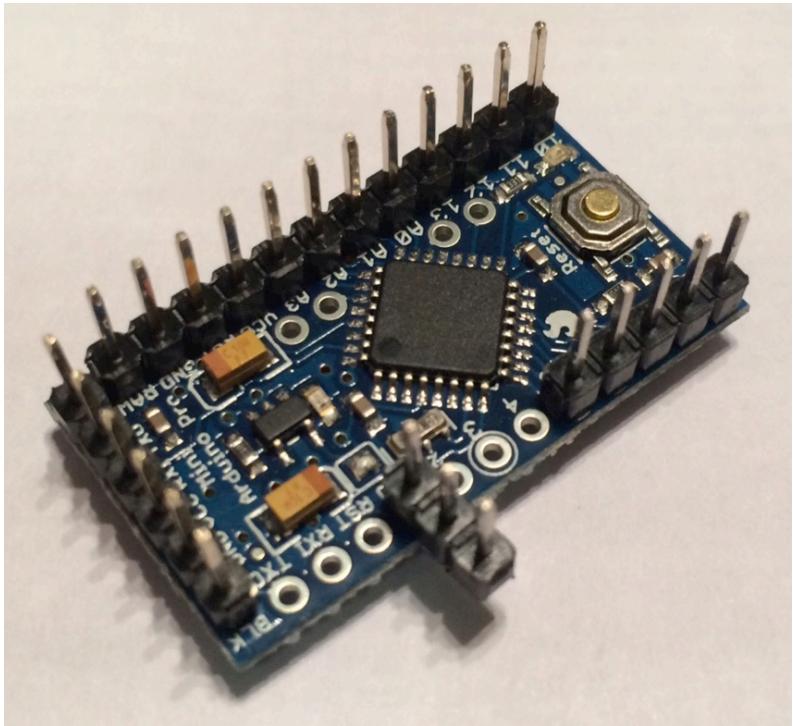


You can solder a row of header pins (left) on the ground pin (GND) in order to have several ground pins for the various sensors that will be connected to the device. But don't forget to link all the pins together to get the GND signal on all the pins (right).

# NOW THE RADIO MODULE (1)


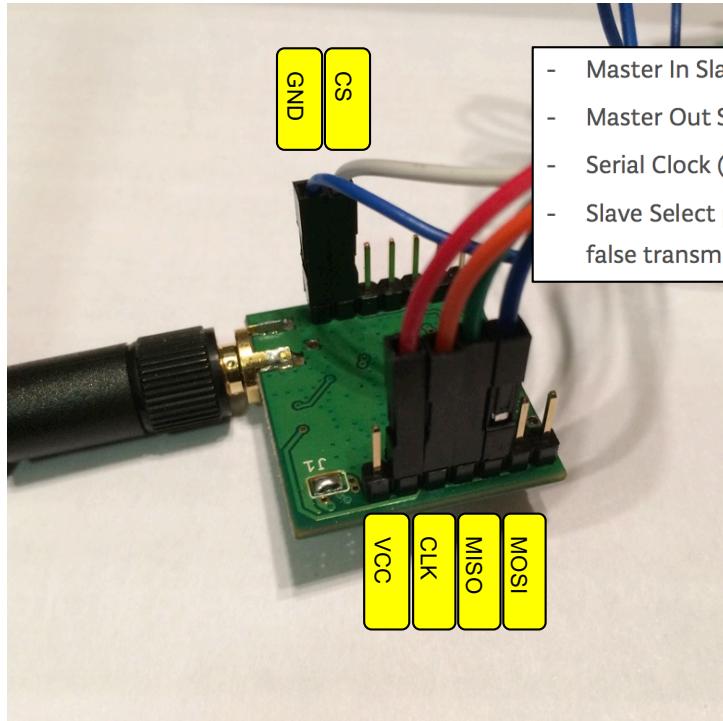


- Master In Slave Out (MISO) - The Slave line for sending data to the master,
- Master Out Slave In (MOSI) - The Master line for sending data to the peripherals,
- Serial Clock (SCK) - The clock pulses which synchronize data transmission generated by the master, and
- Slave Select pin - allocated on each device which the master can use to enable and disable specific devices and avoid false transmissions due to line noise.

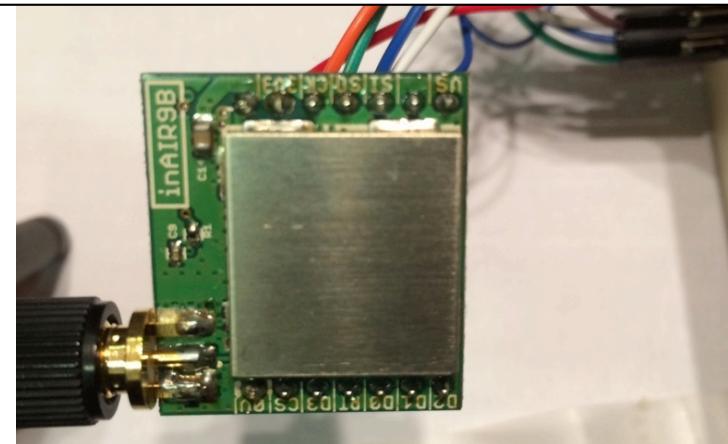

If you go for the inAir9 from Modtronix, then the header pins can come fully assembled. Order with the 6mm header pins to have enough length to connect F/F breadboard cables (left). Connect the SPI pins with the F/F cables. Try to use different colors. I use the following colors: MOSI (blue), MISO (green), CS (white), CLK (orange). Then connect also the VCC (red) and the GND (black or any other dark color) of the radio board.

# NOW THE RADIO MODULE (2)

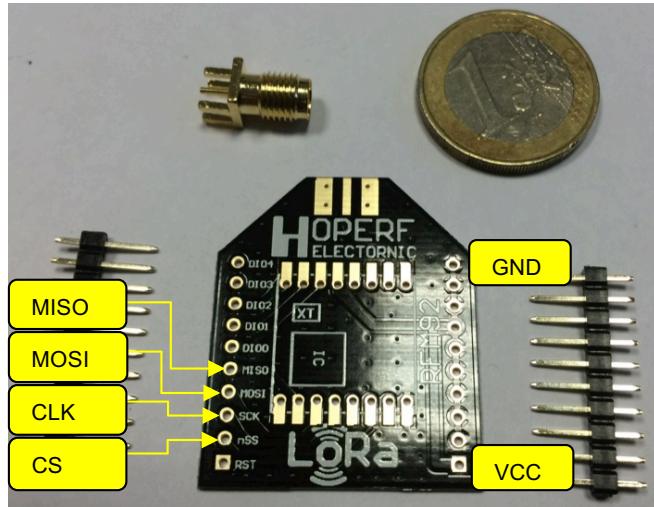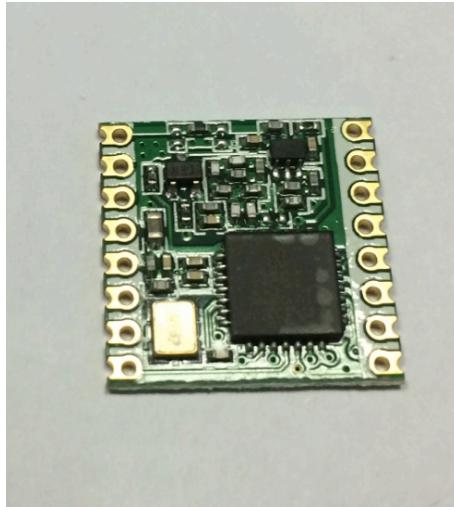

If you take the HopeRF RFM 92W/95W you may need the adaptor breakout and to go through some delicate but simple soldering tasks! It is not difficult but you have to trained a bit before! Then, like for the inAir9, use F/F breadboard cable to connect the SPI pins, using different colors as explained previously.




Another breakout from  
[https://github.com/ccadic/RFM95LORA\\_Breadboard](https://github.com/ccadic/RFM95LORA_Breadboard)





Another breakout from Tindie  
<https://www.tindie.com/products/leona/hi/rfm95-lora-breakout-board/>

# THE WAZIHAT PCB

- We also have a simple RFM95 breakout mainly for the gateway, but can be used for devices
- Contact A. Rahim (arahim"at"fbk.eu) for more information



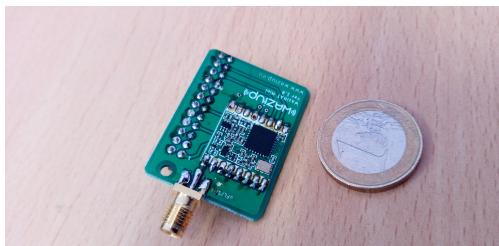


Short WAZIHAT version

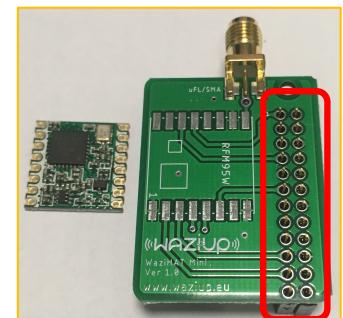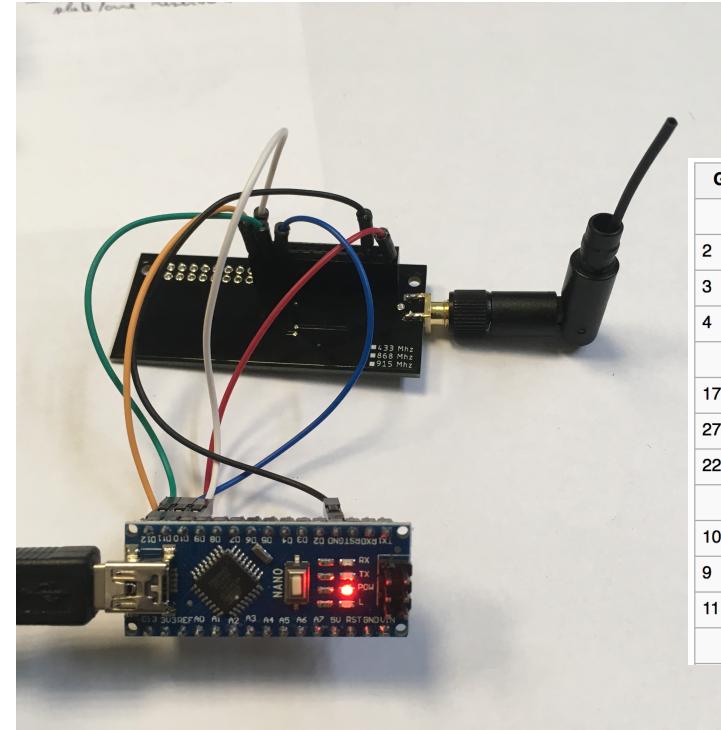


GPIO#	2nd func.	Pin#	Pin#	2nd func.	GPIO#
	+3.3 V	1	2	+5 V	
2	SDA1 (I2C)	3	4	+5 V	
3	SCL1 (I2C)	5	6	GND	
4	GCLK	7	8	TXD0 (UART)	14
	GND	9	10	RXD0 (UART)	15
17	GEN0	11	12	GEN1	18
27	GEN2	13	14	GND	
22	GEN3	15	16	GEN4	23
	+3.3 V	17	18	GEN5	24
10	MOSI (SPI)	19	20	GND	
9	MISO (SPI)	21	22	GEN6	25
11	SCLK (SPI)	23	24	CE0_N (SPI)	8
	GND	25	26	CE1_N (SPI)	7

# CONNECTING THE RADIO MODULE

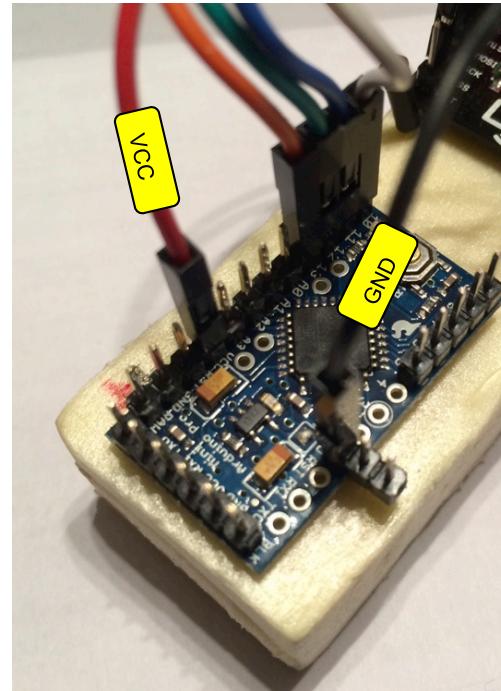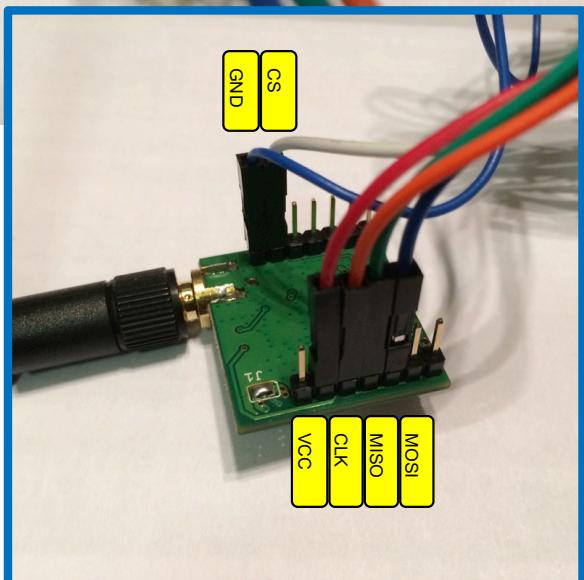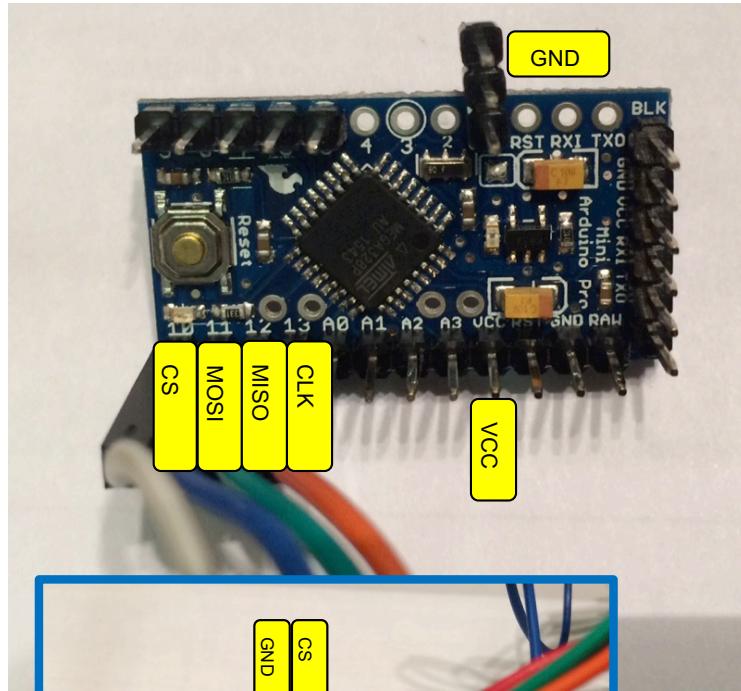


CAUTION: the radio module needs 3.3v, not 5v! Most of Arduino boards have a 3.3v pin so you can use this pin to power the radio module. Example wth an Arduino Nano:

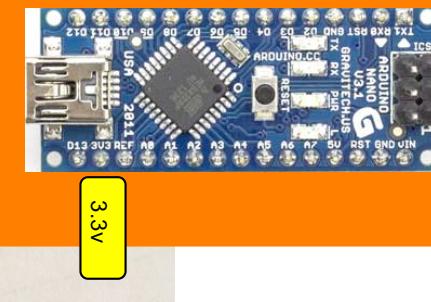

Now, just connect the corresponding SPI pins of the radio module to the SPI pins on the board. MOSI (blue) is pin 11, MISO (green) is pin 12, CS (white) is pin 10 and CLK (orange) is pin 13 (left picture). Then connect also the VCC (red) and the GND (black) of the radio board to the VCC and the GND of the board (right picture). The VCC of the board gets 3.3v from the on-board voltage regulator.

# CONNECTING THE RADIO MODULE ON OTHER BOARDS

- If you use other Arduino boards, check on the specific Arduino web page where are the SPI pins. Example with Arduino MEGA:

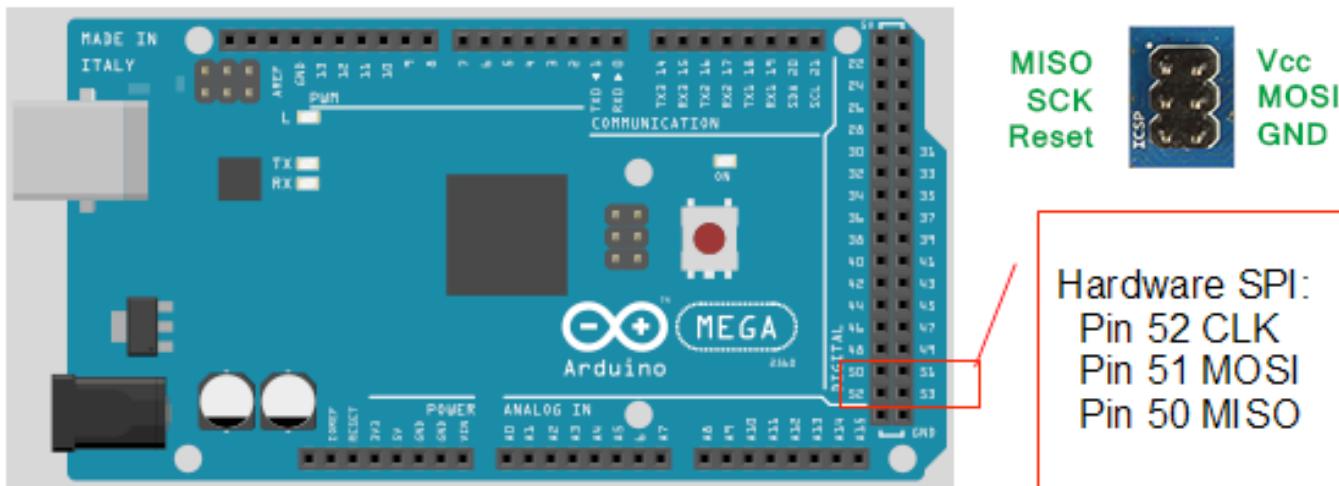


Hardware SPI:  
Pin 52 CLK  
Pin 51 MOSI  
Pin 50 MISO

SPI: 50 (MISO), 51 (MOSI), 52 (SCK). These pins support SPI communication using the SPI library. The SPI pins are also broken out on the ICSP header, which is physically compatible with the Arduino /Genuino Uno and the old Duemilanove and Diecimila Arduino boards.


# CONNECTING THE SPI CS

- The SPI Chip Select (CS) or SS (Slave Select) of the radio module needs to be connected to a specific pin on the board.
- Starting from November 3rd, 2017, the **CS pin is pin 10** for all Arduino boards regardless of their size

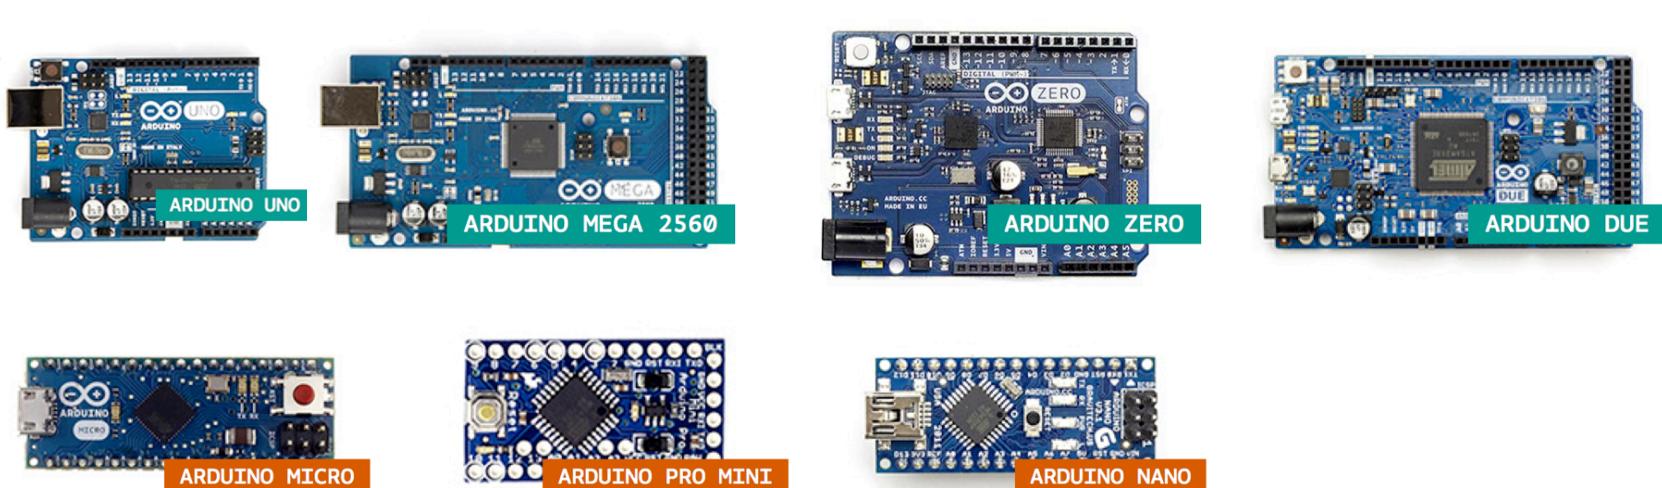

# LOW-COST INTEGRATION WITH WAZIUP PCB

Arduino Pro Mini @3.3V

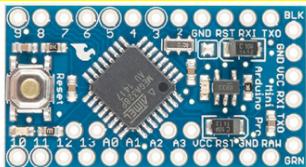


1.5€



[https://github.com/FabienFerrero/UCA\\_Board](https://github.com/FabienFerrero/UCA_Board)




4€

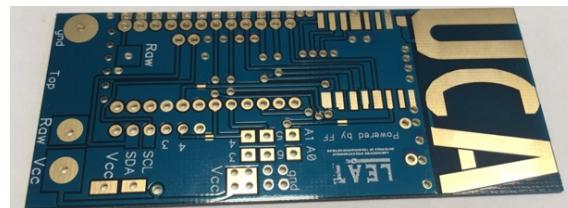

1€

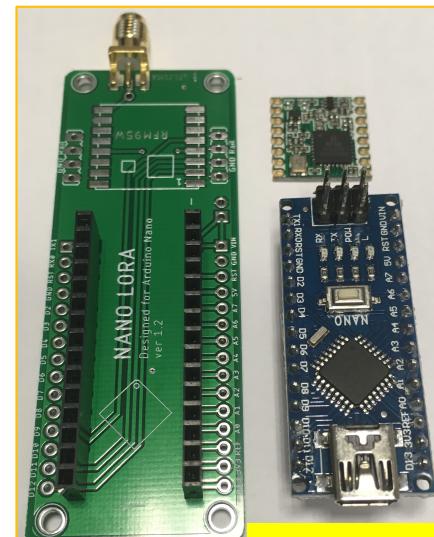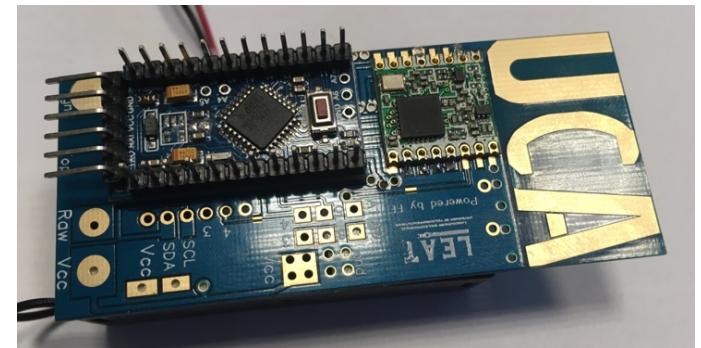

Arduino Nano

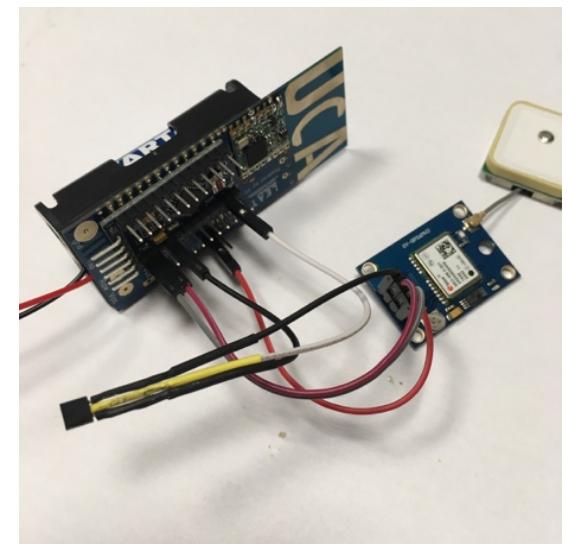


# BOARDS WITH INTEGRATED LORA RADIO MODULE

- Most of boards with integrated LoRa module use the HopeRF RFM9x



IoT-MCU LoRa radio node. CS pin is pin 10

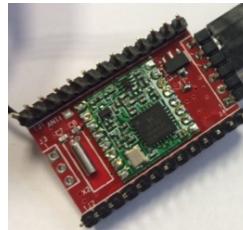

Ideetron Nexus. CS pin is pin 10




Adafruit Feather 32u4/M0  
CS pin is pin 8



Heltec LoRa. CS pin is pin 18

# GETTING, COMPIILING & UPLOADING THE SOFTWARE

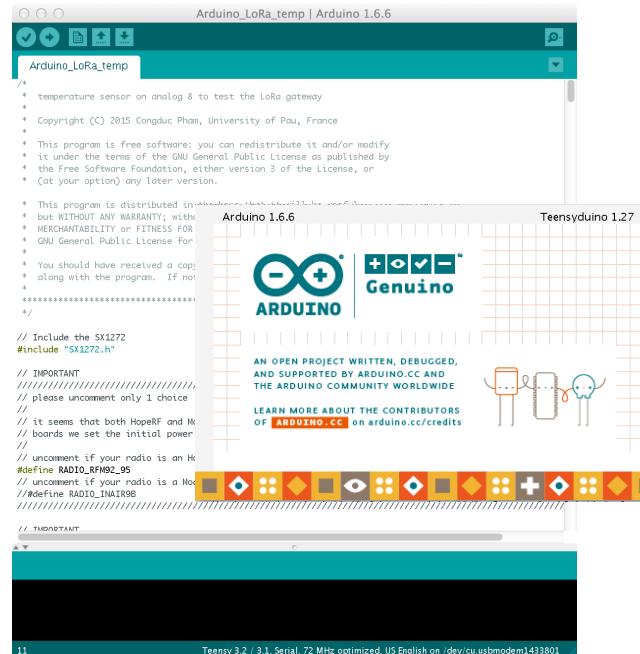



# GETTING THE SOFTWARE

```
Arduino_LoRa_temp | Arduino 1.6.6
Arduin..._LoRa_temp

/*
 * temperature sensor on analog 0 to test the LoRa gateway
 *
 * Copyright (C) 2015 Congduc Pham, University of Pau, France
 *
 * This program is free software: you can redistribute it and/or modify
 * it under the terms of the GNU General Public License as published by
 * the Free Software Foundation, either version 3 of the License, or
 * (at your option) any later version.
 *
 * This program is distributed in the hope that it will be useful,
 * but WITHOUT ANY WARRANTY; without
 * MERCHANTABILITY OR FITNESS FOR
 * GNU General Public License For
 *
 * You should have received a copy
 * along with the program. If not
 */
*****  
// Include the SX1272
#include "SX1272.h"  
  
// IMPORTANT
// please uncomment only 1 choice
// it seems that both HopeRF and M
// boards we set the initial power
// uncomment if your radio is an H
#define RADIO_RF902_95
// uncomment if your radio is a No
#define RADIO_INA198  
*****  
// THROTTLE
  
Teensyduino 1.27
Arduino 1.6.6
Genuino
AN OPEN PROJECT WRITTEN, DEBUGGED,
AND SUPPORTED BY ARDUINO.CC AND
THE ARDUINO COMMUNITY WORLDWIDE
LEARN MORE ABOUT THE CONTRIBUTORS
OF ARDUINO.CC ON arduino.cc/credits




  
Teensy 3.2 / 3.1, Serial, 72 MHz optimized, US English on /dev/cu.usbmodem1433801
```

CongducPham / LowCostLoRaGw

Code Issues 62 Pull requests 2 Projects 0 Pulse Graphs

Low-cost LoRa IoT & gateway with SX1272/76, Raspberry and Arduino

122 commits 1 branch 0 releases 2 contributors

Branch: master New pull request Find file Clone or download


Congduc Pham bug fix in lora\_gateway.cpp Latest commit a0daa4a a day ago

Author	Commit Message	Date
Arduino	update SMS scripts	15 days ago
gw_full_latest	bug fix in lora_gateway.cpp	a day ago
tutorials	update SMS scripts	15 days ago
.gitignore	.DS_Store banished	10 months ago
README.md	update README	11 days ago
Arduino_LoRa_Simple_temp	update sketch	3 months ago
Arduino_LoRa_temp	update sketch	3 months ago
Arduino_LoRa_ucamll	update image support	2 months ago
libraries	update image support	2 months ago
README.md	update image support	2 months ago

Fisrt, you will need the Arduino IDE 1.6.6 or later (left). Get the entire ZIP archive of the LowCostLoRaGw github repository at <https://github.com/CongducPham/LowCostLoRaGw>

Unzip the archive and copy the content of the Arduino folder in your Arduino IDE sketch folder  
If you already have a libraries folder in your sketch folder, copy the content of the new libraries folder in your libraries folder

# COMPILING

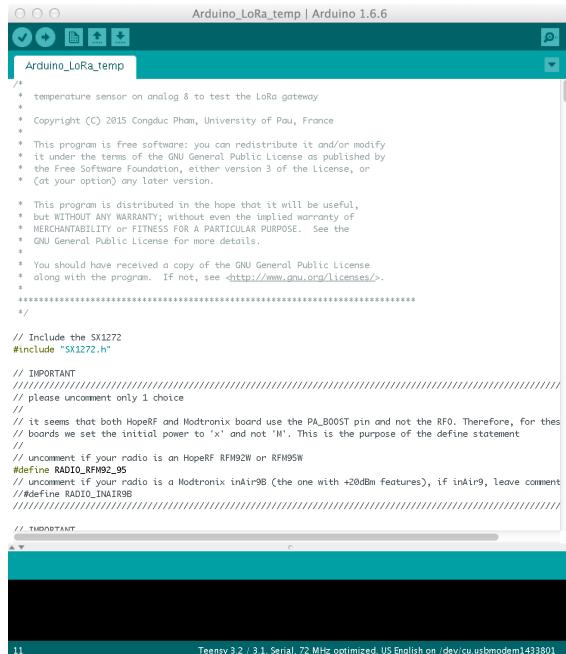

```
Arduino_LoRa_temp | Arduino 1.6.6

/*
 * temperature sensor on analog 0 to test the LoRa gateway
 *
 * Copyright (C) 2015 Congduc Pham, University of Pau, France
 *
 * This program is free software: you can redistribute it and/or modify
 * it under the terms of the GNU General Public License as published by
 * the Free Software Foundation, either version 3 of the License, or
 * (at your option) any later version.
 *
 * This program is distributed in the hope that it will be useful,
 * but WITHOUT ANY WARRANTY; without even the implied warranty of
 * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the
 * GNU General Public License for more details.
 *
 * You should have received a copy of the GNU General Public License
 * along with the program. If not, see <http://www.gnu.org/licenses/>.
 */
*****  

// Include the SX1272
#include "SX1272.h"  

// IMPORTANT  

// please uncomment only 1 choice  

// it seems that both HopeRF and Nodtronix board use the PA_BOOST pin and not the RFO. Therefore, for these  


// boards we set the initial power to 'x' and not 'W'. This is the purpose of the define statement  

//  

// uncomment if your radio is an HopeRF RFM92W or RFM95W
#define RADIO_RF95_05
// uncomment if your radio is a Nodtronix inAir98 (the one with +20dBm features), if inAir9, leave comment
//#define RADIO_INAIR98
//  

//  

// THROTTLE
```

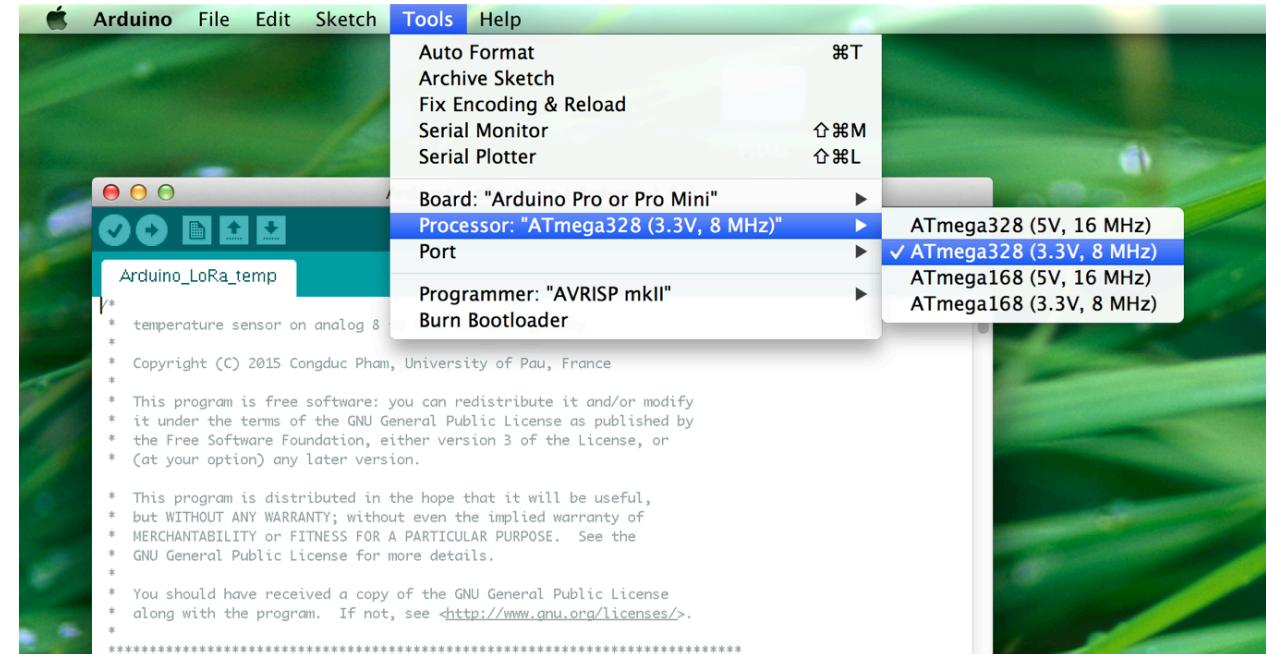


Open the `Arduino_LoRa_Simple_temp` sketch and select the Arduino Pro Mini board with its 3.3V & 8MHz version.



Then, click on the « verify » button



# UPLOADING (1)

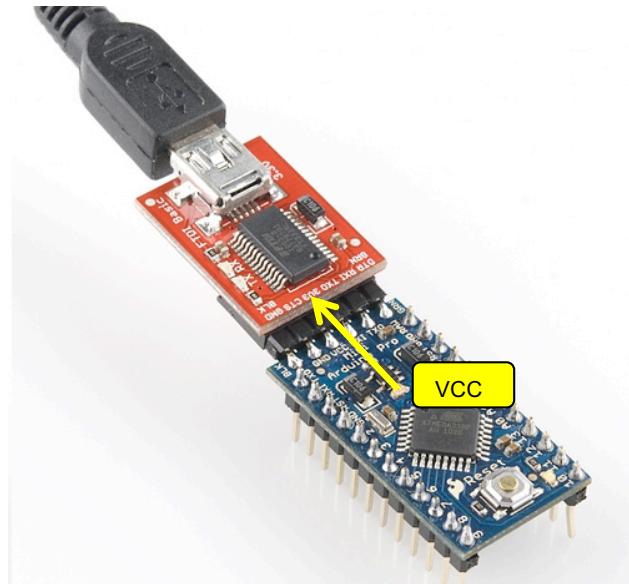


Some clone version, check the VCC pin

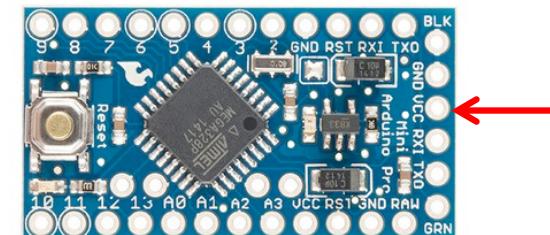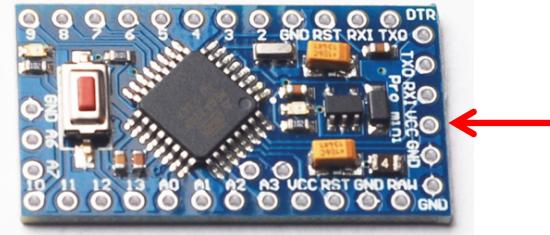

Original Sparkfun version

For the Pro Mini, you need to have an FTDI breakout cable working at 3.3v level (there is also 5v version but our advised Pro Mini version is running at 3.3v to reduce energy consumption). Be careful, on some low-cost Pro Mini version (Chinese manufacturer for instance) the pins may be in reversed order. The simplest way in to check the VCC pin and make it to correspond to the VCC pin of the FTDI breakout.

# UPLOADING (2)

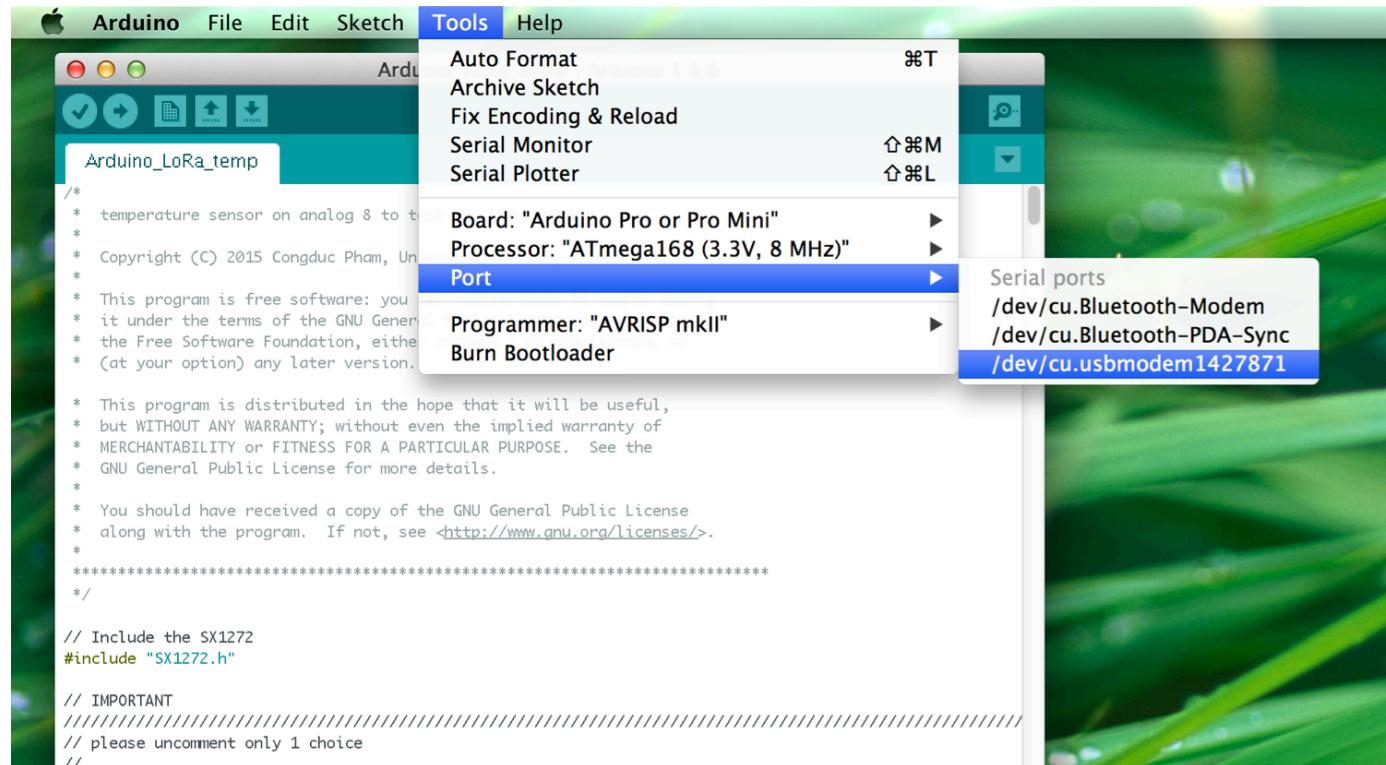


Connect the USB end to your computer and the USB port should be detected in the Arduino IDE. Select the serial port for your device. It may have another name than what is shown in the example. Then click on the « upload » button



# GENERIC BEHAVIOR

# Physical sensor reading

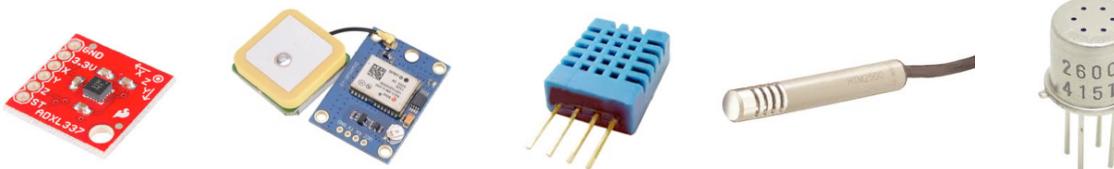

# Physical sensor management



Arduino Pro Mini @3.3V

# AES encryption


# Long-range transmission

## Activity duty-cycle, low power


## Logical sensor management

WAZIUP

# Physical sensor reading

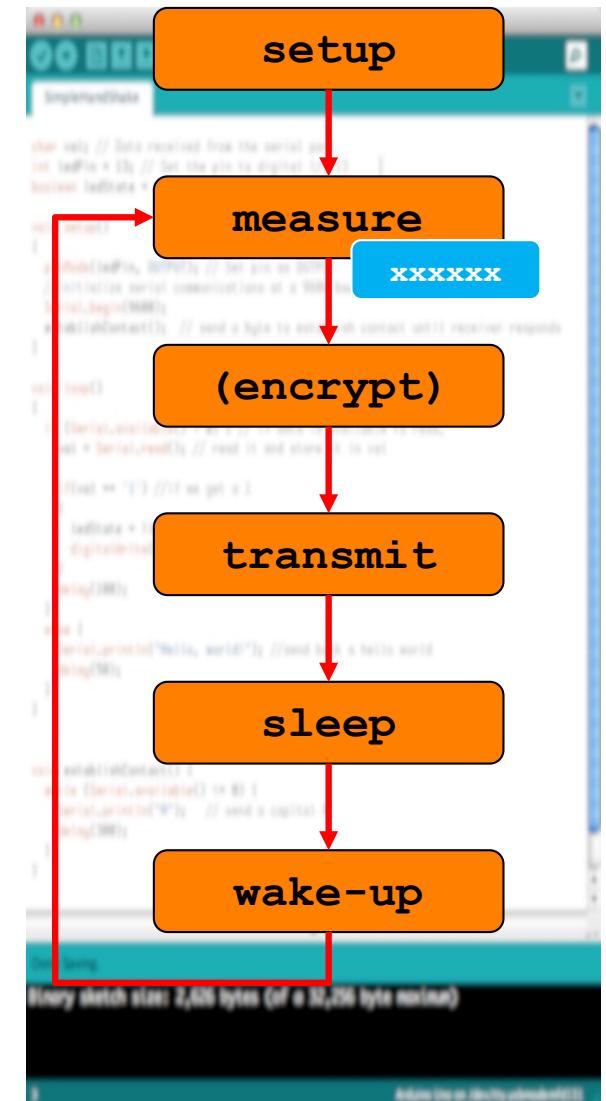

# SERIAL MONITOR AND CHECKING THAT DEVICE IS SENDING

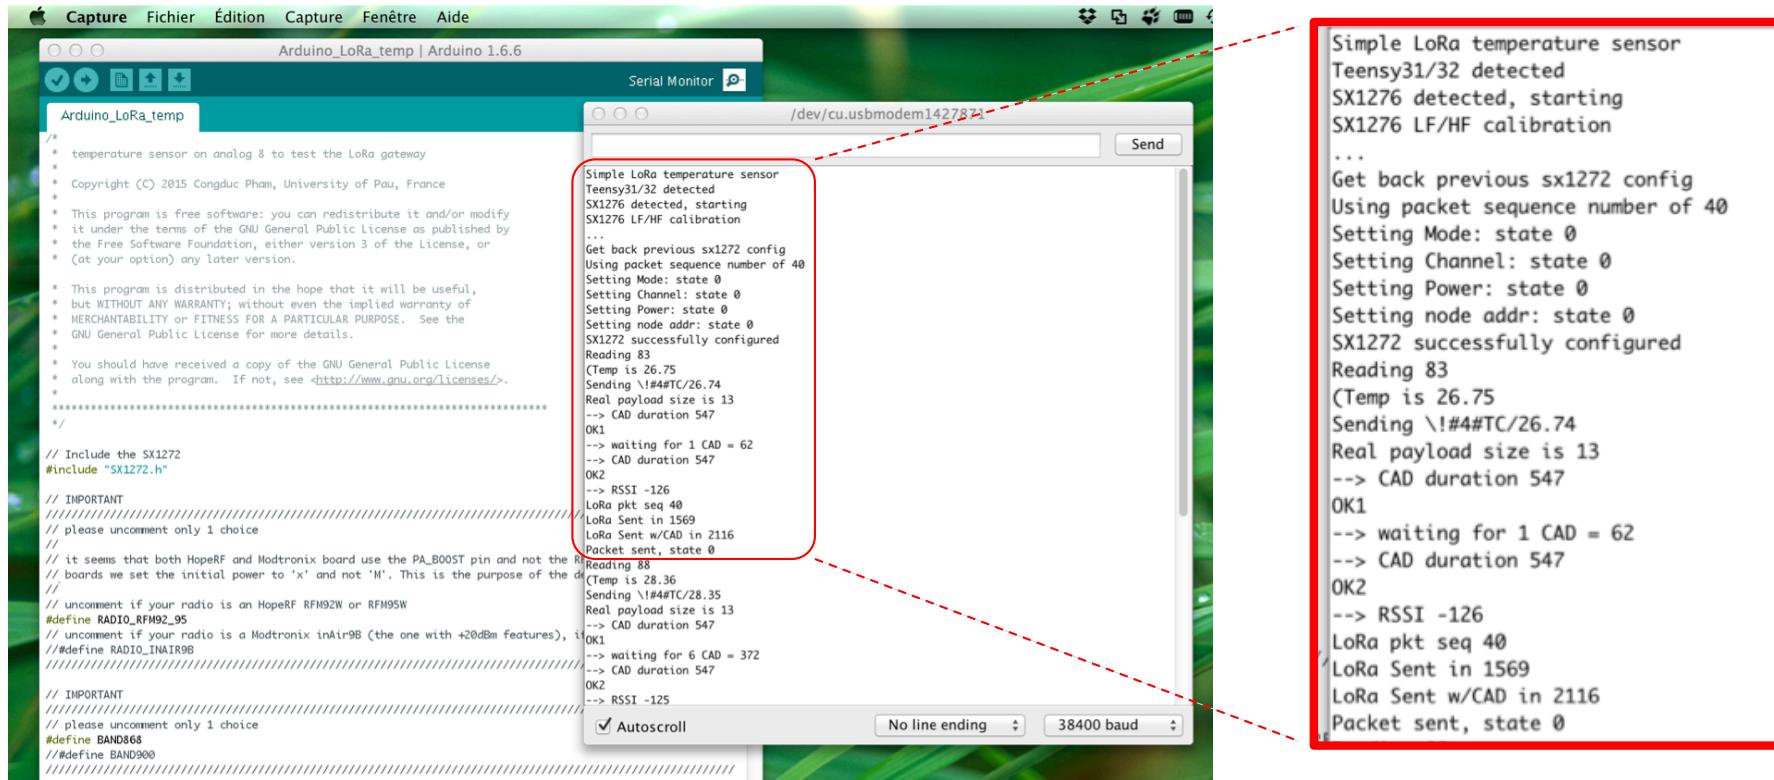

You can see the output from the sensor if it is connected to your computer. Use the Arduino IDE « serial monitor » to get such output, just to verify that the sensor is running fine, or to debug new code. Be sure to use 38400 baud. If you get the "Packet sent, state 0" result, it is most likely that your device is sending OK, but to be sure, you need to check data reception on the gateway.

# SETTING PA\_BOOST

---

- The Semtech SX1272/76 has actually 2 lines of RF power amplification (PA): a high efficiency PA up to 14dBm (RFO) and a high power PA up to 20dBm (PA\_BOOST)
- Some radio modules only wire the PA\_BOOST and not the RFO: RFM95 for instance has only PA\_BOOST line


```
// IMPORTANT
///////////////////////////////
//
// uncomment if your radio is an HopeRF RFM92W, HopeRF RFM95W, Modtronix inAir9B, NiceRF1276
// or you known from the circuit diagram that output use the PABOOST line instead of the RF0 line
//#define PABOOST
/////////////////////////////
```

Uncomment the « #define PABOOST » statement, compile and upload again

# MORE PLATFORMS ARE SUPPORTED!




ARDUINO UNO

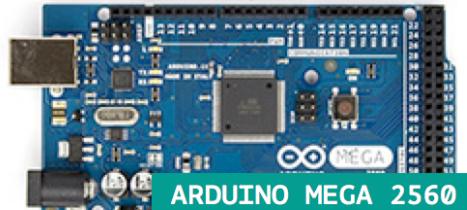

ARDUINO MEGA 2560



ARDUINO ZERO

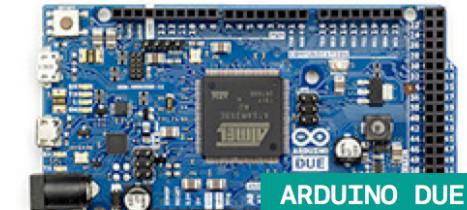


ARDUINO DUE



ARDUINO MICRO



ARDUINO PRO MINI

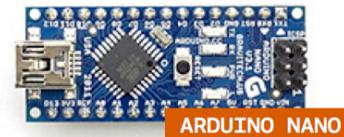

ARDUINO NANO



Ideutron Nexus



Teensy3.1/3.2



Adafruit Feather 32u4/M0

More to come...



LoRa radios that  
our library already  
supports



HopeRF  
RFM92W/95W



Libelium LoRa



Modtronix  
inAir9/9B



NiceRF  
LoRa1276

Long-Range communication library



LoRa radios that  
our library already  
supports




HopeRF  
RFM92W/95W




Libelium LoRa



Modtronix  
inAir9/9B

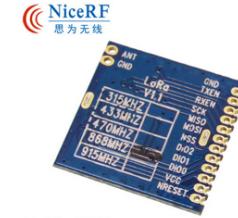

NiceRF  
LoRa1276

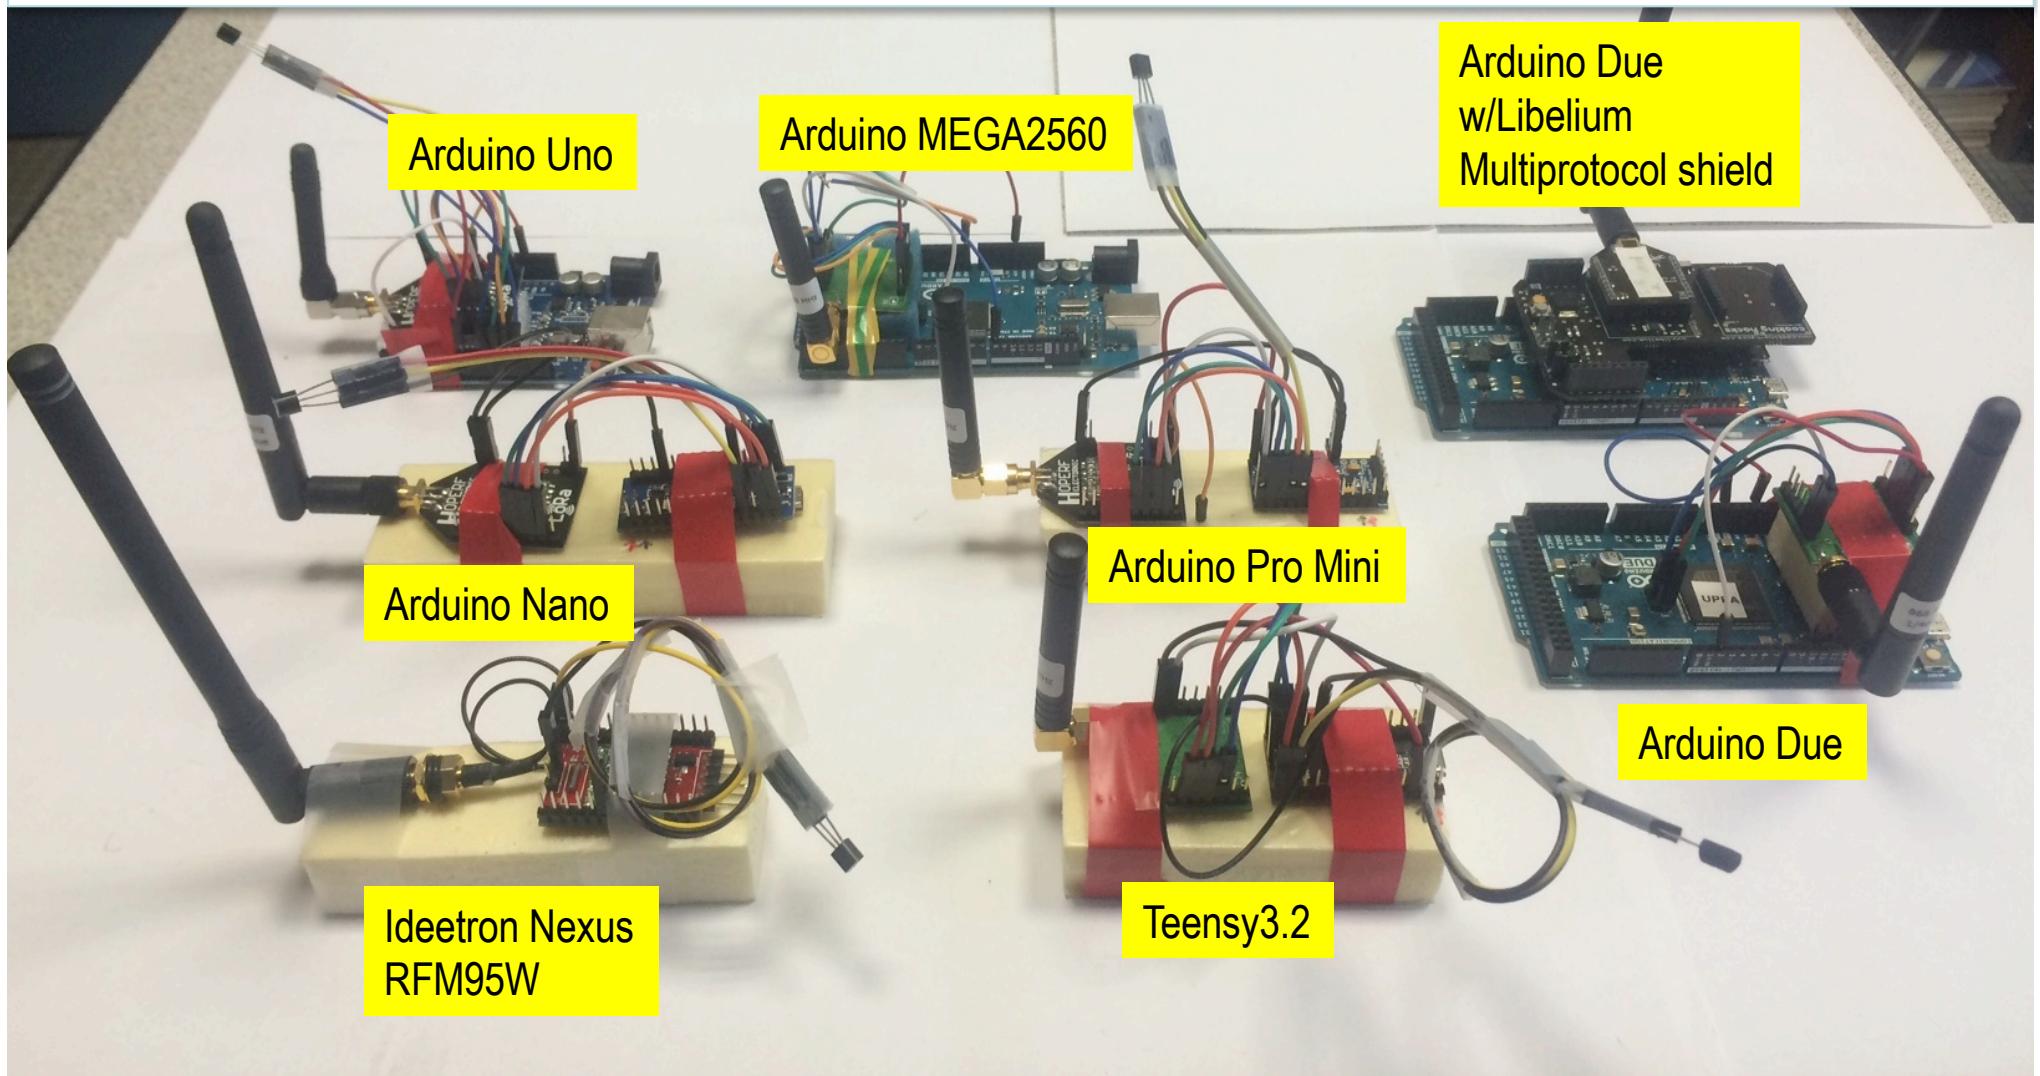


## ADDING A PHYSICAL SENSOR





# TEMPERATURE SENSOR

**LM35DZ TO-92  
PINOUT DIAGRAM**

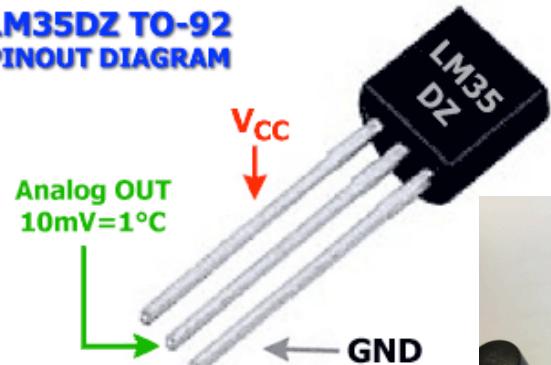


[www.Vcc2GND.com](http://www.Vcc2GND.com)

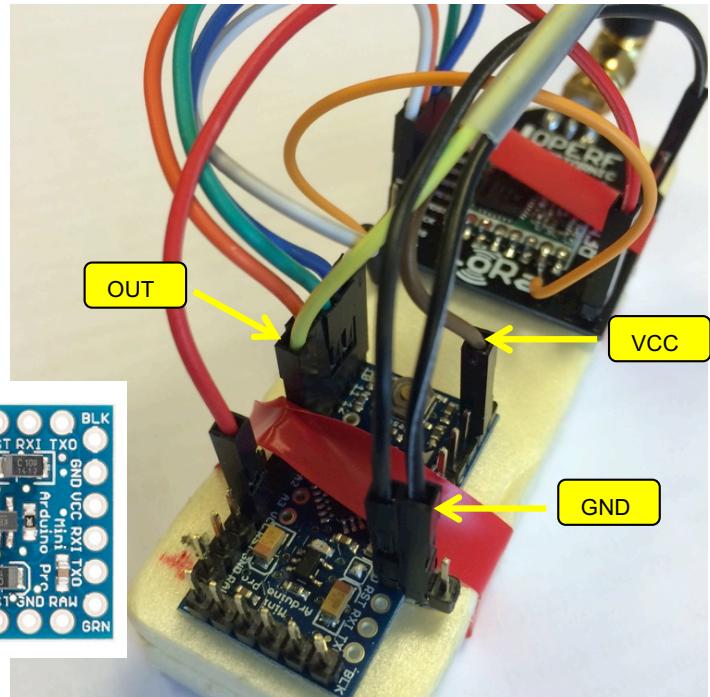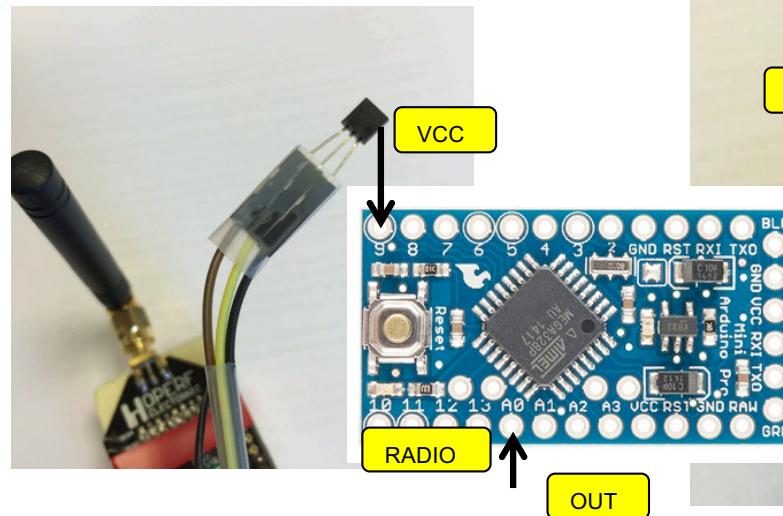

For the moment, there is no physical sensor connected to the board, so you will probably get random value when running the sensor. The `Arduino_LoRa_Simple_temp` example uses the LM35DZ physical sensor to get the ambient temperature. The GND should be connected to one of the board's GND, the VCC should be connected to digital pin 9 and the OUT pin should be connected to the analog A0 pin.

# UNDERSTANDING ANALOG OUTPUT

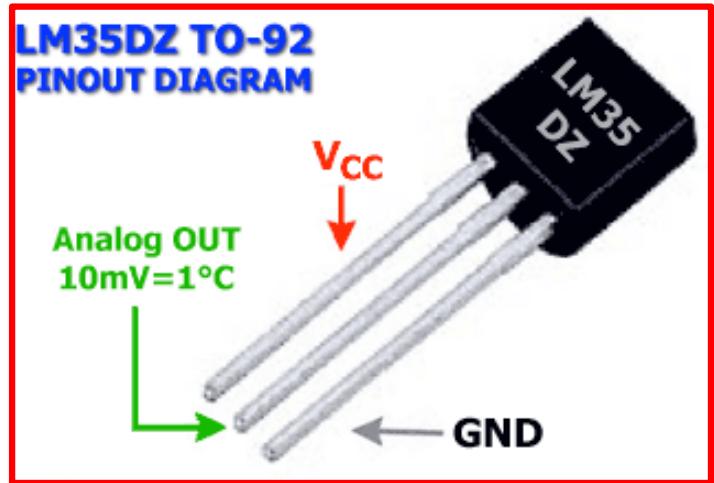


V<sub>CC</sub> is 3.3V (the output of digital 9 will power the sensor)

If 0 means 0V and 1024 means 3300mV (10-bit resolution) then  $3300\text{mV}/1024=3.22\text{mV}$  is the granularity of the measure

A digital value of 100 means  $100*3.22\text{mV}=322\text{mV}$

If the sensor output is 10mV/1°C then the physical temperature is  $322\text{mV}/10\text{mV}=32.2^{\circ}\text{C}$

# READING ANALOG PIN VALUE

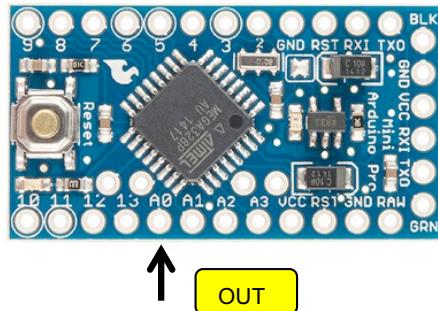

```
// sensor output connected to A0 analog pin  
  
value = analogRead(A0);  
  
// now need to convert to Celcius degree
```


And converting into Celcius

```
Temp = value * 3300.0/1024.0; // 3300/1024=3.22  
  
Temp = Temp / 10; // 10mV means 1°C  
  
// now process and transmit the data
```

# GENERALIZATION

- ❑ Depending on the sensor type, getting the physical measure from the analog/digital value follows a specific function provided by the sensor's manufacturer
- ❑ Depending on the microcontroller board, the number of I/O pins and the operating voltage may differ
- ❑ However the process is always the same:
  - ❑ Connect the sensor to the microcontroller board
  - ❑ Read analog or digital pin
  - ❑ Convert read value into meaningful physical measure
  - ❑ Then process and/or transmit

# SEVERAL PHYSICAL SENSORS PER DEVICE

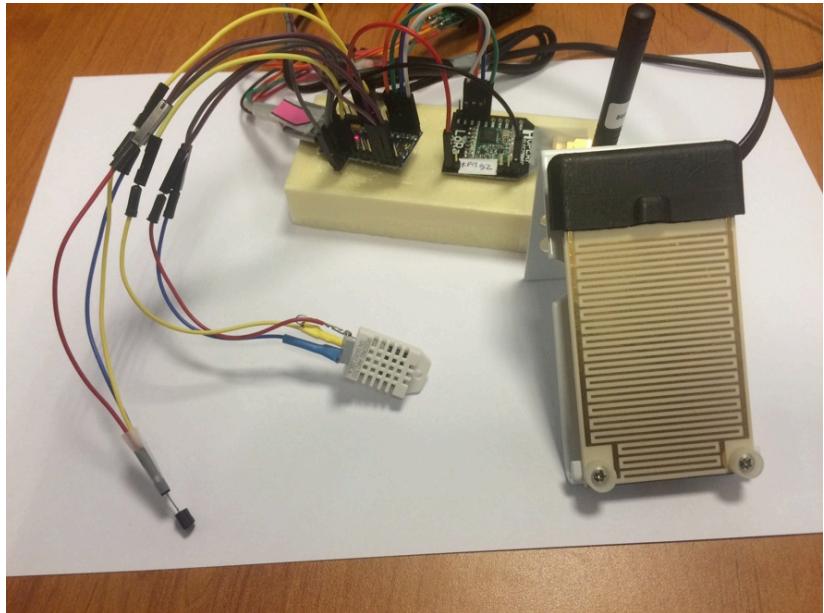

Physical sensor will be derived from Sensor base class and offers a unique `get_value()` function that will be called periodically

A sensor with several physical sensor will simply loop over all the connected sensors to call the `get_value()` function

Several physical sensors can be connected to a board. Currently supported sensors:


All simple analog sensors (value on 1 analog wire: e.g. LM35Z temp. sensor or Davis leaf wetness Vantage)

All simple digital sensors (binary value low/high)



Most of one-wire digital sensor such as DHT22 sensor

For specific sensors, `get_value()` will simply use specific provided/developped library

## RUNNING ON BATTERY & USING LOW-POWER MODE

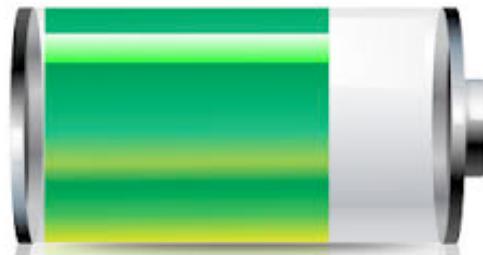

# CONNECTING A BATTERY

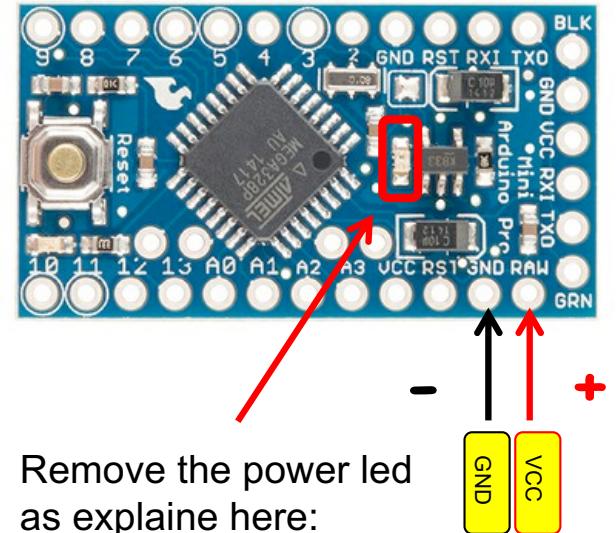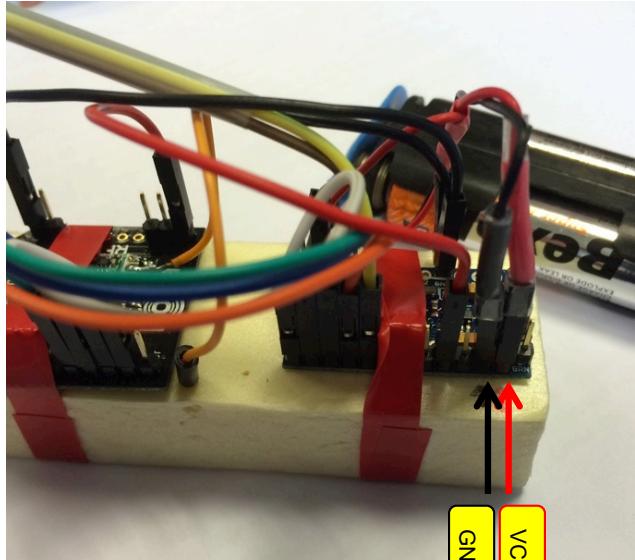

<http://www.home-automation-community.com/arduino-low-power-how-to-run-atmega328p-for-a-year-on-coin-cell-battery/>

The advantage of using the Arduino Pro Mini running at 3.3v is that energy consumption can be low especially when the board is put in « sleep mode » for low-power operation. Remove the power led to further reduce consumption.

You can use 4 AA batteries to provide  $4 \times 1.5\text{v} = 6\text{v}$ . Using only 3 batteries may lead to insufficient voltage difference. This will be injected into the RAW pin of the board, therefore using the on-board voltage regulator to get the 3.3v.

# COMPIILING FOR LOW-POWER

```
//////////  
// COMMENT OR UNCOMMENT TO CHANGE FEATURES.  
// ONLY IF YOU KNOW WHAT YOU ARE DOING!!! OTHERWISE LEAVE AS IT IS  
#if not defined _VARIANT_ARDUINO_DUE_X_ && not defined __SAMD21G18A__  
#define WITH_EEPROM  
#endif  
#define WITH_APPKEY  
#define LOW_POWER  
#define LOW_POWER_HIBERNATE  
//#define WITH_ACK  
/////////
```

Uncomment the « #define LOW\_POWER » statement, compile and upload

```
//////////  
// CHANGE HERE THE TIME IN MINUTES BETWEEN 2 READING & TRANSMISSION  
unsigned int idlePeriodInMin = 60;  
//////////
```



Change the value of idlePeriodInMin to X minutes if needed

# REDUCING FURTHER POWER CONSUMPTION

By removing the voltage regulator, you can use a single 3.6v Lithium-based battery or 2 regular AA batteries that provides about 3.1v


You can use the VCC pin on the programming header to power the board, as the other VCC pin is needed for the radio module

In sleep mode, the board now draws about 12uA, allowing for much longer lifetime

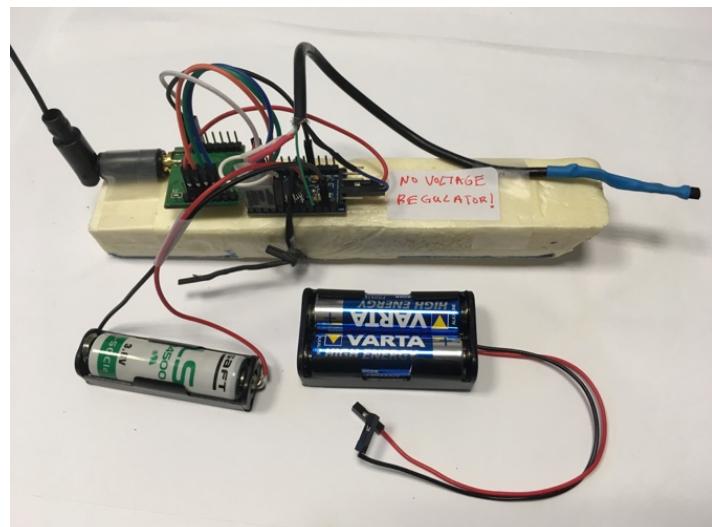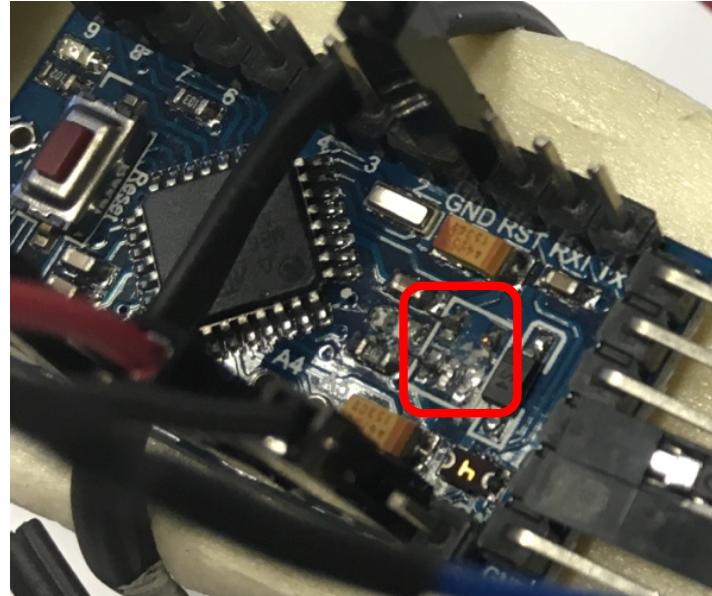


# RUNNING FOR SEVERAL YEARS!

Low-Power library from RocketScream

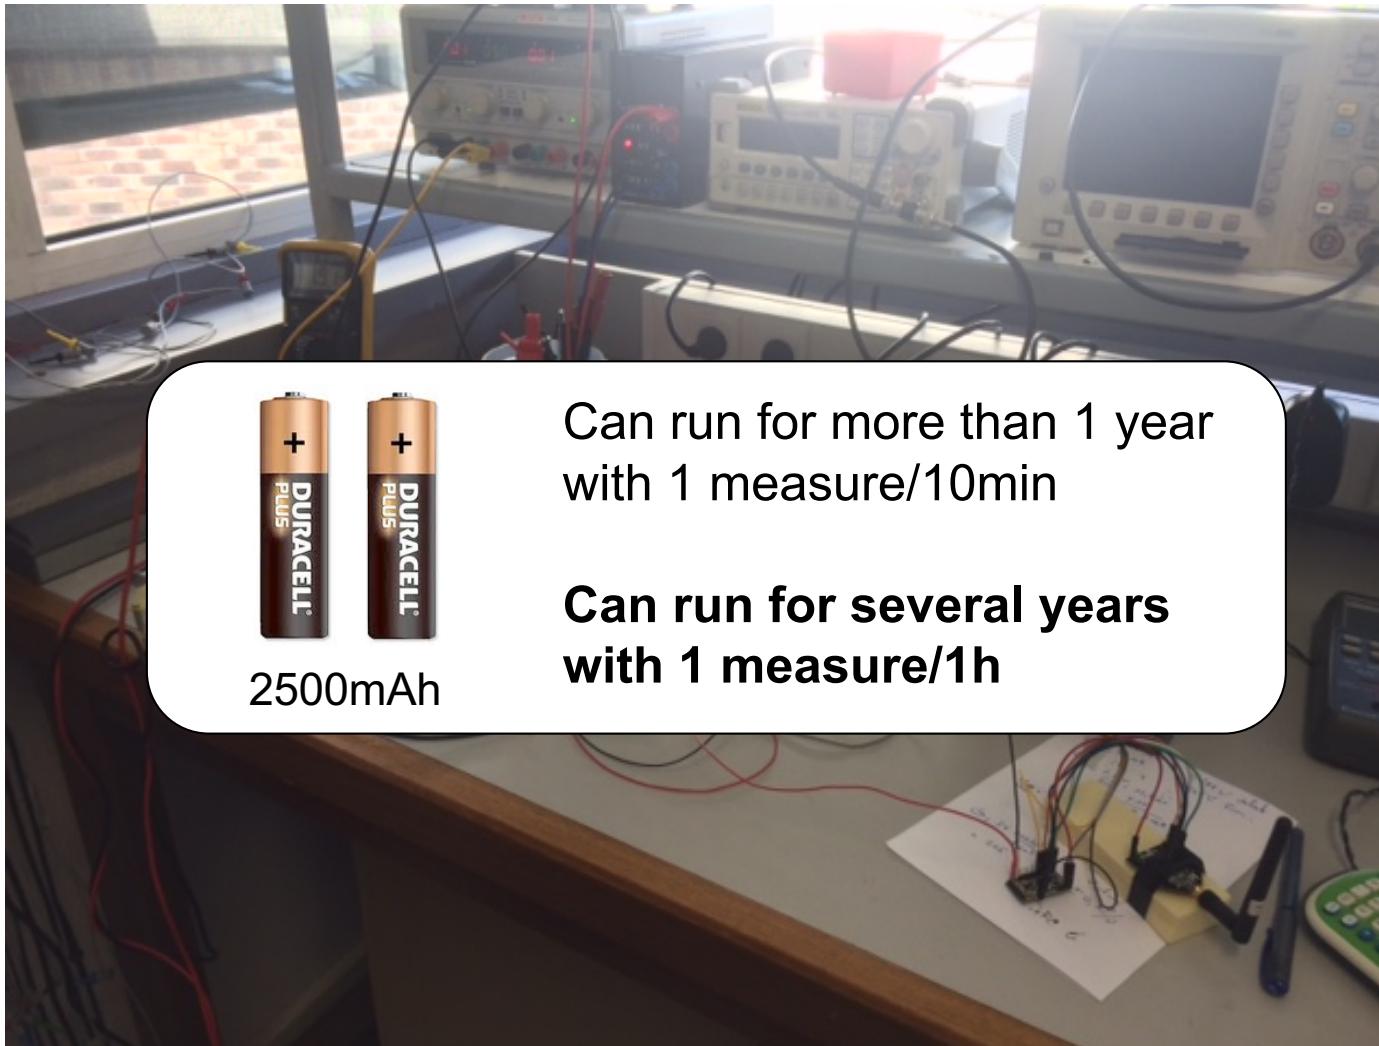


Can run for more than 1 year  
with 1 measure/10min

Can run for several years  
with 1 measure/1h

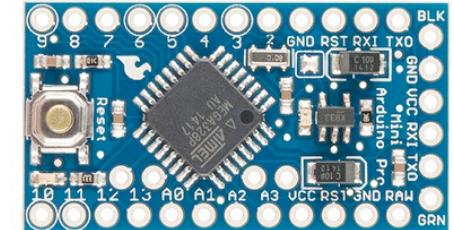


Wakes-up every  
10min, take a  
measure (temp) and  
send to GW

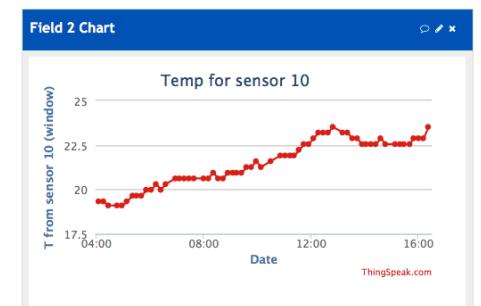


5 $\mu$ A in deep sleep  
mode, about  
40mA when active  
and sending!

Thanks to T. Mesplou and P. Plouraboué for their help


## SENDING TO A GATEWAY

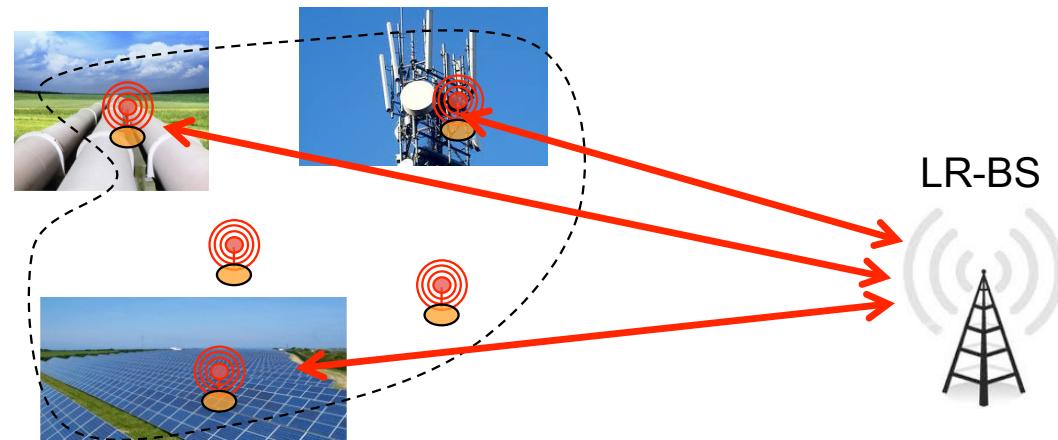

# DEFAULT CONFIGURATION

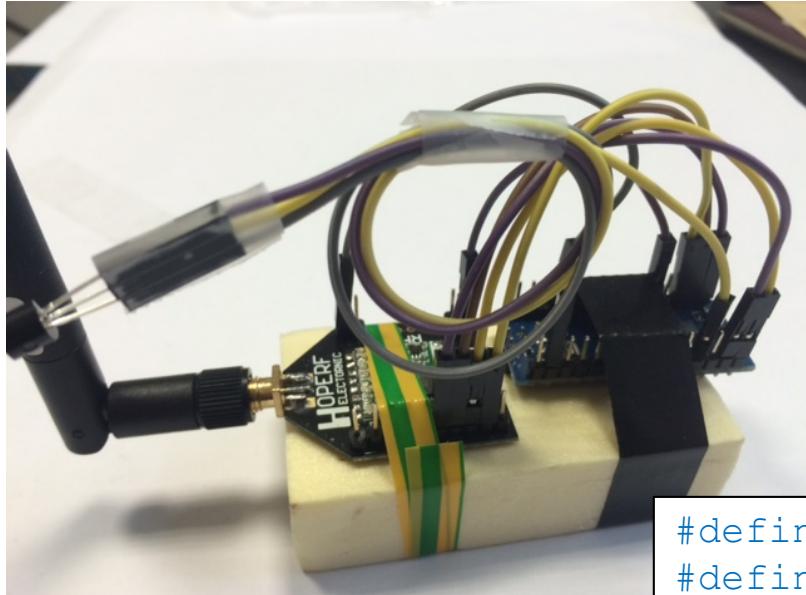

\!##TC/18.5

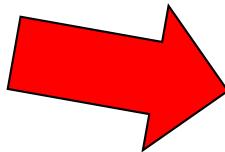

```
#define DEFAULT_DEST_ADDR 1
#define LORAMODE 1
#define node_addr 6
```

The default configuration in the Arduino\_LoRa\_Simple\_temp example is:

Send packets to the gateway (one or many if in range)

LoRa mode 1

Node short address is 6

# SECURING WITH APPLICATION KEY (1)

- End-device can use application key (app key) on 4 bytes to allow filtering mechanisms at the gateway side.
- The app key is defined in the end-device sketch (`Arduino_LoRa_temp`) and the feature is activated by uncommenting `#define WITH_APPKEY`

```
#ifdef WITH_APPKEY
///////////////////////////////
// CHANGE HERE THE APPKEY, BUT IF GW CHECKS FOR APPKEY, MUST BE
// IN THE APPKEY LIST MAINTAINED BY GW.
uint8_t my_appKey[4]={5, 6, 7, 8};
///////////////////////////////
#endif
```

- At the gateway side, `post_processing_gw.py` has a list of allowed app key

```
app_key_list = [
    #change/add here your application keys
    '\x01\x02\x03\x04',
    '\x05\x06\x07\x08' ]
```

# SECURING WITH APPLICATION KEY (2)

- With app key enforcement at gateway, all LoRa data to be uploaded on clouds will need a valid app key, otherwise the data will be discarded as shown below:

```
--- rxlora. dst=1 type=0x12 src=6 seq=136 len=17 SNR=9 RSSIpkt=-56
rcv ctrl pkt info (^p): 1, 18, 6, 136, 17, 9, -56
splitted in: [1, 18, 6, 136, 17, 9, -56]
(dst=1 type=0x12 src=6 seq=136 len=17 SNR=9 RSSI=-56)
got first framing byte
--> got app key sequence
app key is: [9, 10, 11, 12]
not in app key list
invalid app key: discard data
```

- This is configured in the `gateway_conf.json` file. Set to true

```
        "freq": 433.3
    },
    "gateway_conf": {
        "gateway_ID": "000000XXXXXXXXXX",
        "ref_latitude": "my_lat",
        "ref_longitude": "my_long",
        "wappkey": false,
        "raw": false,
        "aes": false,
        "log_post_processing": true
    }
```

# HOW TO USE APP KEY

---

- App key can be used to differentiate data from one organization to another
  - Sensing devices of a given organization will use the same app key
  - The gateway is configured to only accept this app key
- App key can be used to distribute the gateway task in case several gateways in the same organization are deployed
  - Sensing devices will be categorized with 2 app key
  - Each gateway will allow only one of these 2 app key
  - In this way, data that can be received by 2 gateways will be processed by only 1 gateway

# SECURING BY ENCRYPTION

## (1)

---

- ❑ Arduino\_LoRa\_temp is an extended version of Arduino\_LoRa\_Simple\_temp with data encryption feature.
- ❑ Data will be encrypted using 128-bit AES algorithm following the LoRaWAN encryption method.
- ❑ Uncomment `#define WITH_AES`

```
///////////////////////////////  
// COMMENT OR UNCOMMENT TO CHANGE FEATURES.  
// ONLY IF YOU KNOW WHAT YOU ARE DOING!!! OTHERWISE LEAVE AS IT IS  
#if not defined _VARIANT_ARDUINO_DUE_X_ && not defined __SAMD21G18A__  
#define WITH_EEPROM  
#endif  
#define WITH_APPKEY  
#define LOW_POWER  
#define LOW_POWER_HIBERNATE  
#define WITH_AES
```

# SECURING BY ENCRYPTION (2)

---

- ❑ Encryption ensures confidentiality. The two 16-byte encryption keys are defined in the end-device sketch (Arduino\_LoRa\_temp)

```
unsigned char AppSkey[16] = {  
    0x2B, 0x7E, 0x15, 0x16, 0x28, 0xAE, 0xD2, 0xA6,  
    0xAB, 0xF7, 0x15, 0x88, 0x09, 0xCF, 0x4F, 0x3C  
};  
  
unsigned char NwkSkey[16] = {  
    0x2B, 0x7E, 0x15, 0x16, 0x28, 0xAE, 0xD2, 0xA6,  
    0xAB, 0xF7, 0x15, 0x88, 0x09, 0xCF, 0x4F, 0x3C  
};
```

- ❑ And should also be declared in the loraWAN.py script on the gateway

```
AppSKey = '2B7E151628AED2A6ABF7158809CF4F3C'  
NwkSKey = '2B7E151628AED2A6ABF7158809CF4F3C'
```




# SECURING BY ENCRYPTION (3)

- With encryption at device and decryption at gateway, there is more robust integrity check of the messages.
- Note that app key can still be used with AES, even if different gateways may have different encryption keys.
- To enable decryption at gateway, AES feature should be activated (set to true) in the `gateway_conf.json` file.

```
    "freq": 433.3
},
"gateway_conf": {
    "gateway_ID": "000000XXXXXXXXXX",
    "ref_latitude": "my_lat",
    "ref_longitude": "my_long",
    "wappkey": false,
    "raw": false,
    "aes": false,
    "log_post_processing": true
}
```

- Otherwise, the gateway will not be able to decrypt and therefore will not be able to push meaningful data to clouds

# GATEWAY TO CLOUD

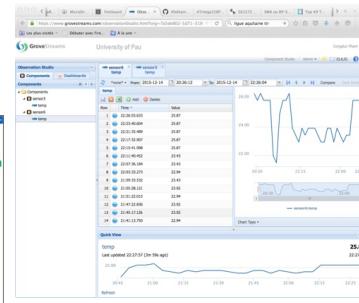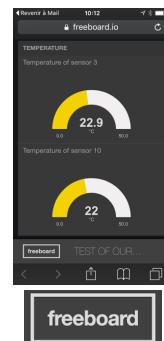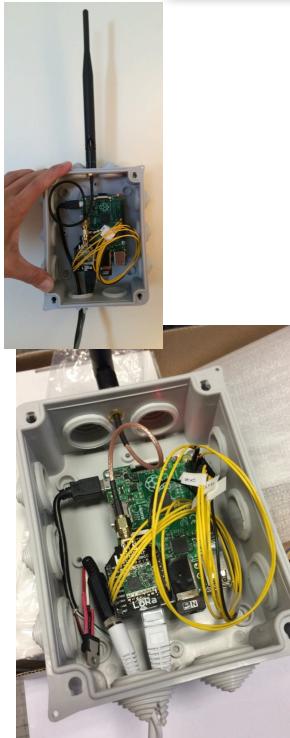

Data received at the gateway will be pushed to IoT clouds. We provide python script examples for many IoT cloud platforms. Most of clouds with REST API can be easily integrated.

Now, have a look at the « Low-cost LoRa gateway: a step-by-step tutorial »