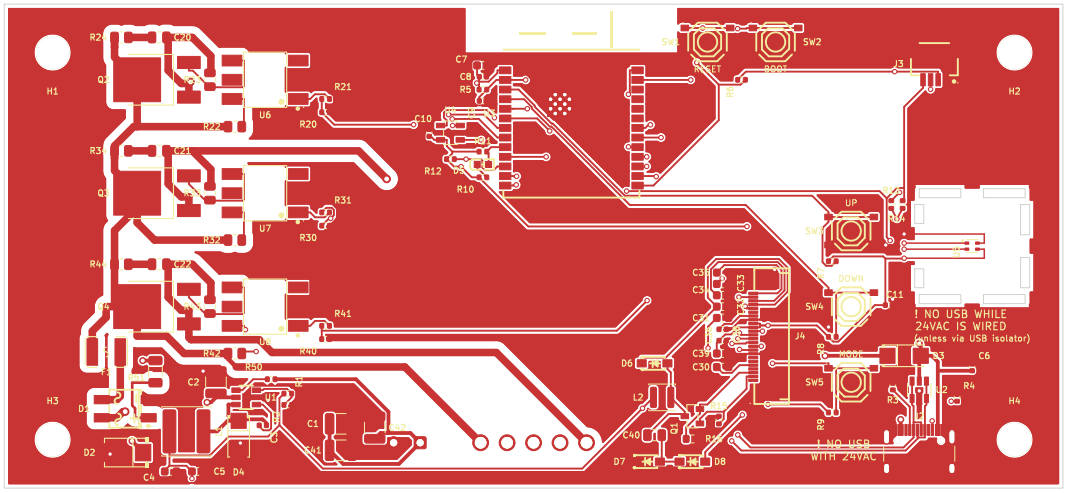

H1
H2
H3
H4
SW1
SW2
RESET
BOOT
UP
DOWN
SW3
SW4
SW5
J3
J4
! NO USB WHILE
24VAC IS WIRED
(unless via USB isolator)
! NO USB
WITH 24VAC