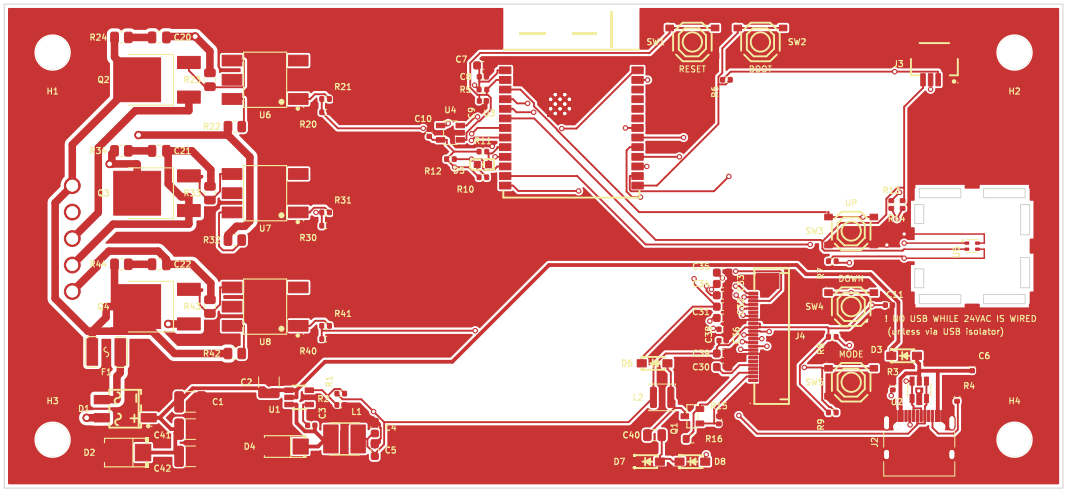

H1
H2
H3
H4
RESET
BOOT
SW1
SW2
SW3
SW4
UP
DOWN
MODE
J4
J2
J3
1 NO USB WHILE 24VAC IS WIRED
(unless via USB isolator)