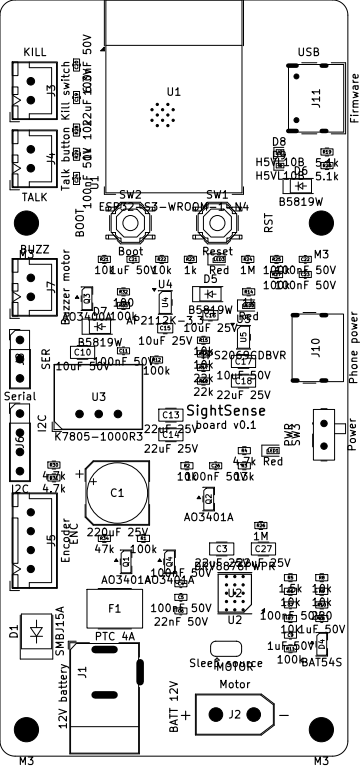

KILL
USB
U1
J11
Firmware
J3
Kill switch
J4
Talk button
TALK
SW2
SW1
ESP32-S3-WROOM-1-N4
BOOT
RST
Boot
Reset
B5819W
BUZZ
J7
Buzzer motor
SER
Serial
I2C
J6
SightSense
board v0.1
U3
K7805-1000R3
SW3
Power
J10
Phone power
C1
220uF 25V
J5
Encoder
ENC
F1
PTC 4A
D1
SMBJ15A
J1
12V battery
Sleep Indicator
Motor
J2
BATT 12V
M3