Roland S-1 Main Controls

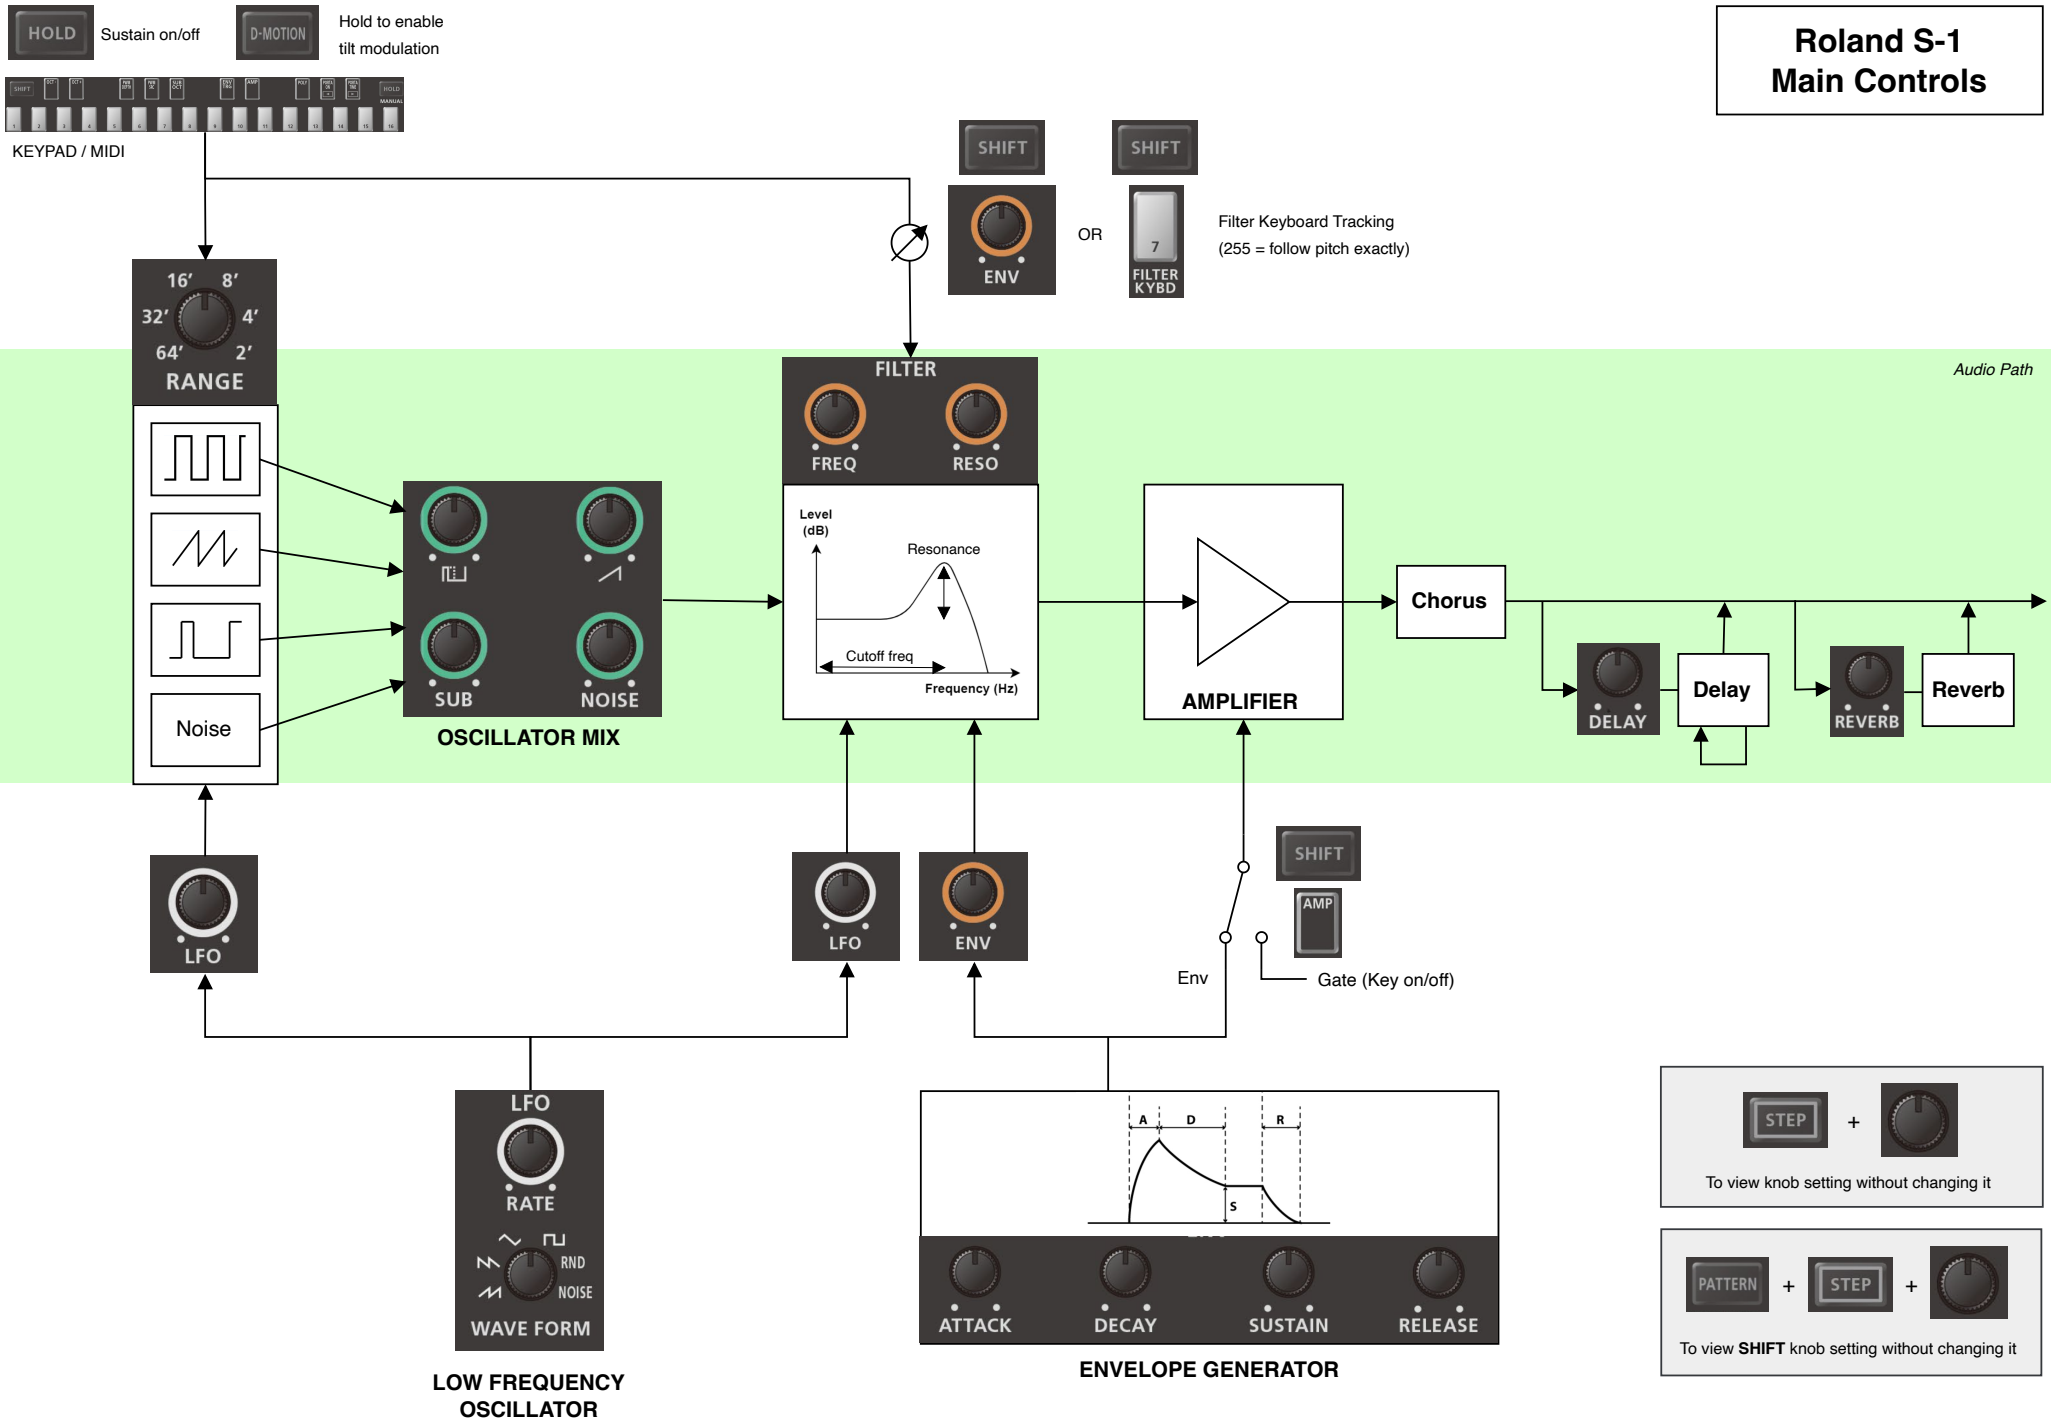

© 2023 Brian Candler - Creative Commons BY 4.0

Keyboard

`Mono` Monophonic
`Uni` Unison
`Poly` Polyphonic
`Chd` Chord

Octave Down

Octave Up

Octave Reset

Transpose in semitones

Portamento On/Off/Auto

Portamento Time

Auto = when pressing next note before releasing previous (legato)

Chord Note On/Off	`v1.SW`	`v2.SW`	`v3.SW`
Key Shift (-12...12)	`v1.KS`	`v2.KS`	`v3.KS`

Oscillator



Env
Manual
LFO
(triangle)

OR



Pulse Width Modulation
(when Osc Draw is Off)

Fine Tune

Sub-oscillator Octave

`-2o.A`	2 octaves down, asymmetric (pulse)
`-2oc`	2 octaves down, square
`-1oc`	1 octave down, square

See manual pp 29-31

Osc Draw Multiply

Osc Draw Switch (Off/Step/Slope)

Osc Chop Overtone

Osc Chop Comb



Noise type Pink/White

Envelope

Envelope Trigger

`LFO`	On each LFO cycle while key pressed
`Gate`	When new note played - not legato
`Trig`	(Gate+Trig) On every key press

Low Frequency Oscillator

LFO Mode Normal/Fast

LFO Sync to Tempo Off/On

`LFO.K`

LFO Key Trigger Off/On

Sets whether LFO is reset when note starts

D-Motion Controller

`roll`	Roll (side-to-side) *
`ptch`	Pitch (front-to-back) *
`r.sns`	Roll sensitivity (1-10)
`p.sns`	Pitch sensitivity (1-10)

`*off`			
`Mod`	Modulation	`pan`	Stereo L/R
`freq`	Filter cutoff	`exp`	Expression (vol)
`reso`	Resonance	`d.Lev`	Delay level
`p.bnd`	Pitch bend	`r.Lev`	Reverb level

© 2023 Brian Candler - Creative Commons BY 4.0

Menu item

Select

Adjust Value

Done

Controls

Delay

`d.Syn`	Synchronize delay time to Tempo (On/Off)
`time`	Delay Time (1-740ms if Delay Sync is Off)
`Lev`	Volume of the delay sound (0-255)
`Fdbk`	Amount of feedback/repetition (0-255)
`Lo.Ct`	Cut frequencies below this (FLAT, 20-800 Hz). No frequencies are cut when set to FLAT
`Hi.Ct`	Cut frequencies above this (630-12.5 kHz, FLAT). No frequencies are cut when set to FLAT

Reverb

`type`	Reverb Type
`time`	Time (length) of reverberation (0-255)
`Lev`	Volume of the reverb sound (0-255)
`Pr.dL`	Pre-delay: time until the reverb starts (0-100ms)
`Lo.Ct`	Cut frequencies below this (FLAT, 20-800 Hz)
`Hi.Ct`	Cut frequencies above this (630-12.5 kHz, FLAT)
`dens`	Density of the reverb sound (0-10)

Amb (Ambience)	Plat (Plate)
Room (Room)	Sprn (Spring)
HAL1 (Hall 1)	Mod (Modulate)
HAL2 (Hall 2)	

Reverb Types

Chorus

`Cho`

`Off`	No chorus		
`1`	Standard chorus effect	`3`	Effect similar to a rotary speaker (fast)
`2`	Chorus with faster modulation	`4`	More relaxed chorus effect

Note Lengths

Display	Explanation
8_1	Octuple whole note
6_1	Sextuple whole note
8_1t	Octuple whole-note triplet
4_1	Quadruple whole note
3_1	Triple whole note
4_1t	Quadruple whole-note triplet
2_1	Double whole note
1d	Dotted whole note
2_1t	Double whole-note triplet
1_1	Whole note
2d	Dotted half note
1t	Whole-note triplet
1_2	Half note
4d	Dotted quarter note
2t	Half-note triplet

(LFO Sync)

1_4	Quarter note
8d	Dotted eighth note
4t	Quarter-note triplet
1_8	Eighth note
16d	Dotted sixteenth note
8t	Eighth-note triplet
1_16	Sixteenth note
32d	Dotted thirty-second note
16t	Sixteenth-note triplet
1_32	Thirty-second note
64d	Dotted sixty-fourth note
32t	Thirty-second-note triplet
1_64	Sixty-fourth note
128d	Dotted 128th note
64t	Sixty-fourth-note triplet
128	128th note

(LFO Sync, Delay Sync)

Menu summary

vol	**Volume** - set the pattern volume (0-127)
Mod.d	**LFO Modulation Depth** (0-255). Depth of LFO modulation when modulation controller is used
bnd.o	**Oscillator Bend Sensitity** (0-240, 120=1 Oct, 240=2 Oct) How much pitch bend affects OSC pitch
bnd.F	**Filter Bend Sensitivity** (0-255). How much pitch bend affects the filter cutoff point
ns.Md	**Noise Mode**. Pink/White
rs.Md	**Riser Mode**. Off, Sync (to quarter notes), Quiver, Quiver Pan (see p57). Or SHIFT + 1 + 2
rs.rs	**Riser Resonance** (0-100)
rs.sh	**Riser Shape** (0-100, 0=Sawtooth, 100=Square)
rs.Lv	**Riser Level** (0-100)
LFO.M	**LFO Mode** (Normal/Fast). Disabled when LFO Sync is On (see p23). Or SHIFT + LFO RATE
LFO.S	**LFO Sync** (Off/On). Whether to sync the LFO rate to the tempo. Or SHIFT + LFO WAVE FORM
LFO.K	**LFO Key Trigger** (Off/On). Whether the LFO is reset when a note-on message is received or played.
Cho	**Chorus** (Off, 1-4)
tran	**Transpose** (-60 .. 60). Or SHIFT + STEP/KEY TRANSPOSE
P.SCL	**Pattern Scale** (1_8, 1_16, 1_32, 8t, 16t, 32t). Length of a single step in the pattern. Or PATTERN + Tempo
M.Prb	**Master Probability** (-100 .. 100). Adds to probability that each step plays in pattern. Or STEP + Tempo
n.Pri	**Note Priority** (Last, Low). Sets whether Last note or Lowest note has priority when POLY is set to Mono/Uni/Chd and ENV TRG is LFO or Gate

When Riser is enabled, use Noise knob to control riser Up (0 to 100, mid-point) then Down (100 to 0). Add SHIFT to adjust silently until released

Pattern management

Without SHIFT



Reload pattern (sound only)

Set all main controls from current knob positions (does not affect SHIFT knob settings)

copy	Copy pattern (dial destination pattern then ENTER, or EXIT to cancel)
init	Initialize the current pattern to defaults
rlod	Reload the pattern (sound and sequence)
rl.Sd	Reload the pattern (sound only)
rl.Sq	Reload the pattern (sequence only)

Save Pattern

© 2023 Brian Candler - Creative Commons BY 4.0

Menu Controls

Menu Item **Select** **Adjust Value** **Done**

GL.dr	**Global Delay/Reverb** (Off/On). Off = sep. settings per pattern, On = settings carried over between patterns
DL.Md	**Delay Level Mode** (Pre/Post). Whether delay level knob affects sound entering or leaving the delay
S.CLK	**Sync Clock** (1,2,3,4,6,8,12,24). Number of sync clocks per beat
CH	**MIDI Channel** (1-16). Specifies the MIDI transmit/receive channel
sync	**MIDI Clock Sync** (Auto, Internal, MIDI, USB). If Sync In jack is connected, it always takes priority
thru	**MIDI Thru** (Off/On). Whether messages from MIDI In jack are output to MIDI Out
TxPc	**TX Program Change** (Off/On). Whether program change messages are sent when pattern changes
RxPc	**RX Program Change** (Off/On). Whether pattern changes when program change message is received
Pc.Ch	**Program Change Channel** (1-16). MIDI channel for transmittin/receiving program change messages
velo	**Key Velocity** (1-127)
tune	**Master Tune** (433.0-448.0). Default 440.0Hz
USB.d	**USB Direct Out** (Off, 1-127). Set volume of signal output to USB. **Off** uses the Volume knob setting
A.Lnk	**AIRA Link** (Off/On). Whether connecting USB Aira Link device such as MX-1. Takes effect on power cycle
Cnt.I	**Count In** (Off, 2-4). Number of beats of count-in for recording
Mtro	**Metronome** (Off, Rec, Rec/Play). Sets whether and when the metronome plays. Or SHIFT + REC
Mtr.L	**Metronome Level** (0-100)
d.Lat	**D-Motion Latch** (Off/On). Whether D-Motion toggles each time you press the button, or is momentary

Followed by Pattern Management options

Arpeggiator

Arpeggio Off/On

Type

up
down
up.dw (up&down)
up.2 (up 2 oct)
dw.2 (down 2 oct)
u.d.2 (up&down 2 oct)
rand (random)
rnd.2 (random 2 oct)

Rate

1_4 (Quarter note)
1_8 (Eighth note)
1_16 (Sixteenth)
1_32 (32nd)
8t (Eighth triplet)
16t (16th triplet)
32t (32nd triplet)

Power-on commands (hold while switching on, without SHIFT)

Battery-only mode
Do not draw power from USB: use with iOS devices with Lightning connectors

Backup/Restore - Connect USB to PC; wait 1-2 minutes until all keyboard lights lit. **Backup**: copy files from BACKUP folder then eject. **Restore**: copy files to RESTORE folder, eject, press HOLD, wait for "done"

Factory reset - D-MOTION flashes; press to confirm, or switch off to cancel

Check firmware version

Firmware update (see instructions with firmware file)

SHIFT + 4 LAST

Set sequence length
1-64 steps

PATTERN + TEMPO/VALUE

Set step duration

1_8 (Eighth note)
1_16 (16th note - default)
1_32 (32nd note)
8t (Eighth triplet)
16t (16th triplet)
32t (32nd triplet)

SHIFT + ●

Metronome **M.Off** (Off)
M.Rec (record only)
M.Rc.P (record & play)

Toggle ● **and/or** STEP **to set input mode**

Sequencer

Manual pp32-46

Step input (mode A)

STEP

Press to add note (C_5) or remove note at this time position.
Press and hold to edit note. While holding,
press D-MOTION to cycle between settings

PORTA ON / PORTA TIME

Move between pages
1-16, 17-32,
33-48, 49-64

Play
sequence

160.0 TEMPO/VALUE

Tempo **

D-MOTION

n.XX	v.XX	G.XX	P.XX	o
Note pitch c°5 = C♯$_5$	Velocity 1-127	Gate (Duration) 1-100; 100 = tie with next	Probability 1-100	Sub-step division

Press and hold note, then press HOLD to tie to next note

e.g. oo_

The step is divided into three parts, with the first and second parts being played and the third part not played

Step edit (mode C)

● STEP

Press to select and play step
Press and hold to edit note as above

PORTA ON / PORTA TIME

Move between pages

St.XX TEMPO/VALUE

Select and
play step *

If step contains a chord:
* lowest note pitch is displayed, all pitches change by same amount
* largest velocity or gate is displayed, new value applies to all notes

Step edit while listening (mode E)

▶ ● STEP

Press to select step
Press and hold to edit note as above

PORTA ON / PORTA TIME

Move between pages

St.XX TEMPO/VALUE

Select step *

Note/chord input and edit (mode B)

●

Add/remove notes from this step.
Press and hold to edit performance data. While holding,
press D-MOTION to cycle between settings

D-MOTION

v.XX	G.XX
Velocity 1-127	Gate (Duration) 1-100; 100 = tie with next

Press and hold note, then press HOLD to tie to next note

STEP + 15 MENU

St.XX TEMPO/VALUE

Select and
play step *

copy	Copy current step
pste	Paste over current step
insr	Insert empty step at current
dupl	All steps copied after last step, doubling the sequence length

Real-time note recording (mode D)

▶ ●

Play to add notes in real time

SHIFT + OCT- OCT+

Octave
Down/Up

Rec TEMPO/VALUE

Unused **

Motion recording

"Motions" are parameter changes like LFO rate, Filter frequency etc
Up to 8 parameters plus pitch bend can be stored in one pattern; pitch-bend only from real-time recording (mode D).
In mode A, hold step pad 1-16 while turning required control knob. In mode B/C/E, turn knob while on selected step.

Other controls

SHIFT + 11 12 — CLEAR — NOTE MOTION

* When step number is displayed:
clear notes or motions in current step only
** When step number is not displayed:
clear all notes or motions in entire pattern

SHIFT + 3 SHUFFLE

-100 .. 100

SHIFT + PATTERN STEP LOOP

Step loop mode: during playback,
hold pads 1-16 to loop over only those steps

STEP + TEMPO/VALUE

Added to note probability for all notes with P < 100

Master
probability

© 2023 Brian Candler - Creative Commons BY 4.0