

# ADSBee 1090

Open Source Embedded ADS-B Receiver

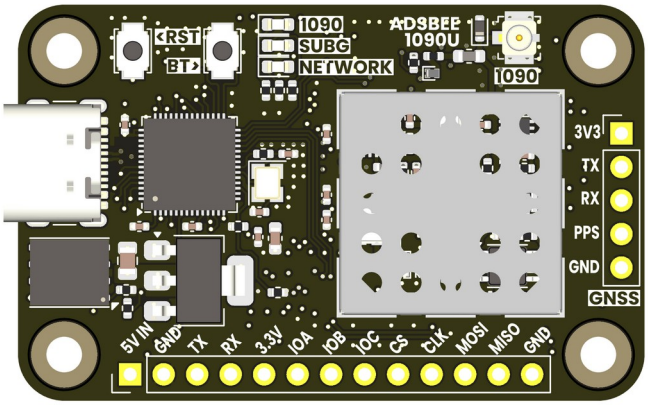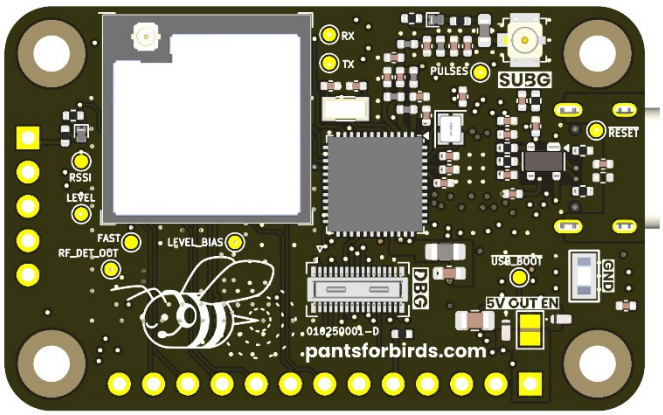


## Features

- 1090MHz Mode S and ADS-B packet decoding.
- Adjustable receive gain and trigger levels for customized tuning in diverse RF environments.
- Tunable sub-GHz transceiver for UAT / additional protocols.
- Multiple output formats over UART or USB: Raw Frames / ADSBee CSV / MAVLINK1 / MAVLINK2 / Mode S Beast / GDL90
- GNSS module input (UART + PPS) for MLAT or Remote ID applications.
- 2.4GHz 802.11 module for connecting directly to ADS-B databases via WiFi or broadcasting Remote ID beacon frames in UAS applications.
- Integrated M2.5 mounting holes.
- Optional PoE pant for power + data over Ethernet.
- Firmware updates over USB, Serial, WiFi, Ethernet.

## Applications

- Aircraft detection for robotics and embedded projects.
- Electronic Flight Bag ADS-B receiver.
- Standalone feeder device for online ADS-B databases. No external compute required, just add power and WiFi!

## Quick Specs

| | |
|---|---|
| Supply Voltage | 5V (via USB or 5V pin) |
| Supply Current | 120mA (WiFi disabled)<br>~400mA (WiFi enabled) |
| Sensitivity | Mode S: -90dBm to 0dBm<br>UAT (1090U): -90dBm to 0dBm<br>m1090 Mode S: about -70dBm (no LNA), -90dBm to 0dBm with an external LNA |
| Simultaneous Aircraft Tracks Supported | ≤200 |
| Connectors | 1090MHz RF In: U.FL / MHF1<br>Sub-GHz RF In/Out: U.FL / MHF1<br>802.11 RF Out: W.FL / MHF3<br>Power / Data: USB C<br>GPIO / UART: 0.1” Pin Headers |

## Open Source Hardware + Software

Github Repository: https://github.com/coolnamesalltaken/adsbee

All hardware schematics and source code files required to build ADSBee 1090 are available under a GNU GPL v3 license. This means that they can be freely incorporated into other open-source projects that utilize a compatible license. The hope is that by opening the design to contributions and feedback from a community of users, the functionality of the ADSBee 1090 will be enhanced over time.

Note that the GPL v3 license applies to design and source code files, and not devices. ADSBee 1090 units purchased from Pants for Birds may be used in commercial applications without any licensing restrictions.

For commercial licensing requests of ADSBee hardware or software design files, please contact john@pantsforbirds.com.

# Contents


Features....1

Applications....1

Quick Specs....1

Open Source Hardware + Software....1

Revision History....6

Safety Notice....6

1 Background....7

2 Communication Interfaces....8

2.1 Console Interface....8

2.2 COMMS_UART Interface....8

2.3 GNSS_UART Interface....8

3 Status Indicators....9

4 AT Commands....10

4.1 AT+ASTERIX_SAC_SIC....10

4.1.1 Set the ASTERIX Data Source Identifier....10

4.1.2 Query the ASTERIX Data Source Identifier....10

4.2 AT+BAUD_RATE....11

4.2.1 Set Baud Rate....11

4.2.2 Query Baud Rate....11

4.3 AT+BIAS_TEE_ENABLE....11

4.3.1 Turn the Bias Tees On or Off....11

4.3.2 Query the Status of the Bias Tee....11

4.4 AT+BOOT_USB_UF2....12

4.5 AT+CONFIG_HASH....13

4.6 AT+DEVICE_INFO....13

4.7 AT+ESP32_ENABLE....14

4.7.1 Turn the ESP32 On or Off....14

4.7.2 Query the Status of the ESP32....14

4.8 AT+ESP32_FLASH....14

4.9 AT+ETHERNET....14

4.9.1 Enable or Disable Ethernet....14
4.9.2 Query Ethernet Setting....15
4.10 AT+FEED....15
4.10.1 Configure a Feed....15
4.10.2 Query Configuration of All Feeds....16
4.10.3 Query Configuration of a Single Feed....16
4.11 AT+FEED_ENABLE....16
4.11.1 Enable or Disable All Feeds....16
4.11.2 Query the Feed Enable Setting....16
4.12 AT+FILTER_ALTITUDE_FT....17
4.12.1 Set the Altitude Filter....17
4.12.2 Query the Altitude Filter....17
4.13 AT+FILTER_DISTANCE_NM....18
4.13.1 Set the Distance Filter....18
4.13.2 Query the Distance Filter....18
4.14 AT+GNSS....18
4.14.1 Configure GNSS....18
4.14.2 Query GNSS Configuration....19
4.15 AT+GNSS_FIX....19
4.15.1 Unsolicited AT+GNSS_FIX Messages....19
4.15.2 Query GNSS Fix....19
4.16 AT+HELP....20
4.17 AT+HOSTNAME....20
4.17.1 Set the Device Hostname....20
4.17.2 Query the Device Hostname....20
4.18 AT+LED_BLINK....21
4.19 AT+LED_ENABLE....22
4.19.1 Enable or Disable the Status Indicators....22
4.19.2 Query the Status Indicator Enable Setting....22
4.20 AT+MAVLINK_ID....23
4.20.1 Set the MAVLINK System ID and Component ID....23
4.20.2 Query the MAVLINK System ID and Component ID....23
4.21 AT+LOG_LEVEL....23
4.22 AT+NTP_SERVER....24
4.22.1 Set the NTP Server....24
4.22.2 Query the NTP Server....24

4.23 AT+PROTOCOL_OUT....24
4.23.1 Set the Reporting Protocol for a Serial Interface....24
4.23.2 Query the Reporting Protocol for All Serial Interfaces....25
4.24 AT+REBOOT....25
4.25 AT+RX_ENABLE....26
4.25.1 Enable or Disable the Receiver(s)....26
4.25.2 Check Whether the Receiver(s) are Currently Enabled....26
4.26 AT+RX_POSITION....27
4.26.1 Query Receiver Position....27
4.26.2 Set Receiver Position....28
4.27 AT+SETTINGS....29
4.27.1 Query Current Settings....29
4.27.2 Dump Settings in AT Format....30
4.27.3 Load Settings from EEPROM....30
4.27.4 Save Settings to EEPROM....30
4.27.5 Reset Settings to Factory Default....30
4.28 AT+SUBG_ENABLE....31
4.28.1 Set Sub-GHz Receiver Enable Status and Line Drive Type....31
4.28.2 Query Sub-GHz Receiver Enable Status and Line Drive Type....31
4.29 AT+TEST....31
4.30 AT+TL_READ....32
4.31 AT+TL_OFFSET....32
4.31.1 Set Trigger Level....32
4.31.2 Query Trigger Level....32
4.32 AT+UPTIME....34
4.33 AT+WATCHDOG....34
4.33.1 Configure the Watchdog Timer....34
4.33.2 Query the Watchdog Timer....34
4.33.3 Test the Watchdog Timer....34
4.34 AT+WIFI_AP....35
4.34.1 Configure the WiFi Access Point....35
4.34.2 Query the WiFi Access Point Configuration....35
4.35 AT+WIFI_STA....36
4.35.1 Configure the WiFi Station....36
4.35.2 Query the WiFi Station Configuration....36
5 Reporting Protocols....37

5.1 ASTERIX....38
5.1.1 ASTERIX: Data Blocks....38
5.1.2 ASTERIX: Time Source....38
5.2 CSBee....39
5.2.1 CSBee Protocol Version History....39
5.2.2 Mode S Aircraft Message....40
5.2.3 UAT Aircraft Message....47
5.2.4 Statistics Message....51
5.3 GDL90....52
5.4 MAVLINK....53
5.4.1 MAVLINK_HEARTBEAT （ Message ID 0 ） Packet Definition....53
5.4.2 MAVLINK ADSB_VEHICLE (Message ID 246) Packet Definition....53
5.4.3 MAVLINK_REQUEST_DATA_STREAM (Message ID 66) Packet Definition....54
5.4.4 MAVLINK MESSAGE_INTERVAL (Message ID 244) Packet Definition....54
5.5 Mode S Beast....55
5.5.1 Beast: Mode S Frames....55
5.5.2 Beast: UAT Frames....55
5.6 Raw Packets....56
5.6.1 Raw Mode S Frames....56
5.6.2 Raw UAT ADSB Frames....56
5.6.3 Raw UAT Uplink Frames....57
5.7 Aircraft JSON WebSocket....58
5.7.1 Message Format....58
5.7.2 JSON Fields....59

# Revision History

20250719

- Initial release with version control.

20250821

- Update CSBee protocol with new bit flag positions, new field for separate baro/GNSS vertical rates.
- Change AT+TL_SET AT command to AT+TL_OFFSET AT command.
- Change AT+PROTOCOL AT command to separate AT+PROTOCOL_IN and AT+PROTOCOL_OUT AT commands.

20260502

- Update CSBee protocol to version 3.
- Add new AT commands:
  - AT+BOOT_USB_UF2
  - AT+MAVLINK_ID
  - AT+RX_POSITION
  - AT+UPTIME

20261023

- Added new AT commands:
  - AT+GNSS
  - AT+GNSS_FIX
  - AT+LED_BLINK
  - AT+LED_ENABLE
  - AT+FEED_ENABLE
  - AT+CONFIG_HASH
  - AT+FILTER_DISTANCE_NM
  - AT+FILTER_ALTITUDE_FT
- Added the Status Indicators section describing the 1090, SUBG, and NETWORK LEDs.
- Corrected the AT Commands introduction: command replies are not prefixed with “+”.
- Added r_dst and r_dir (distance and bearing from the receiver) to the Aircraft JSON WebSocket fields.
- Sensitivity is -90dBm to 0dBm for Mode S on all models and for UAT on the 1090U. The m1090 has no first-stage LNA: about -70dBm, or -90dBm to 0dBm with an external LNA.
- Added the ASTERIX reporting protocol and the AT+ASTERIX_SAC_SIC and AT+NTP_SERVER commands.
- Fixed AT+TL_OFFSET=LEARN: it compares each candidate offset side by side with the best one, and AT+TL_OFFSET? shows its progress. Corrected the default trigger level offset (600 mV) and its range (0-2000 mV).
- Corrected the Aircraft JSON type and hex fields for DF18 (TIS-B, ADS-R) and non-ICAO targets.
- Aircraft JSON on_ground, ASTERIX ground bit and GDL90 airborne flag: ADS-B position and velocity messages decide; Mode S replies only when no ADS-B one has arrived for 30 s, and never on the ground above 18,000 ft. A new aircraft is not reported on the ground before a message gives air/ground.

# Safety Notice

We work hard to make ADSBee products performant and reliable, but not all aircraft broadcast their location, messages can be lost or corrupted, and hardware or software can fail. ADSBee cannot guarantee detection or accurate reporting of all traffic. Users are responsible for evaluating its suitability for their application and for the safe operation of any system






it is integrated into. See our terms of sale (pantsforbirds.com/terms-of-sale) and license (github.com/CoolNamesAllTaken/adsbee) for full terms.

# 1 Background

ADSBee 1090 was created as an attempt to build a low-cost ADS-B receiver without the use of an FPGA (found in most embedded ADS-B receivers on the market) and without the need for external compute (a requirement of most SDR-based ADS-B receivers). ADSBee 1090 accomplishes this through the use of a low-cost dual core microcontroller (RP2040) with flexible IO peripherals (PIO) that run a set of custom-written programs for preamble detection and packet decoding. By dedicating the RP2040's PIO peripherals to the tasks required to find and decode ADS-B packets, ADSBee 1090 frees up its remaining cores to perform the logical functions required to validate checksums on decoded packets and decipher aircraft information (position, altitude, callsign, etc).

The ADSBee 1090 reports decoded aircraft information over UART and USB interfaces in a variety of protocols, and can utilize its attached ESP32 S3 module to host WiFi networks for data streaming to other devices, or connect to existing WiFi networks in order to upload data to the internet or other devices on the network. Ethernet connectivity (and 802.3af Power over Ethernet) is possible using an external Ethernet pant.

Dual band versions of the ADSBee 1090, such as the ADSBee 1090U, includes a TI CC1312 sub-GHz MCU for decoding additional radio protocols like UAT. This datasheet applies to all devices in the ADSBee family that run the ADSBee 1090 firmware (e.g. ADSBee 1090, ADSBee 1090U, ADSBee m1090, ADSBee GS3M PoE).

# 2 Communication Interfaces

## 2.1 Console Interface

The CONSOLE interface (USB-C connector) on the ADSBee 1090 can be used to supply the device with power, configure the device's internal parameters via AT commands, and receive data from the device.

No baud rate configuration is necessary for the CONSOLE interface. Note that AT commands must be suffixed with CR+LF ("\r\n") in order to be processed by the AT command parser.

## 2.2 COMMS_UART Interface

The COMMS_UART interface is used for data output and can support several different protocols. Data can be streamed out of the CONSOLE and COMMS_UART interfaces simultaneously. The baud rate of the COMMS_UART interface can be adjusted via AT commands.

**COMMS_UART Parameters**

| Parameter | Value |
|---|---|
| Baud Rate | 115200 baud (default) |
| Data Bits | 8 |
| Stop Bits | 0 (N) |
| Parity Bits | 1 |
| Logic Level | 3.3V |

## 2.3 GNSS_UART Interface

The ADSBee 1090's GNSS module connector includes a UART interface which can be used to receive NMEA sentences from a GNSS module. The baud rate of the GNSS_UART interface can be adjusted via AT commands.

**GNSS_UART Parameters**

| Parameter | Value |
|---|---|
| Baud Rate | 9600 baud (default) |
| Data Bits | 8 |
| Stop Bits | 0 (N) |
| Parity Bits | 1 |
| Logic Level | 3.3V |

# 3 Status Indicators

The ADSBee 1090 has three status indicator LEDs on its top side. Each LED is driven by a different processor on the board and reports activity for that processor only.

| Indicator | Description | Normal Behavior |
|---|---|---|
| 1090 | Driven by the RP2040. Indicates 1090 MHz receive activity. | Flashes briefly each time a 1090 MHz packet is accepted into the aircraft dictionary.<br>At startup, blinks once if the device is running from flash partition 0, or twice otherwise. |
| SUBG | Driven by the CC1312 sub-GHz receiver. Indicates UAT receive activity. Present only on dual band versions of the ADSBee 1090, such as the ADSBee 1090U. | Flashes briefly each time a UAT packet is decoded. |
| NETWORK | Driven by the ESP32. Indicates network and coprocessor activity. | Flashes briefly on each SPI transaction between the ESP32 and the RP2040. |

All three indicators can be turned off with AT+LED_ENABLE=0. AT+LED_BLINK forces any indicator on for a fixed duration and ignores the AT+LED_ENABLE setting entirely, which makes it useful for verifying indicators on a production test fixture.

In firmware builds that enable the watchdog reboot warning, the 1090 indicator is also held on solid for approximately five seconds after a reboot caused by the watchdog.

# 4 AT Commands

AT Commands are used to configure the ADSBee 1090 receiver's internal parameters via the CONSOLE interface. AT commands can be used to set values (with the '=' operator, e.g. "AT+BAUD_RATE=COMMS_UART,115200") or query values (with the '?' operator, e.g. "AT+BAUD_RATE?").

AT commands and parameters must be all-caps. Whitespace is not ignored and should only be used intentionally (e.g. as part of a Wi-Fi network SSID which contains spaces). Arguments are separated by a single comma and no spaces.

All AT command arguments are optional. Arguments will be ignored if left as blank. For instance, to set the second parameter of AT+TL_SET to 3000 without changing the value of the first parameter, the command "AT+TL_SET=,3000" can be sent. Likewise, to change the first parameter to 2000 without changing the value of the second, the command "AT+TL_SET=2000," can be sent.

Commands from the user to the ADSBee 1090 are prefixed with "AT+" (e.g. "AT+BAUD_RATE..."). Replies may begin with the relevant command name, without the "AT+" prefix (e.g. "BAUD_RATE=...") or nothing (e.g. "OK"). Replies to AT command queries may include text enclosed by parentheses (e.g. "BAUD_RATE=115200(COMMS),9600(GNSS)". These text blobs are annotations to improve human readability of the reply.

**IMPORTANT NOTE**

No settings will persist after shutdown unless `AT+SETTINGS=SAVE` is executed to write new settings values to non-volatile storage.

## 4.1 AT+ASTERIX_SAC_SIC

### 4.1.1 Set the ASTERIX Data Source Identifier

```
AT+ASTERIX_SAC_SIC=<sac>,<sic>
OK
```

Sets the System Area Code (SAC) and System Identification Code (SIC) carried by every ASTERIX record (I021/010 and I023/010). Use the codes the ASTERIX consumer assigned to this receiver: SACs are allocated per country by EUROCONTROL, and each receiver feeding the same consumer needs its own SAC/SIC pair. Both arguments are required.

| Parameter | Description | Acceptable Values |
|---|---|---|
| sac | System Area Code. | 0-255 (default 0) |
| sic | System Identification Code. | 0-255 (default 0) |

### 4.1.2 Query the ASTERIX Data Source Identifier

```
AT+ASTERIX_SAC_SIC?
ASTERIX_SAC_SIC=<sac>,<sic>
```

This setting does not persist across a power cycle unless AT+SETTINGS=SAVE is run to write it to non-volatile storage.

## 4.2 AT+BAUD_RATE

### 4.2.1 Set Baud Rate

```
AT+BAUD_RATE=<iface>,<baud_rate>
```

Set the baud rate for a particular serial interface. Note that the USB C port (CONSOLE interface) is a virtual COM port and does not have a baud rate that can be changed.

| Parameter | Description | Values |
|---|---|---|
| iface | Serial interface to set the baud rate for. | COMMS_UART, GNSS |
| baud_rate | Baud rate, in characters per second. | 9600-115200 |

### 4.2.2 Query Baud Rate

```
AT+BAUD_RATE?
+BAUD_RATE=<comms_uart_baud_rate>(COMMS_UART),<gnss_uart_baud_rate>(GNSS_UART)
```

Queries the baud rate for the COMMS_UART and GNSS_UART interfaces. Note that the baud rates returned by this query are the actual system baud rates, which should be close to the baud rates that were requested with AT+BAUDRATE but may be slightly different due to the particulars of how baud rates are implemented inside the RP2040.

| Parameter | Description | Values |
|---|---|---|
| comms_uart_baud_rate | Baud rate on the COMMS_UART interface. | 9600-115200 |
| gnss_uart_baud_rate | Baud rate on the GNSS_UART interface. | 9600-115200 |

## 4.3 AT+BIAS_TEE_ENABLE

### 4.3.1 Turn the Bias Tees On or Off

```
AT+BIAS_TEE_ENABLE=<1090_bt_enabled>,<subg_bt_enabled>
```

Enable or disable the bias tee to enable use of an external LNA.

| Parameter | Description | Acceptable Values |
|---|---|---|
| 1090_bt_enabled | Whether the 1090MHz bias tee is enabled (3.3VDC supplied to the 1090 RF connector) or disabled (no DC voltage supplied to the 1090 RF connector). | 0 – Bias tee is disabled.<br>1 – Bias tee is enabled. |
| subg_bt_enabled | Whether the Sub-GHz radio bias tee is enabled (3.3VDC supplied to the SubG RF connector) or disabled (no DC voltage supplied to the SubG RF connector). | 0 – Bias tee is disabled.<br>1 – Bias tee is enabled. |

### 4.3.2 Query the Status of the Bias Tee

```
AT+BIAS_TEE_ENABLE?
+BIAS_TEE_ENABLE=<1090_bt_enabled>,<subg_bt_enabled>
```

Queries the status of the bias tee. See table in 4.2.1 for values and their meanings.

## 4.4 AT+BOOT_USB_UF2

Reboots the ADSBee into UF2 Bootloader mode. ONLY use this command if you have USB access to your ADSBee! There is no way to recover from the factory UF2 bootloader other than resetting the device or flashing a firmware file to it over USB.

```
AT+BOOT_USB_UF2=<reboot_passcode>
```

| Parameter | Description | Acceptable Values |
|---|---|---|
| reboot_passcode | A passcode that makes it harder to run this command by accident. | “1DEADBEE” |

## 4.5 AT+CONFIG_HASH

Prints hashes of the settings, the CC1312 CCFG (customer configuration) and the firmware images, so a receiver can be compared with a reference receiver in one line. Two receivers with the same firmware and the same settings print the same values. An example query and reply is shown below.

```
> AT+CONFIG_HASH?
CONFIG_HASH=0x3D7A91C4
SETTINGS_FLEET=0x9140FC1E (settings version 19, 1344 Bytes)
SETTINGS_FULL=0x2F6B0D55
CCFG_CC1312=0x4BB06FBD
FIRMWARE=0x4D476C34
FIRMWARE_RP2040=0x7DC53693 (UF2 image, partition 0, 2950400 Bytes)
FIRMWARE_ESP32=0xC90EA4DB
FIRMWARE_CC1312=0x6F59BCF1
```

| Line | Description |
|---|---|
| CONFIG_HASH | Hash of SETTINGS_FLEET, CCFG_CC1312 and FIRMWARE. Compare this first. |
| SETTINGS_FLEET | All settings except the hostname, WiFi access point SSID and channel, feed receiver IDs, Remote ID UAS ID and receiver position values. |
| SETTINGS_FULL | All settings. |
| CCFG_CC1312 | The CCFG of the CC1312, read from its flash at boot. |
| FIRMWARE | Hash of the three FIRMWARE_<processor> lines. |
| FIRMWARE_RP2040 | The application image in the running flash partition. The .uf2 image and the .ota images for partition 0 and partition 1 each have their own value. |
| FIRMWARE_ESP32 | The first 4 bytes of the SHA-256 that the ESP32 build stores in its application image. |
| FIRMWARE_CC1312 | The application image in the CC1312's flash. |

A line reads UNKNOWN when a processor is off or did not answer. Releases list the firmware and CCFG values in adsbee_1090-<version>.hashes.txt.

## 4.6 AT+DEVICE_INFO

Queries the device information of the ADSBee. An example query and reply is shown below.

```
> AT+DEVICE_INFO?
Part Code: 010240002F-20240907-000001
RP2040 Firmware Version: 0.6.2
RP2040 Firmware Build: Release
OTA Key 0:
cf737c4fce892fab44c6ec0d5d0f66dccf06c5630ac5b531f4067599df014d5ef213bb73205a9ce37
8318f259e3d01e3b99c089a75ac0735b204256b9371fbce
OTA Key 1:
1701a736dc40c837f318c9e7ae82557a39fe07588d3745602bb9269b13843b87ca7962daecc9897c6
dfb0ac4ec77997e9cc34cd356e415fc46eb4ae3dd42b717
ESP32 Firmware Version: 0.6.2
ESP32 Base MAC Address: 64:E8:33:5D:0B:C4
ESP32 WiFi Station MAC Address: 64:E8:33:5D:0B:C4
ESP32 WiFi AP MAC Address: 64:E8:33:5D:0B:C5
ESP32 Bluetooth MAC Address: 64:E8:33:5D:0B:C6
ESP32 Ethernet MAC Address: 64:E8:33:5D:0B:C7
```

The RP2040 Firmware Build line reads Debug or Release (firmware 0.9.1-rc7 and later). Published releases are Release builds; build.sh -d in firmware/adsbee_1090 makes a Debug build.

## 4.7 AT+ESP32_ENABLE

### 4.7.1 Turn the ESP32 On or Off

```
AT+ESP32_ENABLE=<enabled>
```

Turns the ESP32 on or off using its enable line. When the ESP32 is turned off, the ADSBee 1090 will draw less power, but the WiFi and network capabilities will be unavailable. This operational mode is useful for conserving energy in applications where the ADSBee is only being communicated with via its serial interfaces.

| Parameter | Description | Acceptable Values |
|---|---|---|
| enabled | Whether the ESP32 is turned on. | 0 – ESP32 is turned on.<br>1 – ESP32 is turned off. |

### 4.7.2 Query the Status of the ESP32

```
AT+ESP32_ENABLE?
ESP32_ENABLE=<enabled>
```

Queries whether the ESP32 is turned on or off. See table in 4.7.1 for the values and their meanings.

## 4.8 AT+ESP32_FLASH

```
AT+ESP32_FLASH
```

Flashes the ESP32 with the firmware image stored on the RP2040. This should never be needed, since the RP2040 does a firmware version check of the ESP32 on startup and automatically reflashes he firmware if it is out of date. The AT+ESP32_FLASH command is only used in weird debugging scenarios where the version number of the firmware on the ESP32 matches the version of the firmware stored on the RP2040, but the firmware stored on the RP2040 is different and needs to be flashed onto the ESP32.

## 4.9 AT+ETHERNET

### 4.9.1 Enable or Disable Ethernet

Enables or disables Ethernet functionality on the ESP32. Must be connected to a W5500 Ethernet IC via SPI.

```
AT+ETHERNET=<enabled>
```

| Parameter | Description | Acceptable Values |
|---|---|---|
| enabled | Whether Ethernet connectivity is enabled via the ESP32 and a connected W5500 Ethernet IC. | 0 – Ethernet is enabled.<br>1 – Ethernet is disabled. |

### 4.9.2 Query Ethernet Setting

```
AT+ETHERNET?
ETHERNET=1
```

## 4.10 AT+FEED

### 4.10.1 Configure a Feed

```
AT+FEED=<index>,<uri>,<port>,<active>,<protocol>
```

Example command for configuring feed 0 to send data to airplanes.live, which accepts Mode S Beast protocol on port 30004 at the static IP 78.46.234.18:

```
AT+FEED=0,78.46.234.18,30004,1,BEAST
```

| Parameter | Description | Acceptable Values |
|---|---|---|
| index | Which feed slot to configure. | 0-5 |
| uri | Static IP address or hostname of the feed destination. If the field is given as a hostname, a DNS lookup will be performed in order to convert the hostname to an IP address. | Public IP address, e.g. 78.46.234.18<br>Hostname, e.g. feed.whereplane.xyz<br>Maximum length 64 characters. |
| port | Port number to feed to. | 0-65535 |
| active | Whether the feed should be activated. This can be used to temporarily disable a feed while still keeping its configuration information intact. | 0 – Feed is active.<br>1 – Feed is disabled. |
| protocol | Which protocol to use when feeding. | BEAST – Send validated packets in Mode S Beast format.<br>BEAST_RAW – Send both validated and invalid (bad checksum) packets in Mode S Beast format.<br>ASTERIX – Send EUROCONTROL ASTERIX CAT021 and CAT023 data blocks. |

### 4.10.2 Query Configuration of All Feeds

```
AT+FEED?
FEED=0(INDEX),192.168.1.103(URI),30004(PORT),1(ACTIVE),BEAST(PROTOCOL),bee00038172d18c(RECEIVER_ID)
FEED=1(INDEX),(URI),0(PORT),0(ACTIVE),NONE(PROTOCOL),bee00038172d18c(RECEIVER_ID)
FEED=2(INDEX),(URI),0(PORT),0(ACTIVE),NONE(PROTOCOL),bee00038172d18c(RECEIVER_ID)
FEED=3(INDEX),(URI),0(PORT),0(ACTIVE),NONE(PROTOCOL),bee00038172d18c(RECEIVER_ID)
FEED=4(INDEX),78.46.234.18(URI),30004(PORT),1(ACTIVE),BEAST(PROTOCOL),bee00038172d18c(RECEIVER_ID)
FEED=5(INDEX),feed.whereplane.xyz(URI),30004(PORT),0(ACTIVE),BEAST(PROTOCOL),bee00038172d18c(RECEIVER_ID)
```

### 4.10.3 Query Configuration of a Single Feed

```
AT+FEED?<index>
```

Example query for configuration of feed 0 only:

```
AT+FEED?0
FEED=0(INDEX),192.168.1.103(URI),30004(PORT),1(ACTIVE),BEAST(PROTOCOL),bee00038172d18c(RECEIVER_ID)
```

## 4.11 AT+FEED_ENABLE

### 4.11.1 Enable or Disable All Feeds

```
AT+FEED_ENABLE=<enabled>
OK
```

Master switch for all outbound network feeds configured with AT+FEED. When disabled, no feed connections are opened and any open feed connections are closed, regardless of whether individual feeds are marked as active. The per-feed active flags set with AT+FEED are not modified, so re-enabling feeds with AT+FEED_ENABLE=1 resumes exactly the feeds that were previously active. The setting is synchronized to the ESP32 coprocessor. Feeds are enabled by default.

| Parameter | Description | Acceptable Values |
|---|---|---|
| enabled | Whether outbound network feeds are enabled. | 0 – All feeds are disabled.<br>1 – Feeds marked as active with AT+FEED are enabled (default). |

### 4.11.2 Query the Feed Enable Setting

```
AT+FEED_ENABLE?
FEED_ENABLE=<enabled>
```

Queries whether outbound network feeds are enabled. This setting does not persist across a power cycle unless AT+SETTINGS=SAVE is run to write it to non-volatile storage.

## 4.12 AT+FILTER_ALTITUDE_FT

Leaves aircraft outside a set altitude band out of aircraft reports: the web interface's aircraft list and map, the Aircraft JSON WebSocket, and the aircraft reporting protocols (CSBee, MAVLink, GDL90, Aircraft JSON) on serial outputs and network feeds. Raw packets are never filtered: Raw, Beast and MLAT outputs, the network feeds that carry them and the ESP32's packet stream still carry every packet. The aircraft's altitude is its barometric altitude, or its GNSS altitude when no barometric altitude is known. Aircraft with no known altitude are always kept. NEAR_RX compares against the receiver altitude from AT+RX_POSITION (the GNSS altitude for a GNSS fix, otherwise the barometric altitude unless it is 0) and filters nothing while no receiver position is available. With AT+FILTER_DISTANCE_NM also on, an aircraft is reported only if it passes both filters. The filter is off by default. Changes take effect immediately and persist across reboots after AT+SETTINGS=SAVE.

### 4.12.1 Set the Altitude Filter

```
AT+FILTER_ALTITUDE_FT=<mode>,<a_ft>,<b_ft>
OK
AT+FILTER_ALTITUDE_FT=BETWEEN,1000,18000
OK
```

| Parameter | Description | Acceptable Values |
|---|---|---|
| mode | OFF: no filter. ABOVE: keep aircraft at or above a_ft. BELOW: keep aircraft at or below a_ft. BETWEEN: keep aircraft from a_ft to b_ft. NEAR_RX: keep aircraft within a_ft above or below the receiver. Bounds are inclusive. Not case sensitive. Empty keeps the current value. | OFF, ABOVE, BELOW, BETWEEN, NEAR_RX<br><br>Default: OFF |
| a_ft | Altitude in feet for ABOVE, BELOW and BETWEEN, or the band half-width in feet for NEAR_RX (must be greater than 0). Empty keeps the current value. | -2000-100000<br><br>Default: 0 |
| b_ft | Upper altitude in feet for BETWEEN (at least a_ft); kept but unused in the other modes. Empty keeps the current value. | -2000-100000<br><br>Default: 10000 |

### 4.12.2 Query the Altitude Filter

```
AT+FILTER_ALTITUDE_FT?
FILTER_ALTITUDE_FT=OFF,0,10000
```

## 4.13 AT+FILTER_DISTANCE_NM

Leaves aircraft that are farther than a set distance from the receiver position out of aircraft reports: the web interface's aircraft list and map, the Aircraft JSON WebSocket, and the aircraft reporting protocols (CSBee, MAVLink, GDL90, Aircraft JSON) on serial outputs and network feeds. Raw packets are never filtered: Raw, Beast and MLAT outputs, the network feeds that carry them and the ESP32's packet stream still carry every packet, including those from far aircraft. Aircraft at an unknown distance (no position decoded yet, or no receiver position; see AT+RX_POSITION) are always kept. The filter is off by default. Changes take effect immediately and persist across reboots after AT+SETTINGS=SAVE.

### 4.13.1 Set the Distance Filter

```
AT+FILTER_DISTANCE_NM=<enabled>,<distance_nm>
OK
AT+FILTER_DISTANCE_NM=1,50
OK
```

| Parameter | Description | Acceptable Values |
|---|---|---|
| enabled | 1 turns the filter on, 0 turns it off. Empty keeps the current value. | 0, 1<br><br>Default: 0 (filter off) |
| distance_nm | Aircraft known to be farther than this many nautical miles from the receiver position are left out of aircraft reports. Decimal, 0.1 nm resolution (finer values are rounded). Empty keeps the current value. | 0.1-10000.0<br><br>Default: 100.0 |

### 4.13.2 Query the Distance Filter

```
AT+FILTER_DISTANCE_NM?
FILTER_DISTANCE_NM=0,100.0
```

## 4.14 AT+GNSS

### 4.14.1 Configure GNSS

```
AT+GNSS=<enabled>,[type],[notify]
```

| Parameter | Description | Acceptable Values |
|---|---|---|
| enabled | Whether the GNSS system should be activated. | 0-1 |
| type | Optionally specifies the style of messages that are parsed by the GNSS system.<br><br>**NONE** – default value, will disable the GNSS system<br>**GENERIC** – parses NEMA 0138 style messages<br>**UBX_MIA** – parses uBlox MIA style messages, including manufacturer specific messages. | NONE, GENERIC, UBX_MIA |
| notify | Optionally specifies whether the GNSS system should send an | 0-1 |

| | | |
|---|---|---|
| | unsolicited **AT+GNSS_FIX** message when the fix status changes state from invalid to valid, or valid to invalid. | |

### 4.14.2 Query GNSS Configuration

```
AT+GNSS?
GNSS=1,GENERIC,1
```

## 4.15 AT+GNSS_FIX

### 4.15.1 Unsolicited AT+GNSS_FIX Messages

When enabled, the ADSBee sends unsolicited AT+GNSS_FIX messages on the COMMS_UART and web console. These messages are emitted when the state of the GNSS_FIX changes from valid to invalid, or invalid to valid. The maximum transmission rate of these messages is once per second.

### 4.15.2 Query GNSS Fix

```
AT+GNSS_FIX?
GNSS_FIX=<valid>,<lat>,<lon>,<alt_ft>,<heading>,<speed_kts>,<sats>,<UTC>,<pps_count>
GNSS_FIX=1,39.752150,-122.205914,719,324.6,0,7,01:40:01,1530
```

| Parameter | Description | Expected Values |
|---|---|---|
| valid | Whether or not the GNSS system has a valid position fix | 0-1 |
| lat | GNSS position latitude | -90.000 to +90.000 degrees |
| lon | GNSS position longitude | -180.000 to +180.000 degrees |
| alt_ft | GNSS altitude | 0-50,000 feet |
| heading | GNSS track heading | 0.0-360.0 degrees |
| speed_kts | GNSS track speed | 0-999 knots |
| sats | GNSS satellites in view | 0-128 |
| UTC | Current UTC time in HH:MM:SS | 00:00:00-23:59:59 |
| pps_count | Count of pulse-per-second pulses counted by adsbee from the external GNSS module | 0-4,294,967,295 |

## 4.16 AT+HELP

```
AT+HELP
AT Command Help Menu:
BAUDRATE:
        AT+BAUDRATE=<iface>,<baudrate>
        Set the baud rate of a serial interface.
        AT_BAUDRATE?
        Query the baud rate of all serial interfaces.
BIAS_TEE_ENABLE:
        AT+BIAS_TEE_ENABLE=<enabled>
        Enable or disable the bias tee.
        BIAS_TEE_ENABLE?
        Query the status of the bias tee.
...
```

Prints the available AT commands as well as how to use them. The list of commands in the preview above is abridged.

## 4.17 AT+HOSTNAME

### 4.17.1 Set the Device Hostname

```
AT+HOSTNAME=<hostname>
```

Sets the device hostname, which can make things easier when configuring a local network. Hostname is also used for mDNS, allowing you to visit the device's webpage at <hostname>.local.

### 4.17.2 Query the Device Hostname

```
AT+HOSTNAME?
HOSTNAME=ADSBee1090-0240907000001
```

## 4.18 AT+LED_BLINK

```
AT+LED_BLINK=<duration_ms>,<led>[,<led>...]
OK
```

Forces one or more status indicator LEDs solid on for duration_ms milliseconds, then turns them off again. The command is non-blocking and returns immediately. Up to three led arguments may be supplied; repeating the same led has no additional effect. This command ignores the AT+LED_ENABLE setting and lights the requested indicators even when the LEDs are disabled, which makes it useful for test fixtures and production test. See section 3 for a description of each indicator.

| Parameter | Description | Acceptable Values |
|---|---|---|
| duration_ms | Number of milliseconds that the requested indicators are held on. | 1 – 60000 |
| led | Indicator to light. May be repeated up to three times to light more than one indicator. | 1090 – The 1090 MHz activity indicator.<br>SUBG – The sub-GHz (UAT) activity indicator.<br>NETWORK – The network activity indicator.<br>ALL – All three indicators. |

All requested indicators must accept the request for the command to succeed. If a target coprocessor is disabled or unreachable, the command replies with an error that names the indicators that failed; indicators that already started blinking are not turned back off.

```
ERROR Duration must be 1-60000 ms.
ERROR Invalid LED 'X'. Must be 1090, SUBG, NETWORK, or ALL.
ERROR Failed to blink: SUBG(disabled).
```

A blink request does not shorten a longer blink that is already in progress on the same indicator.

## 4.19 AT+LED_ENABLE

### 4.19.1 Enable or Disable the Status Indicators

```
AT+LED_ENABLE=<enabled>
OK
```

Enables or disables the hardware status indicator LEDs. The setting applies to all three indicators and is synchronized to the ESP32 and CC1312 coprocessors. Disabling the indicators turns the 1090 indicator off immediately rather than waiting for the current flash to expire. Note that AT+LED_BLINK overrides this setting.

| Parameter | Description | Acceptable Values |
|---|---|---|
| enabled | Whether the status indicator LEDs are enabled. | 0 – Status indicators are disabled.<br>1 – Status indicators are enabled. |

### 4.19.2 Query the Status Indicator Enable Setting

```
AT+LED_ENABLE?
LED_ENABLE=<enabled>
```

Queries whether the status indicator LEDs are enabled. This setting does not persist across a power cycle unless AT+SETTINGS=SAVE is run to write it to non-volatile storage.

## 4.20 AT+MAVLINK_ID

MAVLINK components have a system and component ID. For more information about system and component IDs, visit: https://mavlink.io/en/services/mavlink_id_assignment.html.

### 4.20.1 Set the MAVLINK System ID and Component ID

```
AT+MAVLINK_ID=<system_id>,<component_id>
OK
```

| Parameter | Description | Acceptable Values |
|---|---|---|
| system_id | Unique identifier for the MAVLINK system (e.g. the aircraft). All components in the system should have the same system_id. | 1-255 |
| component_id | Unique identifier for a component within the MAVLINK system (e.g. the ADSBee). All components in the system should have a unique component_id. | 1-255<br><br>Default: 156 (MAV_COMP_ID_ADSB as defined here: https://mavlink.io/en/messages/common.html#MAV_COMPONENT) |

### 4.20.2 Query the MAVLINK System ID and Component ID

```
AT+MAVLINK_ID?
System ID: 1
Component ID: 156
```

## 4.21 AT+LOG_LEVEL

```
AT+LOG_LEVEL=<log_level>
```

| Parameter | Description | Acceptable Values |
|---|---|---|
| log_level | Log verbosity level for the console. Anything being printed with a lower verbosity than the specified level will be suppressed. A verbosity level of AT+LOG_LEVEL=WARNINGS is recommended.<br><br>Terminal prints are color coded on the Serial CLI (but not on the Web CLI). Errors are printed in red, warnings are printed in yellow, and other prints have no color coding. | INFO – Informational logs. Details every packet received by the ADSBee and whether it passed checksum. Also prints all warnings and errors.<br><br>WARNINGS – Warning logs. Prints out every time something unexpected happens. Warnings include recoverable errors and unexpected values encountered within ADS-B packets being decoded. Also prints all errors.<br><br>ERRORS – Error logs. Prints every time there is a severe error, such as packets being lost in communication between the RP2040 and ESP32, a peripheral failing to communicate properly, or fatal errors in code.<br><br>SILENT – No logs. Only AT command replies and console protocols will be printed. Use this setting to avoid having log messages injected into the console text stream if it is |

| | | |
|---|---|---|
| | | being used to report a protocol to another device. |

## 4.22 AT+NTP_SERVER

### 4.22.1 Set the NTP Server

```
AT+NTP_SERVER=<host>
OK
```

Sets the Network Time Protocol server that the ESP32 takes UTC from for ASTERIX times when no GNSS receiver has a valid time. The ESP32 polls it once an hour while the CONSOLE, the COMMS_UART or an active feed uses ASTERIX, over the WiFi station or Ethernet connection.

| Parameter | Description | Acceptable Values |
|---|---|---|
| host | Hostname or IP address of the NTP server. | Up to 63 characters: letters, digits, ".", "-" and ":".<br>pool.ntp.org (default). |

### 4.22.2 Query the NTP Server

```
AT+NTP_SERVER?
NTP_SERVER=pool.ntp.org
```

## 4.23 AT+PROTOCOL_OUT

### 4.23.1 Set the Reporting Protocol for a Serial Interface

```
AT+PROTOCOL_OUT=<iface>,<protocol>
```

| Parameter | Description | Values |
|---|---|---|
| iface | Serial interface to set the baudrate for. | CONSOLE, COMMS_UART |
| protocol | Reporting protocol for the specified serial interface | NONE – No data reported.<br>RAW – Raw plain text reporting protocol.<br>BEAST – Mode S Beast binary reporting protocol.<br>CSBEE – CSBEE plain text reporting protocol.<br>MAVLINK1 – MAVLINK 1 binary reporting protocol.<br>MAVLINK2 – MAVLINK 2 binary reporting protocol.<br>GDL90 – Garmin GDL90 binary reporting protocol.<br>ASTERIX – EUROCONTROL ASTERIX CAT021 and CAT023 binary reporting protocol. |

### 4.23.2 Query the Reporting Protocol for All Serial Interfaces

```
AT+PROTOCOL_OUT?
PROTOCOL_OUT=CONSOLE,<console_protocol>
PROTOCOL_OUT=COMMS_UART,<comms_uart_protocol>
```

Queries the reporting protocol set for each of the serial interfaces. See the table in 4.23.1 for protocol definitions.

## 4.24 AT+REBOOT

```
AT+REBOOT
```

Reboots the ADSBee 1090 immediately.

## 4.25 AT+RX_ENABLE

### 4.25.1 Enable or Disable the Receiver(s)

```
AT+RX_ENABLE=<all_enabled>,<1090_enabled>,<subg_enabled>
```

| Parameter | Description | Values |
|---|---|---|
| all_enabled | Flag indicating whether to ignore 1090_enabled and subg_enabled flags and enable / disable all radios. | 1 – All radios enabled.<br>0 – All radios disabled. |
| 1090_enabled | Flag indicating whether the 1090MHz receiver should be enabled or disabled.<br><br>NOTE: Disabling the 1090MHz receiver does not conserve any power, as the RF frontend is still active. This receiver disable flag simply disables an interrupt within the RP2040 that is used to check for incoming transponder messages. | 1 – 1090MHz receiver is enabled.<br>0 – 1090MHz receiver is disabled. |
| subg_enabled | Flag indicating whether the Sub-GHz receiver should be enabled or disabled (if equipped).<br><br>Disabling the Sub-GHz receiver does save a small amount of power, as the Sub-GHz transceiver chip will be powered down. | 1 – Sub-GHz receiver is enabled.<br>0 – Sub-GHz receiver is disabled. |

### 4.25.2 Check Whether the Receiver(s) are Currently Enabled

```
AT+RX_ENABLE?
1090 Receiver: ENABLED
SubG Receiver: DISABLED
```

## 4.26 AT+RX_POSITION

ADSBee's internal receiver position is used as a reference location for decoding Mode S surface position packets, and is also sent as an ownship location in various packet formats, enabling electronic flight bag apps to "scroll" their maps in order to follow the location of the receiver.

The receiver location can be hardcoded to a fixed value or can be automatically derived using a number of methods.

Supported position sources:

- NONE – No position set nor available.
- FIXED – Receiver position set to a fixed location.
- GNSS – Receiver position derived from a connected GNSS receiver.
- LOWEST – Receiver position derived from the lowest altitude aircraft being tracked in the aircraft dictionary. Generally aircraft lower to the ground are harder to receive, so the lowest aircraft provides a good guess of where the receiver might be located. **This is the default setting.**
- ICAO – Receiver position tracks the ICAO address of a specific aircraft. This is useful for bootstrapping ownship position from an aircraft that the receiver might be on board or following.

### 4.26.1 Query Receiver Position

```
AT+RX_POSITION?
Receiver Position:
        Source: LOWEST [OK]
        Latitude: 54.313381 deg
        Longitude: -170.856537 deg
        GNSS Altitude: 36325 ft
        Barometric Altitude: 37000 ft
        Heading: 277.5 deg
        Speed: 500 kts
        ICAO: 0xAA92F9 [NOT IN USE]
```

The Position Available field (square brackets to the right of Source) indicates whether the requested receiver position source is providing valid data. For instance, if a receiver position source is set to ICAO, but an aircraft with that ICAO is not found, the Position Available field will show `[NOT AVAILABLE]` when an aircraft with the requested ICAO is found, the field will show `[OK]`. The same behavior applies when the receiver position is set to LOWEST (ie. The position valid field only shows `[OK]` if there is at least one aircraft with a valid altitude in the aircraft dictionary.

The ICAO In Use field (square brackets to the right of ICAO) indicates whether the stored ICAO address is actively in use. This will show `[IN USE]` when the receiver has its source set to ICAO, and will show `[NOT IN USE]` otherwise.





## 4.26.2 Set Receiver Position

### 4.26.2.1 Disable Receiver Position

```
AT+RX_POSITION=NONE
OK
```

### 4.26.2.2 Set Receiver Position to Fixed Value

```
AT+RX_POSITION=FIXED,<lat_deg>,<lon_deg>,<gnss_alt_ft>,<baro_alt_ft>,<heading_deg>
OK
```

| Parameter | Description | Values |
|---|---|---|
| lat_deg | Latitude of the receiver in degrees. | -90.0 to 90.0 |
| lon_deg | Longitude of the receiver in degrees. | -180.0 to 180.0 |
| gnss_alt_ft | GNSS (WGS84) altitude of the receiver, in feet. | Integer |
| baro_alt_ft | Barometric altitude of the receiver, in feet. | Integer |
| heading_deg | Heading of the receiver, in degrees. | 0 to 359.99 |

### 4.26.2.3 Set Receiver Position to GNSS Receiver Position

```
AT+RX_POSITION=GNSS
OK
```

Note: This is not yet implemented.

### 4.26.2.4 Set Receiver Position to Track Lowest Aircraft

```
AT+RX_POSITION=LOWEST
OK
```

### 4.26.2.5 Set Receiver Position to Track Aircraft by ICAO

```
AT+RX_POSITION=ICAO,<icao_address>
OK
```

| Parameter | Description | Values |
|---|---|---|
| icao_address | Hexadecimal formatted 24-bit ICAO address of the aircraft to track. Do not include a leading 0x (just the hexadecimal digits).<br><br>If the aircraft ICAO is present in multiple aircraft dictionary entries (e.g. the aircraft is transmitting on Mode S, and is being re-broadcast on UAT), the receiver will use the position of the aircraft entry that had a packet received most recently. | AA92F9 |

## 4.27 AT+SETTINGS

### 4.27.1 Query Current Settings

```
AT+SETTINGS?
Settings Struct
        Receiver: ENABLED
        Trigger Level: 1300 milliVolts (-62 dBm)
        Bias Tee: DISABLED
        Watchdog Timeout: 10 seconds
        Log Level: WARNINGS
        Reporting Protocols:
                CONSOLE: NONE
                COMMS_UART: CSBEE
        Comms UART Baud Rate: 115207 baud
        GNSS UART Baud Rate: 9600 baud
        ESP32: ENABLED
        WiFi AP: ENABLED
                Channel: 3
                SSID: ADSBee1090-0240907000001
                Password: yummyflowers
        WiFi STA: ENABLED
                SSID: Smart Bidet Wifi
                Password: ********
        Feed URIs:
                0 URI:192.168.1.103 Port:30004 ACTIVE Protocol:BEAST
ID:0xbee00038172d18c1
                1 URI: Port:0 INACTIVE Protocol:NONE ID:0xbee00038172d18c1
                2 URI: Port:0 INACTIVE Protocol:NONE ID:0xbee00038172d18c1
                3 URI: Port:0 INACTIVE Protocol:NONE ID:0xbee00038172d18c1
                4 URI:78.46.234.18 Port:30004 ACTIVE Protocol:BEAST ID:0xbee00038172d18c1
                5 URI:feed.whereplane.xyz Port:30004 INACTIVE Protocol:BEAST
ID:0xbee00038172d18c1
OK
```

### 4.27.2 Dump Settings in AT Format

Sending AT+SETTINGS?DUMP outputs a dump of all nonvolatile settings in AT command format, allowing them to be easily re-entered when restoring the ADSBee settings after a firmware upgrade, or for moving setting between devices.

```
AT+SETTINGS?DUMP
AT+SETTINGS=RESET
AT+BAUD_RATE=CONSOLE,115200
AT+BAUD_RATE=COMMS_UART,115200
AT+BAUD_RATE=GNSS_UART,115200
AT+BIAS_TEE_ENABLE=0
AT+ESP32_ENABLE=1
AT+FEED=0,,0,0,NONE
AT+FEED=1,,0,0,NONE
AT+FEED=2,,0,0,NONE
AT+FEED=3,,0,0,NONE
AT+FEED=4,feed.airplanes.live,30004,1,BEAST
AT+FEED=5,feed.adsb.fi,30004,1,BEAST
AT+LOG_LEVEL=WARNINGS
AT+PROTOCOL=CONSOLE,NONE
AT+PROTOCOL=COMMS_UART,MAVLINK1
AT+RX_ENABLE=1
AT+TL_SET=1300
AT+WATCHDOG=10
AT+WIFI_AP=1,ADSBee1090-0240907000001,yummyflowers,11
AT+WIFI_STA=0,,
AT+FILTER_DISTANCE_NM=0,100.0
OK
```

### 4.27.3 Load Settings from EEPROM

```
AT+SETTINGS=LOAD
```

### 4.27.4 Save Settings to EEPROM

```
AT+SETTINGS=SAVE
```

Note that this command is also used to synchronize settings between the RP2040 and ESP32. When changing parameters in the Serial CLI or Web CLI, run `AT+SETTINGS=SAVE` or reboot the device to synchronize new settings (e.g. new feed parameters or network settings).

### 4.27.5 Reset Settings to Factory Default

```
AT+SETTINGS=RESET
```

Note that this command resets settings to factory defaults, but will not persist them to the next power on unless `AT+SETTINGS=SAVE` is run subsequently.

## 4.28 AT+SUBG_ENABLE

Enable or disable the Sub-GHz receiver, if present. Can be used to drive the Sub-GHz receiver enable line HI or LO, or leave the corresponding GPIO in a high impedance state in order to allow external control (e.g. for using an external debugger).

### 4.28.1 Set Sub-GHz Receiver Enable Status and Line Drive Type

```
AT+SUBG_ENABLE=<enabled>
```

| Parameter | Description | Values |
|---|---|---|
| enabled | Flag indicating whether the Sub-GHz receiver should be enabled or disabled. | 0 – Sub-GHz receiver is disabled.<br>1 – Sub-GHz receiver is enabled.<br>EXTERNAL – Sub-GHz receiver enable is pulled low by default, but can be overridden by an external device. |

### 4.28.2 Query Sub-GHz Receiver Enable Status and Line Drive Type

```
AT+SUBG_ENABLE?
SUBG_ENABLE=1
```

## 4.29 AT+TEST

Used for running internal self-tests. Can only be run once per boot cycle.

```
AT+TEST
[==========] Running 4 test cases.
[ RUN      ] SpiCoprocessor.WriteReadScratchNoAck
[       OK ] SpiCoprocessor.WriteReadScratchNoAck (687000ns)
[ RUN      ] SpiCoprocessor.WriteReadScratchWithAck
[       OK ] SpiCoprocessor.WriteReadScratchWithAck (751000ns)
[ RUN      ] SPICoprocessor.ReadWriteReadRewriteRereadBigNoAck
[       OK ] SPICoprocessor.ReadWriteReadRewriteRereadBigNoAck (25336000ns)
[ RUN      ] SPICoprocessor.ReadWriteReadRewriteRereadBigWithAck
[       OK ] SPICoprocessor.ReadWriteReadRewriteRereadBigWithAck (29287000ns)
[==========] 4 test cases ran.
[  PASSED  ] 4 tests.
```

## 4.30 AT+TL_READ

```
AT+TL_READ?
TL_READ=1258mV (-64 dBm)
```

Queries the current value of the internal trigger level of the RF frontend's data slicer circuit. Signals peaking above this level will trigger a demodulation. This value should be set substantially above the noise floor in order to avoid false triggers.

Note that the value returned from TL_READ is different from querying TL_SET, since the value returned by TL_READ is read from the RP2040's ADC, while the value returned from querying TL_SET is the setpoint for the PWM output that generates the trigger level signal. They should be roughly similar, but slightly offset.

## 4.31 AT+TL_OFFSET

### 4.31.1 Set Trigger Level

```
AT+TL_OFFSET=<command>
```

| Parameter | Description | Values |
|---|---|---|
| command | Trigger level offset (milliVolts above the measured noise floor), or the activation word to begin a self-learning process for the trigger level using simulated annealing. | 0-2000<br>LEARN<br><br>Trigger level offset defaults to 600. |

The `AT+TL_OFFSET` command sets the value of the internal trigger level of the RF frontend's data slicer circuit. Signals peaking above this level will trigger a demodulation. This value should be set above the noise floor in order to avoid false triggers.

A higher trigger level makes the receiver less sensitive, while a lower trigger level makes the receiver more sensitive (and thus more likely to be triggered by unwanted noise).

Sending `AT+TL_OFFSET=LEARN` instead of a value in milliVolts learns the offset from the received traffic by simulated annealing. Each 20 second cycle alternates between the best offset so far and a nearby candidate offset, one second each, and keeps the candidate if it received more valid Mode S frames (a worse one is sometimes kept early on, so the search doesn't stop at a local peak). The candidates come closer to the best offset each cycle. Learning takes about 20 minutes and ends on the best offset. Setting an offset stops learning. Use `AT+SETTINGS=SAVE` to keep the learned offset.

### 4.31.2 Query Trigger Level

```
AT+TL_OFFSET?
TL_OFFSET=600mV (-104 dBm)
TL_OFFSET=520mV (-108 dBm),LEARNING,12/60,600mV
```

Queries the trigger level that is set internally. Note that this may differ from the actual value that is read using an ADC, as provided by `AT+TL_READ`. While learning, the reply goes on with `LEARNING`, the cycle and the number of cycles, and the best offset so far; the offset at the front is the one in use this second.

## 4.32 AT+UPTIME

Queries the uptime of the ADSBee, in seconds.

```
AT+UPTIME?
UPTIME=71
```

## 4.33 AT+WATCHDOG

The ADSBee features a watchdog timer on the RP2040, which will automatically reset all microcontrollers on the board if code executing on the RP2040 freezes up, or if SPI communication with the ESP32 breaks down. This is intended to provide a means of automatic recovery in case of a hard fault caused by firmware bugs (likely), power glitches (maybe), or cosmic rays (probably not). As the watchdog may not be wanted in some cases, like debugging hardfaults, or during device programming / beakpoint debugging, it can be disabled. Additionally, means are provided for self-testing the watchdog via AT command in order to verify that it is still active.

### 4.33.1 Configure the Watchdog Timer

```
AT+WATCHDOG=<timeout_sec>
```

| Parameter | Description | Values |
|---|---|---|
| command | Trigger level, in milliVolts, or the activation word to begin a self-learning process for the trigger level using simulated annealing. | 0-3300<br>LEARN |

### 4.33.2 Query the Watchdog Timer

```
AT+WATCHDOG?
WATCHDOG=10
```

Prints the value of the watchdog timer in seconds, or 0 if the watchdog timer is disabled.

### 4.33.3 Test the Watchdog Timer

```
AT+WATCHDOG=TEST
Blocking for 11 seconds.
```

(ADSBee Reboots here)

The AT+WATCHDOG=TEST command blocks the processor for the currently configured watchdog timeout plus one second. This should induce a device reboot, otherwise an error message will be displayed indicating that the watchdog failed to activate.

## 4.34 AT+WIFI_AP

The ADSBee creates its own WiFi access point that allows other devices to join its network in order to access the Web CLI and receive aircraft data (e.g. GDL90 traffic info over UDP port 4000). The WiFi AP can be enabled/disabled and can have its SSID, password, and WiFi channel customized. Note that WiFi settings don't have any affect unless the ESP32 is enabled, and are not propagated to the ESP32 unless settings are saved with `AT+SETTINGS=SAVE`.

### 4.34.1 Configure the WiFi Access Point

```
AT+WIFI_AP=<enabled>,<ap_ssid>,<ap_pwd>,<ap_channel>
```

| Parameter | Description | Values |
|---|---|---|
| enabled | Toggle whether the AP is enabled or disabled. | 0 – Disable WiFi access point.<br>1 – Enable WiFi access point. |
| ap_ssid | SSID for the access point. Defaults to a unique SSID with the format "ADSBee1090-0240907000001". Can be set to a value up to 32 characters long. | ASCII string up to 32 characters in length. |
| ap_pwd | Password for the access point. Defaults to "yummyflowers". Can be set to a value up to 64 characters long. | ASCII string up to 64 characters in length. |
| ap_channel | WiFi channel number for the access point. Can be set to a value from 1-11. A random channel value is chosen by default during initial programming of the device. It is recommended to change the channel value to a frequency with low utilization in the installation location.<br><br>Note that the ap_channel is overridden automatically if both the access point and station mode are used simultaneously; the wifi access point will use only the channel that was selected by the wifi station when connecting to a network. | 1-11 |

### 4.34.2 Query the WiFi Access Point Configuration

```
AT+WIFI_AP?
WIFI_AP=1,ADSBee1090-0240907000001,yummyflowers,3
```

Reply format matches argument values and ordering from the configuration command.

## 4.35 AT+WIFI_STA

The ADSBee can join external WiFi networks as a WiFi station in order to allow connections from other devices on the existing network, or to connect to the internet in order to feed remote endpoints with air traffic data.

### 4.35.1 Configure the WiFi Station

```
AT+WIFI_STA=<enabled>,<sta_ssid>,<sta_pwd>
```

| Parameter | Description | Values |
|---|---|---|
| enabled | Toggle whether the AP is enabled or disabled. | 0 – Disable WiFi station.<br>1 – Enable WiFi station. |
| sta_ssid | SSID for the access point to connect to. Can be set to a value up to 32 characters long. | ASCII string up to 32 characters in length. |
| sta_pwd | Password for the access point to connect to. Can be set to a value up to 64 characters long. | ASCII string up to 64 characters in length. |

### 4.35.2 Query the WiFi Station Configuration

```
WIFI_STA=1,My Supercool WiFi Network,**********
```

Queries the configuration used by the ADSBee to join an external WiFi network. Note that the value and ordering of the arguments is identical to the configuration command, except the password is censored.

# 5 Reporting Protocols

ADSBee 1090 supports the following reporting protocols on CONSOLE and COMMS_UART.

- ASTERIX
- CSBee
- GDL90
- MAVLINK 1
- MAVLINK 2
- Mode S Beast
- Raw Packets

The CONSOLE interface reports debug messages and AT command responses in addition to the selected reporting protocol. If the CONSOLE interface is being used as a reporting interface, it is recommended to send AT+LOG_LEVEL=SILENT to silence any debug logs that might corrupt the reported data, and to avoid sending additional AT commands while reading reported data in order to avoid the reported data being interspersed with OK and other AT command responses from the ADSBee 1090.

## 5.1 ASTERIX

ASTERIX is the EUROCONTROL surveillance data format used by air navigation service providers. ADSBee 1090 reports CAT021 (ADS-B target reports, Edition 2.6, also valid as Edition 2.7) and CAT023 (ground station and service status, Edition 1.3).

Select it with AT+PROTOCOL_OUT on CONSOLE or COMMS_UART, or as the protocol of a network feed with AT+FEED. Set the data source identifier with AT+ASTERIX_SAC_SIC.

### 5.1.1 ASTERIX: Data Blocks

Once per second, ADSBee 1090 sends one CAT023 data block followed by CAT021 data blocks. The CAT023 block holds a ground station status report and a service status report for the 1090 MHz receiver (service ID 1) and for the UAT receiver (service ID 2). Each CAT021 record reports one aircraft. Data blocks are at most 1024 bytes, so each fits in one UDP datagram, and follow each other with no extra framing.

Aircraft without a position, 1090 MHz DF18 targets, UAT TIS-B and ADS-R targets, Mode S aircraft that don't send ADS-B, and Remote ID drones are not reported. A track number stays with an aircraft while it is reported and is reused 60 s after the aircraft was last reported.

The data items of each record are listed in firmware/common/comms/asterix/README.md in the ADSBee repository. Wireshark decodes ASTERIX on UDP and TCP port 8600.

### 5.1.2 ASTERIX: Time Source

ASTERIX times are seconds since midnight UTC. ADSBee 1090 takes UTC from a GNSS receiver with a valid time (see AT+GNSS), or else from the NTP server set with AT+NTP_SERVER. Without either, times count from boot, CAT023 reports TSV (time source invalid) and NOGO, and every CAT021 record sets the NOGO bit.

## 5.2 CSBee

Comma Separated Bee protocol containing information about tracked aircraft as plain text.

The CSBee protocol is heavily inspired by the Aerobits Aero CSV protocol.

### 5.2.1 CSBee Protocol Version History

Consult the table below for a version history of the CSBee protocol. Each version of the ADSBee firmware writes only the most recent version of the CSBee protocol. All versions of the CSBee protocol except for the most recent version are considered deprecated. Whenever possible, efforts are made to reduce breaking changes to the CSBee protocol when incrementing the version number.

Current protocol version: 3

| CSBee Protocol Version | Introductory Firmware Revision | Description |
|---|---|---|
| 1 | | Initial release. |
| 2 | adsbee_1090-0.9.0-rc1 | • Add UAT contacts.<br>• Change bit flag positions.<br>• Add dedicated fields for GNSS / baro vertical rates.<br>• Add additional aircraft info (e.g. dimensions). |
| 3 | adsbee_1090-0.9.0-rc15 | • Add is_non_transponder flag to Mode S aircraft.<br>• Prepend address qualifier to UAT ICAO addresses.<br>• Add is_utc_coupled flag to UAT aircraft. |

### 5.2.2 Mode S Aircraft Message

This message contains information about an aircraft being tracked via ADS-B (1090MHz). Aircraft reports are provided once per second, per aircraft, until contact with the aircraft has been lost for 60 seconds.

```
#A:ICAO,FLAGS,CALL,SQUAWK,ECAT,LAT,LON,BARO_ALT,GNSS_ALT,DIR,SPEED,BARO_VRATE,GNSS_VRATE,
NICNAC,ACDIMS,VERSION,SIGS,SIGQ,SFPS,ESFPS,CRC\r\n
```

| Field | Description | Format | Example value |
|---|---|---|---|
| #A | Mode S aircraft message start indicator. | | |
| ICAO | ICAO number of aircraft (3 bytes). | Hex Integer | 3C65AC |
| FLAGS | Flags bitfield, see table 5.2.2.1. | Hex Integer | 12F356A8 |
| CALL | Callsign of aircraft. | String | N61ZP |
| SQUAWK | SQUAWK of aircraft. | Octal Integer | 7232 |
| ECAT | Emitter category, see table 5.2.2.2. | Integer | 14 |
| LAT | Latitude, in degrees. | Float | 57.57634 |
| LON | Longitude, in degrees. | Float | 17.59554 |
| BARO_ALT | Barometric altitude, in feet. | Integer | 5000 |
| GNSS_ALT | Geometric altitude, in feet. | Integer | 5000 |
| DIR | Direction of aircraft, in degrees [0,360). Consult bit flags to determine whether this field is true heading, magnetic heading, or track. | Integer | 35 |
| SPEED | Horizontal velocity of aircraft, in knots. | Integer | 464 |
| BARO_VRATE | Barometric vertical velocity of aircraft, in ft/min. | Integer | -1344 |
| GNSS_VRATE | Geometric vertical velocity of the aircraft, in ft/min | Integer | -1344 |
| NICNAC | Aircraft data integrity. See table 5.2.2.3 | Hex Integer | |
| ACDIMS | Aircraft physical dimensions and system design assurance. See table 5.2.2.4. | Hex Integer | 31BE89F2 |
| VERSION | ADS-B protocol version used by the aircraft. | Integer | 2 |
| SIGS | Signal strength, in dBm. | Integer | -92 |
| SIGQ | Signal quality, in dB. | Integer | 2 |
| SFPS | Number of valid 56-bit Squitter Mode S frames received from the aircraft during the last second. | Integer | 2 |
| ESFPS | Number of valid 112-bit Extended Squitter Mode S frames received from the aircraft during the last second. | Integer | 5 |
| CRC | CRC16 (described in 5.2.2.5). | Hex Integer | 2D3E |

#### 5.2.2.1 FLAGS Bitfield

Note: All bits 25-31 are momentary (cleared and updated every reporting interval).

| Bit | Bit Name | Meaning if the bit is set (1) |
|---|---|---|
| 0 | IS_AIRBORNE | Emitter is airborne. |
| 1 | BARO_ALTITUDE_VALID | Emitter has provided a barometer altitude. |
| 2 | GNSS_ALTITUDE_VALID | Emitter has provided a GNSS altitude. |
| 3 | POSITION_VALID | Emitter has provided a pair of even and odd Compact Position Reporting packets that were decoded to a location. |
| 4 | DIRECTION_VALID | Emitter has provided a direction (may be ground track, magnetic compass heading, or true compass heading). |
| 5 | HORIZONTAL_SPEED_VALID | Emitter has provided a horizontal velocity. |
| 6 | BARO_VERTICAL_RATE_VALID | Emitter has provided a barometric vertical velocity. |
| 7 | GNSS_VERTICAL_RATE_VALID | Emitter has provided a GNSS vertical velocity. |
| 8 | IS_MILITARY | Emitter has transmitted at least one packet using a military format, such as Military Extended Squitter (DF=19). |
| 9 | IS_CLASS_B2_GROUND_VEHICLE | Emitter is actually a ground vehicle using a Class B2 transponder with a transmission power < 70W. |
| 10 | HAS_1090_ES_IN | Emitter has receive capability for 1090MHz Extended Squitter transmissions. |
| 11 | HAS_UAT_IN | Emitter has receive capability for UAT (978MHz Universal Access Transceiver) transmissions. |
| 12 | TCAS_OPERATIONAL | Emitter has a functional TCAS (Traffic Collision Avoidance System) onboard. |
| 13 | SINGLE_ANTENNA | Emitter is using a single antenna, instead antennas above and below the fuselage. Transmissions may be weak or irregular during maneuvering. |
| 14 | DIRECTION_IS_HEADING | Surface position messages provided by the aircraft indicate a heading and not a track angle. |
| 15 | HEADING_USES_MAGNETIC_NORTH | Heading reported by the aircraft while on the surface uses magnetic north instead of true north. |
| 16 | IDENT | The aircraft has its SPI (Special Position Identification) bits set in Mode A/C or Mode S messages. This indicates that the pilot has depressed the momentary IDENT switch on their transponder, most likely at the request of air traffic control. |
| 17 | ALERT | The aircraft is issuing either a permanent or momentary alert. This could correspond to an operational mode change or something else. |
| 18 | TCAS_RA | The aircraft has an active TCAS resolution advisory (i.e. the aircraft is warning the pilot to take action in order to avoid colliding with another aircraft). |
| 19 | IS_NON_TRANSPONDER | This aircraft is being rebroadcast (not received from a transponder). |
| 20-22 Reserved | | |
| 23 | UPDATED_BARO_ALTITUDE | Barometric altitude has been updated within the last reporting interval. |
| 24 | UPDATED_GNSS_ALTITUDE | GNSS altitude has been updated within the last reporting interval. |
| 25 | UPDATED_POSITION | Position (latitude / longitude) has been updated within the last reporting interval. |
| 26 | UPDATED_DIRECTION | Direction has been updated within the last reporting interval. |
| 27 | UPDATED_HORIZONTAL_SPEED | Horizontal velocity has been updated within the last reporting interval. |
| 28 | UPDATED_BARO_VERTICAL_RATE | Barometric vertical velocity has been updated within the last reporting interval. |
| 29 | UPDATED_GNSS_VERTICAL_RATE | GNSS vertical velocity has been updated within the last reporting interval. |
| 30-31 Reserved | | |

#### 5.2.2.2 ECAT Field

The ECAT field indicates the Emitter Category (i.e. airframe type) for each ADSB emitter that is being tracked. This field contains information about what kind of aircraft, ground vehicle, obstacle, or other airspace user is emitting ADS-B packets, and can be used to understand the emitter's maneuvering capability and potential for wake vortex impact.

| ECAT Value | Emitter Category |
|---|---|
| -1 | Invalid |
| 0 | No Category Information |
| 1 | Light Aircraft (< 7,000kg) |
| 2 | Medium 1 (7,000kg – 34,000kg) |
| 3 | Medium 2 (34,000kg – 136,000kg) |
| 4 | High Vortex Aircraft |
| 5 | Heavy (> 136,000kg) |
| 6 | High Performance (> 5 G acceleration and > 400 kts speed) |
| 7 | Rotorcraft |
| 8 | Reserved |
| 9 | Glider / Sailplane |
| 10 | Lighter Than Air |
| 11 | Parachutist / Skydiver |
| 12 | Ultralight / Hang Glider / Paraglider |
| 13 | Reserved 1 |
| 14 | Unmanned Aerial Vehicle |
| 15 | Space / Transatmospheric Vehicle |
| 16 | Reserved 2 |
| 17 | Surface Emergency Vehicle |
| 18 | Surface Service Vehicle |
| 19 | Point Obstacle |
| 20 | Cluster Obstacle |
| 21 | Line Obstacle |

#### 5.2.2.3 NICNAC Bitfield

| NICNAC Bitfield | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| Source Integrity Level (SIL) | | Geometric Vertical Accuracy (GVA) | | Navigation Accuracy Category: Position ($NAC_p$) | | | | Navigation Accuracy Category: Velocity ($NAC_v$) | | | Navigation Integrity Category: Barometer ($NIC_{baro}$) | Navigation Integrity Category (NIC) | | | |

**NICNAC[0-3]: Navigation Integrity Category (NIC)**

The radius of containment (NIC) indicates how much trust should be placed in an aircraft's reported location in the horizonal plane. The NIC reports a radius of containment specified by the avionics system of the emitter. The probability that the aircraft is outside of this radius of containment due to its avionics system receiving a faulty signal from one of its inputs (without displaying an error) is provided by another bitfield called the Source Integrity Level (SIL). Combined, the NIC and SIL indicate how likely it is that an aircraft is not actually contained by a bubble of a specified size, centered at the aircraft's reported location, assuming that the avionics onboard the aircraft are functioning correctly but may be given faulty inputs.

A higher NIC value indicates more trust in an aircraft's reported latitude / longitude position.

| **NIC Value** | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| **Radius of Containment** | Unknown | < 20 NM | < 8 NM | < 4 NM | < 2 NM | < 1 NM | < 0.6 NM | < 0.2 NM | < 0.1 NM | < 75 m | < 25 m | < 7.5 m |

**NICNAC [4]: Navigation Integrity Category: Barometer ($NIC_{baro}$)**

The barometric altitude integrity ($NIC_{baro}$) indicates how much trust should be placed in an aircraft's reported altitude. The field is a single bit that indicates whether the aircraft uses an altimeter that has been cross-checked against other sources. Old school encoding altimeters have many parallel wires and output an altitude in a format called a Gillham Code, and have no built-in method of error checking. A single faulty wire can result in erroneous readings, so this bit lets air traffic control know whether to take altitude readings from the aircraft with a grain of salt. A 0 indicates that the transponder is outputting altitude from a Gillham coded source (with no way to cross check the value), while a 1 indicates that the transponder is outputting altitude from a Gillham coded source while using another sensor to cross-check it, or is using a more modern barometer that supports a protocol with built-in error checking.

A higher $NIC_{baro}$ value (i.e. 1 instead of 0) indicates more trust in the aircraft's reported altitude.

| **$NIC_{baro}$ Value** | 0 | 1 |
|---|---|---|
| **Barometric Altitude Integrity** | Altitude is from a Gillham-coded input, not cross checked. | Altitude is from a Gillham-coded input that is being cross-checked with another source, or from a non Gillham-coded input with built-in error checking features. |

**NICNAC [5-7]: Navigation Accuracy Category: Velocity ($NAC_v$)**

The horizontal velocity error ($NAC_v$) indicates the expected accuracy of the reported velocity of the aircraft when systems are operating nominally. This varies depending on the accuracy capabilities of the measurement equipment onboard the aircraft, and not how often we expect said equipment to fail.

A higher $NAC_v$ indicates a more accurate velocity measurement system.

| $NAC_v$ Value | Horizontal Velocity Error |
|---|---|
| 0b000 | Unknown or ≥ 10 m/s |
| 0b110 | < 10 m/s |
| 0b010 | < 3 m/s |
| 0b011 | < 1 m/s |
| 0b100 | < 0.3 m/s |

**NICNAC [8-11]: Navigation Accuracy Category: Position ($NAC_p$)**

The estimated position uncertainty ($NAC_p$) indicates the expected accuracy of the aircraft's reported location when systems are operating nominally. This varies depending on the capabilities of the aircraft's positioning system and not on how often we expect said equipment to fail.

A higher $NAC_p$ indicates a more accurate positioning system.

| $NAC_p$ Value | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| **Estimated Position Uncertainty** | Unknown or ≥ 10NM | < 10 NM | < 4 NM | < 2 NM | < 1 NM | < 0.5 NM | < 0.3 NM | < 0.1 NM | < 0.5 NM | < 30 m | < 10 m | < 3 m |

**NICNAC[12-13]: Geometric Vertical Accuracy (GVA)**

The geometric vertical accuracy indicates the 95% confidence interval (vertical figure of merit) provided by the aircraft's onboard GNSS system (i.e. assuming some distribution of altitudes, the aircraft's GNSS system is confident that 95 out of 100 times, the aircraft falls within some height of the reported geometric altitude.

| GVA Value | 0 | 1 | 2 | 3 |
|---|---|---|---|---|
| **95% Vertical Figure of Merit (VFOM)** | Unknown or ≥ 150 m | < 150 m | ≤ 45 m | < 45 m (Was previously "reserved", the actual value of this field may change but is guaranteed to be < 45 m). |

**NICNAC[14-15]: Source Integrity Level (SIL)**

The source integrity level indicates the probability that the aircraft exceeds the bounds of its horizontal radius of containment (NIC) due to a silent fault in signals received by the aircraft (no avionics failure).

| SIL Value | Probability of Exceeding NIC Radius of Containment Due to Silent Fault |
|---|---|
| 0 | Unknown or > $1x10^{-3}$ per flight hour. |
| 1 | ≤ $1x10^{-3}$ per flight hour. |
| 2 | ≤ $1x10^{-5}$ per flight hour. |
| 3 | ≤ $1x10^{-7}$ per flight hour. |
| 4 | Unknown or > $1x10^{-3}$ per sample. |
| 5 | ≤ $1x10^{-3}$ per sample. |
| 6 | ≤ $1x10^{-5}$ per sample. |
| 7 | ≤ $1x10^{-7}$ per sample. |

#### 5.2.2.4 ACDIMS Bitfield

| ACDIMS Bitfield | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
| GNSS Offset Forward of Reference Point (GOF) | | | | | | | | GNSS Offset Right of Reference Point (GOR) | | | | | | | |

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Aircraft Length (ACL) | | | | | | | Aircraft Width (ACW) | | | | | | | System Design Assurance (SDA) | |

**ACDIMS[0-1]: System Design Assurance (SDA)**

The system design assurance indicates how robust the aircraft's position reporting systems are to failures of various severities. For instance, SDA = 1, a low SDA value, corresponds to Software and Hardware Design Assurance Level D, which states that a minor failure could cause the aircraft to transmit misleading position information with a probability of ≤ $1x10^{-3}$ per flight hour. A more robust system with SDA = 3, corresponding to Software and Hardware Design Assurance Level B, is expected to transmit misleading position information with a probability of $1x10^{-7}$ per flight hour even under a Hazardous failure condition.

Software Design Assurance categories used in this field are classified under RTCA DO-178B, Airborne Electronic Hardware Design Assurance are classified under RTCA DO-254, and failure classification levels are defined in FAA Advisory Circular AC-23.1309-1E.

| SDA Value | Supported Failure Condition | Probability of Undetected Fault causing transmission of False or Misleading Information | Software and Hardware Design Assurance Level |
|---|---|---|---|
| 0 | Unknown / No Safety Effect | > $1x10^{-3}$ per flight hour or unknown. | N/A |
| 1 | Minor | ≤ $1x10^{-3}$ per flight hour. | D |
| 2 | Major | ≤ $1x10^{-5}$ per flight hour. | C |
| 3 | Hazardous | ≤ $1x10^{-7}$ per flight hour. | B |

**ACDIMS[2-8] Aircraft Width (ACW)**

Approximate value for the width of the aircraft bounding box, in meters. Can be interpreted as a 7-bit unsigned integer.

**ACDIMS[9-15] Aircraft Length (ACL)**

Approximate value for the length of the aircraft bounding box, in meters. Can be interpreted as a 7-bit unsigned integer.

**ACDIMS[16-23] GNSS Offset Right of Reference Point (GOR)**

Signed 8-bit integer representing the left/right offset of the GNSS antenna from the aircraft's reference point. A positive value indicates that the GNSS antenna is to the right of the aircraft reference point.

**ACDIMS[24-31] GNSS Offset Forward of Reference Point (GOF)**

Signed 8-bit integer representing the forward/back offset of the GNSS antenna from the aircraft's reference point. A positive value indicates that the GNSS antenna is forward of the aircraft's reference point. Always 0 for Mode S aircraft.

#### 5.2.2.5 CRC Field

CSBee messages use a 16-bit Cyclical Redundancy Checksum (CRC-16), which can be calculated using the algorithm in the C++ code snippet below. Note the “swap16” helper function which also needs to be included.

```
uint16_t swap16(uint16_t value) { return (value << 8) | (value >> 8); }

uint16_t CalculateCRC16(const uint8_t *data_p, int32_t length) {
    uint8_t x;
    uint16_t crc = 0xFFFF;
    while (length--) {
        x = crc >> 8 ^ *data_p++;
        x ^= x >> 4;
        crc = (crc << 8) ^ ((uint16_t)(x << 12)) ^ ((uint16_t)(x << 5)) ^ ((uint16_t)x);
    }
    return swap16(crc);
}
```

### 5.2.3 UAT Aircraft Message

```
#U:ICAO,UAT_FLAGS,CALL,SQUAWK,ECAT,LAT,LON,BARO_ALT,GNSS_ALT,DIR,SPEED,BARO_VRATE,GNSS_VR
ATE,UAT_EMERG,NICNAC,ACDIMS,VERSION,SIGS,SIGQ,UATFPS,CRC\r\n
```

| Field | Description | Format | Example value |
|---|---|---|---|
| #U | UAT aircraft message start indicator. | | |
| ICAO | First Digit (optional): Address Qualifier (1 digit: see table 5.2.3.1)<br>Last 6 Digits: ICAO address of aircraft (6 hex digits). | Hex Integer | 13C65AC<br>3C65AC |
| UAT_FLAGS | Flags bitfield, see table 5.2.3.2. | Hex Integer | 12F356A8 |
| CALL | Callsign of aircraft. | String | N61ZP |
| SQUAWK | SQUAWK of aircraft. | Octal Integer | 7232 |
| ECAT | Emitter category, see table 5.2.2.2. | Integer | 14 |
| LAT | Latitude, in degrees. | Float | 57.57634 |
| LON | Longitude, in degrees. | Float | 17.59554 |
| BARO_ALT | Barometric altitude, in feet. | Integer | 5000 |
| GNSS_ALT | Geometric altitude, in feet. | Integer | 5000 |
| DIR | Direction of aircraft, in degrees [0,360). Consult bit flags to determine whether this field is true heading, magnetic heading, or track. | Integer | 35 |
| SPEED | Horizontal velocity of aircraft, in knots. | Integer | 464 |
| BARO_VRATE | Barometric vertical velocity of aircraft, in ft/min. | Integer | -1344 |
| GNSS_VRATE | Geometric vertical velocity of the aircraft, in ft/min | Integer | -1344 |
| UAT_EMERG | Aircraft UAT emergency / priority status. See table. | Integer | 0 |
| NICNAC | Aircraft data integrity. See table 5.2.2.3 | Hex Integer | |
| ACDIMS | Aircraft physical dimensions and system design assurance. See table 5.2.2.4. | Hex Integer | 31BE89F2 |
| VERSION | UAT protocol version used by the aircraft. | Integer | 1 |
| SIGS | Signal strength, in dBm. | Integer | -92 |
| SIGQ | Number of bits corrected using UAT forward error correction. 0 (best), 6 (worst). | Integer | 2 |
| UATFPS | Number of valid UAT frames received from the aircraft in the last second. | Integer | 1 |
| CRC | CRC16 (described in 5.2.2.5). | Hex Integer | 2D3E |

NOTE: See Mode S Aircraft message decoding reference for any bitfields not prefixed with “UAT_”.




#### 5.2.3.1 UAT Address Qualifier

| Address Qualifier Value | Meaning |
|---|---|
| 0 | Contact is ADSB target (broadcast by transponder) with 24-bit ICAO address. |
| 1 | Contact is ADSB target (broadcast by transponder) with self-assigned temporary address. |
| 2 | Contact is TIS-B target (broadcast by ground station), using a 24-bit ICAO address. |
| 3 | Contact is TIS-B target (broadcast by ground stations) with track file identifier. |
| 4 | Contact is a surface vehicle. |
| 5 | Contact is a fixed ADSB beacon. |

#### 5.2.3.2 UAT_FLAGS Bitfield

| Bit | Bit Name | Meaning if the bit is set (1) |
|---|---|---|
| 0 | IS_AIRBORNE | Emitter is airborne. |
| 1 | BARO_ALTITUDE_VALID | Emitter has provided a barometer altitude. |
| 2 | GNSS_ALTITUDE_VALID | Emitter has provided a GNSS altitude. |
| 3 | POSITION_VALID | Emitter has provided a pair of even and odd Compact Position Reporting packets that were decoded to a location. |
| 4 | DIRECTION_VALID | Emitter has provided a direction (may be ground track, magnetic compass heading, or true compass heading). |
| 5 | HORIZONTAL_SPEED_VALID | Emitter has provided a horizontal velocity. |
| 6 | BARO_VERTICAL_RATE_VALID | Emitter has provided a barometric vertical velocity. |
| 7 | GNSS_VERTICAL_RATE_VALID | Emitter has provided a GNSS vertical velocity. |
| 8 | HAS_CDTI | Aircraft has Cockpit Display of Traffic Information (CDTI) equipped. |
| 9 | TCAS_OPERATIONAL | Aircraft is equipped with an operational TCAS / ACAS system. |
| 10 | DIRECTION_IS_HEADING | Surface position messages provided by the aircraft indicate a heading and not a track angle. |
| 11 | HEADING_USES_MAGNETIC_NORTH | Heading reported by the aircraft while on the surface uses magnetic north instead of true north. |
| 12 | IDENT | The aircraft has its SPI (Special Position Identification) bits set in Mode A/C or Mode S messages. This indicates that the pilot has depressed the momentary IDENT switch on their transponder, most likely at the request of air traffic control. |
| 13 | IS_UTC_COUPLED | The aircraft is transmitting frames precisely aligned to the UTC second. |
| 14 Reserved | | |
| 15 | TCAS_RA | The aircraft has an active TCAS resolution advisory (i.e. the aircraft is warning the pilot to take action in order to avoid colliding with another aircraft). |
| 16 | RECEIVING_ATC_SERVICES | |
| 17-22 Reserved | | |
| 23 | UPDATED_BARO_ALTITUDE | Barometric altitude has been updated within the last reporting interval. |
| 24 | UPDATED_GNSS_ALTITUDE | GNSS altitude has been updated within the last reporting interval. |
| 25 | UPDATED_POSITION | Position (latitude / longitude) has been updated within the last reporting interval. |
| 26 | UPDATED_DIRECTION | Direction has been updated within the last reporting interval. |
| 27 | UPDATED_HORIZONTAL_SPEED | Horizontal velocity has been updated within the last reporting interval. |
| 28 | UPDATED_BARO_VERTICAL_RATE | Barometric vertical velocity has been updated within the last reporting interval. |
| 29 | UPDATED_GNSS_VERTICAL_RATE | GNSS vertical velocity has been updated within the last reporting interval. |
| 30-31 Reserved | | |

#### 5.2.3.3 UAT_EMERG Bitfield

Contains the emergency / priority status reported by a UAT emitter.

| UAT_EMERG Value | Meaning |
|---|---|
| 0 | No emergency. |
| 1 | General emergency. |
| 2 | Lifeguard / medical emergency. |
| 3 | Minimum fuel. |
| 4 | No communications. |
| 5 | Unlawful interference. |
| 6 | Downed aircraft. |
| 7 | Reserved. |

### 5.2.4 Statistics Message

This message contains some useful statistics about ADSBee's operational status. Format of that frame is shown below:

```
#S:VERSION,DPS,RAW_SFPS,SFPS,RAW_ESFPS,ESFPS,RAW_UATFPS,UATFPS,TSCAL,UPTIME,CRC\r\n
```

| Field | Description | Format | Example Value |
|---|---|---|---|
| #S | Statistics message start indicator. | | |
| VERSION | Version of the CSBee protocol being used. | Integer | 3 |
| SDPS | Number of attempted Mode S demodulations in the last second. | Integer | 106 |
| RAW_SFPS | Number of squitter (56-bit Mode S) frames received in the last second. | Integer | 150 |
| SFPS | Number of valid squitter (56-bit Mode S) frames received in the last second. | Integer | 20 |
| RAW_ESFPS | Number of extended squitter (112-bit Mode S) frames received in the last second. | Integer | 15 |
| ESFPS | Number of valid Mode S frames received in the last second. | Integer | 3 |
| RAW_UATFPS | Number of UAT frames received in the last second. | Integer | 5 |
| UATFPS | Number of valid UAT frames received in the last second. | Integer | 4 |
| NUM_AIRCRAFT | Number of aircraft tracked in the last second. | Integer | 20 |
| TSCAL | Calibration value for TS field in raw frames | Integer | 13999415 |
| UPTIME | Receiver uptime, in seconds. | Integer | 13456 |
| CRC | CRC16 (described in 5.2.4.1). | Hex Integer | 2D3E |

#### 5.2.4.1 CRC Field

See 5.2.2.5.

## 5.3 GDL90

ADSBee complies with the GDL90 public data interface specification 560-1058-00 Rev A.

## 5.4 MAVLINK

Tracked aircraft information is sent in MAVLINK ADSB_VEHICLE messages, in a data burst once per second. The data burst consists of 1x MAVLINK Heartbeat message, Nx ADSB_VEHICLE messages, where N is the number of tracked aircraft, and 1x special delimiter message (MAVLINK_REQUEST_DATA_STREAM for MAVLINK1 mode, MAVLINK_MESSAGE_INTERVAL for MAVLINK2 mode) which indicates the end of the list of tracked aircraft. Note that this is a binary protocol which is not human readable.

**WARNING**: Windows has a bug, which causes some machines to recognize a serial port reporting MAVLINK packets as a mouse, which can result in phantom mouse movements and clicks (ask me how I know). Please use caution while running MAVLINK on a serial port while the computer is unattended.

### 5.4.1 MAVLINK_HEARTBEAT ( Message ID 0 ) Packet Definition

| Field Name | Type | Units | Values | Description |
|---|---|---|---|---|
| custom_mode | `uint32_t` | | 0 | Unused. |
| type | `uint8_t` | | MAV_TYPE_ADSB | Always MAV_TYPE_ADSB (27). |
| autopilot | `uint8_t` | | MAV_AUTOPILOT_INVALID | Always MAV_AUTOPILOT_INVALID (8). |
| base_mode | `uint8_t` | | 0 | Unused. |
| system_status | `uint8_t` | | MAV_STATE_ACTIVE | Always MAV_STATE_ACTIVE (4). |
| mavlink_version | `uint8_t` | | MAVLINK_VERSION | 1 for MAVLINK1 mode, 2 for MAVLINK2 mode. |

### 5.4.2 MAVLINK ADSB_VEHICLE (Message ID 246) Packet Definition

From: https://mavlink.io/en/messages/common.html#ADSB_VEHICLE

| Field Name | Type | Units | Values | Description |
|---|---|---|---|---|
| ICAO_address | `uint32_t` | | | ICAO address |
| lat | `int32_t` | degE7 | | Latitude |
| lon | `int32_t` | degE7 | | Longitude |
| altitude_type | `uint8_t` | | ADSB_ALTITUDE_TYPE | ADSB altitude type. |
| altitude | `int32_t` | mm | | Altitude(ASL) |
| heading | `uint16_t` | cdeg | | Course over ground |
| hor_velocity | `uint16_t` | cm/s | | The horizontal velocity |
| ver_velocity | `int16_t` | cm/s | | The vertical velocity. Positive is up |
| callsign | `char[9]` | | | The callsign, 8+null |
| emitter_type | `uint8_t` | | ADSB_EMITTER_TYPE | ADSB emitter type. |
| tslc | `uint8_t` | s | | Time since last communication in seconds |
| flags | `uint16_t` | | ADSB_FLAGS | Bitmap to indicate various statuses including valid data fields |
| squawk | `uint16_t` | | | Squawk code |

### 5.4.3 MAVLINK_REQUEST_DATA_STREAM (Message ID 66) Packet Definition

This message serves as the delimiter which indicates the end of the aircraft list in MAVLINK1 mode.

| Field Name | Type | Units | Description |
|---|---|---|---|
| req_message_rate | `uint16_t` | | Always 0 (unused). |
| target_system | `uint8_t` | | Always 0 (unused). |
| target_component | `uint8_t` | | Always 0 (unused). |
| req_stream_id | `uint8_t` | | Always 0 (unused). |
| start_stop | `uint8_t` | | Always 0 (unused). |

### 5.4.4 MAVLINK MESSAGE_INTERVAL (Message ID 244) Packet Definition

This message serves as the delimiter which indicates the end of the aircraft list in MAVLINK2 mode.

From: https://mavlink.io/en/messages/common.html#MESSAGE_INTERVAL

| Field Name | Type | Units | Description |
|---|---|---|---|
| message_id | `uint16_t` | | The ID of the requested MAVLink message. v1.0 is limited to 254 messages.<br><br>NOTE: For ADSBee 1090, message_id is always 246, corresponding to the ADSB_VEHICLE message. |
| interval_us | `int32_t` | us | The interval between two messages. A value of -1 indicates this stream is disabled, 0 indicates it is not available, > 0 indicates the interval at which it is sent.<br><br>NOTE: For ADSBee 1090, message_id is always 1000 us. |

## 5.5 Mode S Beast

Mode S Beast is a popular feed protocol used by both open-source and commercial data exchanges to send Mode S data, often over TCP sockets or serial connections.

Mode S Beast sends packets as raw binary, with 0x1a used as an "escape" character indicating the start of a Beast frame. Any non start-of-frame instance of 0x1a is escaped with an additional 0x1a beforehand. Thus, 0x1a can be interpreted as the start of a Beast frame, and 0x1a1a can be interpreted as a 0x1a value within a Beast frame.

### 5.5.1 Beast: Mode S Frames

| Field | Frame Start | Frame Type | Timestamp | RSSI | Payload |
|---|---|---|---|---|---|
| Length [Bytes] | 1 | 1 | 6-12 | 1-2 | Mode S Short: 7-14<br>Mode S Long: 14-28 |
| Example | 0x1a | 0x32 | 0x123456781a1aff | 0x56 | <data> |
| Definition | 0x1a<br><br>Frame start is always an escape char. | 0x32: Mode S Short<br>0x33: Mode S Long<br><br>No escapes. | 6-byte 12MHz MLAT timestamp, MSB first.<br><br>May have up to 6 escapes. | RSSI byte is "Beast Power Level", which is the square root of the un-logged dBFS value.<br><br>May have up to 1 escape. | Packet contents.<br><br>May theoretically have up to <packet_length> escapes, but this would not correspond to a valid packet and will not be seen in practice. |

### 5.5.2 Beast: UAT Frames

| Field | Frame Start | Frame Type | UAT Message Type | Timestamp | RSSI | Payload |
|---|---|---|---|---|---|---|
| Length [Bytes] | 1 | 1 | 1 | 6-12 | 1-2 | UAT Short ADSB: |
| Example | 0x1a | 0xec | 0x73 | 0x123456781a1aff | 0x56 | <data> |
| Definition | 0x1a<br><br>Frame start is always an escape char. | 0xec<br><br>Indicates frame type UAT (both ADSB and uplink).<br><br>No escapes. | 0x73 ('s'): UAT short ADSB (30 byte payload, not including escapes).<br>0x5c ('l'): UAT long ADSB (48 byte payload, not including escapes)<br>0x75 ('u'): UAT Uplink (552 byte payload, not including escapes)<br><br>No escapes. | 6-byte 12MHz MLAT timestamp, MSB first.<br><br>May have up to 6 escapes. | RSSI byte is "Beast Power Level", which is the square root of the un-logged dBFS value.<br><br>May have up to 1 escape. | Packet contents, including both payload and FEC parity.<br><br>Uplink packets remain interleaved (transmitted byte order retained).<br><br>May theoretically have up to <packet_length> escapes, but this would not correspond to a valid packet and will not be seen in practice. |

## 5.6 Raw Packets

### 5.6.1 Raw Mode S Frames

Raw Mode S packets are reported in the format below. Only packets that have passed checksum validation and match a supported Mode S downlink format are reported.

```
#MDS*RAW_FRAME;(SOURCE,SIGS,SIGQ,TS)\r\n
```

| Field | Description | Format | Example value |
|---|---|---|---|
| #MDS | Indicates the start of a raw Mode S frame. | | |
| RAW_FRAME | The packet contents as raw hexadecimal. Varies in length depending on packet length. | Hexadecimal String | 8D48C22D60AB0452BFAD19A695E0 |
| SOURCE | An unsigned integer | `int16_t` | 2 |
| SIGS | Signal strength of the packet in dBm, printed as a decimal value. | `int16_t` | -60 |
| SIGQ | Signal quality of the packet in dB, printed as a decimal value. | `int16_t` | 2 |
| TS | 64-bit 48MHz MLAT counter ticks, printed as a hexadecimal string. | `uint64_t` | 00000000FB671342 |

### 5.6.2 Raw UAT ADSB Frames

Raw UAT frames are reported in the format below. Only packets that have passed checksum validation are reported. Note that UAT uplink frames can be quite long (552 Bytes / 1104 chars), so serial buffers need to be able to handle this!

```
#UAT*-RAW_FRAME;(SIGS,SIGQ,TS)\r\n
```

| Field | Description | Format | Example value |
|---|---|---|---|
| #UAT | Indicates the start of a raw UAT frame. | | |
| RAW_FRAME | The packet contents as raw hexadecimal. Varies in length depending on packet length. | Hexadecimal String | |
| SIGS | Signal strength of the packet in dBm. | `int16_t` | -60 |
| SIGQ | Signal quality of the packet in dB. | `int16_t` | 2 |
| TS | 64-bit MLAT counter value in hexadecimal format. | `uint64_t` | 00000000FB671342 |

### 5.6.3 Raw UAT Uplink Frames

Raw UAT uplink frames are reported in the format below. Only packets that have passed checksum validation are reported. Note that UAT uplink frames can be quite long (552 Bytes / 1104 chars), so serial buffers need to be able to handle this!

```
#UAT*+RAW_FRAME;(SIGS,SIGQ,TS)\r\n
```

| Field | Description | Format | Example value |
|---|---|---|---|
| #UAT | Indicates the start of a raw UAT frame. | | |
| RAW_FRAME | The packet contents as raw hexadecimal. Varies in length depending on packet length. | Hexadecimal String | |
| SIGS | Signal strength of the packet in dBm. | `int16_t` | -60 |
| SIGQ | Signal quality of the packet in dB. | `int16_t` | 2 |
| TS | 64-bit MLAT counter value in hexadecimal format. | `uint64_t` | 00000000FB671342 |

## 5.7 Aircraft JSON WebSocket

The ADSBee 1090 exposes a WebSocket endpoint at ws://<device-ip>/aircraft that streams real-time aircraft data once per second. Each update consists of one JSON object per tracked aircraft, with objects separated by newline characters. The endpoint requires no authentication and supports up to 4 simultaneous connections. Connections that are idle for 90 seconds are automatically closed.

The ADSBee Aircraft JSON format is intended to be compatible with the JSON format emitted by readsb (https://github.com/wiedehopf/readsb/blob/dev/README-json.md).

| Parameter | Value | Description |
|---|---|---|
| URL | /aircraft | WebSocket URI path |
| Protocol | WebSocket (RFC 6455) | HTTP upgrade required |
| Update Rate | 1 Hz | Full aircraft list sent every 1000 ms |
| Max Clients | 4 | Simultaneous connections per device |
| Inactivity Timeout | 90 s | Connection closed if no data exchanged |
| Max Message Size | 4000 bytes | Per WebSocket frame |

### 5.7.1 Message Format

Each WebSocket message contains one or more newline-terminated JSON objects. Each object represents a single tracked aircraft. Fields are omitted when their data has not been received or is not applicable to the aircraft type; clients must treat absent fields as unknown rather than zero.

```
{"hex":"a1b2c3","type":"adsb_icao","flight":"UAL123
","lat":37.62345,"lon":-122.37812,"alt_baro":37000,"gs":480,"track":270.0,"baro_rate":0,"
nic":8,"nic_baro":1,"nac_p":9,"nac_v":2,"sil":3,"gva":2,"sda":2,"version":2,"rssi":-68,"m
essages":142}
{"hex":"c3d4e5","type":"adsb_icao","on_ground":1,"lat":37.61200,"lon":-122.38500,"alt_bar
o":0,"gs":12,"track":90.0,"nic":8,"nic_baro":1,"nac_p":9,"nac_v":2,"sil":3,"gva":2,"sda":
2,"version":2,"rssi":-71,"messages":23}
```



### 5.7.2 JSON Fields

| Field | Type | Condition | Mode S | UAT | Units | Description |
|---|---|---|---|---|---|---|
| hex | string | Always | ✓ | ✓ | — | 6-digit ICAO 24-bit address in lowercase hex. Non-ICAO addresses (adsb_other, tisb_trackfile, tisb_other, adsr_other) are prefixed with ~. |
| type | string | Always | ✓ | ✓ | — | Aircraft type. Mode S: adsb_icao (DF17), adsb_icao_nt (DF18 non-transponder), adsb_other (DF18 anonymous address), tisb_icao, tisb_trackfile, tisb_other (TIS-B), adsr_icao, adsr_other (ADS-R), mode_s (no ADS-B). UAT: adsb_icao, adsb_other, tisb_icao, tisb_trackfile, adsr_other. |
| flight | string | If callsign received | ✓ | ✓ | — | 8-character flight identifier / callsign, right-padded with spaces. |
| squawk | string | If squawk received | ✓ | ✓ | — | 4-digit octal transponder squawk code. |
| category | string | If category received | ✓ | ✓ | — | Emitter category in readsb A0-D7 format. Letter A-D = set 0-3; digit 0-7 = subcategory. |
| lat | number | If position valid | ✓ | ✓ | degrees | WGS-84 latitude, 5 decimal places (~1.1 m resolution). |
| lon | number | If position valid | ✓ | ✓ | degrees | WGS-84 longitude, 5 decimal places (~1.1 m resolution). |
| r_dst | number | If distance known | ✓ | ✓ | NM | Distance from the receiver position (see AT+RX_POSITION), 3 decimal places. Within 0.015% + 1 m of the WGS-84 geodesic distance up to 600 km. |
| r_dir | number | If distance known | ✓ | ✓ | degrees | Bearing from the receiver position, clockwise from true north, 1 decimal place. Within 0.2 degrees of the WGS-84 geodesic bearing. |
| alt_baro | integer | If baro altitude valid | ✓ | ✓ | ft | Barometric pressure altitude. |
| alt_geom | integer | If GNSS altitude valid | ✓ | ✓ | ft | Geometric (GNSS/GPS) altitude. |
| gs | integer | If speed valid | ✓ | ✓ | kt | Ground speed. |
| track | number | If direction valid, not heading | ✓ | ✓ | degrees | True track over ground, 1 decimal place. |

| | | | | | | |
|---|---|---|---|---|---|---|
| mag_heading | number | If heading valid, magnetic | ✓ | ✓ | degrees | Magnetic heading, 1 decimal place. |
| true_heading | number | If heading valid, true north | ✓ | ✓ | degrees | True heading, 1 decimal place. |
| baro_rate | integer | If baro vertical rate valid | ✓ | ✓ | ft/min | Barometric vertical rate of climb/descent. |
| geom_rate | integer | If GNSS vertical rate valid | ✓ | ✓ | ft/min | Geometric (GNSS) vertical rate of climb/descent. |
| nic | integer | Always | ✓ | ✓ | — | Navigation Integrity Category (0-11). |
| nic_baro | integer | Always | ✓ | ✓ | — | Navigation Integrity Category Barometric (0-4). |
| nac_p | integer | Always | ✓ | ✓ | — | Navigation Accuracy Category - Position (0-11). |
| nac_v | integer | Always | ✓ | ✓ | — | Navigation Accuracy Category - Velocity (0-4). |
| sil | integer | Always | ✓ | ✓ | — | Surveillance Integrity Level (0-3). |
| gva | integer | Always | ✓ | ✓ | — | Geometric Vertical Accuracy (0-2). |
| sda | integer | Always | ✓ | ✓ | — | System Design Assurance (0-3). |
| version | integer | Always (Mode S); if >= 0 (UAT) | ✓ | ✓ | — | ADS-B version number. |
| rssi | integer | Always | ✓ | ✓ | dBm | Last received signal strength. |
| messages | integer | Always | ✓ | ✓ | — | Total valid messages received from this aircraft since tracking began. |
| alert | integer (1) | If alert flag set | ✓ | ✗ | — | Present (value 1) when the Mode S alert flag is active. Mode S only. |
| spi | integer (1) | If SPI flag set | ✓ | ✗ | — | Present (value 1) when the aircraft is squawking ident (Special Position Identification). Mode S only. |
| emergency | string | If emergency status set | ✗ | ✓ | — | Emergency/priority status: none, general, lifeguard, minfuel, nordo, unlawful, downed, reserved. UAT only. |

| | | | | | | |
|---|---|---|---|---|---|---|
| on_ground | integer (1) | If on ground | ✓ | ✓ | — | Present (value 1) when aircraft is on the ground. For UAT, also set for surface vehicles. 1090 MHz: from ADS-B; from Mode S replies only after 30 s without ADS-B, never above 18,000 ft; absent until known. |