MILITARY SPECIFICATION

ADAPTER, TEST, MX-9042/G

1. SCOPE

1.1 This specification covers the design and test requirements for one type of test adapter for use with the AN/GWM-4 analyzer.

2. APPLICABLE DOCUMENTS

2.1 The following documents of the issue in effect on the date of invitation for bids or request for proposal form a part of the specification to the extent specified herein.

SPECIFICATIONS

Military

MIL-E-4158	Electronic Equipment, Ground; General Requirements For
MIL-D-1000	Drawings, Engineering, And Associated Lists
MIL-E-17555	Electronic And Electrical Equipment And Associated Repair Parts. Preparation For Delivery Of
MIL-C-25200	Cable Assemblies, Special Weapons, Electrical. General Specification For

STANDARDS

Military

MIL-STD-129	Marking For Shipment And Storage
MIL-STD-130	Identification Marking Of US Military Property
MIL-STD-810	Environmental Test Methods
MIL-STD-831	Test Reports, Preparation Of
MIL-STD-1472	Human Engineering Design Criteria For Military systems, Equipment And Facilities

DRAWINGS

Air Force

7036933-10	Test Adapter, MX-9042/C

(Copies of specifications, standards, drawings, and publications required by suppliers in connection with specific procurement functions should be obtained from the procuring activity or as directed by the contracting officer.)

Source: https://assist.dla.mil -- Downloaded: 2026-10-23T09:40Z
Check the source to verify that this is the current version before use.

3. REQUIREMENTS

3.1 Preproduction testing. This specification makes provisions for preproduction testing.

3.2 General. The requirements of MIL-E-4158 and MIL-C-25200 are applicable as requirements of this specification. When conflict occurs, the requirements of this specification shall govern.

3.2.1 Producibility. The test adapter shall be designed in such a manner as to utilize available-production facilities and methods to the maximum extent possible and to minimize the need for specialized tools and equipment.

3.2.2 Maintainability. The test adapter shall have a minimum number *of* parts consistent with reliability. The general principles Outlined in MIL-STD-1472 shall be adhered to.

3.3 Design and contruction. The design and construction of the test adapter shall be in conformance with Air Force Drawing 7036933-l0 and subsidiary drawings. Associated cabling shall be in accordance with MIL-C-25200.

3.3.1 Interchangeability. All parts having the same manufacturer's part number shall be functionally and dimensionally interchangeable.

3.4 Performance. The test adapter, when used In conjunction with the AN/GWM-4 analyzer, shall be capable of performing the necessary tests and checks to assure proper functioning of aircraft monitoring systems using the Control-Monitor Group AF/A24T-l and the DCU-9/A In-flight Control-Monitor. In addition, the test adapter and AN/GWM-4 Analyzer shall be capable of checking B52/Clip-In subassembly wiring system as required" The test adapter Shall provide the necessary conversion of circuitry to enable the analyzer to check l ach circuit of the systems to be tested.

3.5 Materials. Materials that are nutrients for fungi shall not be used where it is-practical to avoid them. Where used and not hermetically sealed, they shall be treated with a fungicidal agent acceptable to the procuring activity. However, if they are to be used in a hermetically sealed enclosure, fungicidal treatment till not be necessary.

3.5.1 Metals. Metals shall be of the corrosion-resist=t type or Shall be suitably treated to resist corrosion from mineral oils, salt spray, or at-spheric conditions likely to be met in storage or nomnal service.

3.5.2 Dissimilar metals. Dissimilar metals shell not be used in intimate contact with each other unless they are suitably protected against electrolytic corrosion.

3.6 Environmental requirements. The test adapter shall be capable of satisfactory performance during or after exposure to the following environmental conditions as specified:

a. High temperature, up to 71° Centigrade (C), 160° Farenheit (F) for a period of 50 hours (see 4.6.3.1).

b. Low temperature, between -54°C (-65°F) and -62°C (-80°F) (see 4.6.3.2) for a period of 72 hours.

Source: https://assist.dla.mil -- Downloaded: 2026l0-23T09:40Z
Check the source to verify that this is the currentversion before use.

Humidity of 95 percent with temperature ranging from 20°C (see 4.6.3.3) (68°F) to 71°C (160°F).

Vibration to be encountered during service and transportation (see 4.6.3.4).

e. Shot equal to being dropped from a vehicle when in transport (see 4.6.3.5) configuration.

3.7 Identification of product. Equipment assemblies and parts shall be marked for identification in accordance with MIL-STD-130.

3.8 Workmanship. The test adapter, including all parts and accessories, shall be fabricated and finished in a workmanlike manner to produce units free from defects. Particular attention shall be given to neatness and thoroughness of soldering, wiring, marking of parts and assemblies, plating, painting, machine screw assemblage, and freedom of parts from burrs and sharp edges.

4. QUALITY ASSURANCE PROVISIONS

4.1 Responsibility for inspection. Unless otherwise specified in the contract or purchase order, the supplier is responsible for the performance of all inspection requirements as specified herein. Except as otherwise specified in the contract or order, the supplier may use his own or any other facilities suitable for the performance of the inspection requirements specified herein, unless disapproved by the Government. The Government reserves the right to perform any of the inspections set forth in the specification where such inspections are deemed necessary to assure supplies and services conform to prescribed requirments.

4.2 Classification of tests. The inspection and testing of the adapter shall be as follows:

a. Preproduction tests (see 4.3).

b. Acceptance tests (see 4.4).

4.3 Reproduction tests. Preproduction tests shall consist of all tests described under 4.6.

4.3.1 Reproduction test samples. The preproduction test samples shall consist of models representative of the production items. They shall be tested at a laboratory designated by the procuring activity, or, When so stated in the contract, at the contractor's plant under supervision of the procuring activity.

4.3.2 Reproduction test report. When preproduction testing is performed at the contractor's plant, the contractor shall, after completion of the preproduction tests, prepare a preproduction test report in accordance with MIL-STD-831 and furnish complete copies of the report to the procuring activity.

Source: https://assist.dla.mil -- Downloaded: 2026-10-23T09:40Z
Check the source to verify that this is the current version before use.

4.4 Acceptance tests. Acceptance tests shall consist of the individual tests.

4.4.1 Individual tests. Each adapter shall be subjected to the following tests as described under 4.6 of this specification.

a. Examination of product

b. Conformance to drawings

c. Functional tests

4.4.2 Defects in items already accented. The investigation of a test failure could indicate that defects may exist in items already accepted. If so, the contractor shall fully advise the procuring activity of all defects likely to be found and methods of correcting them.

4.5 Test conditions. Unless otherwise specified, all tests prescribed by this specification shall be conducted at an atmospheric pressure of 28 to 32 inches of mercury and at a temperature of 25°C (77°F) ± l°C (l°F). Relative humidity shall be 80 percent or less.

4.5.1 Test power. Unless otherwise specified in specific tests, the testing power applied shall be 28 volts ± l volt direct current (DC).

4.6 Test methods.

4.6.1 Examination of product. Each adapter shall be examined to determine compliance with the requirements of this specification, including materials, workmanship, and ease or operation of controls.

4.6.2 Functional tests. Each adapter shall be subjected to the functional test in accordance with the procedures of 4.6.2.3.

4.6.2.1 Rejection and retest. ln the event an item fails to meet the appropriate indication requirement of any step of the test, the adapter shall be rejected, and after correction of cause of failure, shall be resubmitted for complete functional testing.

4.6.2.2 Preparation for functional tests. Prior to conducting the functional tests of 4.6.3,the Government loaned AN/GWM-4 must be verified for proper functioning in accordance with existing acceptance criteria.

4.6.2.3 Functional test procedures.

a. Connect the equipment as shown in Figure 1 with all preliminary switch settings as shown in Figure 2. Connect the power cable to a direct current power supply capable of delivery 10 amperes (amps). Connect a set of jumper wires between the following pins: P2B, P2C, P4-0, P4S, P4U, P4V, P8K, and P8L. Turn on the power supply. Place the AN/GWM-4 and test adapter power stitches (S6 and S1, respectively) in the “on” position. The power indicator lights shall illuminate. The AN/GWM-4 meter, M1, should read 115 ±10 microamperes for a 28 volt input. Check that the letter “S” (start) appears in the INSULATION RESISTANCE and CONTINUITY WINDOWS of the AN/GWM-4. If not, override to the “S” position using the AUTO-SCAN/OVERRIDE switch, S7. Check that the number “1” appears in the test adapter POSITION window. If not, advance to the number “1” position using the CIRCUIT ADVANCE switch, S3.

Source: https://assist.dla.mil -- Downloaded: 2026l0-23T09:40Z
Check the source to verify that this is the current version before use.

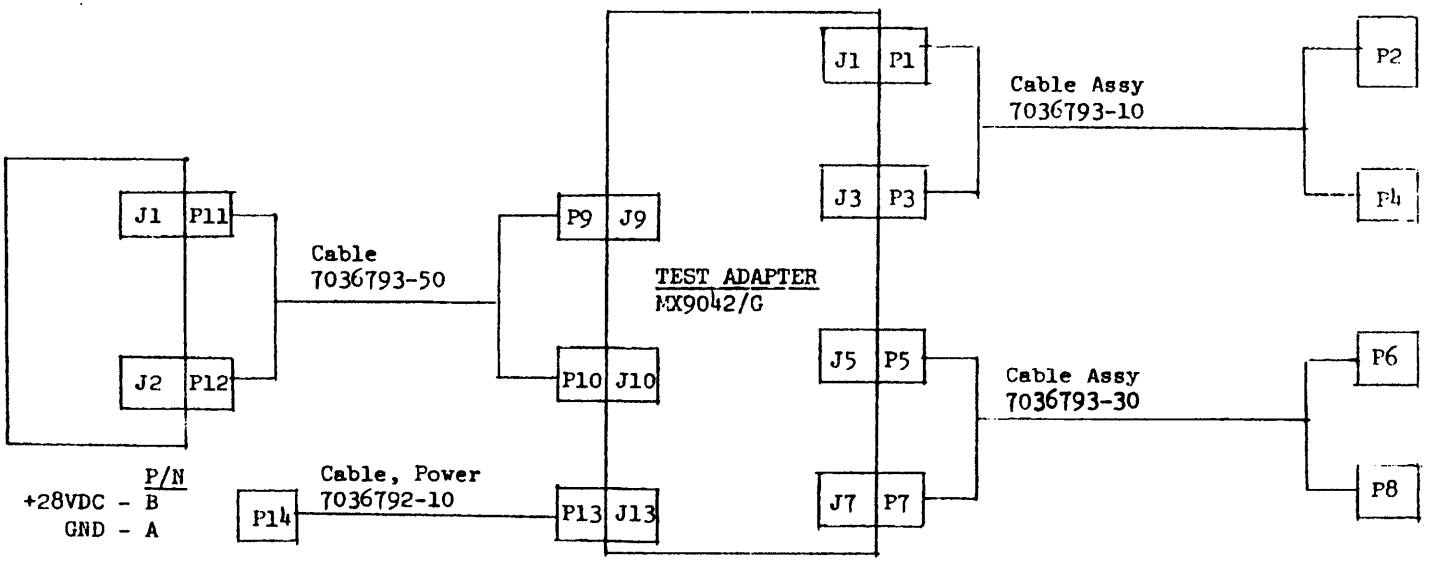


FIGURE 1 - Interconnecting Diagram for Functional Check of Adapter (Aircraft Circuits)

Source: https://assist.dla.mil -- Downloaded: 2026-10-23T09:40Z
Check the source to verify that this is the current version before use.

AN/GWM-4 - ANALYZER		
SWITCH		POSITION
S6	POWER	OFF
S4	CIRCUIT SELECTOR	2
S9	K1 RELAY	OFF
S10	K2 RELAY, SIGNAL	OFF
Sll	POLARITY	-28 VOLTS
S12	METER	2
S3	FUNCTION	INSULATION RESISTANCE.
S7	AUTO-SCAN, OVERRIDE	OFF
TEST ADAPTER - MX - 9042/G		
S1	POWER	OFF
S3	CIRCUIT ADVANCE	"1" in POSITION window
S4	RELEASE/SALVO	OFF
S5	SELECT	OFF
S6	LOAD	OFF

FIGURE 2

Preliminary Stitch Settings for Functional Check of Adapter

Source: https://assist.dla.mil -- Downloaded: 2026l0-23T09:40Z
Check the source to verify that this is the current version before use.

b. While holding the K1 RELAY switch, S9, in the “on” position, check for continuity between ground and P2L. Release S9 and place the AN/GWM-4 FUNCTION switch S3 in the CONTINUITY position. Check for ground at, P2H. Return S3 to the INSULATION RESISTANCE position momentary apply a ground to each of the “test circuit” pins listed in Table 1. The AN/GWM-4 FAULT light-, 13, shall illuminate on each step. Override back to the “S” position upon completion of step 23.

c. Momentarily energize the CIRCUIT ADVANCE switch S3 on the test adapter. The number “2” shall appear in the POSITION window. Momentarily override to step 1 on the AN/GWM-4. Check for the presence of +28 volts DC on each of the “test circuit” pins shown in Table 1.

d. Override to step 2 on the A2/GMW-4. Momentarily apply a ground to each of the “test circuit” pins listed in Table II for steps 2 through 17. The AN/GWM-4 FAULT light, I3, shall illuminate on each step.

e. Auto-scan back to the “S” position upon completion of step 17.

f. Place the FUNCTION switch, S3, on AX/GWM-4 in the CONTINUITY position and momentarily energize the CIRCUIT ADVANCE switch S3 on the test adapter until the number “1” appears in the POSITION window.

g. Connect a jumper as required by Table III to the listed “test circuit” pins . On each step the AN/GWM-4 FAULT light should go out upon connection of a Jumper. OVERRIDE to position 18, then AUTO-SCAN back to the “S” position.

h. Momentarily energize the CIRCUIT ADVANCE switch, S3, on the test adapter until the number "2" appears in the POSITION window.

i. Place the SIGNAL stitch, S10, in the “on” position. Check for the presence of +28 volts DC to P4G and P4K and ground at pin P4L. Place the SIGNAL switch to the “off” position.

WARNING: Do not apply voltage to test circuit pins longer than one or two seconds. Disregard any arc observed when removing power load from test circuit pin.

J. Apply 28 volts DC as required by Table IV to the listed test circuit pins. At each step, the AN/GWM-4 FAULT light should go out upon application of voltage except steps 15 and 16. At steps 15 and 16, the FAULT light will remain “off” after the voltage has been removed.

k. Override back to the “S” position.

1. With a PSM-6 on the RXl scale, check for 5.1 +.5 ohms between the following pins:

(1) P8M and P8T

(2) P8W and P8T

Source: https://assist.dla.mil -- Downloaded: 2026l0-23T09:40Z
Check the source to verify that this is the current version before use.

TABLE I - IR Test Circuits For Adapter Position 1

AN/GWM-4 STEP	TEST CIRCUIT PIN	AN/GWM-4 STEP	TEST CIRCUIT PIN
1	P4f	13	P4C
2	P4C	14	P6A
3	P4D	15	P6B
4	P4F	16	P6C
5	P4H	17	P6D
6	P4J	18	P6F
7		19	P6G
8	P4Z	20	P6H
9	P4R	21	P6J
10	P4T	22	P6K
11	P4W, P4Y	23	P6L
12	P4K		

TABLE II - IR Test Circuits For Adapter Position 2

AN/GWM-4 STEP	TEST CIRCUIT PIN	AN/GWM-4 STEP	TEST CIRCUIT PIN
1	ALL PINS OF TABLE I	9	P81
2	P6M	10	No Test
3	No Test	11	No Test
4	P2D	12	P4B
5	P2E	13	P4A
6	P2F	14	P4c
7	No Test	15	P4a
8	P8 B,D,E,F, G,N,R,T P2 M, K	16	P4 b,e,g,h,j,k,m,n
		17	P4X

Source: https://assist.dla.mil -- Downloaded: 2026l0-23T09:40Z
Check the source to verify that this is the current version before use.

TABLE III - Continuity Test Pins For Adapter Position 1

ANALYZER AN/GWM-4 STEP	TEST CIRCUIT PINS JUMPER	ANALYZER AN/GWM-4 STEP	TEST CIRCUIT PINS JUMPER
1	P4d to P4A	13	P4f to P4a
2	P4C to P4f	14	P4d to P4D
3	P4d to P4E	15	P4E to P4J
4	P4F to P4H	16	P4f to P47
5	P4d to P4P	17	P4d to P4A
6	P4d to P4T	18	
7	P4d to P4W	19	
8	P4d to P4Y	20	
9	P4d to P6D	21	
10	P4d to P4B	22	
11	P4d to P4R	23	
12	P4H to P4c		

Source: https://assist.dla.mil -- Downloaded: 2026-10-23T09:40Z
Check the source to verify that this is the current version before use.

m. Override to position 15 on the AN/GWM-4. Disregard the FAULT light indication. Momentarily place the RELEASE/SALVO switch in position “1.” The FAULT light should now be “off.”

n. Momentarily place the RELEASE/SALVO switch in position “2.” The FAULT light should not illuminate.

o. Override to position 16. The FAULT light should be “off.” Momentarily place the RELEASE/SALVO switch in position “1.” The FAULT light should now illuminate.

p. Again. place the RELEASE/SALVO switch in position “2.” The FAULT light should be “off.” Override back to the “S” position.

q. Check that the following pins are at ground potential: 8B, D, E, F, C, N, R, T; P2K, and P2M.

r. With the AN/GWM-4 RELAY switch, S9, in the “on” position, the following pins shall be at ground potential: P8A, C, H, and P. Release the K1 RELAY switch.

s. Momentarily energize the CIRCUIT ADVANCE switch, S3, on the test adapter until the number "3" appears in the POSITION window. Place the FUNCTION switch, S3, on the AN/GWM-4 in the INSULATION RESISTANCE position.

t. Rotate the SELECT switch, S5, on test adapter through positions 1 through 11 measuring continuity between the positive (red) meter binding post and the test circuit pins indicated in Table V.

u. Measure the resistance across the red and black binding posts while holding the test adapter LOAD switch, S6, in the “on” position. The resistance should be 50 $\pm$ 10 ohms. Turn off all power and remove all ground connections.

v. Disconnect cable assemblies 7036793-10 and 7036793-30 from the test adapter and reconnect them in accordance with Figure 3.

w. Connect jumpers between the following pins: P3S, O, U, and P1B. Turn on the power switch of the AN/GWM-4 and test adapter. Check that number “3” appears in the test adapter position window. Place the AN//GWM-4 FUNCTION switch, S3, in the CONTINUITY position and the SIGNAL switch, S10, in the “on” position.

x. Application of a ground to each of the test circuit pins shown in Table VI shall cause the AN/GWM-4 FAULT light to extinguish. Turn “off” the SIGNAL switch at step 18 and then override back to the “S” position. (CB2 on the AN/GWM-4 will trip if signal switch is “on” when step 22 is reached.)

y. Momentarily hold the RELEASE/SALVO switch, S4, on test adapter in the number 1 position. Check for the presence of +28 volts DC at pins PIA and P7M. Momentarily hold the RELEASE/SALVO switch in the number 2 position. Check for the presence of +28 volts DC at pins P1J and P7W.

z. While holding the K1 RELAY switch in the “on” position, check for the presence of +28 volts DC at pins H, K, L, and M of P5. While holding K1 RELAY switch “on” and placing the RELEASE/SALVO switch in number 2 position, check for +28 volts DC at pins P1A, P1J, P7M, and P7W.

Source: https://assist.dla.mil -- Downloaded: 2026-10-23T09:40Z
Check the source to verify that this is the current version before use.

TABLE IV - Continuity Test Pins For Adapter Position 2

ANALYZER AN/GWM-4 STEP	TEST CIRCUIT PINS APPLY 28V DC TO	ANALYZER AN/GWM-4 STEP	TEST CIRCUIT PINS APPLY 28V DC TO
1	P6L	13	P2J
2	P6H	14	P8I
3	P6K	* 15	P8M
4	P6M	** 16	P8W
5	P2E	17	P6A
6	P2F	18	No Test
7	No Test	19	No Test
8	P6F	20	P2D
9	P6G	21	No Test
10	No Test	22	No Test
11	No Test	23	No Test
12	P2A		

* If the AN/GWM-4 FAULT light is off at this step, momentarily PLACE the RELEASE/SALVO swith in position 2. The FAULT light should then illuminate. Hold S7 in the FWD position while performing this step.

** Hold S7 in the REAR position while performing this step.

TABLE V - Stray Voltage Test Pins, Adapter Position 3

S5 POSITION	TEST CIRCUIT PIN	S5 POSITION	TEST CIRCUIT PIN
1	P2A	8	P4E
2	P2J	9	P4d
3	P8I	10	P4f, P4C, P4d, P4F P4H, P4J, P4Z, P4R P4T, P4W, P4Y, P4K, P4G, P6A, P6B, P6C, P6D, P6F, P6G, P6H, P6J, P6K, P6M, P2D, P2E, P2F, P4B, P4A, P4a, P4b, P4e, P4g, P4h, P4j, P4k, P4M, P4N
4	P8M		
5	P8W		
6	P4X		
7	P4P		
		11	P4c

Source: https://assist.dla.mil -- Downloaded: 2026-10-23T09:40Z
Check the source to verify that this is the current version before use.

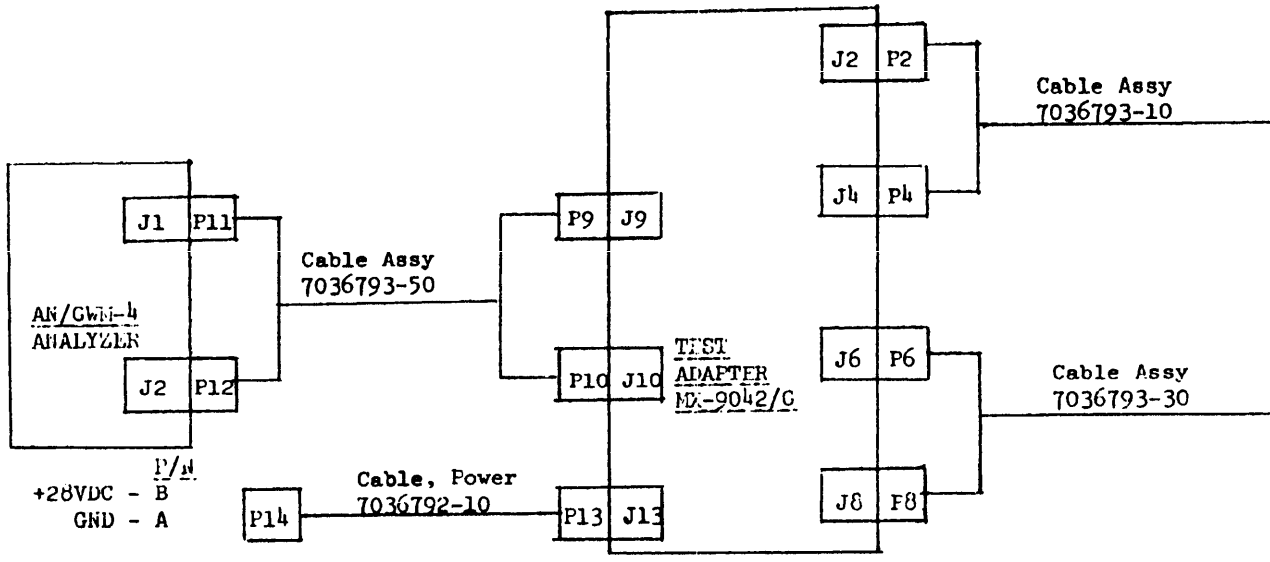


FIGURE 3 - Interconnecting Diagram for Functional Check of Adapter (Clip-In Circu

Source: https://assist.dla.mil -- Downloaded: 2026-10-23T09:40Z
Check the source to verify that this is the current version before use.

aa. Momentarily energize the CIRCUIT ADVANCE switch, S3, until the number one appears in the POSITION window of the test adapter.

bb. Connect jumper as required by Table VII. On each step the FAULT light should extinguish; except step 14 which requires energizing the K1 RELAY switch, S9. This completes all tests.

4.6.3 Environmental tests.

4.6.3.1 High temperature. The test adapter shall satisfy the high temperature test described In method 501, procedure 1 of MIL-STD-810, except that the test adapter shall be stabilized at ambient temperature prior to operation.

4.6.3.2 Low temperature. The test adapter shall satisfy the high temperature test described in method 5-2 of MIL-STD-810.

4.6.3.3 Humidity test. The test adapater shall satisfy the humidity test described in method 507, procedure 1 of MIL-STD-810.

4.6.3.4 Vibration test. The test adapter shall be subjected to the vibration test described in method 514, procedure XI of MIL-STD-810, except that the lower frequency shall be 5 Hz.

4.6.3.5 Shock test. The test adapter shall be subjected to the shock test described in method 516, procedure II of MIL-STD-810.

4.6.4 Rejection. -Failure of the test sample to satisfy the functional tests during or after enviromental test as required in the specific environmental test, shall be considered as failure to satisfy the environmental test and cause for rejection. This does not apply to the rain or fungus tests.

5. PREPARATION FOR DELIVERY

5.1 Preservation, packing, and packaging. Preservation, Packing, and packaging for shipment shall be in accordance with MIL-E-17555.

5.2 Marking for shipment and storage. Interior and exterior shiping containers shall be marked in accordance with MIL-STD-129.

6. NOTES

6.1 Intended use. The test adapter, MX-9042/G, is intended to be used in conjunction with the AN/GWM-4 analyzer to check B-52 aircraft weapons monitoring and release system wiring. The test adapter also performs continuity test on the MHU-14/C, -20/C, -23/C, and -29/C clip-ins.

6.2 ordering data. Procurement documents should specify the following:

a. Title, number, and date of this specification.

b. Selection of applicable levels of preservation, packing, and packaging (see Section 5).

Custodian:
Air Force - 79

Review Activity:
Air Force - 15

Preparing Activity:
Air Force - 79

Project No. 1190-F008

Source: https://assist.dla.mil -- Downloaded: 2026-10-23T09:40Z
Check the source to verify that this is the current version before use.

TABLE VI - Clip-In Test Pins, Adapter Position 3

ANALYZER AN/GWM-4 STEP	TEST CIRCUIT PIN	ANALYZER AN/GWM-4 STEP	TEST CIRCUIT PIN
1	P7N, P1C	10	P7H
2	P7F, P1H	11	P7A
3	P7B, P1L	12	P7C
4	P7D, P1K	13	P7K
5	P7G	14	P7L
6	P7R	15	P3L
7	P7E	16	P3K
8	P7T	17	P3G
9	P7P	* 18	No Test

* Place SIGNAL switch in "off" position.

TABLE VII - Clip-In Test Pins, Adapter Position 1

ANALYZER AN/GWM-4 STEP	TEST CIRCUIT PINS CONNECT JUMPER	ANALYZER AN/GWM-4 STEP	TEST CIRCUIT PINS CONNECT JUMPER
1	P3f to P3c	8	P3d to P3W
2	P3C to P3B	9	P3Z to P3X
3	P3a to P3T	10	P3E to P3D
4	P3H to P3F	11	P5C to P3d
5	P3A to P3P	12	P5D to P3a
6	P3R to P3J	13	No Test
7	P3Y to P3W	* 14	P3Y to P3D

* Energize K1 RELAY Switch (AN/GWM-4)

Source: https://assist.dla.mil -- Downloaded: 2026-10-23T09:40Z
Check the source to verify that this is the current version before use.

FOLD

POSTAGE AND FEES PAID

DEPARTMENT OF THE AIR FORCE

OFFICIAL BUSINESS

SAAMA/SWRCS
Kelly AFB TX 78241

FOLD

Source: https://assist.dla.mil -- Downloaded: 2026-10-23T09:40Z
Check the source to verify that this is the current version before use.

SPECIFICATION ANALYSIS SHEET

Form Approved
Budget Bureau No. 22-R255

INSTRUCTIONS: This sheet is to be filled out by personnel, either Government or contractor, involved in the use of the specification in procurement of products for ultimate use by the Department of Defense. This sheet is provided for obtaining information on the use of this specification which will insure that suitable products can be procured with a minimum amount of delay and at the least cost. Comments and the return of this form will be appreciated. Fold on lines on reverse side, staple in corner, and send to preparing activity. Comments and suggestions submitted on this form do not constitute or imply authorization to waive any portion of the referenced document(s) or serve to amend contractual requirements.

SPECIFICATION

ORGANIZATION

CITY AND STATE

CONTRACT NUMBER

MATERIAL PROCURED UNDER A

☐ DIRECT GOVERNMENT CONTRACT ☐ SUBCONTRACT

1. HAS ANY PART OF THE SPECIFICATION CREATED PROBLEMS OR REQUIRED INTERPRETATION IN PROCUREMENT USE?

A. GIVE PARAGRAPH NUMBER AND WORDING.

B. RECOMMENDATIONS FOR CORRECTING THE DEFICIENCIES

2. COMMENTS ON ANY SPECIFICATION REQUIREMENT CONSIDERED TOO RIGID

3. IS THE SPECIFICATION RESTRICTIVE?

☐ YES ☐ NO *(If "yes", in what way?)*

4. REMARKS *(Attach any pertinent data which may be of use in improving this specification. If there are additional papers, attach to form and place both in an envelope addressed to preparing activity)*

SUBMITTED BY *(Printed or typed name and activity - Optional)*

DATE

DD FORM 1 JAN 66 1426

REPLACES EDITION OF 1 OCT 64 WHICH MAY BE USED.

Source: https://assist.dla.mil -- Downloaded: 2026-10-23T09:40Z
Check the source to verify that this is the current version before use.

NOTICE OF INACTIVATION
FOR NEW DESIGN

INCH-POUND

MIL-A-83783(USAF)
NOTICE 3
12 JULY 1995

MILITARY SPECIFICATION

ADAPTER, TEST, MX-9042/G

This notice should be filed in front of MIL-A-83783(USAF)
dated 13 March 1972

MIL-A-83783 (USAF), is inactive for new design and is no longer used except for replacement purposes.

Custodian:
Air Force-79

Review Activity:
Air Force-15

Preparing Activity:
Air Force - 79

(Project 1190-0040)

AMSC N/A

FSC 1190

DISTRIBUTION STATEMENT A. Approved for public release; distribution is unlimited.

Source: https://assist.dla.mil -- Downloaded: 2026-10-23T09:40Z
Check the source to verify that this is the current version before use.