MIL-T-83507/13(USAF)
28 November 1977


SUPERSEDING
MIL-C-22520/13A(USAF) 1/
19 November 1976

MILITARY SPECIFICATION SHEET

TOOL KITS, ELECTRICAL CONNECTORS, CONTACTS, AND CONNECTOR AND CABLE ACCESSORIES: TOOL KIT FOR F15 AIRCRAFT CONNECTOR SYSTEMS

This specification is approved for use by the Engineering and Technical Support Division (AFLC/LOIE), Department of the Air Force, and is available for use by all Departments and Agencies of the Department of Defense.

The complete requirements for procuring the tool kit described herein shall consist of this document and the latest issue of Specification MIL-T-83507.

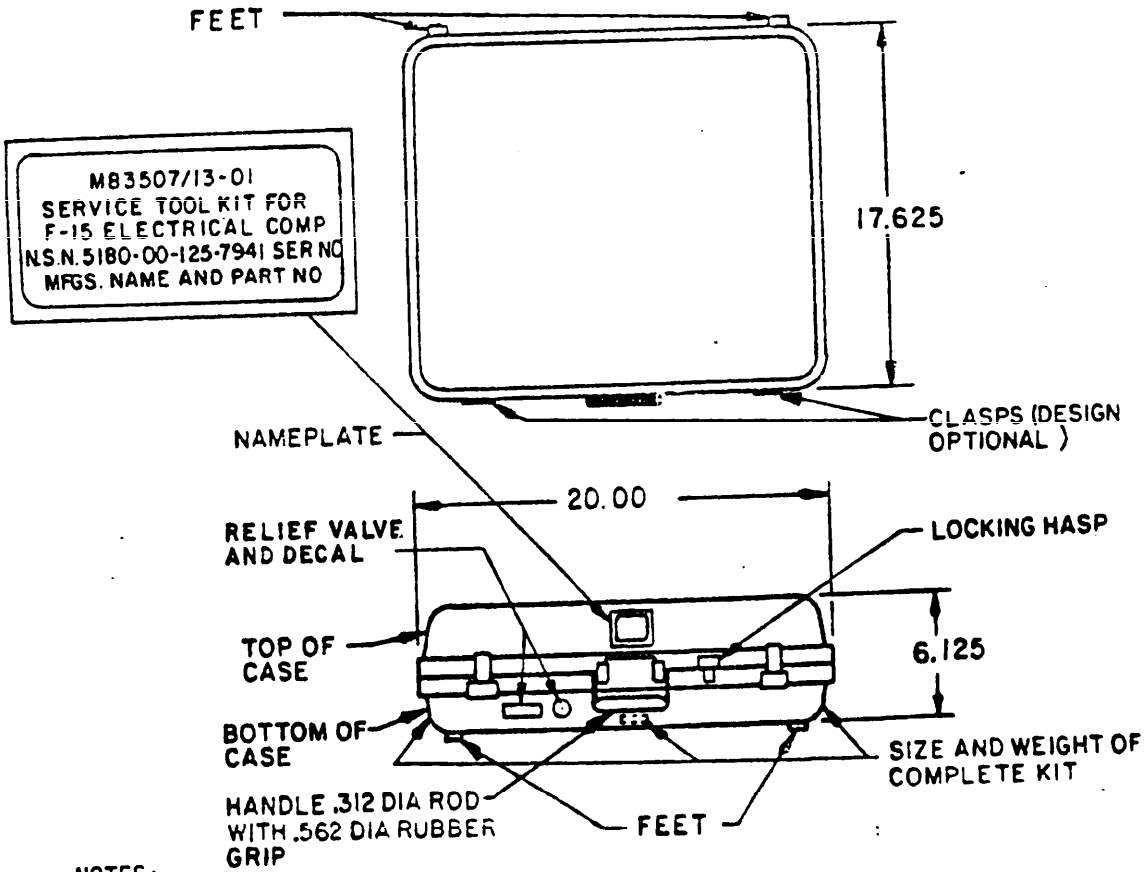

NOTES:
1. For drawing notes and metric equivalents, see figure 5.
2. Part number M83507/13-01 includes case and tools.

FIGURE 1. Tool kit for F15 aircraft connector systems.

1/ This specification sheet supersedes only part numbers M22520/13-01 and M22520/13-04.

FSC 5180

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

PARTS LIST:

(1)	M83507/13-02	- Tool case assembly.
(1)	M22520/2-01	- Crimp tool frame.
(1)	M22520/2-02	- Positioner.
(1)	M22520/2-06	- Positioner.
(1)	M22520/2-07	- Positioner.
(1)	M22520/2-09	- Positioner.
(1)	M22520/2-10	- Positioner.
(1)	M22520/2-24	- Positioner.
(1)	Daniels K413	- Positioner (or approved equivalent).
(1)	Daniels K392	- Positioner (or approved equivalent).
(1)	Daniels K160	- Positioner (or approved equivalent).
(1)	Daniels K74S	- Positioner (or approved equivalent).
(1)	Daniels K30C	- Positioner (or approved equivalent).
(1)	Ideal 45-1758	- Wire stripper, 12-14 AWG, Kapton insulated wire (or approved equivalent).
(1)	Ideal 45-1633	- Wire stripper, 16-26 AWG, Kapton insulated wire (or approved equivalent).
(1)	Ideal 45-1316	- Wire stripper 16-26 AWG, Teflon insulated wire (or approved equivalent).
(1)	Daniels HX3-82	- Die removal pin (or approved equivalent).
(1)	M22520/3-01	- Gage
(1)	Daniels G244	- Gage (or approved equivalent).
(1)	Daniels 9/64	- Hex wrench (or approved equivalent).
(1)	M22520/1-01	- Crimp tool frame.
(1)	M22520/1-02	- Turret head.
(1)	M22520/1-04	- Turret head.
(1)	M22520/1-12	- Turret head.
(1)	M22520/1-13	- Turret head.
(1)	M22520/1-14	- Turret head.
(1)	Daniels TH317	- Turret head (or approved equivalent).
(1)	M22520/1-15	- Single position turret head.
(1)	Daniels TP120	- Single position turret head (or approved equivalent).
(1)	M22520/5-01	- Crimp tool frame.
(1)	M22520/5-03	- Hex die set.
(1)	M22520/5-05	- Hex die set.
(1)	M22520/5-10	- Hex die set.
(1)	M22520/5-19	- Hex die set.
(1)	M22520/5-23	- Hex die set.
(1)	M22520/5-33	- Hex die set.
(1)	M22520/5-35	- Hex die set.
(1)	Daniels Y248	- Hex die set (or approved equivalent).
(1)	Daniels Y501	- Die set (or approved equivalent).
(1)	M22520/5-61	- Hex die set.
(1)	M22520/5-45	- Hex die set.

FIGURE 1. Tool kit for F15 aircraft connector systems - Continued.


Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

PARTS LIST -Continued.

(1)	M22520/5-41	- Hex die set.
(1)	Ideal 45-123	- Wire cutters (or approved equivalent).
(1)	Marking pencil	- Grease type.
(1)	Amphenol 294-264	- Daniels DRK114-12 Removal Tool (or approved equivalent).
(1)	Burndy RX8-1	- Daniels DRK58-8 Removal Tool (or approved equivalent).
(1)	MS27495A12	- Installing tool.
(1)	MS27495A16	- Installing tool.
(1)	MS27495A20	- Installing tool.
(1)	MS27495A22	- Installing tool.
(1)	MS27495A22M	- Installing tool.
(1)	Deutsch M15513-25	- Daniels DAK51-8 installing tool (or approved equivalent).
(1)	MS27495R12	- Removal tool.
(1)	MS27495R16	- Removal tool.
(1)	MS27495R20	- Removal tool.
(1)	MS27495R22	- Removal tool.
(1)	MS27495R22M	- Removal tool.
(1)	Bendix 11-10050-1,	- Daniels DRK105-22M removal tool (or approved equivalent).
(1)	Bendix 11-10050-2	- Daniels DRK105-22 removal tool (or approved equivalent).
(1)	Bendix 11-10050-3,	- Daniels DRK105-20 removal tool (or approved equivalent).
(1)	Bendix 11-10050-4,	- Daniels DRK105-16 removal tool (or approved equivalent).
(1)	Bendix 11-10050-5	- Daniels DRK105-12 removal tool (or approved equivalent).
(1)	Deutsch M15515-25	- Daniels DRK51-8 removal tool (or approved equivalent).
(1)	Deutsch M15515-20	- Daniels DRK51-20 removal tool (or approved equivalent).
(1)	MS3448-001	- Removal tool.
(1)	MS3448-001A	- Probe.
(1)	MS3448-001B	- Probe.
(1)	MS3448-001C	- Probe.
(10)	MS27534-12	- Installing removal tool.
(10)	MS27534-16	- Installing removal tool.
(20)	MS27534-20	- Installing removal tool.
(20)	MS27534-22D	- Installing removal tool.
(3)	ONO89564	- Installing tool.
(3)	ONO89565	- Removal tool.
(1)	Bendix 11-9170	- Removal tool (or approved equivalent).
(1)	Daniels DRK87-8	- Removal tool (or approved equivalent).
(1)	Daniels DAK87-8	- Installing tool (or approved equivalent).
(1)	MS24256A12	- Installing tool.
(1)	MS24256A16	- Installing tool.
(1)	MS24256A20	- Installing tool.
(1)	MS24256R12	- Removal tool.
(1)	MS24256RH16	- Installing/removal tool.
(1)	MS24256RH20	- Installing/removal tool.
(1)	Daniels Y516	- Die set (or approved equivalent).
(1 set)	Contents charts, instruction sheets, and tool selection chart.	

FIGURE 1. Tool kit for F15 aircraft connector systems - Continued.


Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

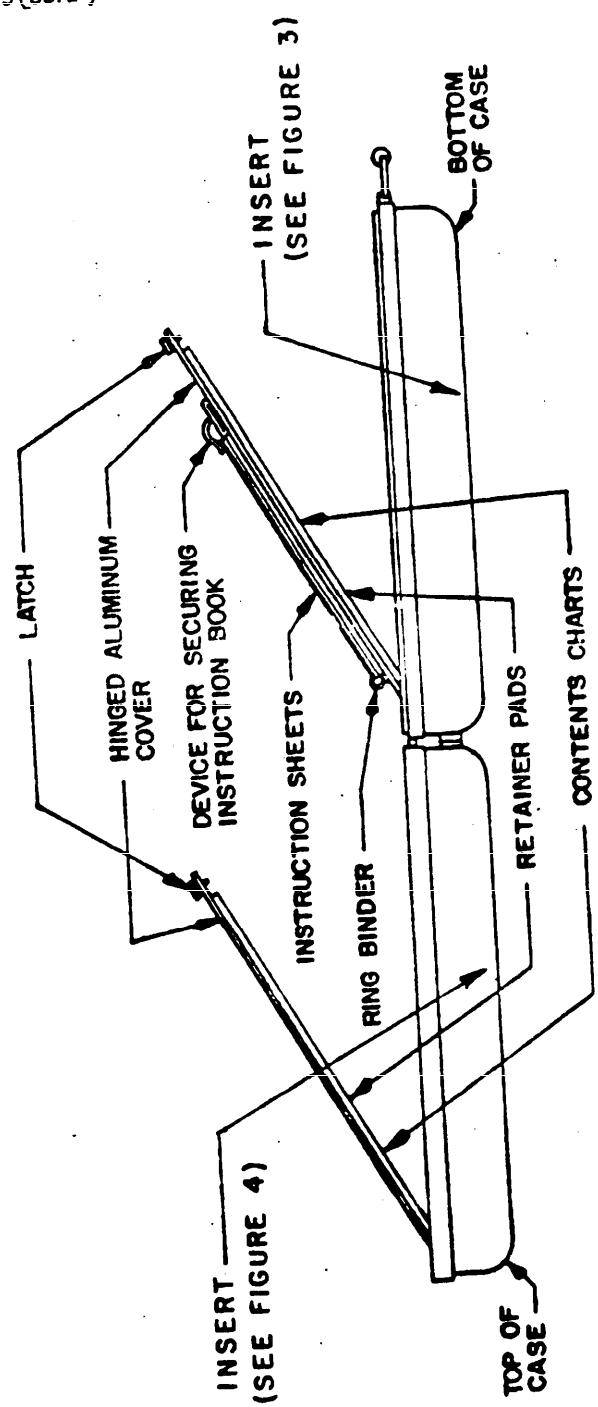

NOTES:
1. See figure 5, note 4.
2. Part number M83507/13-02 for case only (tools not included).

FIGURE 2. Tool case assembly.


Source: https://assist.dla.mil -- Downloaded: 202610-26T04:45Z
Check the source to verify that this is the currentversion before use.

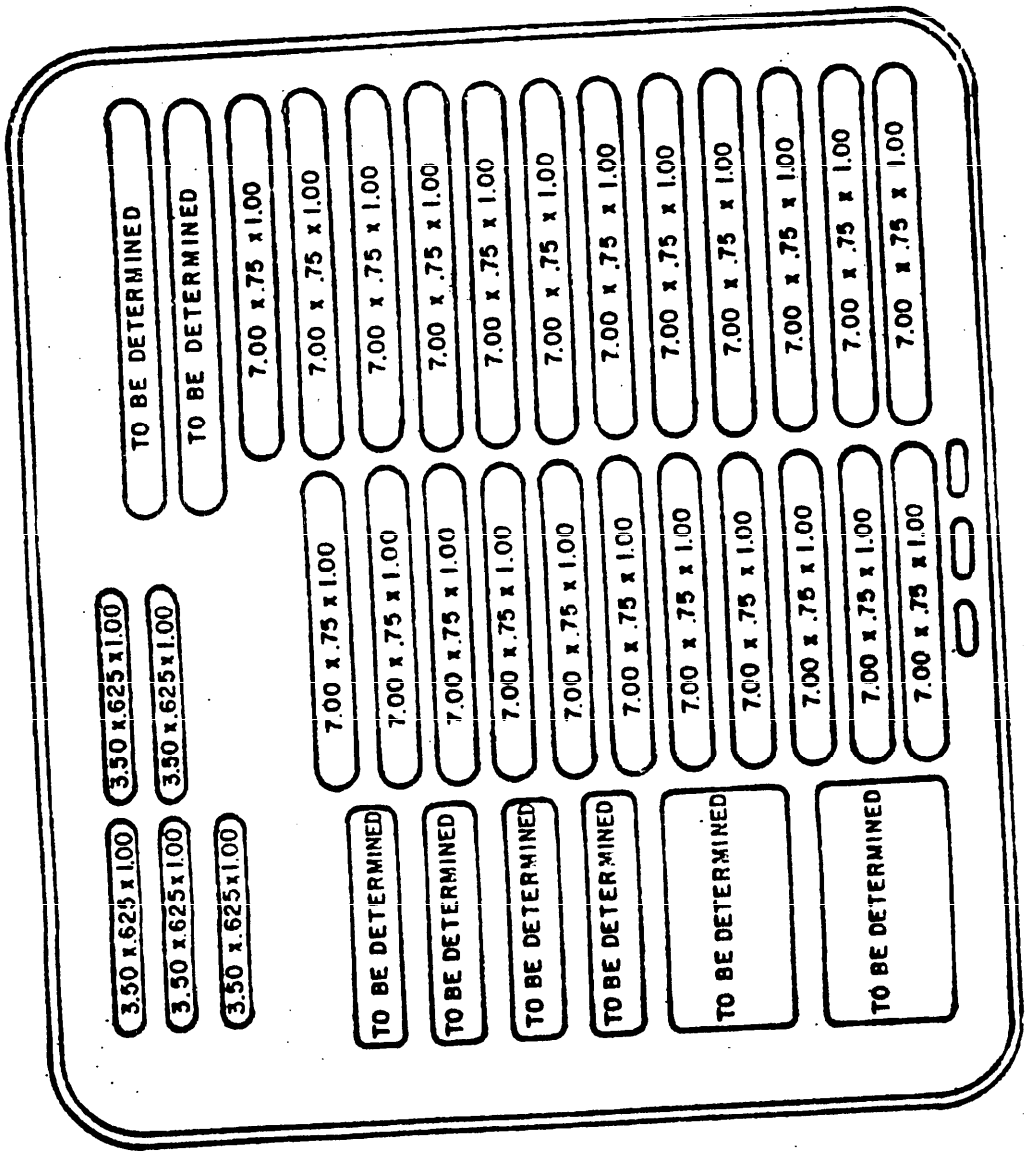

NOTES:
1. For drawing notes and metric equivalents, see figure 5.
2. This insert is part of the tool case assembly (see figure 2).

FIGURE 3. Insert (top of case).

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

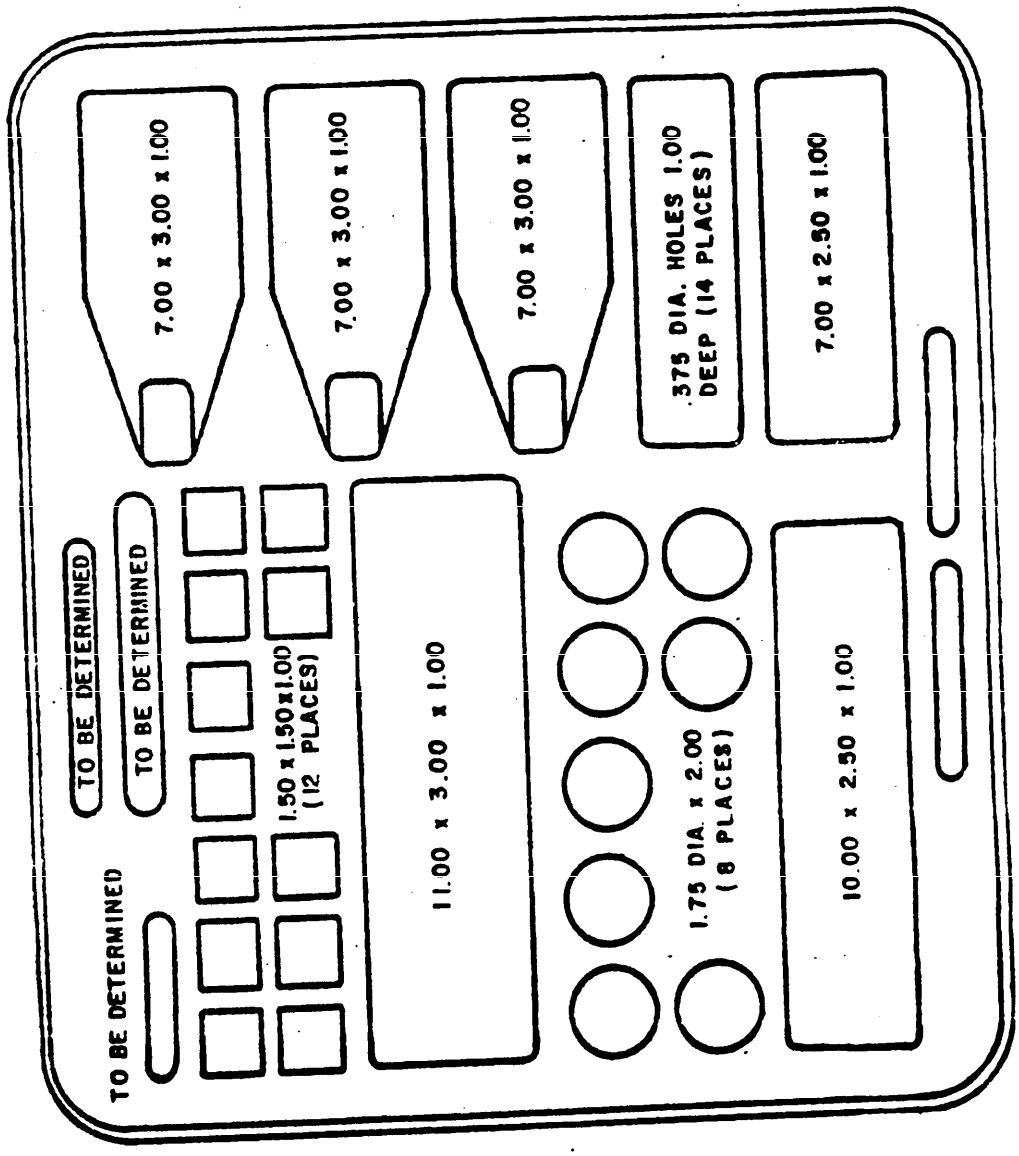

NOTES:
1. For drawing notes and metric equivalents, see figure 5.
2. This insert is part of the tool case assembly (see figure 2).

FIGURE 4. Insert (bottom of case).

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

INCHES	MM	INCHES	MM	INCHES	MM	INCHES	MM
.312	7.92	1.00	25.4	3.00	76.2	11.00	279.4
.375	9.52	1.50	38.1	3.50	88.9	17.625	447.68
.562	14.27	1.75	44.4	6.125	155.58	20.00	508.0
.625	15.88	2.00	50.8	7.00	177.8		
.75	19.0	2.50	63.5	10.00	254.0		


NOTES:
1. Dimensions are in inches.
2. Metric equivalents are given for general information only and are based upon 1.00 inch = 25.4 mm.
3. Unless otherwise specified, tolerance is ±.125 (3.18 mm).
4. Remove all burrs, break sharp edges and corners.

FIGURE 5. Drawing notes and metric equivalents.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

WARNING: FOREIGN OBJECT DAMAGE (FOD) CAN ABORT A MISSION OR A LIFE. MAKE SURE ALL TOOLS ARE ACCOUNTED FOR AFTER USING THIS KIT.

CONTENTS CHART

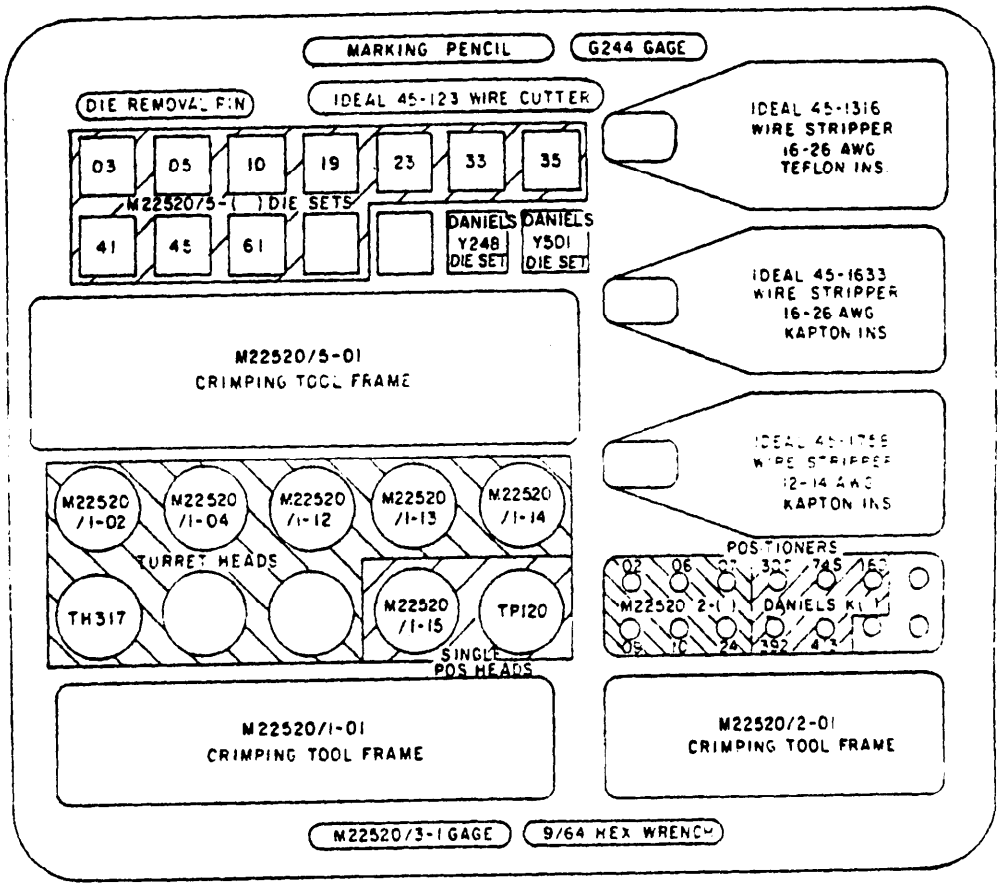


CONTENTS CHART (BOTTOM)

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

WARNING: FOREIGN OBJECT DAMAGE (FOD) CAN ABORT A MISSION OR A LIFE. MAKE SURE ALL TOOLS ARE ACCOUNTED FOR AFTER USING THIS KIT.

CONTENTS CHART

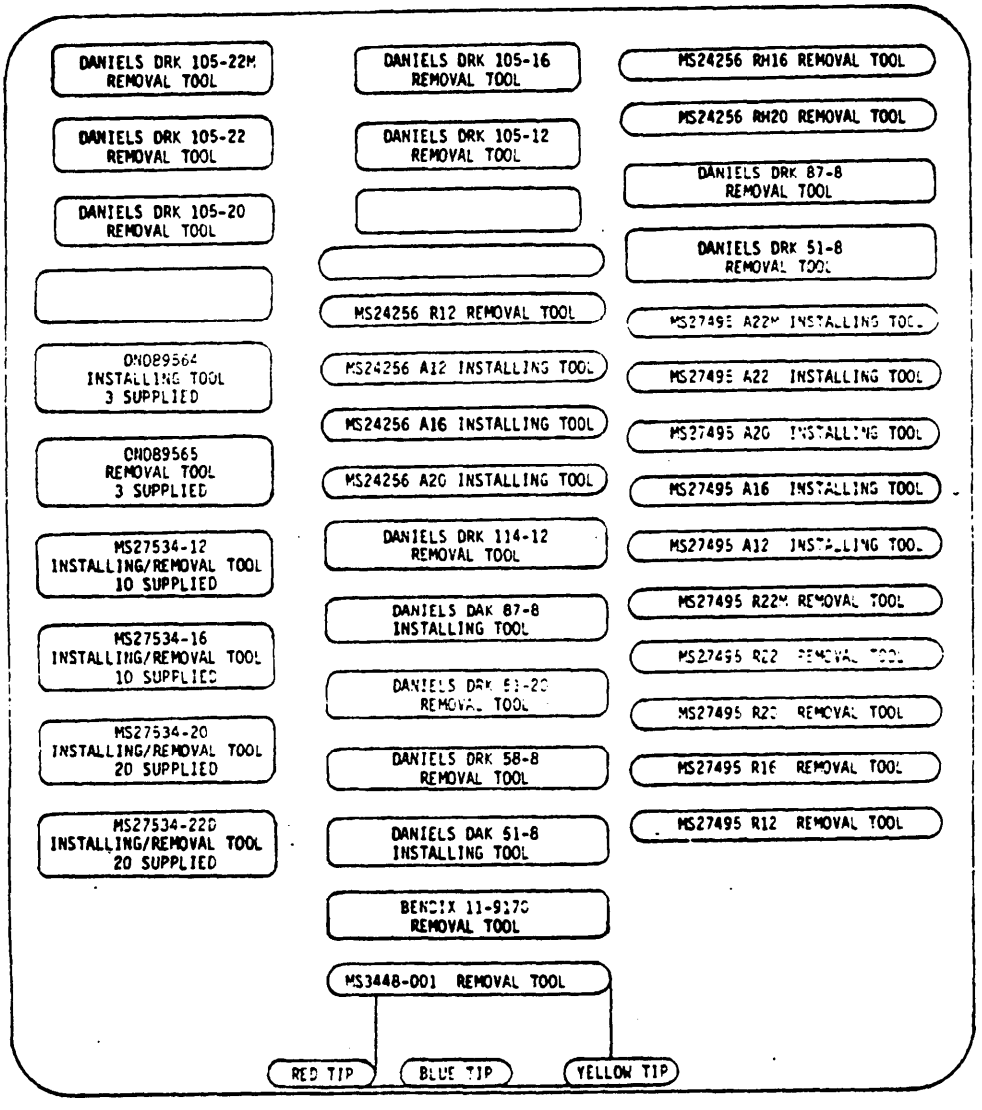

CONTENTS CHART (TOP)

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

INSTRUCTION SHEETS ARE AS FOLLOWS:

PROCEDURE FOR STRIPPING WIRE WITH HAND STRIPPER


STEP A: SELECT CORRECT HOLE TO MATCH WIRE GAGE.

STEP B: BLADES REMAIN OPEN UNTIL WIRE IS REMOVED. BE CAREFUL NOT TO NICK OR CUT STRANDS

STEP C: STRIPPING IS COMPLETED.

1. Determine the proper length of insulation to be removed. Wire must be visible in inspection hole, insulation must be between .016 and .031 from end of contact or inside of insulation cup.
2. Insert wire into exact center of correct cutting slot for wire size to be stripped; each slot is marked with wire size.
3. Close handles together as close as possible.
4. Release handles, allowing wire holder to return to open position.
5. Remove stripped wire.
6. After stripping, strands of wire should be twisted firmly together in the same direction as the normal lay of the wire.
7. Stripped wire with nicked or cut strands is not acceptable.


Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

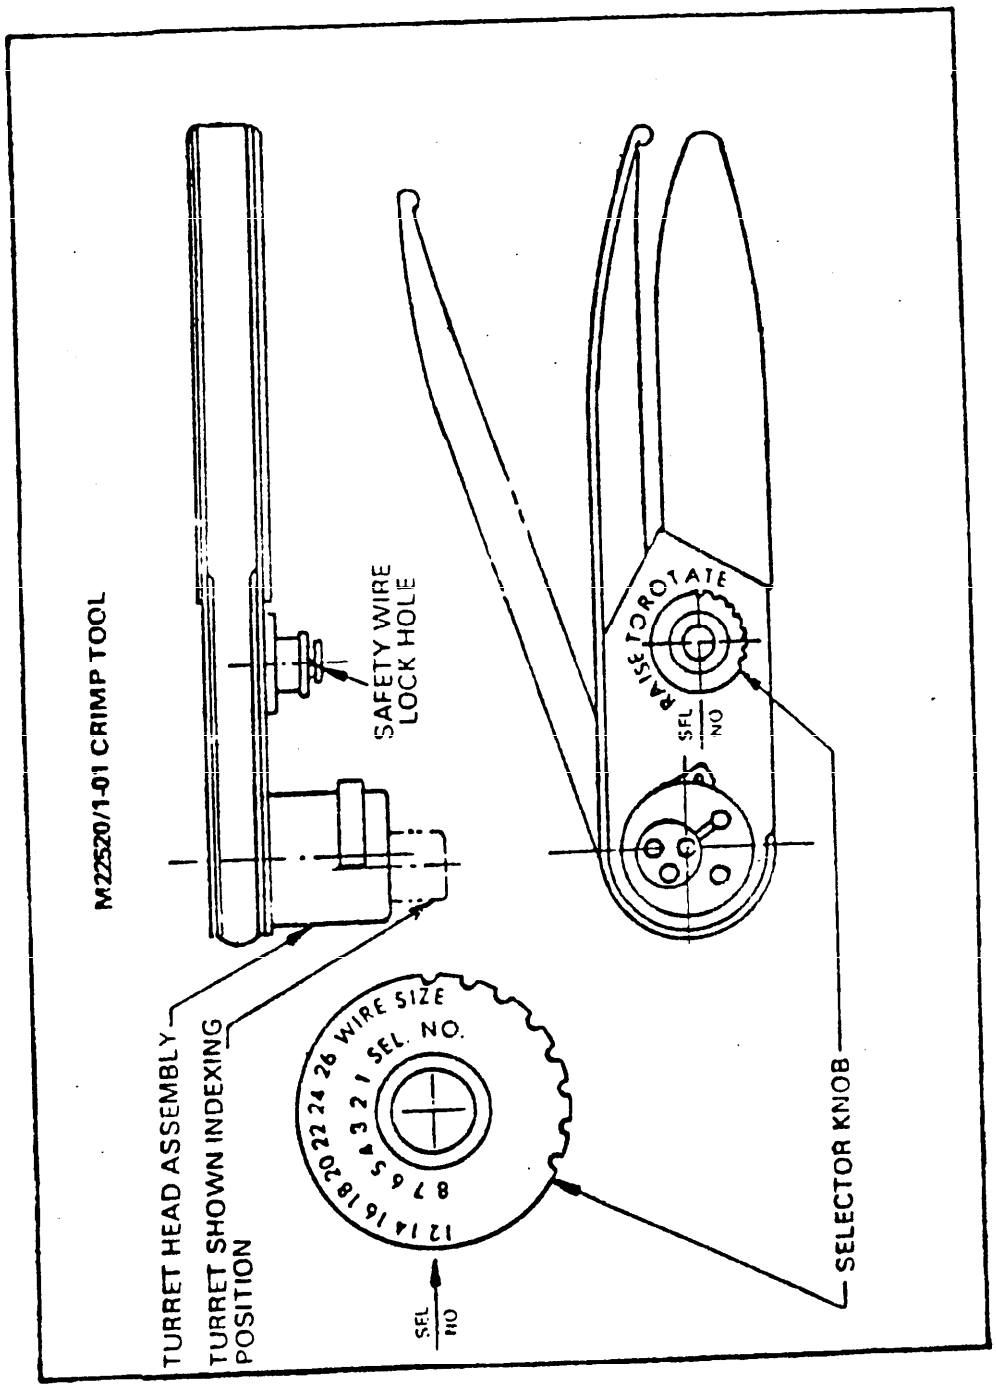

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

Instructions For Using Indenter Closure Selector


1. Refer to data plate on Turret Head Assembly. Below the wire size and opposite the contact size is listed the correct indenter closure number.
2. Remove the spring clip lock from selector knob.
3. Tool must be in open position when using selector.
4. Raise selector knob and rotate to desired selector number.
5. Replace the spring clip and tool is ready for use.
6. Repeat instruction procedures when changing contact and/or wire sizes.

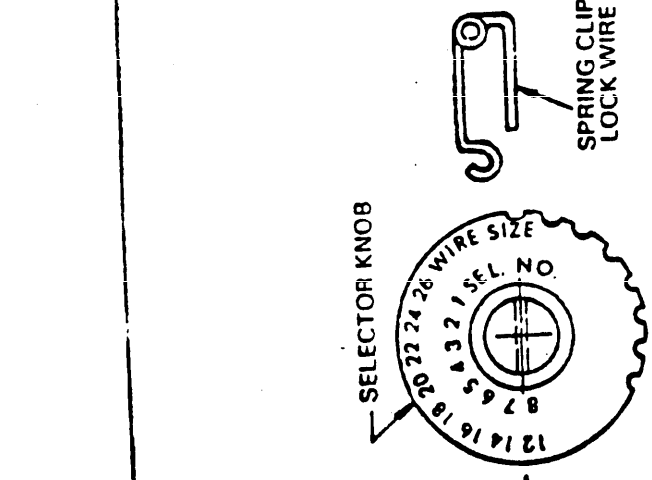

CONTACT	COLOR CODE	26	24	22	20	18	16	14	12	WIRE SIZE
-20	RED	1	2	3	4					SEL. NO.
-16	BLUE				4	5	6			
-12	GREEN							7	8	

TYPICAL DATA PLATE


Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

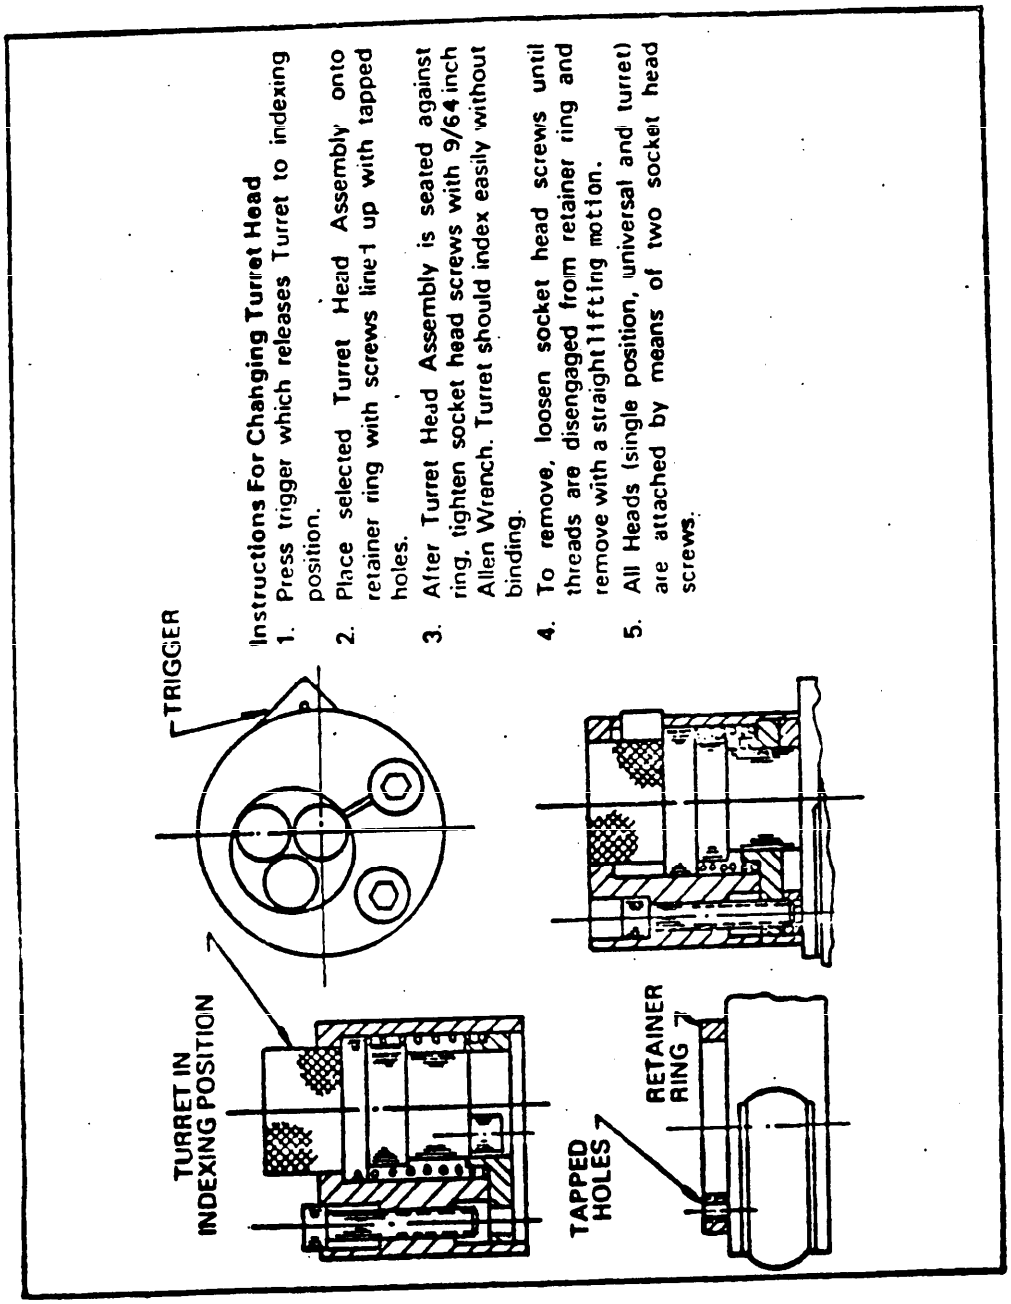


Instructions For Changing Turret Head

1. Press trigger which releases Turret to indexing position.
2. Place selected Turret Head Assembly onto retainer ring with screws lined up with tapped holes.
3. After Turret Head Assembly is seated against ring, tighten socket head screws with 9/64 inch Allen Wrench. Turret should index easily without binding.
4. To remove, loosen socket head screws until threads are disengaged from retainer ring and remove with a straight lifting motion.
5. All Heads (single position, universal and turret) are attached by means of two socket head screws.


Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

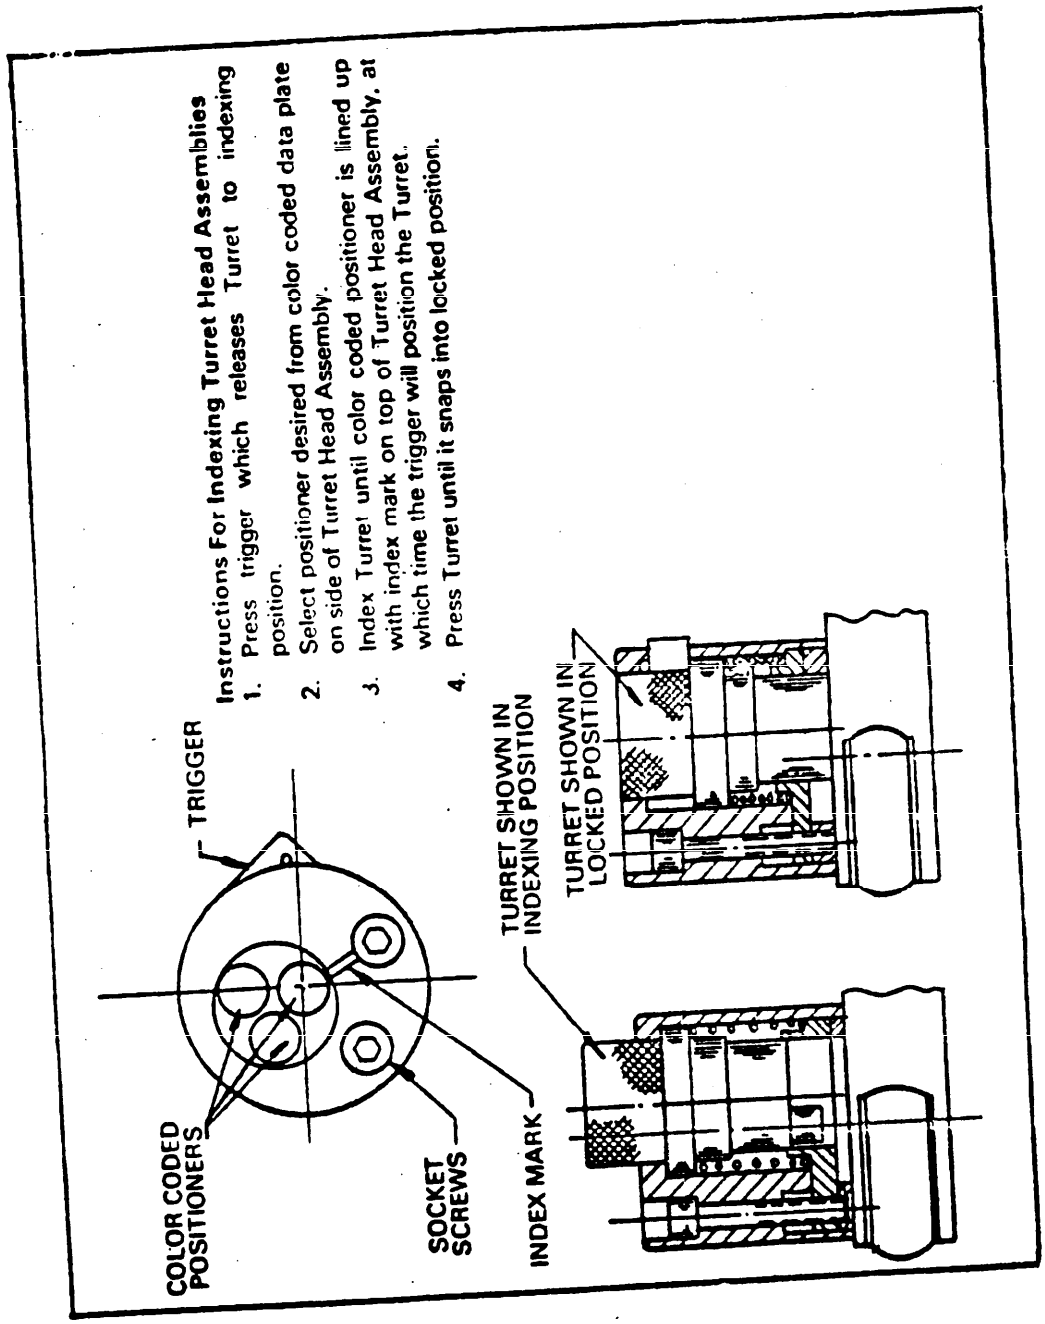


Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

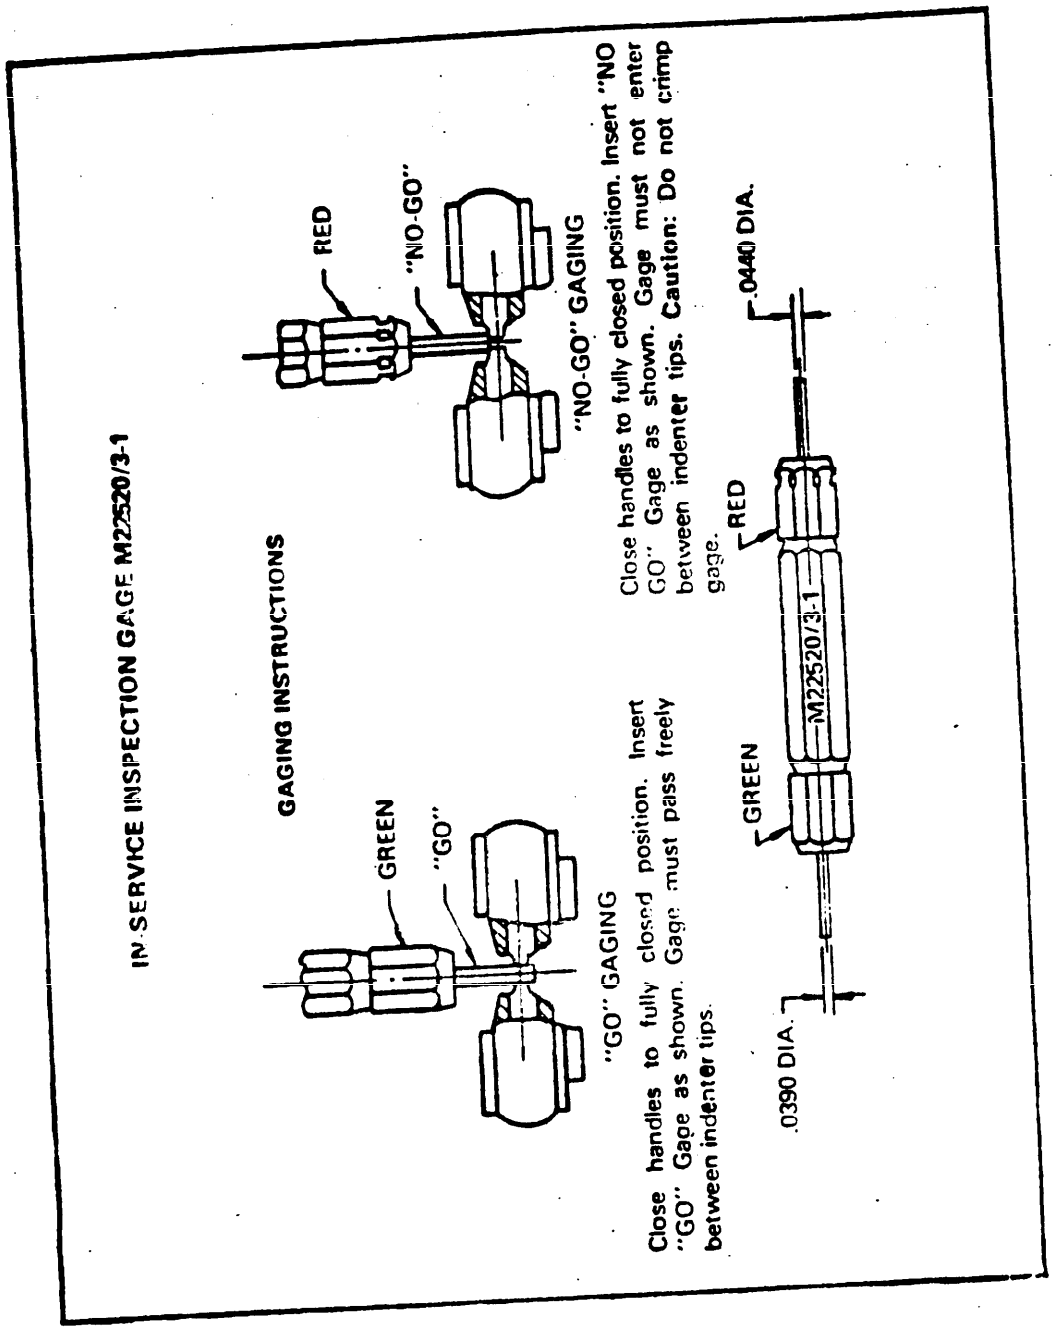

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

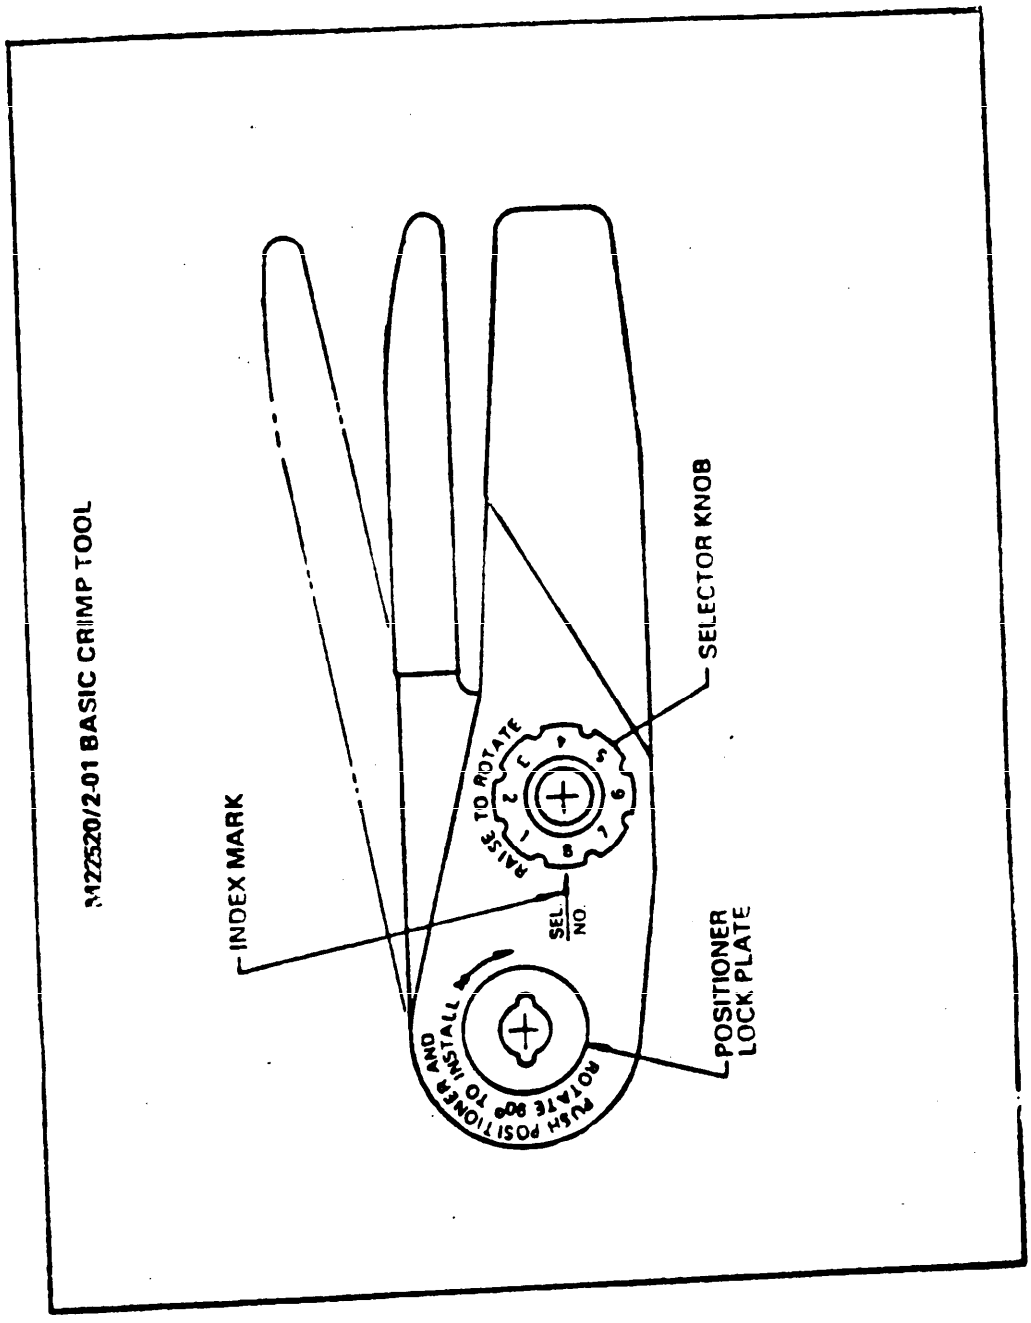


Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

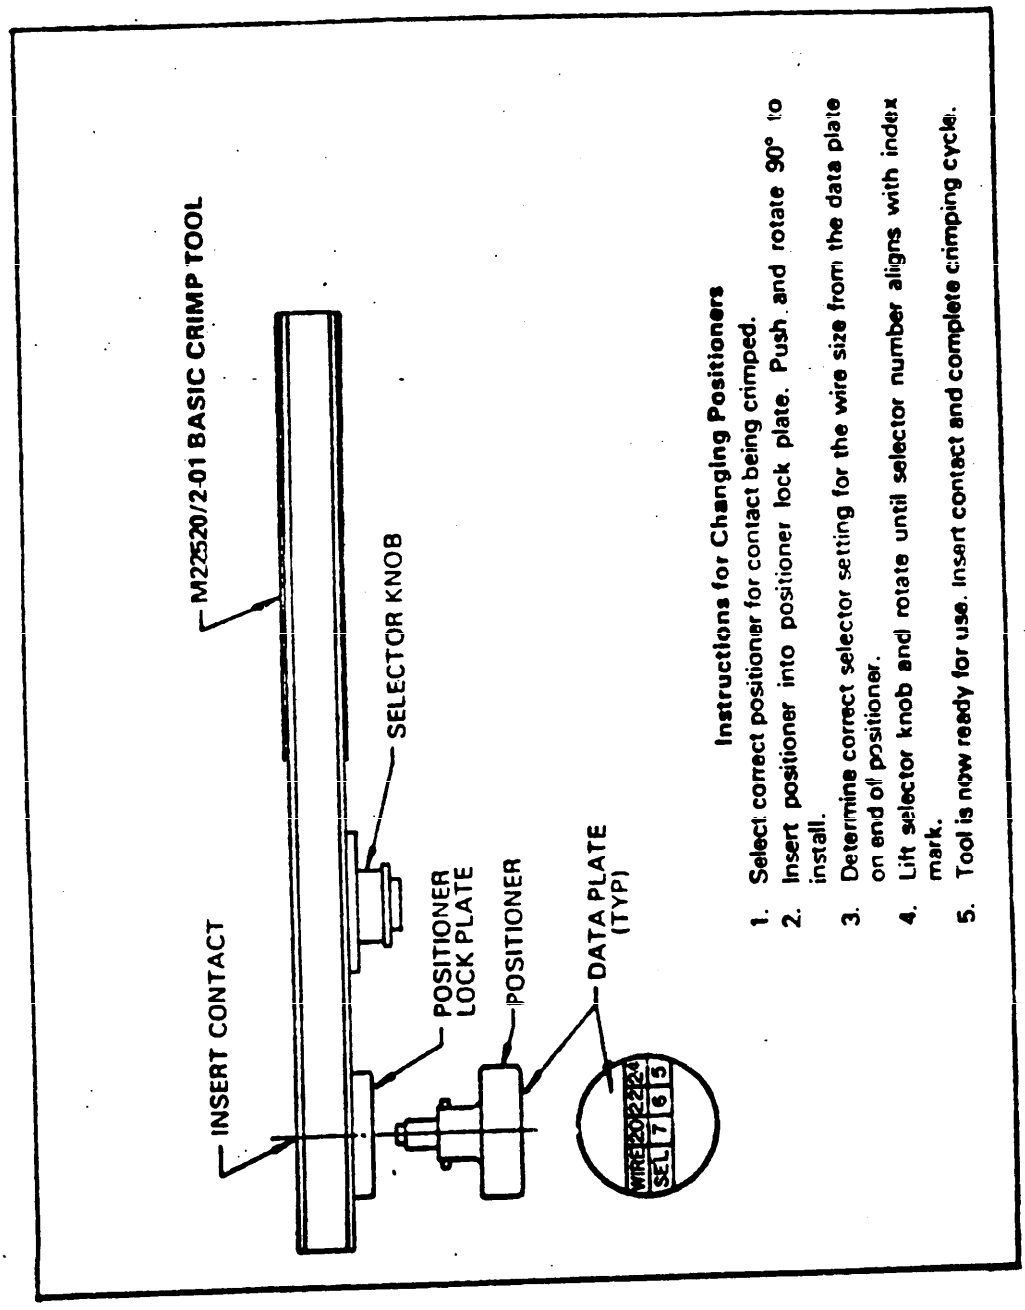


Instructions for Changing Positioners

1. Select correct positioner for contact being crimped.
2. Insert positioner into positioner lock plate. Push and rotate 90° to install.
3. Determine correct selector setting for the wire size from the data plate on end of positioner.
4. Lift selector knob and rotate until selector number aligns with index mark.
5. Tool is now ready for use. Insert contact and complete crimping cycle.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

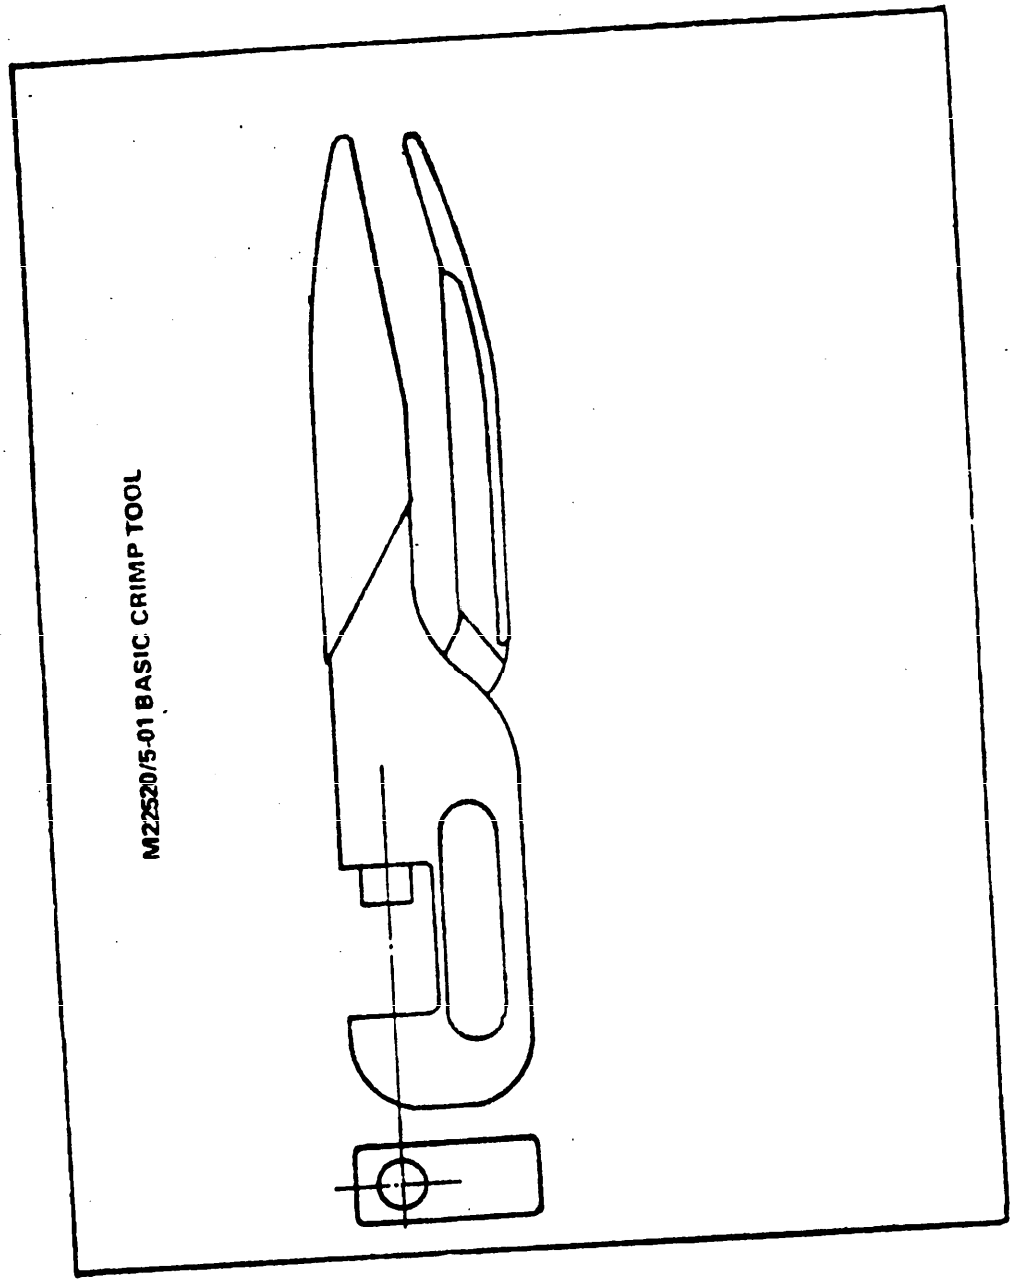

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

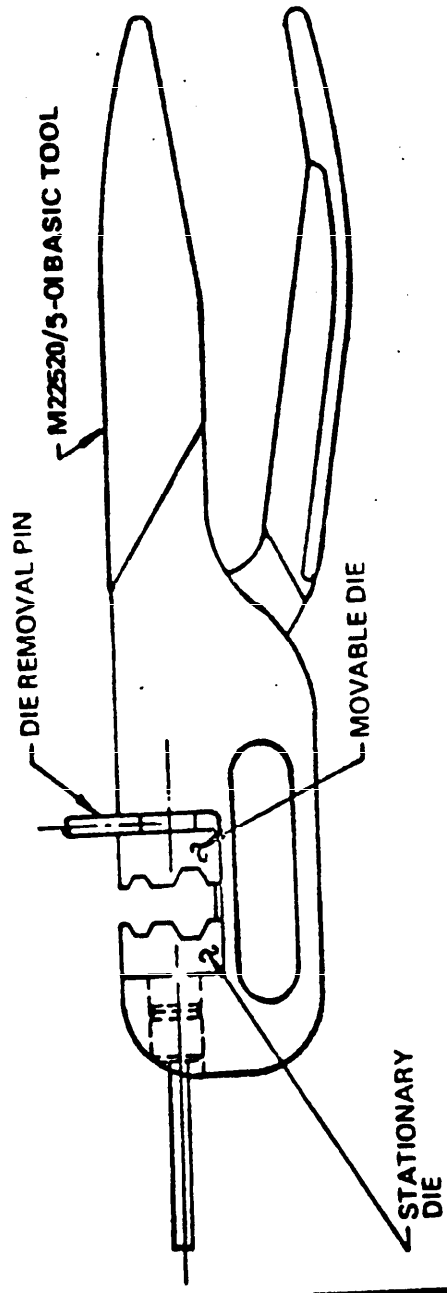

INSTRUCTIONS FOR INSERTING AND REMOVING DIES


1. Tool must be in open position. Place stationary die in position and push. Die will snap into lock position.
2. Place movable die into position and push. Die will snap into lock position. Cycle tool to insure that both dies are properly seated.
3. To remove movable die, place die removal pin between back edge of movable die and body. Open handle with a light snap. This will disengage movable die which can then be removed by hand.
4. To remove stationary die, place die removal pin against end of knock out pin as shown and tap lightly. This will disengage die which can then be removed by hand.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

FRONT RELEASE CONNECTORS

OPERATING INSTRUCTIONS - INSTALLING TOOLS


1. Select correct installing tool and place contact/wire assembly in tool.
   (a) # 20 contacts with insulation cups are inserted by sliding cup into front end of installing tip until end of cup butts against shoulder in installing tip.
   (b) Contacts without insulation cups are inserted by sliding wire barrel into front end of installing tip until contact shoulder butts against installing tip.
2. Align tool and contact axially with grommet hole and carefully guide contact through grommet into lock position.

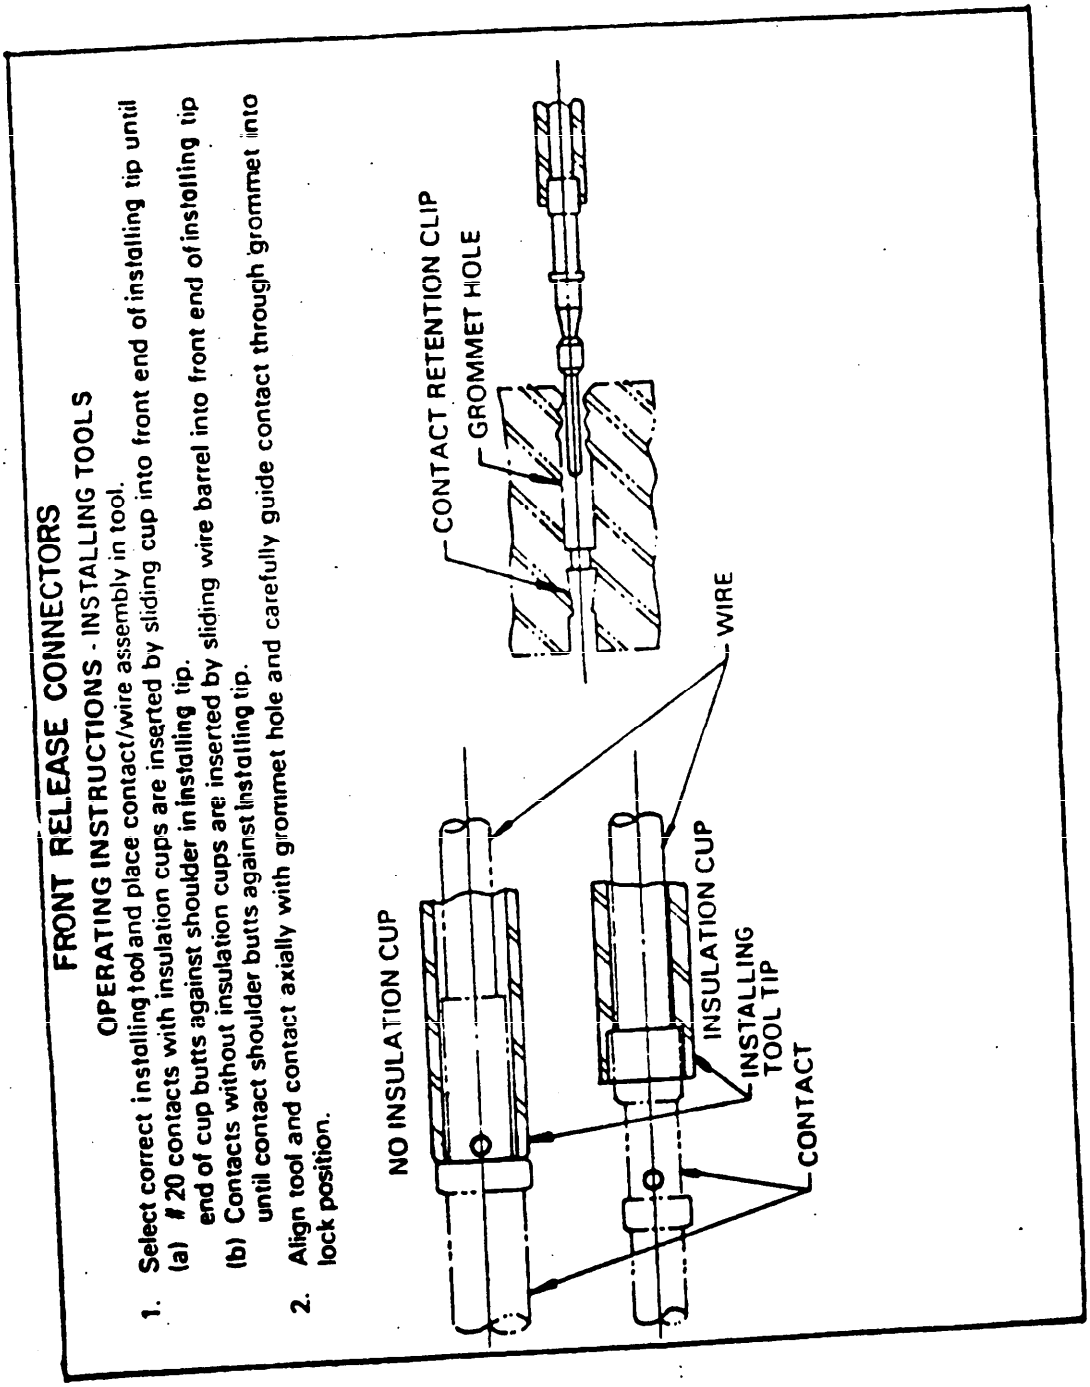

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

FRONT RELEASE CONNECTORS
OPERATING INSTRUCTIONS - REMOVAL TOOLS


1. **Select** correct contact removal tool.
2. **Tool must be** held in straight line; parallel to contact and square to connector face.
3. **For pin** contacts, insert removal tool tip into connector to **first mark on barrel** which will release retention clip. Push plunger slide forward to eject contact.
4. **For socket** contacts, insert removal tool tip into connector to **second mark on barrel** which will release retention clip. Push plunger slide forward to eject contact.
   NOTE: Plunger slide must remain in retracted position as removal tool tip is inserted into connector.

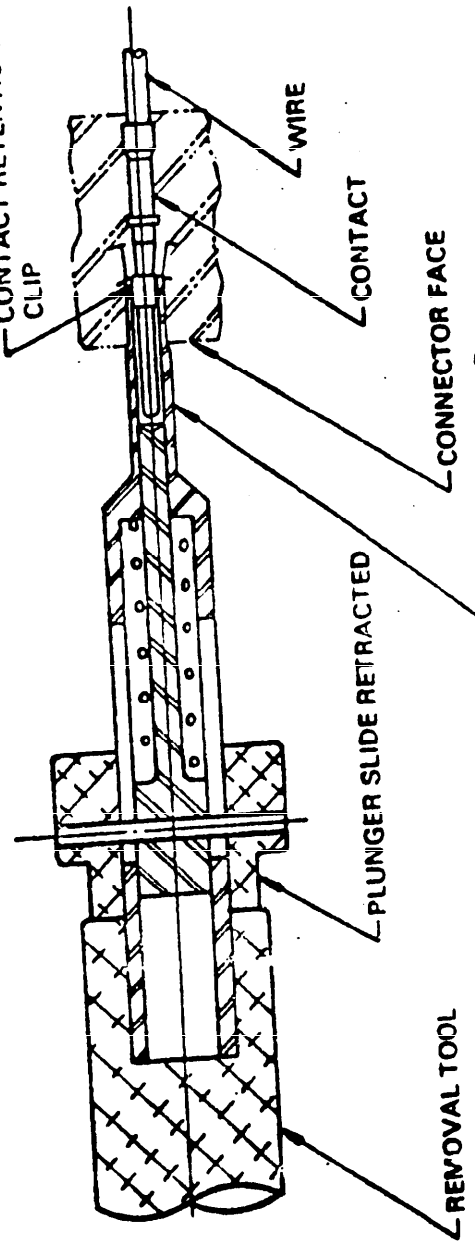

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

REAR RELEASE CONNECTORS

INSTRUCTION FOR PLASTIC CONTACT INSTALLING TOOLS

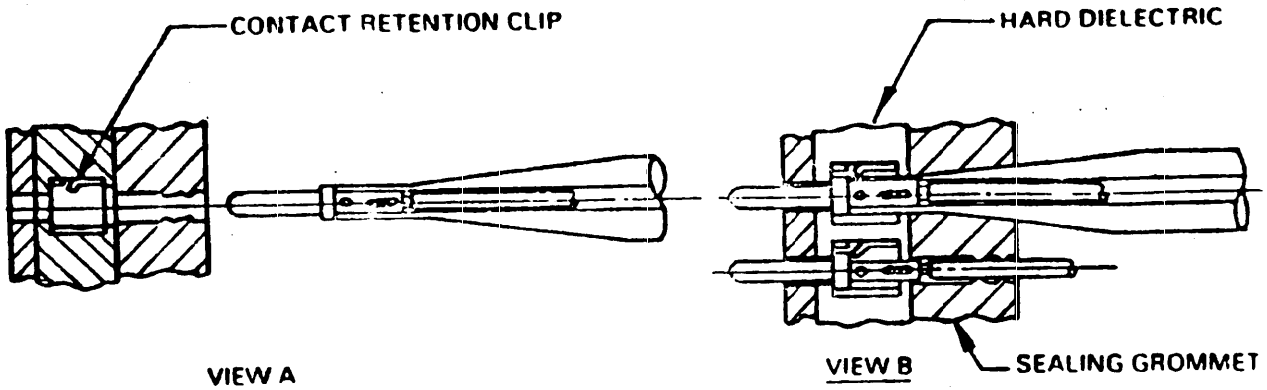


1. Select correct installing tool (see tool selection chart) and place tool around wire attached to be inserted.
2. Slide tool down wire on to contact crimp barrel until it butts against the contact shoulder. (See View A.)
3. Grip tool, wire, and contact as a unit and guide contact into connector thru sealing grommet and hard dielectric until contact is firmly seated. (See View B.)
4. Release grip on wire and withdraw tool from connector until it clears the grommet. Hold wire forward while tool is being removed from wire.

CAUTION: Assembled contact must be held perpendicular to face of connector during installation, When seating boot does not allow excessive bending or twisting of the cable.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

REAR RELEASE CONNECTORS

INSTRUCTION FOR PLASTIC CONTACT REMOVAL TOOLS

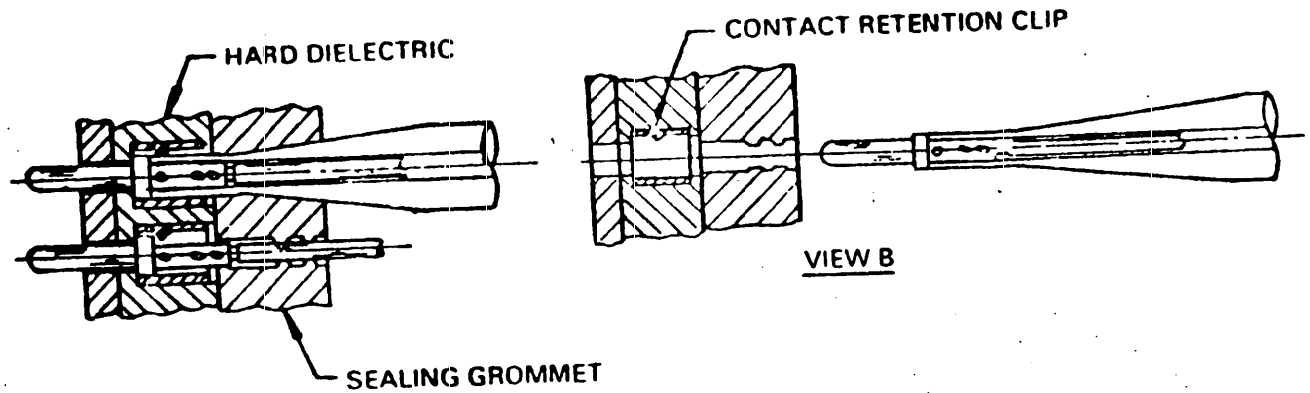


1. Select correct removal tool (see tool selection chart) and place tool around wire attached to contact to be removed.
2. Slide tool down wire into the connector thru the sealing grommet and into the hard dielectric until tool stops against contact shoulder. (See View A.)
3. At this stage of removal, tool will collapse contact retention clips to the point where they no longer retain control.
4. Grip wire and tool as a unit and withdraw wire, tool, and contact from connector simultaneously. (See View B.)

CAUTION: To avoid damage to tool and/or connector, do not tip, spread or rotate tool while in connector.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

REAR RELEASE CONNECTORS

INSTRUCTIONS FOR MS27495 INSTALLING TOOLS

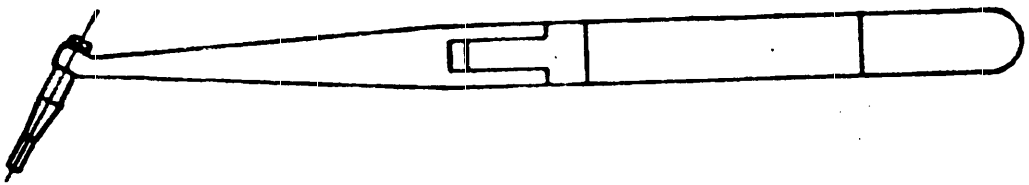

USE ONLY WHEN PLASTIC TOOL IS NOT AVAILABLE OR WHEN SPACE DOES NOT PERMIT USE OF PLASTIC TOOL


1. Select correct installing tool from Tool Selection Chart. (Installing tools have a single color code band).
2. Compress tweezer handles to open tips. Straddle contact wire barrel with tips butting against contact shoulder (See View "A" under plastic tools). Reduce pressure on handles allowing tips to close.
3. Carefully guide contact into connector thru sealing grommet and hard dielectric until contact snaps firmly in place. (See View "B" under plastic tools).
4. Withdraw tool from connector.

CAUTION: Contact must be inserted perpendicular to face of connector. Do not tip, spread or rotate tool while in connector

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

REAR RELEASE CONNECTORS

INSTRUCTIONS FOR MS27495 REMOVAL TOOLS

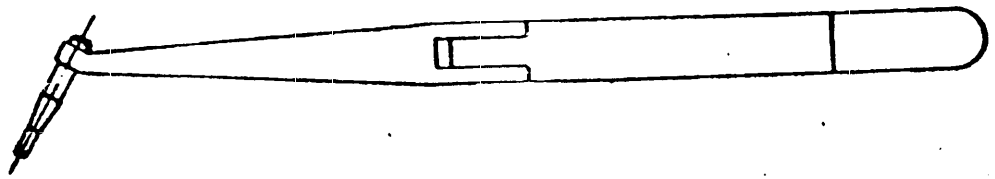

USE ONLY WHEN PLASTIC TOOL IS NOT AVAILABLE OR WHEN SPACE DOES NOT PERMIT USE OF PLASTIC TOOL


1. Select correct removal tool from Tool Selection Chart. (Removal tools have a white band and a color code band).
2. Compress tweezer handles to open tips. Straddle wire, reduce pressure on handles, allowing tips to close without nicking or cutting the insulation. Slide tool down wire into connector until it bottoms to release spring clip.
3. To remove contact, pull lightly on wire while withdrawing tool.

   CAUTION: Do not exert excessive force on wire. If contact is not easily extracted, remove tool and repeat above procedure.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

IDENTIFICATION OF CONNECTORS WITH REAR RELEASE CONTACTS

MATED PLUG AND RECEPTACLE

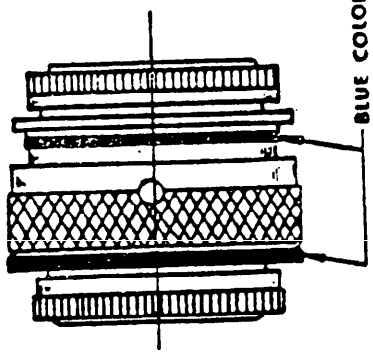

Connectors having contacts which are released and removed from the rear of the connector have blue color bands around them.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

Cable/connector
cable, connector, and die cross-reference

*Die width, .325, all others are .400

RG - /u cable group	Connector series	Cavity req'd	Military die set no.	Hex size (across flats) Cavity A	Cavity B
5, 6, 21, 143, 212, 222, 304	N	A	M22520/5-35	.324	.128
8, 9, 11, 63, 87, 114, 115, 133, 144, 149, 165, 213, 214, 216, 225, 393	N	A (only)	M22520/5-61	.429	---
8, 9, 11, 115, 149, 213	UHF	A (only)	M22520/5-23	.384	---
55, 58, 141, 142, 223, 303, 400	BNC, TNC UHF, SMA N	B	M22520/5-19	.255	.213
		A	M22520/5-05*	.213	.178
59, 62, 210, 302	BNC, TNC UHF, SMA N	A	M22520/5-19	.255	.213
122, 174, 179, 180 188, 195	BNC, TNC SMA	B	M22520/5-41	.290	.178
		B	M22520/5-05*	.213	.178
174, 179, 187, 188, 316	BNC, TNC SMA	B	M22520/5-35	.324	.128
		A	M22520/5-03*	.128	.105
178, 196	BNC, TNC, SMA	B	M22520/5-33	.343	.105
		B	M22520/5-03*	.128	.105


Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

FRONT RELEASE CONNECTORS

OPERATING INSTRUCTIONS-REMOVAL TOOL - FOR MIL-C-26518 RECTANGULAR CONNECTORS

1. Select correct contact removal tool from tool selection chart.
2. Tool must be held in straight line; parallel to contact, square to connector face.
3. To remove MIL-C-26518 socket contacts, use three bladed tip of removal tool ("STAR" end). Orient three bladed tip into connector, slowly pressing tool until tip bottoms against retention clip tube. Maintain pressure (approx. 8 lbs.) and push forward on plunger to eject contact.
4. To remove MIL-C-26518 pin contacts, use barrel end of removal tool ("TUBE" end). For operating instructions of "TUBE" end, see page No. 4.

NOTE: Plunger slide must remain in retracted position as removal tool tip/barrel is inserted in connector.

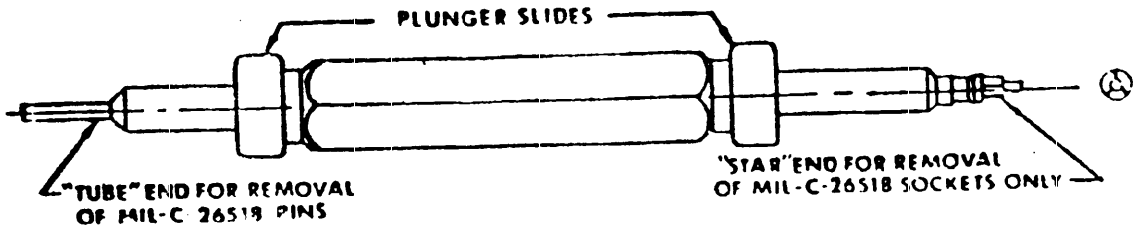

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

VENDOR INFORMATION

FSCM - Federal Supply Code for Manufacturers

FSCM	VENDOR
03554	Amphenol Canada Ltd. Bunker Ramo Corp. 44 Metropolitan Rd. Scarborough, Ontario Canada
02660	Amphenol Connector Div. Bunker Ramo Corp. 2801 S. 25th Ave. Broadview, IL 60153
74868	Amphenol RF Div. Bunker Ramo Corp. 33 E. Franklin St. Danbury, CT 06810
77820	Bendix Corp. Electrical Components Div. Sherman Ave. Sidney, NY 13838
95712	Bendix Corp. Microwave Devices Hurricane Rd. Franklin, IN 46131
09922	Burndy Corp. Richards Ave. Norwalk, CT 06852
11651	Daniels Manufacturing Corp. 2256 Franklin Rd. Bloomfield Hills, MI 48013
11139	Deutsch Co. Electronic Components Div. 700 S. Hathaway Municipal Airport Banning, CA 92220
99699	Deutsch Relays Inc. 65 Daly Rd. East Northport L.I., NY 11731
71468	ITT Cannon Electric 666 E. Dyer Rd. Santa Ana, CA 92702
91737	ITT Cannon/Gremar 922 S. Lyon St. Santa Ana, CA 92705
95077	Solitron Microwave Div. Solitron Devices Inc. P.O. Box 278 Cove Rd. Port Salerno, FL 33492
07145	Times Wire & Cable 358 Hall Ave. Wallingford, CT 06492

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

NOTES

NOTES ON TOOL SELECTION CHART

The following pages provide a cross-reference between connectors and the tools required to service them. The chart is intended as a guide and some special connectors may not be covered. When in doubt, DO NOT GUESS! Refer to the applicable technical publication.

1. Turret heads have three (3) separate positioners which are color coded. The chart shows the proper positioner color to be used in parenthesis ().
2. Hex dies with two (2) cavities are stamped with cavity designators "A" and "B". The chart shows the proper cavity in parenthesis ().
3. Some size 20 contacts can be crimped with either the large or small tool. Both options are shown. Generally, the small tool (M22520/2-01) is preferred.
4. Care must be taken when preparing wire. Choose the proper stripper. The wire must be visible through the inspection hole in the contact and there should be a 1/64" to 1/32" gap between the end of the wire barrel and the insulation. Coaxial and triaxial cable may require special stripping instructions which are usually provided with the connector or contact.
5. The "*" represents a variable letter or digit in the connector or contact part number. For the purpose of tool selection and use, the variable is not significant and can be ignored.
6. "N.A." stands for "Not Applicable".
7. "SAME" under "REMOVAL TOOL FOR UNWIRED CONTACTS" means use standard removal tool. Rear release contacts require special tools which operate in a similar manner as the standard rear release tools.
8. The G244 gage is for checking the wire barrel I.D. of Deutsch inner coaxial contacts when using the K30C positioner. The I.D. is either .033 or .040. If the pin enters the wire barrel, the contact is .040, if it does not, it is .033.
9. MS27490, MS27491, MS27492, MS27493 and MS27494 Contacts: Size 22M can be replaced by size 22D if desired.
10. The MS27495 installing and removal tools are to be used only when the appropriate plastic tool is not available or when connector access is limited such that the plastic tool cannot be used.
11. The Y516 die is for use with the Raychem thermofit environmental splice (see MIL-S-81824/1).
12. Any pertinent comments or suggestions as to tool contents, instructions, format, etc. should be forwarded to:

Headquarters, AFLC/LOIEP
Wright Patterson Air Force Base
Dayton, Ohio 45433
ATTN: Mr. Carl Mathai

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

TOOL SELECTION CHART

VENDOR (VENDOR CODE) CONNECTOR SERIES AND TYPE	BASIC CONNECTOR PART NO.	CONN. DESC.	CONTACT PART NO.	PIN (P) OR SOCKET (S)	CONTACT SIZE (MATING END-WIRE BARREL)	WIRE RANGE OR CABLE	CRIMP TOOL	TURRET HEAD POSITIONER OR DIE	INSTALLING TOOL	REMOVAL TOOL	REMOVAL TOOL FOR UNWIRED CONTACTS
MILITARY SPECIFICATION MIL-C-26500 FRONT RELEASE CONTACTS	MS24264 MS24266 MS27613 MS27614 MS27615	CIRC.	MS24254-12P	P	12-12	12-14	M22520/1-01	M22520/1-02 (YELLOW)	MS24256A12	MS24256R12	SAME
			MS24255-12S	S							
			MS24254-16P	P	16-16	16-18	M22520/1-01	M22520/1-02 (BLUE)	MS24256A16	MS24256RH16 "TUBE" END	SAME
			MS24255-16S	S							
			MS24254-20P	P	20-20	20-24	M22520/1-01 — OR — M22520/2-01	M22520/1-02 (RED) M22520/2-02	MS24256A20	MS24256RH20 "TUBE" END	SAME
			MS24255-20S	S							
MILITARY SPECIFICATION MIL-C-26518 FRONT RELEASE CONTACTS	MS24285 SOCKET CONTACTS RESILIENT FRONT INSERT	RECT.	MS24254-16P	P	16-16	16-18	M22520/1-01	M22520/1-02 (BLUE)	MS24256A16	MS24256RH16 "TUBE" END	SAME
			MS24255-16S	S							
			MS24254-20P	P	20-20	20-24	M22520/1-01 — OR — M22520/2-01	M22520/1-02 (RED) M22520/2-02	MS24256A20	MS24256RH20 "TUBE" END	SAME
			MS24255-20S	S							
	MS24286 PIN CONTACTS RESILIENT FRONT INSERT		MS27184-22P	P	12-12 (COAX)	CABLE GROUP A	INNER CONTACT M22520/2-01 K74S; OUTER FERRULE M22520/5-01 M22520/5-03(A)		MS24256A12	MS24256R12	SAME
			MS27185-22S	S							
	MS27399 SOCKET CONTACTS HARD FRONT INSERT	RECT.	MS24255-16S	S	16-16	16-18	M22520/1-01	M22520/1-02 (BLUE)	MS24256A16	MS24256RH16 "STAR" END	SAME
			MS24255-20S	S	20-20	20-24	M22520/1-01 — OR — M22520/2-01	M22520/1-02 (RED) M22520/2-02	MS24256A20	MS24256RH20 "STAR" END	SAME
			MS27185-22S	S	12-12 (COAX)	CABLE GROUP A	INNER CONTACT M22520/2-01 K74S; OUTER FERRULE M22520/5-01 M22520/5-03(A)		MS24256A12	DRK114-12 OR 294-264	SAME
MILITARY SPECIFICATION MIL-C-38999 REAR RELEASE CONTACTS	SERIES I SCOOP. PROOF MS27466 MS27467 MS27468 MS27496 MS27498 MS27505 MS27515 MS27652 MS27653 MS27654 MS27656 MS27661 MS27665	CIRC.	MS27493-12	P	12-12	12-14	M22520/1-01	M22520/1-04 (YELLOW)	MS27534-12 MS27495A12	MS27534-12 MS27495R12	DRK105-12 OR 11-10050-5
			MS27494-12								
			MS27490-12	S							
			MS27655-12								
			MS27493-16	P	16-16	16-20	M22520/1-01	M22520/1-04 (BLUE)	MS27534-16 MS27495A16	MS27534-16 MS27495R16	DRK105-16 OR 11-10050-4
			MS27494-16								
			MS27490-16	S							
			MS27655-16								
			MS27493-20	P	20-20	20-24	M22520/1-01 — OR — M22520/2-01	M22520/1-04 (RED) M22520/2-10	MS27534-20 MS27495A20	MS27534-20 MS27495R20	DRK105-20 OR 11-10050-3
			MS27494-20								
			MS27490-20	S							
			MS27655-20								

CABLE GROUP A - RG161/u, RG174/u, RG179/u, RG187/u, RG188/u
MIL-C-27500-22 KING OR #22AWG PER MIL-C-7078 TYPE II

MIL-T-81542/13 (USAF)

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

TOOL SELECTION CHART

VENDOR (VENDOR CODE) CONNECTOR SERIES AND TYPE	BASIC CONNECTOR PART NO.	CONN. DESC.	CONTACT PART NO.	PIN (P) OR SOCKET (S)	CONTACT SIZE (MATING END-WIRE BARREL)	WIRE RANGE OR CABLE	CRIMP TOOL	TURRET HEAD POSITIONER OR DIE	INSTALLING TOOL	REMOVAL TOOL	REMOVAL TOOL FOR UNWIRED CONTACTS
MIL-C-38999 CONTINUED	SERIES I SCOOP-PROOF CONTINUED	CIRC.	MS27493-22	P	22-22	22-26	M22520/2-01	M22520/2-09	MS27495A22	MS27495R22	DRK105-22 OR 11-10050-2
			MS27494-22								
			MS27490-22	S	22-22	22-26	M22520/2-01	M22520/2-07			
			MS27655-22								
REAR RELEASE CONTACTS	SEE PREVIOUS PAGE FOR CONNECTOR PART NO'S		MS27493-22M	P	22-22M	24-28	M22520/2-01	M22520/2-09	MS27534-22D MS27495A22M	MS27534-22D MS27495R22M	DRK105-22M OR 11-10050-1
			MS27494-22M								
			MS27490-22M	S	22-22M	24-28	M22520/2-01	M22520/2-07			
			MS27655-22M								
			MS27493-22D	P	22-22D	22-28	M22520/2-01	M22520/2-09	MS27534-22D MS27495A22M	MS27534-22D MS27495R22M	DRK105-22M OR 11-10050-1
			MS27494-22D								
			MS27490-22D	S	22-22D	22-28	M22520/2-01	M22520/2-07			
			MS27655-22D								
CONTACT APPLICATION			MS27536	P	8-8 (COAX)	CABLE GROUP B	INNER CONTACT SOLDER / OUTER FERRULE M22520/5-01	M22520/5-41(B)	NONE REQ'D	11-9170	SAME
			MS27535	S							
SERIES IA-150°C MS27490 MS27493	SERIES II LOW SILHOUETTE MS27472 MS27473 MS27474 MS27479 MS27480 MS27481 MS27484 MS27497 MS27499 MS27500 MS27504 MS27508 MS27513 MS27664	CIRC.	MS27493-12 — OR — MS27494-12	P	12-12	12-14	M22520/1-01	M22520/1-04 (YELLOW)	MS27534-12 MS27495A12	MS27534-12 MS27495R12	DRK105-12 OR 11-10050-5
			MS27491-12 — OR — MS27492-12	S							
SERIES IB-200°C MS27494 MS27655			MS27493-16 — OR — MS27494-16	P	16-16	16-20	M22520/1-01	M22520/1-04 (BLUE)	MS27534-16 MS27495A16	MS27534-16 MS27495R16	DRK105-16 OR 11-10050-4
			MS27491-16 — OR — MS27492-16	S							
SERIES IIA-150°C MS27491 MS27493			MS27493-20 — OR — MS27494-20	P	20-20	20-24	M22520/1-01 OR M22520/2-01	M22520/1-04 (RED) M22520/2-10	MS27534-20 MS27495A20	MS27534-20 MS27495R20	DRK105-20 OR 11-10050-3
			MS27491-20 — OR — MS27492-20	S							
SERIES IIB-200°C MS27492 MS27494			MS27493-22 — OR — MS27494-22	P	22-22	22-26	M22520/2-01	M22520/2-09	MS27495A22	MS27495R22	DRK105-22 OR 11-10050-2
			MS27491-22 — OR — MS27492-22	S	22-22	22-26	M22520/2-01	M22520/2-06			
			MS27493-22M — OR — MS27494-22M	P	22-22M	24-28	M22520/2-01	M22520/2-09	MS27534-22D MS27495A22M	MS27534-22D MS27495R22M	DRK105-22M OR 11-10050-1
			MS27491-22M — OR — MS27492-22M	S	22-22M	24-28	M22520/2-01	M22520/2-06			
			MS27493-22D — OR — MS27494-22D	P	22-22D	22-28	M22520/2-01	M22520/2-09 M22520/2-06	MS27534-22D MS27495A22M	MS27534-22D MS27495R22M	DRK105-22M OR 11-10050-1
			MS27491-22D — OR — MS27492-22D	S							

CABLE GROUP B-RG180/U, RG195/U, MICRODOT 293-3922

Source: https://assist.dla.mil -- Downloaded: 2026/0-26T04:45Z
Check the source to verify that this is the current version before use.

VENDOR (VENDOR CODE) CONNECTOR SERIES AND TYPE	BASIC CONNECTOR PART NO.	CONN. DESC.	CONTACT PART NO.	PIN (P) OR SOCKET (S)	CONTACT SIZE (MATING END-WIRE BARREL)	WIRE RANGE OR CABLE	CRIMP TOOL	TURRET HEAD POSITIONER OR DIE	INSTALLING TOOL	REMOVAL TOOL	REMOVAL TOOL FOR UNWIRED CONTACTS
MILITARY SPECIFICATION MIL-C-39012 RADIO FREQUENCY COAXIAL	M39012/01-0501 SERIES N	ST. PLUG	INNER CONTACT 1-10	P	---	CABLE GROUP C	M22520/1-01	M22520/1-13 (GREEN)	N.A.	N.A.	N.A.
			OUTER FERRULE 1-50	N.A.	N.A.		M22520/5-01	M22520/5-61			
	M39012/03-0501 SERIES N	RECEIPT	INNER CONTACT 3-10	S	---	CABLE GROUP C	M22520/1-01	M22520/1-14 (GREEN)	N.A.	N.A.	N.A.
			OUTER FERRULE 3-50	N.A.	N.A.		M22520/5-01	M22520/5-61			
	M39012/05-0501 SERIES N	RT. ANGLE PLUG	INNER CONTACT 5-10	P	---	CABLE GROUP C	M22520/1-01	M22520/1-13 (BLUE)	N.A.	N.A.	N.A.
			OUTER FERRULE 5-50	N.A.	N.A.		M22520/5-01	M22520/5-61			
	M39012/16-0503 SERIES BNC	PLUG	INNER CONTACT 16-10	P	---	RG122/u	M22520/1-01	M22520/1-12 (BLUE)	N.A.	N.A.	N.A.
			OUTER FERRULE 16-51	N.A.	N.A.		M22520/5-01	M22520/5-05 (B)			
	M39012/20-0503 SERIES BNC	RT. ANGLE PLUG	INNER CONTACT 20-10	P	---	CABLE GROUP D	M22520/1-01	M22520/1-12 (GREEN)	N.A.	N.A.	N.A.
			OUTER FERRULE 20-51	N.A.	N.A.		M22520/5-01	M22520/5-19 (B)			
	M39012/26-0503 SERIES TNC	PLUG	INNER CONTACT 26-10	P	---	CABLE GROUP D	M22520/1-01	M22520/1-12 (BLUE)	N.A.	N.A.	N.A.
			OUTER FERRULE 26-51	N.A.	N.A.		M22520/5-01	M22520/5-19 (B)			
	M39012/28-0503 SERIES TNC	RECEIPT	INNER CONTACT 28-10	S	---	CABLE GROUP D	M22520/1-01	M22520/1-12 (RED)	N.A.	N.A.	N.A.
			OUTER FERRULE 28-51	N.A.	N.A.		M22520/5-01	M22520/5-19 (B)			
	M39012/30-0503 SERIES TNC	PLUG	INNER CONTACT 30-10	P	---	CABLE GROUP D	M22520/1-01	M22520/1-12 (GREEN)	N.A.	N.A.	N.A.
			OUTER FERRULE 30-51	N.A.	N.A.		M22520/5-01	M22520/5-19 (B)			
	M39012/35-0501 SERIES SC	PLUG	INNER CONTACT 35-10	P	---	CABLE GROUP C	M22520/1-01	M22520/1-13 (BLUE)	N.A.	N.A.	N.A.
			OUTER FERRULE 35-50	N.A.	N.A.		M22520/5-01	M22520/5-61			
	M39012/35-0503 SERIES SC	PLUG	INNER CONTACT 35-11	P	---	CABLE GROUP D	M22520/1-01	M22520/1-14 (BLUE)	N.A.	N.A.	N.A.
			OUTER FERRULE 35-52	N.A.	N.A.		M22520/5-01	M22520/5-19 (B)			
	M39012/39-0501 SERIES SC	RT. ANGLE PLUG	INNER CONTACT 39-10	P	---	CABLE GROUP C	M22520/1-01	M22520/1-13 (BLUE)	N.A.	N.A.	N.A.
			OUTER FERRULE 39-50	N.A.	N.A.		M22520/5-01	M22520/5-61			
	M39012/55-4502 SERIES SMA	PLUG	INNER CONTACT 55-10	P	---	RG400/u	M22520/1-01	M22520/1-15	N.A.	N.A.	N.A.
			OUTER FERRULE 55-50	N.A.	N.A.		M22520/5-01	M22520/5-19 (B)			
	M39012/39-0503 SERIES SC	RT. ANGLE PLUG	INNER CONTACT 39-11	P	---	CABLE GROUP D	M22520/1-01	M22520/1-13 (BLUE)	N.A.	N.A.	N.A.
			OUTER FERRULE 39-52	N.A.	N.A.		M22520/5-01	M22520/5-19 (B)			

CABLE GROUP C-RG214/U, RG225/U, RG393/U
CABLE GROUP D-RG142/U, RG400/U

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

TOOL SELECTION CHART

VENDOR (VENDOR CODE) CONNECTOR SERIES AND TYPE	BASIC CONNECTOR PART NO.	CONN. DESC.	CONTACT PART NO.	PIN (P) OR SOCKET (S)	CONTACT SIZE (MATING END-WIRE BARREL)	WIRE RANGE OR CABLE	CRIMP TOOL	TURRET HEAD POSITIONER OR DIE	INSTALLING TOOL	REMOVAL TOOL	REMOVAL TOOL FOR UNWIRED CONTACTS
MILITARY SPECIFICATION MIL-C-81703 FRONT RELEASE CONTACTS	[SERIES 2] MS3140 MS3144 MS3147 MS3148 MS3445	CIRC. [PUSH PULL]	MS3192-20-20*	P	20-20	20-26	M22520/1-01 — OR — M22520/2-01	M22520/1-02 (RED)	MS24256A20	MS24256RH20 "TUBE" END	SAME
			MS3193-20-20*	S				M22520/2-02			
MILITARY SPECIFICATIONS MIL-C-83723 REAR RELEASE CONTACTS [SEE ITT CANNON LISTING FOR THERMOCOUPLE CONTACTS]	BAYONET AND THREADED COUPLING SERIES M83723*** "B" CONTACT P/N'S USED FOR BAYONET "T" CONTACT P/N'S USED FOR THREADED	CIRC.	M83723-33B12	P	12-12	12-14	M22520/1-01	M22520/1-02 (YELLOW)	MS27534-12 OR M83723-31-12 (YELLOW END)	MS27534-12 OR M83723-31-12 (WHITE END)	MS3448-001 WITH YELLOW PROBE
			M83723-29T12	S							
			M83723-34B12								
			M83723-30T12								
			M83723-33B16	P	16-16	16-20	M22520/1-01	M22520/1-02 (BLUE)	MS27534-16 OR M83723-31-16 (BLUE END)	MS27534-16 OR M83723-31-16 (WHITE END)	MS3448-001 WITH BLUE PROBE
			M83723-29T16	S							
			M83723-34B16								
			M83723-30T16								
			M83723-33B20	P	20-20	20-26	M22520/1-01 OR M22520/2-01	M22520/1-02 (RED)	MS27534-20 OR M83723-31-20 (RED END)	MS27534-20 OR M83723-31-20 (WHITE END)	MS3448-001 WITH RED PROBE
			M83723-34B20	S				M22520/2-02			
MILITARY SPECIFICATION MIL-T-7928	INSULATED TERMINALS AND SPLICES	INS. TERM. & SPLICE	MS25036*** TERMINALS MS25181*** SPLICES	N.A.	YELLOW	12-10	M22520/5-01	Y501 (Large Cavity	N.A.	N.A.	N.A.
					BLUE	16-14	M22520/5-01	Y501 (Small Cavity	N.A.	N.A.	N.A.
					RED	22-18					
					YELLOW	26-24					
DEPT. OF DEFENSE SPECIFICATION ONO89562 REAR RELEASE CONTACTS	"AIMS" SERIES ONO89559 ONO89560 ONO89561	RECT.	M83723-33B20	P	20-20	20-26	M22520/1-01 — OR — M22520/2-01	M22520/1-02 (RED)	MS27534-20 OR M83723-31-20 (RED END)	MS27534-20 OR M83723-31-20 (WHITE END)	MS3448-001 WITH RED PROBE
			M83723-34B20	S				M22520/2-02			
			M83723-33B16	P	16-16	16-20	M22520/1-01	M22520/1-02 (BLUE)	MS27534-16 OR M83723-31-16 (BLUE END)	MS27534-16 OR M83723-31-16 (WHITE END)	MS3448-001 WITH BLUE PROBE
			M83723-34B16	S							
			ONO89558-1	P	8-8 (SHIELDED)	CABLE GROUP E	INNER CONTACT M22520/2-01 OUTER FERRULE M22520/5-01	M22520/2-24 M22520/5-10	ONO89564 (GREEN) (294-540)	ONO89565 (WHITE) (294-541)	SAME
			ONO89558-2	S							

CABLE GROUP E-M27500/u, TWISTED PAIR (SIZES 24 AND 26 AWG)
(SEE SPECIFICATION MIL-C-22520/11 FOR ASSEMBLY INSTRUCTIONS.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

TOOL SELECTION CHART

VENDOR (VENDOR CODE) CONNECTOR SERIES AND TYPE	CONNECTOR PART NO.	CONN. DESC.	CONTACT PART NO.	PIN (P) OR SOCKET (S)	CONTACT SIZE (MATING END-WIRE BARREL)	WIRE RANGE OR CABLE	CRIMP TOOL	TURRET HEAD POSITIONER OR DIE	INSTALLING TOOL	REMOVAL TOOL	REMOVAL TOOL FOR UNWIRED CONTACTS
AMPHENOL RF DIV. (74868) RADIO FREQUENCY COAXIAL	31-3228-1000 SERIES TNC	ST. PLUG	INNER CONTACT M39012/26-10	P	N.A.	CABLE GROUP F	INNER CONTACT M22520/1-01	M22520/1-12 (BLUE)	N.A.	N.A.	N.A.
			OUTER FERRULE M39012/26-51	N.A.	N.A.		OUTER FERRULE M22520/5-01	M22520/5-19(B)			
	31-3229-1000 SERIES TNC	RT. ANGLE PLUG	INNER CONTACT M39012/30-10	P	N.A.	CABLE GROUP F	INNER CONTACT M22520/1-01	M22520/1-12 (GREEN)	N.A.	N.A.	N.A.
			OUTER FERRULE M39012/30-50	N.A.	N.A.		OUTER FERRULE M22520/5-01	M22520/5-19(B)			
	31-3230-2000 SERIES TNC	ST. PLUG	INNER CONTACT M39012/26-11	P	N.A.	CABLE GROUP G	INNER CONTACT M22520/1-01	M22520/1-12 (GREEN)	N.A.	N.A.	N.A.
			OUTER FERRULE 31-1357-5	N.A.	N.A.		OUTER FERRULE M22520/5-01	M22520/5-19(B)			
	31-3231-2000 SERIES TNC	RT. ANGLE PLUG	INNER CONTACT M39012/30-11	P	N.A.	CABLE GROUP G	INNER CONTACT M22520/1-01	M22520/1-12 (GREEN)	N.A.	N.A.	N.A.
			OUTER FERRULE 31-1357-5	N.A.	N.A.		OUTER FERRULE M22520/5-01	M22520/5-19(B)			
	31-4228-2000 SERIES TNC	RT. ANGLE PLUG	INNER CONTACT M39012/30-12	P	N.A.	CABLE GROUP H	INNER CONTACT M22520/1-01	M22520/1-12 (GREEN)	N.A.	N.A.	N.A.
			OUTER FERRULE 31-1357-5	N.A.	N.A.		OUTER FERRULE M22520/5-01	M22520/5-19(B)			
	31-4230-1000 SERIES TNC	RT. ANGLE PLUG	INNER CONTACT M39012/30-11	P	N.A.	CABLE GROUP J	INNER CONTACT M22520/1-01	M22520/1-12 (GREEN)	N.A.	N.A.	N.A.
			OUTER FERRULE M39012/30-51	N.A.	N.A.		OUTER FERRULE M22520/5-01	M22520/5-41(B)			
	31-4478-1000 SERIES TNC	ST. PLUG	INNER CONTACT M39012/26-11	P	N.A.	CABLE GROUP G	INNER CONTACT M22520/1-01	M22520/1-12 (BLUE)	N.A.	N.A.	N.A.
			OUTER FERRULE 31-1357-5	N.A.	N.A.		OUTER FERRULE M22520/5-01	M22520/5-19(B)			
	31-4481-1000 SERIES BNC	RT. ANGLE PLUG	INNER CONTACT M39012/20-11	P	N.A.	CABLE GROUP G	INNER CONTACT M22520/1-01	M22520/1-12 (GREEN)	N.A.	N.A.	N.A.
			OUTER FERRULE 31-1357-5	N.A.	N.A.		OUTER FERRULE M22520/5-01	M22520/5-19(B)			

CABLE GROUP F - RG142/u, RG400/u H - MCAIR ST5M1347, TIMES AA-2372, HAVEG 51-03628, TENSOLITE 24875-4X-1
G - MCAIR 5M1010, MICRODOT 295-3963, SUPRENANT ES2970, TIMES AA-2443 J - RG180/u, ST5M1351

Source: https://assist.dla.mil -- Downloaded: 2026/10-26T04:45Z
Check the source to verify that this is the current version before use.

TOOL SELECTION CHART

VENDOR (VENDOR CODE) CONNECTOR SERIES AND TYPE	CONTACT PART NO.	CONN. DESC	CONTACT PART NO.	PIN (P) OR SOCKET (S)	CONTACT SIZE (MATING END-WIRE BARREL)	WIRE RANGE OR CABLE	CRIMP TOOL	TURRET HEAD POSITIONER OR DIE	INSTALLING TOOL	REMOVAL TOOL	REMOVAL TOOL FOR UNWIRED CONTACTS
AMPHENOL RF DIV. (CON1.)	31-4509-1 SERIES TMC	RECPT.	INNER CONTACT M39012/23-11	S	N.A.	CABLE GROUP K	INNER CONTACT M22520/1-01	M22520/1-12 (RED)	N.A.	N.A.	N.A.
			OUTER FERRULE 31-1357-5	N.A.	N.A.		OUTER FERRULE M22520/5-01	M22520/5-19(8)			
AMPHENOL CONNECTOR DIV. (02660) THERMOCOUPLE FRONT RELEASE CONTACTS	THERMOCOUPLE CONTACTS FOR USE IN AMPHENOL "48" SERIES AND MIL-C-26500 CONNECTORS	AL	48-2247	P	20-20	20-24	M22520/1-01 OR M22520/2-01	M22520/1-02 (RED)	MS24256A20	MS24256RH20 "TUBE" END	SAME
			48-2233	S				M22520/2-02			
		CR	48-2178	P							
			48-2176	S							
AMPHENOL CANADA LTD. (03554) REAR RELEASE FILTER CONTACTS	480-16E20-39P FILTER PIN CONNECTOR	CIRC. PLUG	4R6-122-20	FP	20-20	20-24	M22520/1-01	TH317 (RED)	MS27534-20 OR M83723-31-20 (RED)	MS27534-20 OR M83723-31-20 (WHITE)	MS3448-001 WITH RED PROBE
			4R6-51-20	P							
			4R6-210-16	FP	16-16	16-18	M22520/1-01	TH317 (BLUE)	MS27534-16 OR M83723-31-6 (WHITE)	MS27534-16 OR M83723-31-16 (WHITE)	MS3448-001 WITH BLUE PROBE
			4N6-51-16	P							
BENDIX (77820) "SJT" SERIES REAR RELEASE CONTACTS	SJTPOORT-1R-35P	CIRC.	MS27493-22D	P	22D-22D	22-28	M22520/2-01	M22520/2-09	MS27534-22D MS27495A22M	MS27534-22D MS27495R22M	DRK105-22M OR 11-10050-1
	91-496296-18-35S		MS27490-22D	S	22D-22D	22-28	M22520/2-01	M22520/2-07			
THERMOCOUPLE REAR RELEASE CONTACTS	THERMOCOUPLE CONTACTS FOR USE IN MIL-C-38999 SERIES II CONNECTORS	AL	10-407830-320	P	20-20	20-24	M22520/1-01 OR M22520/2-01	M22520/1-04 (RED) M22520/2-10	MS27534-22D MS27495A20	MS27534-20 MS27495R20	DRK105-20 OR 11-10050-3
			10-407831-320	S							
		CR	10-407830-310	P							
			10-407831-310	S							
		CN	10-407830-347	P							
			10-407831-347	S							
"LJT" SERIES REAR RELEASE CONTACTS	LJTPSQOORT 21-79** AND LJTPSQOGRT 21-79**	CIRC. PLUG & RECPT.	MS27494-22D	P	22D-22D 22D-22D	22-28 22-28	M22520/2-01 M22520/2-01	M22520/2-09 M22520/2-07	MS27534-22D MS27495A22M	MS27534-22D MS27495R22M	DRK105-22M 11-10050-1
			MS27655-22D	S							
			21-33102-22	P	8-8 (COAX)	CABLE GROUP L	INNER CONTACT SOLDER		HAND INSERTED	11-9170	N.A.
			21-33101-22	S			OUTER FERRULE M22520/5-01	M22520/5-41(8)			

CABLE GROUP K - RG142/u, RG400/u CABLE GROUP L- MCAIR 5M1010, TENSOLITE 2R095/2X1, MICRODOT 293-3963, SUPRENANT ES2970, TIMES AA-2443
AL - ALUMEL, CR - CHROMEL, CN - CONSTANTAN; FP - FILTER PIN

Source: https://assist.dla.mil -- Downloaded: 2026/0-26T04:45Z
Check the source to verify that this is the current version before use.

TOOL SELECTION CHART

VENDOR (VENDOR CODE) CONNECTOR SERIES AND TYPE	BASIC CONNECTOR PART NO.	CONN. DESC.	CONTACT PART NO.	PIN (P) OR SOCKET (S)	CONTACT SIZE (MATING END-WIRE BARREL)	WIRE RANGE OR CABLE	CRIMP TOOL	TURRET HEAD POSITIONER OR DIE	INSTALLING TOOL	REMOVAL TOOL	REMOVAL TOOL FOR UNWIRED CONTACTS
BENDIX (77820)	87-488700-*** 87-488706-*** 87-488714-*** 87-488720-*** 87-488730-*** 87-488740-*** 87-488749-*** 87-488758-*** 87-488768-***	CIRC. LANY REL.	MS27493-22D	P	22D-22D	22-28	M22520/2-01	M22520/2-09	MS27534-22D MS27495A22M	MS27534-22D MS27495R22M	DRK105-22M OR 11-10050-1
			OR								
			MS27490-22D	S	22D-22D	22-28	M22520/2-01	M22520/2-07.			
SIMILAR TO MIL-C-38999 SERIES 1A EXCEPT HAS LANYARD RELEASE COUPLING	87-488712-***		MS27493-22M	P	22M-22M	24-28	M22520/2-01	M22520/2-09	MS27534-22D MS27495A22M	MS27534-22D MS27495R22M	DRK105-22M OR 11-10050-1
			OR								
			MS27490-22M	S	22M-22M	24-28	M22520/2-01	M22520/2-07.			
REAR RELEASE CONTACTS	87-488701-*** 87-488704-*** 87-488705-*** 87-488711-*** 87-488713-*** 87-488719-*** 87-488729-*** 87-488739-*** 87-488750-*** 87-488759-*** 87-488770-***		MS27493-20	P	20-20	20-24	M22520/1-01 OR M22520/2-01	M22520/1-04 (RED) M22520/2-10	MS27534-20 MS27495A20	MS27534-20 MS27495R20	DRK105-20 OR 11-10050-3
			OR								
			MS27490-20	S	20-20	20-24	M22520/1-01 OR M22520/2-01	M22520/1-04 (RED) M22520/2-10			
	87-488710-*** 87-488718-*** 87-488728-*** 87-488737-*** 87-488748-*** 87-488757-*** 87-488767-***		MS27493-16	P	16-16	16-18	M22520/1-01	M22520/1-04 (BLUE)	MS27534-16 MS27495A16	MS27534-16 MS27495R16	DRK105-16 OR 11-10050-4
			OR								
			MS27490-16	S							
	87-488721-*** 87-488738-*** 87-488769-***		MS27493-20 OR MS27490-20	P S	20-20	20-24	M22520/1-01 OR M22520/2-01	M22520/1-04 (RED) M22520/2-10	MS27534-20 MS27495A20	MS27534-20 MS27495R20	DRK105-20 OR 11-10050-3
			MS27493-16 OR MS27490-16	P S	16-16	16-18	M22520/1-01	M22520/1-04 (BLUE)	MS27534-16 MS27495A16	MS27534-16 MS27495R16	DRK105-16 OR 11-10050-4
	87-488727-*** 87-488747-*** 87-488766-***		MS27493-12 OR MS27490-12	P S	12-12	12-14	M22520/1-01	M22520/1-04 (YELLOW)	MS27534-12 MS27495A12	MS27534-12 MS27495R12	DRK105-12 OR 11-10050-5

***SUFFIX CODE: FIRST TWO DIGITS REPRESENT LANYARD LENGTH. THIRD DIGIT REPRESENTS CONTACT STYLE (PIN OR SOCKET) AND CONNECTOR KEY POSITION. CODES P, E, R, W OR Y INDICATE PIN CONTACTS, CODES S, F, T, X AND Z INDICATE SOCKET CONTACTS.

Source: https://assist.dla.mil -- Downloaded: 20260-26T04:45Z
Check the source to verify that this is the current version before use.

TOOL SELECTION CHART

VENDOR (VENDOR CODE) CONNECTOR SERIES AND TYPE	BASIC CONNECTOR PART NO.	CONN. DESC.	CONTACT PART NO.	PIN (P) OR SOCKET (S)	CONTACT SIZE (MATING END-WIRE BARREL)	WIRE RANGE OR CABLE	CRIMP TOOL	TURRET HEAD POSITIONER OR DIE	INSTALLING TOOL	REMOVAL TOOL	REMOVAL TOOL FOR UNWIRED CONTACTS
BENDIX (77820)	91-539700-*** 91-539706-*** 91-539714-*** 91-539720-*** 91-539730-*** 91-539740-*** 91-539749-*** 91-539758-*** 91-539768-***	CIRC. LAMY REL.	MS27494-22D	P	22D-22D	22-28	M22520/2-01	M22520/2-09	MS27534-22D	MS27534-22D	DRK105-22M OR 11-10050-1
			OR								
			MS27655-22D	S	22D-22D	22-28	M22520/2-01	M22520/2-07	MS27495A22M	MS27495R22M	
SIMILAR TO MIL-C-38999 SERIES IB EXCEPT HAS LANYARD RELEASE COUPLING	91-539712-***		MS27494-22M	P	22M-22M	24-28	M22520/2-01	M22520/2-09	MS27534-22D	MS27534-22D	DRK105-22M OR 11-10050-1
			OR								
			MS27655-22D	S	22D-22D	22-28	M22520/2-01	M22520/2-07	MS27495A22M	MS27495R22M	
REAR RELEASE CONTACTS	91-539701-*** 91-539704-*** 91-539709-*** 91-539711-*** 91-539713-*** 91-539719-*** 91-539729-*** 91-539739-*** 91-539750-*** 91-539759-*** 91-539770-***		MS27494-20	P	20-20	20-24	M22520/1-01 OR M22520/2-01	M22520/1-04 (RED) M22520/2-10	MS27534-20	MS27534-20	DRK105-20 OR 11-10050-3
			OR								
			MS27655-20	S	20-20	20-24	M22520/1-01 OR M22520/2-01	M22520/1-04 (RED) M22520/2-10	MS27495A20	MS27495R20	
	91-539710-*** 91-539718-*** 91-539728-*** 91-539738-*** 91-539748-*** 91-539757-*** 91-539768-***		MS27494-16	P	16-16	16-18	M22520/1-01	M22520/1-04 (BLUE)	MS27534-16 MS27495A16	MS27534-16 MS27495R16	DRK105-16 OR 11-10050-4
			OR								
			MS27655-16	S							
	91-539721-*** 91-539738-*** 91-539769-***		MS27494-20	P	20-20	20-24	M22520/2-01	M22520/2-10	MS27534-20 MS27495A20	MS27534-20 MS27495R20	DRK105-20 OR 11-10050-3
			OR								
			MS27655-20	S							
			MS27494-16	P	16-16	16-18	M22520/1-01	M22520/1-04 (BLUE)	MS27534-16 MS27495A16	MS27534-16 MS27495R16	DRK105-16 OR 11-10050-4
			OR								
			MS27655-16	S							
	91-539727-*** 91-539743-*** 91-539769-***		MS27494-12	P	12-12	12-14	M22520/1-01	M22520/1-04 (YELLOW)	MS27534-12 MS27495A12	MS27534-12 MS27495R12	DRK105-12 OR 11-10050-5
			OR								
			MS27655-12	S							

Source: https://assist.dla.mil -- Downloaded: 202640-26T04:45Z
Check the source to verify that this is the current version before use.

TOOL SELECTION CHART

VENDOR (VENDOR CODE) CONNECTOR SERIES AND TYPE	CONNECTOR PART NO.	CONN. DESC.	CONTACT PART NO.	PIN (P) OR SOCKET (S)	CONTACT SIZE (MATING END-WIRE BARREL)	WIRE RANGE OR CABLE	CRIMP TOOL	TURRET HEAD POSITIONER OR DIE	INSTALLING TOOL	REMOVAL TOOL	REMOVAL TOOL FOR UNWIRED CONTACTS
BENDIX (77820) SIMILAR TO MIL-C-38999 SERIES IIB EXCEPT HAS LANYARD RELEASE MOUNTING	91-540446-35* 91-540447-35* 91-540448-35* 91-540449-35* 91-540450-35* 91-540451-35* 91-540452-35* 91-540453-35* 91-540454-35*	CIRC. LANY. REL.	MS27494-22D	P	22D-22D	22-28	M22520/2-01	M22520/2-09	MS27534-22D MS27495A22M	MS27534-22D MS27495R22M	DRK105-22M OR 11-10050-1
			MS27492-22D	S	22D-22D	22-28	M22520/2-01	M22520/2-06			
	91-540448-22*		MS27494-22M	P	22M-22M	24-28	M22520/2-01	M22520/2-09	MS27534-22D MS27495A22M	MS27534-22D MS27495R22M	DRK105-22M OR 11-10050-1
			MS27492-22M	S	22M-22M	24-28	M22520/2-01	M22520/2-06			
	91-540446-98* 91-540447-6* 91-540448-8* 91-540448-98* 91-540449-19* 91-540450-26* 91-540451-32* 91-540452-41* 91-540453-55* 91-540454-61*		MS27494-20	P	20-20	20-24	M22520/2-01	M22520/2-10	MS27534-20 MS27495A20	MS27534-20 MS27495R20	DRK105-20 OR 11-10050-3
			MS27492-20	S	20-20	20-24					
	91-540444R-4* 91-540449-5* 91-540450-8* 91-540451-11* 91-540452-16* 91-540453-21*		MS27494-16	P	16-16	16-20	M22520/1-01	M22520/1-04 (BLUE)	MS27534-16 MS27495A16	MS27534-16 MS27495R16	DRK105-16 OR 11-10050-4
			MS27492-16	S	16-16	16-20					
	91-540449-97* 91-540451-28* 91-540452-39* 91-540454-4*		MS27494-20	P	20-20	20-24	M22520/2-01	M22520/2-10	MS27534-20 MS27495A20	MS27534-20 MS27495R20	DRK105-20 OR 11-10050-3
			MS27492-20	S							
			MS27494-16	P	16-16	16-20	M22520/1-01	M22520/1-04 (BLUE)	MS27534-16 MS27495A16	MS27534-16 MS27495R16	DRK105-16 OR 11-10050-4
			MS27492-16	S							
	91-540450-6*		MS27494-12	P	12-12	12-14	M22520/1-01	M22520/1-04 (YELLOW)	MS27534-12 MS27495A12	MS27534-12 MS27495R12	DRK105-12 OR 11-10050-5
			MS27492-12	S							
	91-540454-24*		MS27494-16	P	16-16	16-20	M22520/1-01	M22520/1-04 (BLUE)	MS27534-16 MS27495A16	MS27534-16 MS27495R16	DRK105-16 OR 11-10050-4
			MS27492-16	S							
			MS27494-12	P	12-12	12-14	M22520/1-01	M22520/1-04 (YELLOW)	MS27534-12 MS27495A12	MS27534-12 MS27495R12	DRK105-12 OR 11-10050-5
			MS27492-12	S							

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

TOOL SELECTION CHART

NOTE: COMPLETE CONTACT PART NO. NOT ASSIGNED, BUT THEY ARE COMPRISED OF PIECE PARTS INDICATED.

VENDOR (VENDOR CODE) CONNECTOR SERIES AND TYPE	CONNECTOR PART NO.	CONN. DESC.	CONTACT PART NO.	PIN (P) OR SOCKET (S)	CONTACT SIZE (MATING END WIRE BARREL)	WIRE RANGE OR CABLE	CRIMP TOOL	TURRET HEAD POSITIONER OR DIE	INSTALLING TOOL	REMOVAL TOOL	REMOVAL TOOL FOR UNWIRED CONTACTS
"HYFEN BANTAM" SERIES BURNDY (09927) FRONT RELEASE CONTACTS	M22T10X*6*-H25 M22TR10X*6*-H33 M22TR10X*6*-H68	CIRC.	SEE NOTE ① ② ③ ④	P	8-8 COAX	CABLE GROUP M	INNER CONTACT 2 & 6 M22520/2-01	K413	NONE REQ'D	DRK58-8 OR RX8-1	SAME
			③ ④ ⑤ ⑥	S			OUTER FERRULE 3 M22520/5-01	M22520/5-05(R)			
			② ⑦ ⑧ ⑨	P	8-R COAX	CABLE GROUP N	INNER CONTACT 2 & 6 M22520/2-01	K413	NONE REQ'D	DRK58-8 OR RX8-1	SAME
			⑥ ⑧ ⑨ ⑩	S			OUTER FERRULE 8 M22520/5-01	Y248			
			① ② ③ ④	P	8-8 COAX	CABLE GROUP M	INNER CONTACT 2 & 6 M22520/2-01	K413	NONE REQ'D	DRK58-8 OR RX8-1	SAME
			③ ④ ⑤ ⑥	S			OUTER FERRULE 1 M22520/5-01	M22520/5-05(B)			
			② ⑦ ⑧ ⑨	P	8-8 COAX	CABLE GROUP N	INNER CONTACT 2 & 6 M22520/2-01	K413	NONE REQ'D	DRK58-8 OR RX8-1	SAME
			⑥ ⑧ ⑨ ⑩	S			OUTER FERRULE 8 M22520/5-01	Y248			
"SMOOTH BANTAM" SERIES FRONT RELEASE CONTACTS	L18T*88*** (POWER & TRIAX) AND L22T*96*** (TRIAX ONLY)	CIRC.	MS3192A20-20A	P	20-20	20-24	M22520/1-01 OR M22520/2-01	M22520/1-02 (RED) M22520/2-02	MS24256A20	MS24256RM20 "TUBE" END	SAME
			MS3193A20-20A	S							
			LRMXSK-19	P	8-8 TRIAX	CABLE GROUP P	INNER CONTACT M22520/2-01	K160	DAK 87-8 OR RTM8-1	DRK 87-8 OR RX8-3	SAME
			LRCXSK-19	S			INNER FERRULE M22520/1-01 OUTER FERRULE M22520/5-01	TP120 M22520/5-45(A)			
THERMOCOUPLE REAR RELEASE CONTACTS	THERMOCOUPLE CONTACTS FOR USE IN MIL-C-38999 SERIES II CONNECTORS.	AL	TM20W-9	P	20-20	20-24	M22520/1-01 OR M22520/2-01	M22520/1-04 (RED) M22520/2-10	MS27534-20 MS27495A20	MS27534-20 MS27495R20	DRK105-20 OR 11-10050-3
			TC20W-9	S							
		CR	TM20W-10	P							
			TC20W-10	S							
		CN	TM20W-12	P							
			TC20W-12	S							
DEUTSCH RELAYS (99699) RELAY SOCKET MODULES REAR RELEASE CONTACTS	BSE410-6 BSE410-7 BSCTD210-8 BSCTD210-9 BSCVSTD410-11	REL. SKT. MOD.	MS27491-16	S	16-16	16-20	M22520/1-01	M22520/1-04 (BLUE)	MS27534-16 MS27495A16	MS27534-16 MS27495R16	DRK105-16 OR 11-10050-3
	BSE210-6 BSE210-7 BSCVS110-1 BSCVS110-2 BSCVS210-1		MS27491-22	S	22-22	22-26	M22520/2-01	M22520/2-06	MS27495A22	MS27495R22	DRK105-22 OR 11-10050-2
			MS27491-16	S	16-16	16-20	M22520/1-01	M22520/1-04 (BLUE)	MS27534-16 MS27495A16	MS27534-16 MS27495R16	DRK105-16 OR 11-10050-4
			MS27491-20	S	20-20	20-24	M22520/1-01 OR M22520/2-01	M22520/1-04 (RED) M22520/2-10	MS27534-20 MS27495A20	MS27534-20 MS27495R20	DRK105-20 OR 11-10050-3
	BSEL410-1		MS27491-16	S	16-16	16-20	M22520/1-01	M22520/1-04 (BLUE)	MS27534-16 MS27495A16	MS27534-16 MS27495R16	DRK105-16 OR 11-10050-4

CABLE GROUP M - RG180/u, RG195/u, AMPHENOL 21-597, SUPRENANT 4429 & 9872; CABLE GROUP N - SUPRENANT FAR-73J-CAA.
CABLE GROUP P - MCAIR ST6M1323 001, TIMES AA2375; TENSOLITE 26695/1511
CONTACT PIECE PARTS: ① RMMX110-9, ② RFM26W-1, ③ YOC110, ④ YORX110-2, ⑤ RCMX110-9, ⑥ RMM26W-1, ⑦ RMMX128-4, ⑧ YOC126, ⑨ RMMX128-4P2, ⑩ RCMX128-4

Source: https://assist.dla.mil -- Downloaded: 20260-26T04:45Z
Check the source to verify that this is the current version before use.

VENDOR (VENDOR CODE) CONNECTOR SERIES AND TYPE	CONNECTOR PART NO.	CONN. DESC.	CONTACT PART NO.	PIN (P) OR SOCKET (S)	CONTACT SIZE (MATING END-WIRE BARREL)	WIRE RANGE OR CABLE	CRIMP TOOL	TURRET HEAD POSITOINER OR DIE	INSTALLING TOOL	REMOVAL TOOL	REMOVAL TOOL FOR UNWIRED CONTACTS
DEUTSCH (11139) "DS" SERIES FRONT RELEASE CONTACTS	DS07-3719** AND DS07-61-21** (COAX CONTACTS ONLY)	CIRC. PLUG PUSH PULL	800-20/32-1	P	20-20	20-24	M22520/2-01	K392	MS24256A20	M15515-20	SAME
			800-20/30-1	S							
			0106-003-000	P	8-8 (COAX)	CABLE GROUP Q	INNER M22520/2-01 OUTER M22520/5-01	CONTACT K30C (1) FERRULE M22520/5-03 (A)	DAK51-8 OR M15513-25	DRK51-8 OR M15515-25	SAME
			0107-003-000	S							
	DS07-3719**-1 AND DS07-61-21**-1 (COAX CONTACTS ONLY)		800-20/32-1	P	20-20	20-24	M22520/2-01	K392	MS24256A20	DRK51-20 OR M15515-20	SAME
			800-20/30-1	S							
			800/33-1	P	8-8 (COAX)	CABLE GROUP R	INNER M22520/2-01 OUTER M22520/5-01	CONTACT K30C (1) FERRULE M22520/5-05(B)	DAK51-8 OR M15513-25	DRK51-8 OR M15515-25	SAME
			800-34-1	S							
	DS07-3719**-5 AND DS07-61-21**-5 (COAX CONTACTS ONLY)		800-20/32-1	P	20-20	20-24	M22520/2-01	K392	MS24256A20	DRK51-20 OR M15515-20	SAME
			800-20/30-1	S							
			0106-001-000	P	8-8 (COAX)	CABLE GROUP S	INNER M22520/2-01 OUTER M22520/5-01	CONTACT K30C (1) FERRULE M22520/5-05 (A)	DAK51-8 OR M15513-25	DRK51-8 OR M15515-25	SAME
			0107-001-000	S							
	DS07-3719**-15 AND DS07-61-21**-15 (COAX CONTACTS ONLY)		800-20/32-1	P	20-20	20-24	M22520/2-01	K392	MS24256A20	DRK51-20 OR M15515-20	SAME
			800-20/30-1	S							
			10926-56	P	8-8 (COAX)	CABLE GROUP T	INNER M22520/2-01 OUTER M22520/5-01	CONTACT K30C (1) FERRULE M22520/5-03 (A)	DAK51-8 OR M15513-25	DRK51-8 OR M15515-25	SAME
			109267-56	S							
	DS07-3719**-16 AND DS07-61-21**-16 (COAX CONTACTS ONLY)		800-20/32-1	P	20-20	20-24	M22520/2-01	K392	MS24256A20	DRK51-20 OR M15515-20	SAME
			800-20/30-1	S							
			800/33-1	P	8-8 (COAX)	CABLE GROUP U	INNER M22520/2-01 OUTER M22520/5-01	CONTACT K30C (1) FERRULE M22520/5-05 (B)	DAK51-8 OR M15513-25	DRK51-8 OR M15515-25	SAME
			800/34-1	S							
ITT CANNON (71468)		AL	030-3196-015	P	16-16 16 (SHORT)	16-20	M22520/1-01	M22520/1-02 (BLUE)	MS27534-16 OR M83723-31-6 (BLUE)	MS27534-16 OR M83723-31-16 (WHITE)	MS3448-001 WITH BLUE PROBE
			031-3114-014	S							
			031-3113-011	S							
		CR	030-3196-016	P							
			031-3114-015	S							
			031-3133-012	S							
		AL	030-3197-011	P	12-12	12-14	M22520/1-01	M22520/1-02 (YELLOW)	MS27534-12 OR M83723-31-12 (YELLOW)	MS27534-12 OR M83723-31-12 (WHITE)	MS3448-001 WITH YELLOW PROBE
			031-3115-009	S							
		CR	030-3197-012	P							
			031-3115-010	S							

NOTE (1) - USE G244 GAGE TO DETERMINE APPLICABLE CONTACT I.D. GAGE WILL NOT ENTER CONTACT WIRE BARREL WITH .033 I.D.
(AL) - ALUMEL. (CR) - CHROMEL

CABLE GROUP Q - RG174/u, RG178/u, RG179/u, RG187/u, RG188/u, RG196/u
R - RG180/u, RG195/u
S - RG55/u, RG58/u, RG141/u, RG142/u, RG223/u
T - M AIR SM1010 MICRODOT 295 3963, SUPRENANT ES 2970, TIMES AA-2443
U - RG180/u, MCAIR ST5M1347 TIMES AA-2372, HAVEG 51-03628, TENSOLITE 24M75-4X-1

Source: https://assist.dla.mil -- Downloaded: 2026/0-26T04:45Z
Check the source to verify that this is the current version before use.

TOOL SELECTION CHART

VENDOR (VENDOR CODE) CONNECTOR SERIES AND TYPE	BASIC CONNECTOR PART NO.	CONN. DESC.	CONTACT PART NO.	PIN (P) OR SOCKET (S)	CONTACT SIZE (MATING END-WIRE BARREL)	WIRE RANGE OR CABLE	CRIMP TOOL / TURRET HEAD POSITIONER OR DIE	INSTALLING TOOL	REMOVAL TOOL	REMOVAL TOOL FOR UNWIRED CONTACTS
ITT GREMAR (91737)	26114* SERIES BNC	RT. ANGLE PLUG	INNER CONTACT M39012/20-11	P	N.A.	CABLE GROUP V	INNER CONTACT M22520/1-01 | M22520/1-12 (GREEN) OUTER FERRULE M22520/5-01 | M22520/5-19(B)	N.A.	N.A.	N.A.
			OUTER FERRULE 27162-43	N.A.	N.A.					
	27162* SERIES TNC	ST. PLUG	INNER CONTACT M39012/26-11	P	N.A.	CABLE GROUP V	INNER CONTACT M22520/1-01 | M22520/1-12 (BLUE) OUTER FERRULE M22520/5-01 | M22520/5-19(B)	N.A.	N.A.	N.A.
			OUTER FERRULE 27162-43	N.A.	N.A.					
RADIO FREQUENCY COAXIAL	25116* SERIES N	RT. ANGLE PLUG	INNER CONTACT M39012/5-10	P	N.A.	CABLE GROUP W	INNER CONTACT M22520/1-01 | M22520/1-13 (BLUE) OUTER FERRULE M22520/5-01 | M22520/5-61(A)	N.A.	N.A.	N.A.
			OUTER FERRULE M39012/5-50	N.A.	N.A.					
	27164* SERIES TNC	ST. PLUG	INNER CONTACT M39012/26-10	P	N.A.	CABLE GROUP X	INNER CONTACT M22520/1-01 | M22520/1-12 (BLUE) OUTER FERRULE M22520/5-01 | M22520/5-19(B)	N.A.	N.A.	N.A.
			OUTER FERRULE M39012/26-51	N.A.	N.A.					
	27165* SERIES TNC	RT. ANGLE PLUG	INNER CONTACT M39012/30-10	P	N.A.	CABLE GROUP X	INNER CONTACT M22520/1-01 | M22520/1-12 (GREEN) OUTER FERRULE M22520/5-01 | M22520/5-19(B)	N.A.	N.A.	N.A.
			OUTER FERRULE M39012/30-50	N.A.	N.A.					
	27166* SERIES TNC	ST. PLUG	INNER CONTACT M39012/26-11	P	N.A.	CABLE GROUP V	INNER CONTACT M22520/1-01 | M22520/1-12 (GREEN) OUTER FERRULE M22520/5-01 | M22520/5-19(B)	N.A.	N.A.	N.A.
			OUTER FERRULE 27162-43	N.A.	N.A.					
	27167* SERIES TNC	RT. ANGLE PLUG	INNER CONTACT M39012/30-11	P	N.A.	CABLE GROUP V	INNER CONTACT M22520/1-01 | M22520/1-12 (GREEN) OUTER FERRULE M22520/5-01 | M22520/5-19(B)	N.A.	N.A.	N.A.
			OUTER FERRULE 27162-43	N.A.	N.A.					
	MCAIR P/N (ST5M134A1ROD) SERIES TNC	ST. PLUG	INNER CONTACT M39012/30-12	P	N.A.	CABLE GROUP Y	INNER CONTACT M22520/1-01 | M22520/1-12 (GREEN) OUTER FERRULE M22520/5-01 | M22520/5-19(B)	N.A.	N.A.	N.A.
			OUTER FERRULE 27162-41	N.A.	N.A.					
	MCAIR P/N (ST5M134A1ROE) SERIES TNC	RT. ANGLE PLUG	INNER CONTACT M39012/30-11	P	N.A.	CABLE GROUP Z	INNER CONTACT M22520/1-01 | M22520/1-12 (GREEN) OUTER FERRULE M22520/5-01 | M22520/5-41(B)	N.A.	N.A.	N.A.
			OUTER FERRULE M39012/30-51	N.A.	N.A.					

CABLE GROUPS - V-MCAIR SM1010, MICRODOT 293-3963, SUPRENANT ES 2970, TIMES AA-2443 W - MCAIR ST5M1339-001, TIMES AA-2306 X RG142/u RG400/u
Y-MCAIR ST5M1347, HAVEG 51-00628, TENSOLITE 24875-4X-1, TIMES AA 2372 Z - RG180/u, MCAIR ST5M1351

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

REQUIREMENTS:

Design and configuration: See figures 1 through 5.

Material:
Case (Category 2): Fiberglass with an aluminum frame (Skydyne part number SK672900 or equal), olive drab in accordance with FED-STD-595.
Cover and components: Aluminum alloy clear anodized in accordance with MIL-A-8625.
Instruction sheets and contents charts: White vinyl 0.020 inch (0.51 mm) thick.

Insert and retainer pad: Fire retardant foamed polyethylene in accordance with PPP-C-1752; color is optional.

Clasps, handles, hinges, and locking hasp: Suitably plated to resist corrosion.

Nameplate: In accordance with MIL-P-19834.

Cover: A retainer pad shall be permanently affixed to the underside and a latch shall be provided so that when the cover is closed the tools will be captivated in their respective positions.

Manual air pressure relief valve: Provided and located adjacent to handle. Decal with "OPEN BEFORE AIRFLIGHT", "CLOSE AFTER AIRFLIGHT" shall be attached to case adjacent to valve.

Rubber feet: Provided on back and bottom of case (see figure 1).

Instruction sheets and contents charts (see pages 8 through 42). Lettering shall be legible and protected with a transparent coating. Contents charts (centered on inside of top and bottom tool case cover) shall have pressure sensitive adhesive backing and show the insert cavity configurations and the respective tool part numbers; a list of NSN's will also be supplied.

Part number:
M83507/13-01 - Tool kit for F15 aircraft connector systems.
M83507/13-02 - Tool case assembly.

QUALIFICATION:
Qualifying activity: Defense Electronics Supply Center, (DESC-E). Dayton, OH 45444

Custodian:
Air Force - 85

Review Activities:
Air Force - 11, 17, 99
DLA - ES

User activity:
Air Force - 19

Preparing activity:
Air Force - 85

(Project 5180-F104)

☆U.S. GOVERNMENT PRINTING OFFICE: 1977 — 703-122/82

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:45Z
Check the source to verify that this is the current version before use.