
MILITARY SPECIFICATION SHEET

SWITCH, ROTARY, CLOSED CONSTRUCTION, .500 AMPERE, STYLE SR13

This specification is approved for use by all Departments and Agencies of the Department of Defense.

The complete requirements for acquiring the switch described herein shall consist of this specification and the latest issue of MIL-S-3786.

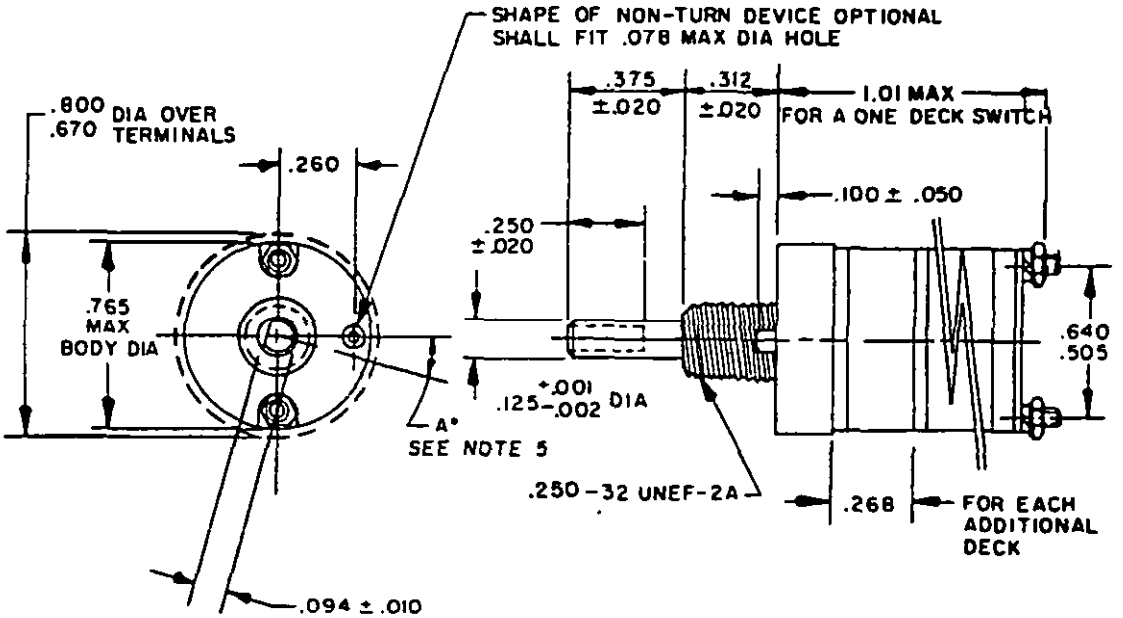

D "E" CONSTRUCTION STYLE

(EXPLOSION-PROOF, CLOSED CONSTRUCTION WITHOUT SEALED SHAFT AND BUSHING)

Inches	mm	Inches	mm	Inches	mm
.001	0.03	.100	2.54	.375	9.53
.002	0.05	.125	3.18	.505	12.83
.010	0.25	.250	6.35	.640	16.26
.020	0.51	.260	6.60	.670	17.02
.050	1.27	.268	6.81	.765	19.43
.094	2.39	.312	7.92	.800	20.32
				1.01	25.65


NOTES:
1. Dimensions are in inches.
2. Metric equivalents are given for general information only.
3. Unless otherwise specified, tolerances are ±.015 (0.38 mm) and ±3° on angles (nonaccumulative).
4. Maximum weight: one deck switch is 19 grams. Add 2.5 max grams for each additional deck and based upon 1 oz = 28.35 grams.
5. Shaft-flat angle A° is the angle between a line through the center of the shaft, perpendicular to the mounting bushing flats and another line through center of the shaft and perpendicular to the shaft flat, with switch in position number 1. This refers to panel position; see figure 2 for terminal location.

(D) FIGURE 1. Style SR13 switch.

(D) denotes change


Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

DISTRIBUTION STATEMENT A. Approved for public release; distribution is unlimited.

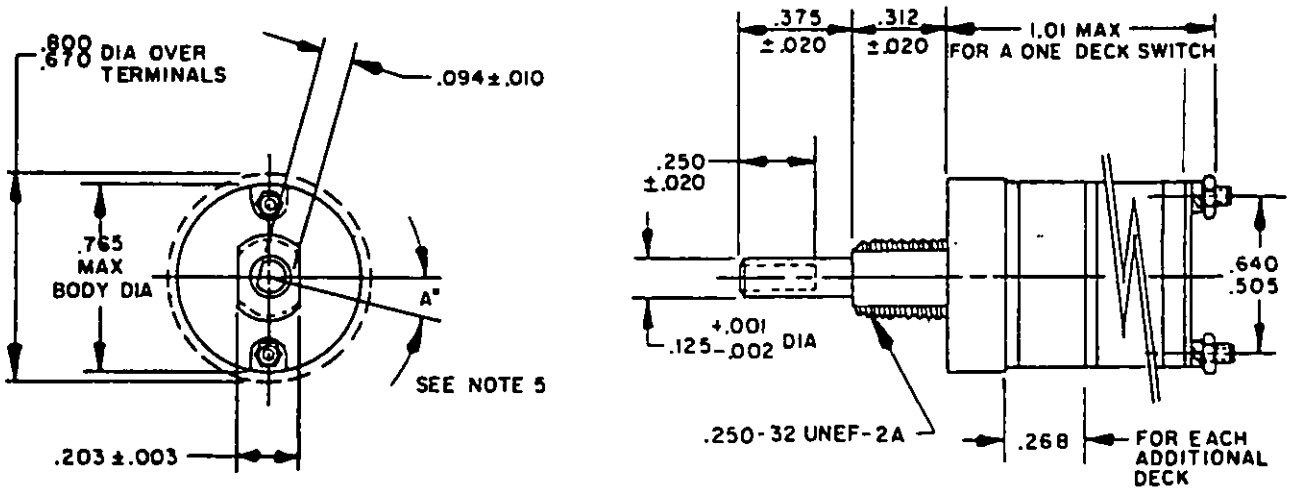

"F" CONSTRUCTION STYLE

(EXPLOSION-PROOF, CLOSED CONSTRUCTION WITH SEALED SHAFT AND BUSHING)

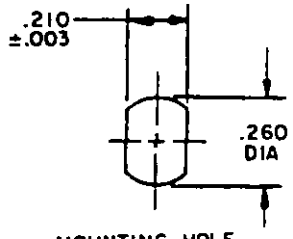


MOUNTING HOLE

Inches	mm	Inches	mm	Inches	mm
.001	0.03	.203	5.16	.375	9.53
.002	0.05	.210	5.33	.505	12.83
.010	0.25	.250	6.35	.640	16.26
.020	0.51	.260	6.60	.670	17.02
.094	2.39	.268	6.81	.765	19.43
.125	3.18	.312	7.92	.800	20.32
				1.01	25.65

NOTES:
1. Dimensions are in inches.
2. Metric equivalents are given for general information only.
3. Unless otherwise specified, tolerances are ±.015 (0.38 mm) and ±3° on angles (nonaccumulative).
4. Maximum weight: one deck switch is 19 grams. Add 2.5 max grams for each additional deck and based upon 1 oz = 28.35 grams.
5. Shaft-flat angle A° is the angle between a line through the center of the shaft and center of the nonturn device, and another line through the center of the shaft and perpendicular to the shaft flat, with switch in position number 1. This refers to panel position; see figure 2 for terminal location.


(D) FIGURE 1. Style SR13 switch - Continued.

Source: https://assist.dla.mil -- Downloaded: 202610-16T21:36Z
Check the source to verify that this is the current version before use.

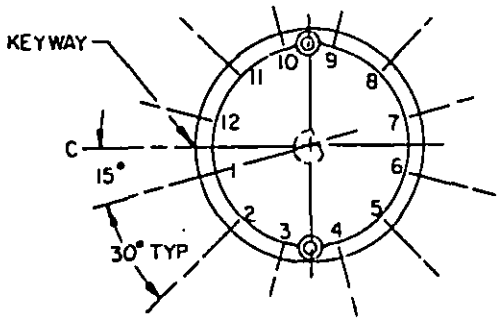

EXAMPLE

SWITCH VIEWED FROM REAR WITH BUSHING KEYWAY AT NINE O'CLOCK. ("C" REPRESENTS COMMON TERMINAL)

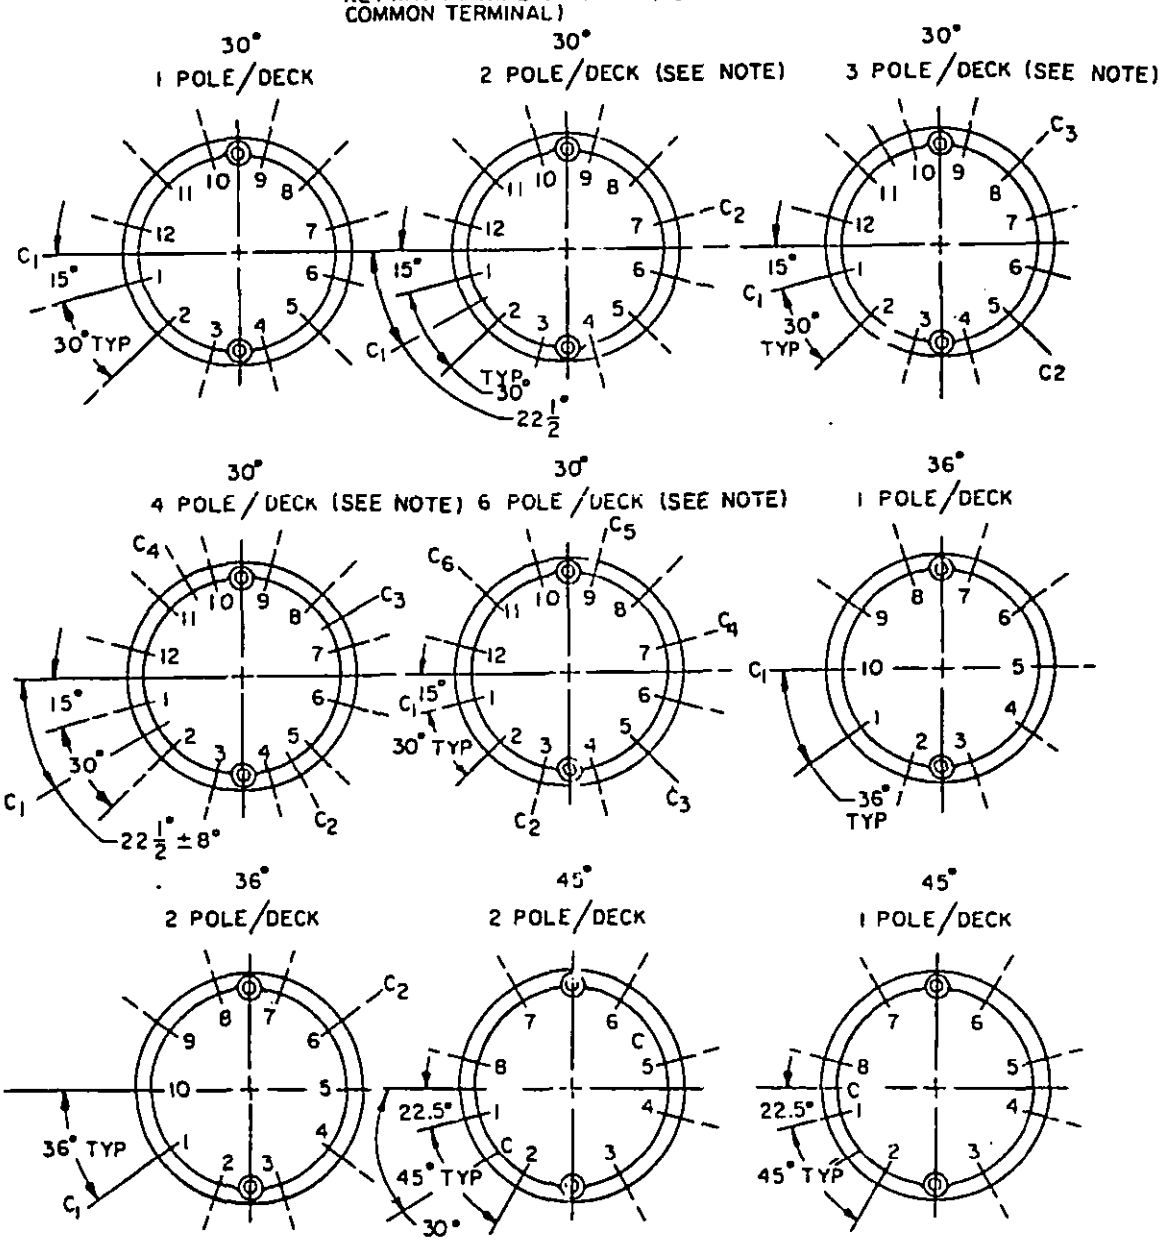

Ⓓ FIGURE 2. Rear view of terminals configurations.

Source: https://assist.dla.mil -- Downloaded: 20261O-16T21:36Z
Check the source to verify that this is the current version before use.

REQUIREMENTS:

Dimensions and configuration: See figure. Angle "A" is 15° for switches of 30° and 45° angle of throw; 36° for switches of 36° angle of throw.

Angle of throw and maximum number of poles per deck:

30 degrees: 6 poles
36 degrees: 2 poles
45 degrees: 2 poles

Insulation material: Symbol P.

Construction style: See table IV.

Temperature life characteristics: See table IV.

Vibration grade: Symbol 3 (10 to 2,000 Hz).

Shock type: Symbol H (high impact) and
M (medium impact).

Altitude: Symbol C (70,000 ft).

Mounting hardware: Each switch shall be provided with two hexagon nuts, unless otherwise specified, 0.312 ±0.010 inch across flats and 0.062 ±0.010-inch thick; one internal tooth lockwasher .415 max. OD.

Terminals: Terminals shall be designed so that the terminals can accommodate a wire having a diameter of 0.030 inch. The terminals shall project in a direction parallel to the plane of the switch section.

Moisture resistance: Insulation resistance, measured immediately after conclusion of the moisture resistance test, and while the switches are still in the humidity chamber, shall be greater than 0.5 megohm. At the end of the drying period, the insulation resistance shall not be less than 10 megohms.

Stop strength: Switches shall have a stop strength of 12 pound-inches minimum.

Rotational torque: The minimum and maximum values of torque determined for shaft rotation shall be within the limits specified in table I.

Terminal strength (pull): A force of 2 pounds minimum shall be applied to the terminals.

TABLE I. Rotational torque limits.

Total number of switch poles	Temperature	Torque (lb-in)	
		Minimum	Maximum
Less than 4	Room	.32	1.7
	Minimum	.32	2.2
4 thru 8	Room	.4	2.7
	Minimum	.4	3.2
More than 8	Room	.5	3.5
	Minimum	.5	4.0

Life (rotational): The test loads for the applicable circuit conditions shall be as specified in table II. Each of the loads, specified for the applicable environmental condition shall be switched by at least one rotor contact of the switch.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

Extent of qualification: "F" construction style qualifies "E" construction style for the same switches provided two sample units of "E" construction switches are tested to explosion requirement paragraph to verify explosion proof capability.

TABLE II. Circuit values for life (rotational) test.

Environmental condition	Inductive loads (250 millihenries)		Resistive loads	
	Milliamperes	Volts, dc	Milliamperes	Volts
At atmospheric pressure and 85°C or 125°C (25,000 cycles)	50	28	125	28 dc
			75	115 V rms 60 Hz
At reduced barometric pressure (approximately 25°C) (25,000 cycles)	10	28	50	28 dc
			20	115 V rms 60 Hz
At atmospheric pressure and room temperature (Approx. 25°C) (10,000 cycles) 1/, 2/	250	28	500	28 dc
			500	115 V rms 60 Hz

1/ Three additional samples will be run for qualification. Switch to be tested shall be part number M3786/13-0321, -3321; or -5321.
2/ The contact resistance (applicable to ac and dc), after life tests shall not exceed 50 milliohms.

Dielectric withstanding voltage: The applicable voltage specified in table III shall be applied.

TABLE III. Dielectric-test voltages.

Altitude	Test voltage
	(Volts, rms) (60 Hz)
At atmospheric pressure	500
At reduced barometric pressure	350

Ordering data: Acquisition document should specify the following:

(1) Title, number, and date of this specification sheet, and the military part number as listed in table IV.

(2) For switches not listed in table IV acquisition shall be in accordance with the ordering data of MIL-S-3786 (for switches covered by specification sheets).

Part number: See table IV.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers.

Part No. M3786/13- Construction: E Temp. -life char: B	Part No. M3786/13- Construction: E Temp. -life char: C	Part No. M3786/13- Construction: F Temp. -life char: C	Angle of throw	No. of decks	Poles per decks	Pos. per pole	Switching char. (S or NS)
0001	3001	5001	30°	1	1	2	NS
0002	3002	5002	"	"	"	3	"
0003	3003	5003	"	"	"	4	"
0004	3004	5004	"	"	"	5	"
0005	3005	5005	"	"	"	6	"
0006	3006	5006	"	"	"	7	"
0007	3007	5007	"	"	"	8	"
0008	3008	5008	"	"	"	9	"
0009	3009	5009	"	"	"	10	"
0010	3010	5010	"	"	"	11	"
0011	3011	5011	"	"	"	12 1/	"
0012	3012	5012	"	"	"	12	"
0013	3013	5013	"	"	2	2	"
0014	3014	5014	"	"	"	3	"
0015	3015	5015	"	"	"	4	"
0016	3016	5016	"	"	"	5	"
0017	3017	5017	"	"	"	6	"
0018	3018	5018	"	"	3	2	"
0019	3019	5019	"	"	"	3	"
0020	3020	5020	"	"	"	4	"
0021	3021	5021	"	"	4	2	"
0022	3022	5022	"	"	"	3	"
0023	3023	5023	"	"	6	2	"
0024	3024	5024	"	2	1	2	"
0025	3025	5025	"	"	"	3	"
0026	3026	5026	"	"	"	4	"
0027	3027	5027	"	"	"	5	"
0028	3028	5028	"	"	"	6	"
0029	3029	5029	"	"	"	7	"
0030	3030	5030	"	"	"	8	"
0031	3031	5031	"	"	"	9	"
0032	3032	5032	"	"	"	10	"
0033	3033	5033	"	"	"	11	"
0034	3034	5034	"	"	"	12 1/	"
0035	3035	5035	"	"	"	12	"
0036	3036	5036	"	"	2	2	"
0037	3037	5037	"	"	"	3	"
0038	3038	5038	"	"	"	4	"
0039	3039	5039	"	"	"	5	"
0040	3040	5040	"	"	"	6	"
0041	3041	5041	"	"	3	2	"
0042	3042	5042	"	"	"	3	"
0043	3043	5043	"	"	"	4	"
0044	3044	5044	"	"	4	2	"
0045	3045	5045	"	"	"	3	"
0046	3046	5046	"	"	6	2	"
0047	3047	5047	"	3	1	2	"
0048	3048	5048	"	"	"	3	"
0049	3049	5049	"	"	"	4	"
0050	3050	5050	"	"	"	5	"
0051	3051	5051	"	"	"	6	"
0052	3052	5052	"	"	"	7	"
0053	3053	5053	"	"	"	8	"
0054	3054	5054	"	"	"	9	"
0055	3055	5055	"	"	"	10	"
0056	3056	5056	"	"	"	11	"
0057	3057	5057	"	"	"	12 1/	"
0058	3058	5058	"	"	"	12	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 202640-16T21:36Z
Check the source to verify that this is the currentversion before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part No. M3786/13- Construction: E Temp. -life char: B	Part No. M3786/13- Construction: E Temp. -life char: C	Part No. M3786/13- Construction: F Temp. -life char: C	Angle of throw	No. of decks	Poles per decks	Pos. per pole	Switching char. (S or NS)
0059	3059	5059	30°	3	2	2	NS
0060	3060	5060	"	"	"	3	"
0061	3061	5061	"	"	"	4	"
0062	3062	5062	"	"	"	5	"
0063	3063	5063	"	"	"	6	"
0064	3064	5064	"	"	3	2	"
0065	3065	5065	"	"	"	3	"
0066	3066	5066	"	"	"	4	"
0067	3067	5067	"	"	4	2	"
0068	3068	5068	"	"	"	3	"
0069	3069	5069	"	"	6	2	"
0070	3070	5070	"	4	1	2	"
0071	3071	5071	"	"	"	3	"
0072	3072	5072	"	"	"	4	"
0073	3073	5073	"	"	"	5	"
0074	3074	5074	"	"	"	6	"
0075	3075	5075	"	"	"	7	"
0076	3076	5076	"	"	"	8	"
0077	3077	5077	"	"	"	9	"
0078	3078	5078	"	"	"	10	"
0079	3079	5079	"	"	"	11	"
0080	3080	5080	"	"	"	12 1/	"
0081	3081	5081	"	"	"	12	"
0082	3082	5082	"	"	2	2	"
0083	3083	5083	"	"	"	3	"
0084	3084	5084	"	"	"	4	"
0085	3085	5085	"	"	"	5	"
0086	3086	5086	"	"	"	6	"
0087	3087	5087	"	"	3	2	"
0088	3088	5088	"	"	"	3	"
0089	3089	5089	"	"	"	4	"
0090	3090	5090	"	"	4	2	"
0091	3091	5091	"	"	"	3	"
0092	3092	5092	"	5	1	2	"
0093	3093	5093	"	"	"	3	"
0094	3094	5094	"	"	"	4	"
0095	3095	5095	"	"	"	5	"
0096	3096	5096	"	"	"	6	"
0097	3097	5097	"	"	"	7	"
0098	3098	5098	"	"	"	8	"
0099	3099	5099	"	"	"	9	"
0100	3100	5100	"	"	"	10	"
0101	3101	5101	"	"	"	11	"
0102	3102	5102	"	"	"	12 1/	"
0103	3103	5103	"	"	"	12	"
0104	3104	5104	"	"	2	2	"
0105	3105	5105	"	"	"	3	"
0106	3106	5106	"	"	"	4	"
0107	3107	5107	"	"	"	5	"
0108	3108	5108	"	"	"	6	"
0109	3109	5109	"	"	3	2	"
0110	3110	5110	"	"	"	3	"
0111	3111	5111	"	"	"	4	"
0112	3112	5112	"	6	1	2	"
0113	3113	5113	"	"	"	3	"
0114	3114	5114	"	"	"	4	"
0115	3115	5115	"	"	"	5	"
0116	3116	5116	"	"	"	6	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part No. M3786/13- Construction: E Temp. -life char: B	Part No. M3786/13- Construction: E Temp. -life char: C	Part No. M3786/13- Construction: F Temp. -life char: C	Angle of throw	No. of decks	Poles per decks	Pos. per pole	Switching char. (S or NS)
0117	3117	5117	30°	6	1	7	"
0118	3118	5118	"	"	"	8	"
0119	3119	5119	"	"	"	9	"
0120	3120	5120	"	"	"	10	"
0121	3121	5121	"	"	"	11	"
0122	3122	5122	"	"	"	12 1/	"
0123	3123	5123	"	"	"	12	"
0124	3124	5124	"	"	2	2	"
0125	3125	5125	"	"	"	3	"
0126	3126	5126	"	"	"	4	"
0127	3127	5127	"	"	"	5	"
0128	3128	5128	"	"	"	6	"
0129	3129	5129	"	"	3	2	"
0130	3130	5130	"	"	"	3	"
0131	3131	5131	"	"	"	4	"
0132	3132	5132	"	7	1	2	"
0133	3133	5133	"	"	"	3	"
0134	3134	5134	"	"	"	4	"
0135	3135	5135	"	"	"	5	"
0136	3136	5136	"	"	"	6	"
0137	3137	5137	"	"	"	7	"
0138	3138	5138	"	"	"	8	"
0139	3139	5139	"	"	"	9	"
0140	3140	5140	"	"	"	10	"
0141	3141	5141	"	"	"	11	"
0142	3142	5142	"	"	"	12 1/	"
0143	3143	5143	"	"	"	12	"
0144	3144	5144	"	"	2	2	"
0145	3145	5145	"	"	"	3	"
0146	3146	5146	"	"	"	4	"
0147	3147	5147	"	"	"	5	"
0148	3148	5148	"	"	"	6	"
0149	3149	5149	"	8	1	2	"
0150	3150	5150	"	"	"	3	"
0151	3151	5151	"	"	"	4	"
0152	3152	5152	"	"	"	5	"
0153	3153	5153	"	"	"	6	"
0154	3154	5154	"	"	"	7	"
0155	3155	5155	"	"	"	8	"
0156	3156	5156	"	"	"	9	"
0157	3157	5157	"	"	"	10	"
0158	3158	5158	"	"	"	11	"
0159	3159	5159	"	"	"	12 1/	"
0160	3160	5160	"	"	"	12	"
0161	3161	5161	"	"	2	2	"
0162	3162	5162	"	"	"	3	"
0163	3163	5163	"	"	"	4	"
0164	3164	5164	"	"	"	5	"
0165	3165	5165	"	"	"	6	"
0166	3166	5166	"	9	1	2	"
0167	3167	5167	"	"	"	3	"
0168	3168	5168	"	"	"	4	"
0169	3169	5169	"	"	"	5	"
0170	3170	5170	"	"	"	6	"
0171	3171	5171	"	"	"	7	"
0172	3172	5172	"	"	"	8	"
0173	3173	5173	"	"	"	9	"
0174	3174	5174	"	"	"	10	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 202610-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part No. M3786/13- Construction: E Temp. -life char: B	Part No. M3786/13- Construction: E Temp. -life char: C	Part No. M3786/13- Construction: F Temp. -life char: C	Angle of throw	No. of decks	Poles per decks	Pos. per pole	Switching char. (S or NS)
0175	3175	5175	30°	9	1	11	NS
0176	3176	5176	"	"	"	12 1/	"
0177	3177	5177	"	"	"	12	"
0178	3178	5178	"	"	2	2	"
0179	3179	5179	"	"	"	3	"
0180	3180	5180	"	"	"	4	"
0181	3181	5181	"	"	"	5	"
0182	3182	5182	"	"	"	6	"
0183	3183	5183	"	10	1	2	"
0184	3184	5184	"	"	"	3	"
0185	3185	5185	"	"	"	4	"
0186	3186	5186	"	"	"	5	"
0187	3187	5187	"	"	"	6	"
0188	3188	5188	"	"	"	7	"
0189	3189	5189	"	"	"	8	"
0190	3190	5190	"	"	"	9	"
0191	3191	5191	"	"	"	10	"
0192	3192	5192	"	"	"	11	"
0193	3193	5193	"	"	"	12 1/	"
0194	3194	5194	"	"	"	12	"
0195	3195	5195	"	11	"	2	"
0196	3196	5196	"	"	"	3	"
0197	3197	5197	"	"	"	4	"
0198	3198	5198	"	"	"	5	"
0199	3199	5199	"	"	"	6	"
0200	3200	5200	"	"	"	7	"
0201	3201	5201	"	"	"	8	"
0202	3202	5202	"	"	"	9	"
0203	3203	5203	"	"	"	10	"
0204	3204	5204	"	"	"	11	"
0205	3205	5205	"	"	"	12 1/	"
0206	3206	5206	"	"	"	12	"
0207	3207	5207	"	12	"	2	"
0208	3208	5208	"	"	"	3	"
0209	3209	5209	"	"	"	4	"
0210	3210	5210	"	"	"	5	"
0211	3211	5211	"	"	"	6	"
0212	3212	5212	"	"	"	7	"
0213	3213	5213	"	"	"	8	"
0214	3214	5214	"	"	"	9	"
0215	3215	5215	"	"	"	10	"
0216	3216	5216	"	"	"	11	"
0217	3217	5217	"	"	"	12 1/	"
0218	3218	5218	"	"	"	12	"
0219	3219	5219	"	1	"	2	S
0220	3220	5220	"	"	"	3	"
0221	3221	5221	"	"	"	4	"
0222	3222	5222	"	"	"	5	"
0223	3223	5223	"	"	"	6	"
0224	3224	5224	"	"	"	7	"
0225	3225	5225	"	"	"	8	"
0226	3226	5226	"	"	"	9	"
0227	3227	5227	"	"	"	10	"
0228	3228	5228	"	"	"	11	"
0229	3229	5229	"	"	"	12 1/	S
0230	3230	5230	"	"	"	12	"
0231	3231	5231	"	"	2	2	"
0232	3232	5232	"	"	"	3	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part No. M3786/13- Construction: E Temp. -life char: B	Part No. M3786/13- Construction: E Temp. -life char: C	Part No. M3786/13- Construction: F Temp. -life char: C	Angle of throw	No. of decks	Poles per decks	Pos. per pole	Switching char. (S or NS)
0233	3233	5233	30°	1	2	4	S
0234	3234	5234	"	"	"	5	"
0235	3235	5235	"	"	"	6	"
0236	3236	5236	"	"	3	2	"
0237	3237	5237	"	"	"	3	"
0238	3238	5238	"	"	"	4	"
0239	3239	5239	"	"	4	2	"
0240	3240	5240	"	"	"	3	"
0241	3241	5241	"	"	6	2	"
0242	3242	5242	"	2	1	2	"
0243	3243	5243	"	"	"	3	"
0244	3244	5244	"	"	"	4	"
0245	3245	5245	"	"	"	5	"
0246	3246	5246	"	"	"	6	"
0247	3247	5247	"	"	"	7	"
0248	3248	5248	"	"	"	8	"
0249	3249	5249	"	"	"	9	"
0250	3250	5250	"	"	"	10	"
0251	3251	5251	"	"	"	11	"
0252	3252	5252	"	"	"	12 1/	"
0253	3253	5253	"	"	"	12	"
0254	3254	5254	"	"	2	2	"
0255	3255	5255	"	"	"	3	"
0256	3256	5256	"	"	"	4	"
0257	3257	5257	"	"	"	5	"
0258	3258	5258	"	"	"	6	"
0259	3259	5259	"	"	3	2	"
0260	3260	5260	"	"	"	3	"
0261	3261	5261	"	"	"	4	"
0262	3262	5262	"	"	4	2	"
0263	3263	5263	"	"	"	3	"
0264	3264	5264	"	"	6	2	"
0265	3265	5265	"	3	1	2	"
0266	3266	5266	"	"	"	3	"
0267	3267	5267	"	"	"	4	"
0268	3268	5268	"	"	"	5	"
0269	3269	5269	"	"	"	6	"
0270	3270	5270	"	"	"	7	"
0271	3271	5271	"	"	"	8	"
0272	3272	5272	"	"	"	9	"
0273	3273	5273	"	"	"	10	"
0274	3274	5274	"	"	"	11	"
0275	3275	5275	"	"	"	12 1/	"
0276	3276	5276	"	"	"	12	"
0277	3277	5277	"	"	2	2	"
0278	3278	5278	"	"	"	3	"
0279	3279	5279	"	"	"	4	"
0280	3280	5280	"	"	"	5	"
0281	3281	5281	"	"	"	6	"
0282	3282	5282	"	"	3	2	"
0283	3283	5283	"	"	"	3	"
0284	3284	5284	"	"	"	4	"
0285	3285	5285	"	"	4	2	"
0286	3286	5286	"	"	"	3	"
0287	3287	5287	"	"	6	2	"
0288	3288	5288	"	4	1	2	"
0289	3289	5289	"	"	"	3	"
0290	3290	5290	"	"	"	4	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part No. M3786/13- Construction: E Temp. -life char: B	Part No. M3786/13- Construction: E Temp. -life char: C	Part No. M3786/13- Construction: F Temp. -life char: C	Angle of throw	No. of decks	Poles per decks	Pos. per pole	Switching char. (S or NS)
0291	3291	5291	30°	4	1	5	"
0292	3292	5292	"	"	"	6	"
0293	3293	5293	"	"	"	7	"
0294	3294	5294	"	"	"	8	"
0295	3295	5295	"	"	"	9	"
0296	3296	5296	"	"	"	10	"
0297	3297	5297	"	"	"	11	"
0298	3298	5298	"	"	"	12 1/	"
0299	3299	5299	"	"	"	12	"
0300	3300	5300	"	"	2	2	"
0301	3301	5301	"	"	"	3	"
0302	3302	5302	"	"	"	4	"
0303	3303	5303	"	"	"	5	"
0304	3304	5304	"	"	"	6	"
0305	3305	5305	"	"	3	2	"
0306	3306	5306	"	"	"	3	"
0307	3307	5307	"	"	"	4	"
0308	3308	5308	"	"	4	2	"
0309	3309	5309	"	"	"	3	"
0310	3310	5310	"	5	1	2	"
0311	3311	5311	"	"	"	3	"
0312	3312	5312	"	"	"	4	"
0313	3313	5313	"	"	"	5	"
0314	3314	5314	"	"	"	6	"
0315	3315	5315	"	"	"	7	"
0316	3316	5316	"	"	"	8	"
0317	3317	5317	"	"	"	9	"
0318	3318	5318	"	"	"	10	"
0319	3319	5319	"	"	"	11	"
0320	3320	5320	"	"	"	12 1/	"
0321	3321	5321	"	"	"	12	"
0322	3322	5322	"	"	2	2	"
0323	3323	5323	"	"	"	3	"
0324	3324	5324	"	"	"	4	"
0325	3325	5325	"	"	"	5	"
0326	3326	5326	"	"	"	6	"
0327	3327	5327	"	"	3	2	"
0328	3328	5328	"	"	"	3	"
0329	3329	5329	"	"	"	4	"
0330	3330	5330	"	6	1	2	"
0331	3331	5331	"	"	"	3	"
0332	3332	5332	"	"	"	4	"
0333	3333	5333	"	"	"	5	"
0334	3334	5334	"	"	"	6	"
0335	3335	5335	"	"	"	7	"
0336	3336	5336	"	"	"	8	"
0337	3337	5337	"	"	"	9	"
0338	3338	5338	"	"	"	10	"
0339	3339	5339	"	"	"	11	"
0340	3340	5340	"	"	"	12 1/	"
0341	3341	5341	"	"	"	12	"
0342	3342	5342	"	"	2	2	"
0343	3343	5343	"	"	"	3	"
0344	3344	5344	"	"	"	4	"
0345	3345	5345	"	"	"	5	"
0346	3346	5346	"	"	"	6	"
0347	3347	5347	"	"	3	2	"
0348	3348	5348	"	"	"	3	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part No. M3786/13- Construction: E Temp. -life char: B	Part No. M3786/13- Construction: E Temp. -life char: C	Part No. M3786/13- Construction: F Temp. -life char: C	Angle of throw	No. of decks	Poles per decks	Pos. per pole	Switching char. (S or NS)
0349	3349	5349	30°	6	3	4	S
0350	3350	5350	"	7	1	2	"
0351	3351	5351	"	"	"	3	"
0352	3352	5352	"	"	"	4	"
0353	3353	5353	"	"	"	5	"
0354	3354	5354	"	"	"	6	"
0355	3355	5355	"	"	"	7	"
0356	3356	5356	"	"	"	8	"
0357	3357	5357	"	"	"	9	"
0358	3358	5358	"	"	"	10	"
0359	3359	5359	"	"	"	11	"
0360	3360	5360	"	"	"	12 1/	"
0361	3361	5361	"	"	"	12	"
0362	3362	5362	"	"	2	2	"
0363	3363	5363	"	"	"	3	"
0364	3364	5364	"	"	"	4	"
0365	3365	5365	"	"	"	5	"
0366	3366	5366	"	"	"	6	"
0367	3367	5367	"	8	1	2	"
0368	3368	5368	"	"	"	3	"
0369	3369	5369	"	"	"	4	"
0370	3370	5370	"	"	"	5	"
0371	3371	5371	"	"	"	6	"
0372	3372	5372	"	"	"	7	"
0373	3373	5373	"	"	"	8	"
0374	3374	5374	"	"	"	9	"
0375	3375	5375	"	"	"	10	"
0376	3376	5376	"	"	"	11	"
0377	3377	5377	"	"	"	12 1/	"
0378	3378	5378	"	"	"	12	"
0379	3379	5379	"	"	2	2	"
0380	3380	5380	"	"	"	3	"
0381	3381	5381	"	"	"	4	"
0382	3382	5382	"	"	"	5	"
0383	3383	5383	"	"	"	6	"
0384	3384	5384	"	9	1	2	"
0385	3385	5385	"	"	"	3	"
0386	3386	5386	"	"	"	4	"
0387	3387	5387	"	"	"	5	"
0388	3388	5388	"	"	"	6	"
0389	3389	5389	"	"	"	7	"
0390	3390	5390	"	"	"	8	"
0391	3391	5391	"	"	"	9	"
0392	3392	5392	"	"	"	10	"
0393	3393	5393	"	"	"	11	"
0394	3394	5394	"	"	"	12 1/	"
0395	3395	5395	"	"	"	12	"
0396	3396	5396	"	"	2	2	"
0397	3397	5397	"	"	"	3	"
0398	3398	5398	"	"	"	4	"
0399	3399	5399	"	"	"	5	"
0400	3400	5400	"	"	"	6	"
0401	3401	5401	"	10	1	2	"
0402	3402	5402	"	"	"	3	"
0403	3403	5403	"	"	"	4	"
0404	3404	5404	"	"	"	5	"
0405	3405	5405	"	"	"	6	"
0406	3406	5406	"	"	"	7	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 202640-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part No. M3786/13- Construction: E Temp. -life char: B	Part No. M3786/13- Construction: E Temp. -life char: C	Part No. M3786/13- Construction: F Temp. -life char: C	Angle of throw	No. of decks	Poles per decks	Pos. per pole	Switching char. (S or NS)
0407	3407	5407	30°	10	1	2	S
0408	3408	5408	"	"	"	9	"
0409	3409	5409	"	"	"	10	"
0410	3410	5410	"	"	"	11	"
0411	3411	5411	"	"	"	12 1/	"
0412	3412	5412	"	"	"	12	"
0413	3413	5413	"	11	"	2	"
0414	3414	5414	"	"	"	3	"
0415	3415	5415	"	"	"	4	"
0416	3416	5416	"	"	"	5	"
0417	3417	5417	"	"	"	6	"
0418	3418	5418	"	"	"	7	"
0419	3419	5419	"	"	"	8	"
0420	3420	5420	"	"	"	9	"
0421	3421	5421	"	"	"	10	"
0422	3422	5422	"	"	"	11	"
0423	3423	5423	"	"	"	12 1/	"
0424	3424	5424	"	"	"	12	"
0425	3425	5425	"	12	"	2	"
0426	3426	5426	"	"	"	3	"
0427	3427	5427	"	"	"	4	"
0428	3428	5428	"	"	"	5	"
0429	3429	5429	"	"	"	6	"
0430	3430	5430	"	"	"	7	"
0431	3431	5431	"	"	"	8	"
0432	3432	5432	"	"	"	9	"
0433	3433	5433	"	"	"	10	"
0434	3434	5434	"	"	"	11	"
0435	3435	5435	"	"	"	12 1/	"
0436	3436	5436	"	"	"	12	"
0437	3437	5437	36°	1	"	2	NS
0438	3438	5438	"	"	"	3	"
0439	3439	5439	"	"	"	4	"
0440	3440	5440	"	"	"	5	"
0441	3441	5441	"	"	"	6	"
0442	3442	5442	"	"	"	7	"
0443	3443	5443	"	"	"	8	"
0444	3444	5444	"	"	"	9	"
0445	3445	5445	"	"	"	10 1/	"
0446	3446	5446	"	"	"	10	"
0447	3447	5447	"	"	2	2	"
0448	3448	5448	"	"	"	3	"
0449	3449	5449	"	"	"	4	"
0450	3450	5450	"	"	"	5	"
0451	3451	5451	"	2	1	2	"
0452	3452	5452	"	"	"	3	"
0453	3453	5453	"	"	"	4	"
0454	3454	5454	"	"	"	5	"
0455	3455	5455	"	"	"	6	"
0456	3456	5456	"	"	"	7	"
0457	3457	5457	"	"	"	8	"
0458	3458	5458	"	"	"	9	"
0459	3459	5459	"	"	"	10 1/	"
0460	3460	5460	"	"	"	10	"
0461	3461	5461	"	"	2	2	"
0462	3462	5462	"	"	"	3	"
0463	3463	5463	"	"	"	4	"
0464	3464	5464	"	"	"	5	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part No. M3786/13- Construction: E Temp. -life char: B	Part No. M3786/13- Construction: E Temp. -life char: C	Part No. M3786/13- Construction: F Temp. -life char: C	Angle of throw	No. of decks	Poles per decks	Pos. per pole	Switching char. (S or NS)
0465	3465	5465	36°	3	1	2	NS
0466	3466	5466	"	"	"	3	"
0467	3467	5467	"	"	"	4	"
0468	3468	5468	"	"	"	5	"
0469	3469	5469	"	"	"	6	"
0470	3470	5470	"	"	"	7	"
0471	3471	5471	"	"	"	8	"
0472	3472	5472	"	"	"	9	"
0473	3473	5473	"	"	"	10 1/	"
0474	3474	5474	"	"	"	10	"
0475	3475	5475	"	"	2	2	"
0476	3476	5476	"	"	"	3	"
0477	3477	5477	"	"	"	4	"
0478	3478	5478	"	"	"	5	"
0479	3479	5479	"	4	1	2	"
0480	3480	5480	"	"	"	3	"
0481	3481	5481	"	"	"	4	"
0482	3482	5482	"	"	"	5	"
0483	3483	5483	"	"	"	6	"
0484	3484	5484	"	"	"	7	"
0485	3485	5485	"	"	"	8	"
0486	3486	5486	"	"	"	9	"
0487	3487	5487	"	"	"	10 1/	"
0488	3488	5488	"	"	"	10	"
0489	3489	5489	"	"	2	2	"
0490	3490	5490	"	"	"	3	"
0491	3491	5491	"	"	"	4	"
0492	3492	5492	"	"	"	5	"
0493	3493	5493	"	5	1	2	"
0494	3494	5494	"	"	"	3	"
0495	3495	5495	"	"	"	4	"
0496	3496	5496	"	"	"	5	"
0497	3497	5497	"	"	"	6	"
0498	3498	5498	"	"	"	7	"
0499	3499	5499	"	"	"	8	"
0500	3500	5500	"	"	"	9	"
0501	3501	5501	"	"	"	10 1/	"
0502	3502	5502	"	"	"	10	"
0503	3503	5503	"	"	2	2	"
0504	3504	5504	"	"	"	3	"
0505	3505	5505	"	"	"	4	"
0506	3506	5506	"	"	"	5	"
0507	3507	5507	"	6	1	2	"
0508	3508	5508	"	"	"	3	"
0509	3509	5509	"	"	"	4	"
0510	3510	5510	"	"	"	5	"
0511	3511	5511	"	"	"	6	"
0512	3512	5512	"	"	"	7	"
0513	3513	5513	"	"	"	8	"
0514	3514	5514	"	"	"	9	"
0515	3515	5515	"	"	"	10 1/	"
0516	3516	5516	"	"	"	10	"
0517	3517	5517	"	"	2	2	"
0518	3518	5518	"	"	"	3	"
0519	3519	5519	"	"	"	4	"
0520	3520	5520	"	"	"	5	"
0521	3521	5521	"	7	1	2	"
0522	3522	5522	"	"	"	3	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part No. M3786/13- Construction: E Temp. -life char: B	Part No. M3786/13- Construction: E Temp. -life char: C	Part No. M3786/13- Construction: F Temp. -life char: C	Angle of throw	No. of decks	Poles per decks	Pos. per pole	Switching char. (S or NS)
0523	3523	5523	36°	7	1	4	"
0524	3524	5524	"	"	"	5	"
0525	3525	5525	"	"	"	6	"
0526	3526	5526	"	"	"	7	"
0527	3527	5527	"	"	"	8	"
0528	3528	5528	"	"	"	9	"
0529	3529	5529	"	"	"	10 1/	"
0530	3530	5530	"	"	"	10	"
0531	3531	5531	"	"	2	2	"
0532	3532	5532	"	"	"	3	"
0533	3533	5533	"	"	"	4	"
0534	3534	5534	"	"	"	5	"
0535	3535	5535	"	8	1	2	"
0536	3536	5536	"	"	"	3	"
0537	3537	5537	"	"	"	4	"
0538	3538	5538	"	"	"	5	"
0539	3539	5539	"	"	"	6	"
0540	3540	5540	"	"	"	7	"
0541	3541	5541	"	"	"	8	"
0542	3542	5542	"	"	"	9	"
0543	3543	5543	"	"	"	10 1/	"
0544	3544	5544	"	"	"	10	"
0545	3545	5545	"	"	2	2	"
0546	3546	5546	"	"	"	3	"
0547	3547	5547	"	"	"	4	"
0548	3548	5548	"	"	"	5	"
0549	3549	5549	"	9	1	2	"
0550	3550	5550	"	"	"	3	"
0551	3551	5551	"	"	"	4	"
0552	3552	5552	"	"	"	5	"
0553	3553	5553	"	"	"	6	"
0554	3554	5554	"	"	"	7	"
0555	3555	5555	"	"	"	8	"
0556	3556	5556	"	"	"	9	"
0557	3557	5557	"	"	"	10 1/	"
0558	3558	5558	"	"	"	10	"
0559	3559	5559	"	"	2	2	"
0560	3560	5560	"	"	"	3	"
0561	3561	5561	"	"	"	4	"
0562	3562	5562	"	"	"	5	"
0563	3563	5563	"	10	1	2	"
0564	3564	5564	"	"	"	3	"
0565	3565	5565	"	"	"	4	"
0566	3566	5566	"	"	"	5	"
0567	3567	5567	"	"	"	6	"
0568	3568	5568	"	"	"	7	"
0569	3569	5569	"	"	"	8	"
0570	3570	5570	"	"	"	9	"
0571	3571	5571	"	"	"	10 1/	"
0572	3572	5572	"	"	"	10	"
0573	3573	5573	"	11	"	2	"
0574	3574	5574	"	"	"	3	"
0575	3575	5575	"	"	"	4	"
0576	3576	5576	"	"	"	5	"
0577	3577	5577	"	"	"	6	"
0578	3578	5578	"	"	"	7	"
0579	3579	5579	"	"	"	8	"
0580	3580	5580	"	"	"	9	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 202640-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part No. M3786/13- Construction: E Temp. -life char: B	Part No. M3786/13- Construction: E Temp. -life char: C	Part No. M3786/13- Construction: F Temp. -life char: C	Angle of throw	No. of decks	Poles per decks	Pos. per pole	Switching char. (S or NS)
0581	3581	5581	36°	11	1	10 1/	"
0582	3582	5582	"	"	"	10	"
0583	3583	5583	"	12	"	2	"
0584	3584	5584	"	"	"	3	"
0585	3585	5585	"	"	"	4	"
0586	3586	5586	"	"	"	5	"
0587	3587	5587	"	"	"	6	"
0588	3588	5588	"	"	"	7	"
0589	3589	5589	"	"	"	8	"
0590	3590	5590	"	"	"	9	"
0591	3591	5591	"	"	"	10 1/	"
0592	3592	5592	"	"	"	10	"
0593	3593	5593	"	1	"	2	S
0594	3594	5594	"	"	"	3	"
0595	3595	5595	"	"	"	4	"
0596	3596	5596	"	"	"	5	"
0597	3597	5597	"	"	"	6	"
0598	3598	5598	"	"	"	7	"
0599	3599	5599	"	"	"	8	"
0600	3600	5600	"	"	"	9	"
0601	3601	5601	"	"	"	10 1/	"
0602	3602	5602	"	"	"	10	"
0603	3603	5603	"	"	2	2	"
0604	3604	5604	"	"	"	3	"
0605	3605	5605	"	"	"	4	"
0606	3606	5606	"	"	"	5	"
0607	3607	5607	"	2	1	2	"
0608	3608	5608	"	"	"	3	"
0609	3609	5609	"	"	"	4	"
0610	3610	5610	"	"	"	5	"
0611	3611	5611	"	"	"	6	"
0612	3612	5612	"	"	"	7	"
0613	3613	5613	"	"	"	8	"
0614	3614	5614	"	"	"	9	"
0615	3615	5615	"	"	"	10 1/	"
0616	3616	5616	"	"	"	10	"
0617	3617	5617	"	"	2	2	"
0618	3618	5618	"	"	"	3	"
0619	3619	5619	"	"	"	4	"
0620	3620	5620	"	"	"	5	"
0621	3621	5621	"	3	1	2	"
0622	3622	5622	"	"	"	3	"
0623	3623	5623	"	"	"	4	"
0624	3624	5624	"	"	"	5	"
0625	3625	5625	"	"	"	6	"
0626	3626	5626	"	"	"	7	"
0627	3627	5627	"	"	"	8	"
0628	3628	5628	"	"	"	9	"
0629	3629	5629	"	"	"	10 1/	"
0630	3630	5630	"	"	"	10	"
0631	3631	5631	"	"	2	2	"
0632	3632	5632	"	"	"	3	"
0633	3633	5633	"	"	"	4	"
0634	3634	5634	"	"	"	5	"
0635	3635	5635	"	4	1	2	"
0636	3636	5636	"	"	"	3	"
0637	3637	5637	"	"	"	4	"
0638	3638	5638	"	"	"	5	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part No. M3786/13- Construction: E Temp. -life char: B	Part No. M3786/13- Construction: E Temp. -life char: C	Part No. M3786/13- Construction: F Temp. -life char: C	Angle of throw	No. of decks	Poles per decks	Pos. per pole	Switching char. (S or NS)
0639	3639	5639	36°	4	1	6	S
0640	3640	5640	"	"	"	7	"
0641	3641	5641	"	"	"	8	"
0642	3642	5642	"	"	"	9	"
0643	3643	5643	"	"	"	10 1/	S
0644	3644	5644	"	"	"	10	"
0645	3645	5645	"	"	2	2	"
0646	3646	5646	"	"	"	3	"
0647	3647	5647	"	"	"	4	"
0648	3648	5648	"	"	"	5	"
0649	3649	5649	"	5	1	2	"
0650	3650	5650	"	"	"	3	"
0651	3651	5651	"	"	"	4	"
0652	3652	5652	"	"	"	5	"
0653	3653	5653	"	"	"	6	"
0654	3654	5654	"	"	"	7	"
0655	3655	5655	"	"	"	8	"
0656	3656	5656	"	"	"	9	"
0657	3657	5657	"	"	"	10 1/	"
0658	3658	5658	"	"	"	10	"
0659	3659	5659	"	"	2	2	"
0660	3660	5660	"	"	"	3	"
0661	3661	5661	"	"	"	4	"
0662	3662	5662	"	"	"	5	"
0663	3663	5663	"	6	1	2	"
0664	3664	5664	"	"	"	3	"
0665	3665	5665	"	"	"	4	"
0666	3666	5666	"	"	"	5	"
0667	3667	5667	"	"	"	6	"
0668	3668	5668	"	"	"	7	"
0669	3669	5669	"	"	"	8	"
0670	3670	5670	"	"	"	9	"
0671	3671	5671	"	"	"	10 1/	"
0672	3672	5672	"	"	"	10	"
0673	3673	5673	"	"	2	2	"
0674	3674	5674	"	"	"	3	"
0675	3675	5675	"	"	"	4	"
0676	3676	5676	"	"	"	5	"
0677	3677	5677	"	7	1	2	"
0678	3678	5678	"	"	"	3	"
0679	3679	5679	"	"	"	4	"
0680	3680	5680	"	"	"	5	"
0681	3681	5681	"	"	"	6	"
0682	3682	5682	"	"	"	7	"
0683	3683	5683	"	"	"	8	"
0684	3684	5684	"	"	"	9	"
0685	3685	5685	"	"	"	10 1/	"
0686	3686	5686	"	"	"	10	"
0687	3687	5687	"	"	2	2	"
0688	3688	5688	"	"	"	3	"
0689	3689	5689	"	"	"	4	"
0690	3690	5690	"	"	"	5	"
0691	3691	5691	"	8	1	2	"
0692	3692	5692	"	"	"	3	"
0693	3693	5693	"	"	"	4	"
0694	3694	5694	"	"	"	5	"
0695	3695	5695	"	"	"	6	"
0696	3696	5696	"	"	"	7	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part No. M3786/13- Construction: E Temp. -life char: B	Part No. M3786/13- Construction: E Temp. -life char: C	Part No. M3786/13- Construction: F Temp. -life char: C	Angle of throw	No. of decks	Poles per decks	Pos. per pole	Switching char. (S or NS)
0697	3697	5697	36°	8	1	8	S
0698	3698	5698	"	"	"	9	"
0699	3699	5699	"	"	"	10 1/	"
0700	3700	5700	"	"	"	10	"
0701	3701	5701	"	"	2	2	"
0702	3702	5702	"	"	"	3	"
0703	3703	5703	"	"	"	4	"
0704	3704	5704	"	"	"	5	"
0705	3705	5705	"	9	1	2	"
0706	3706	5706	"	"	"	3	"
0707	3707	5707	"	"	"	4	"
0708	3708	5708	"	"	"	5	"
0709	3709	5709	"	"	"	6	"
0710	3710	5710	"	"	"	7	"
0711	3711	5711	"	"	"	8	"
0712	3712	5712	"	"	"	9	"
0713	3713	5713	"	"	"	10 1/	"
0714	3714	5714	"	"	"	10	"
0715	3715	5715	"	10	"	2	"
0716	3716	5716	"	"	"	3	"
0717	3717	5717	"	"	"	4	"
0718	3718	5718	"	"	"	5	"
0719	3719	5719	"	"	"	6	"
0720	3720	5720	"	"	"	7	"
0721	3721	5721	"	"	"	8	"
0722	3722	5722	"	"	"	9	"
0723	3723	5723	"	"	"	10 1/	"
0724	3724	5724	"	"	"	10	"
0725	3725	5725	"	11	"	2	"
0726	3726	5726	"	"	"	3	"
0727	3727	5727	"	"	"	4	"
0728	3728	5728	"	"	"	5	"
0729	3729	5729	"	"	"	6	"
0730	3730	5730	"	"	"	7	"
0731	3731	5731	"	"	"	8	"
0732	3732	5732	"	"	"	9	"
0733	3733	5733	"	"	"	10 1/	"
0734	3734	5734	"	"	"	10	"
0735	3735	5735	"	12	"	2	"
0736	3736	5736	"	"	"	3	"
0737	3737	5737	"	"	"	4	"
0738	3738	5738	"	"	"	5	"
0739	3739	5739	"	"	"	6	"
0740	3740	5740	"	"	"	7	"
0741	3741	5741	"	"	"	8	"
0742	3742	5742	"	"	"	9	"
0743	3743	5743	"	"	"	10 1/	"
0744	3744	5744	"	"	"	10	"
0745	3745	5745	45°	1	1	2	NS
0746	3746	5746	"	"	"	3	"
0747	3747	5747	"	"	"	4	"
0748	3748	5748	"	"	"	5	"
0749	3749	5749	"	"	"	6	"
0750	3750	5750	"	"	"	7	"
0751	3751	5751	"	"	"	8	"
0752	3752	5752	"	"	"	8 1/	"
0753	3753	5753	"	"	2	2	"
0754	3754	5754	"	"	"	3	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part No. M3786/13- Construction: E Temp. -life char: B	Part No. M3786/13- Construction: E Temp. -life char: C	Part No. M3786/13- Construction: F Temp. -life char: C	Angle of throw	No. of decks	Poles per decks	Pos. per pole	Switching char. (S or NS)
0755	3755	5755	45°	1	2	4	NS
0756	3756	5756	"	2	1	2	"
0757	3757	5757	"	"	"	3	"
0758	3758	5758	"	"	"	4	"
0759	3759	5759	"	"	"	5	"
0760	3760	5760	"	"	"	6	"
0761	3761	5761	"	"	"	7	"
0762	3762	5762	"	"	"	8	"
0763	3763	5763	"	"	"	8 1/	"
0764	3764	5764	"	"	2	2	"
0765	3765	5765	"	"	"	3	"
0766	3766	5766	"	"	"	4	"
0767	3767	5767	"	3	1	2	"
0768	3768	5768	"	"	"	3	"
0769	3769	5769	"	"	"	4	"
0770	3770	5770	"	"	"	5	"
0771	3771	5771	"	"	"	6	"
0772	3772	5772	"	"	"	7	"
0773	3773	5773	"	"	"	8	"
0774	3774	5774	"	"	"	8 1/	"
0775	3775	5775	"	"	2	2	"
0776	3776	5776	"	"	"	3	"
0777	3777	5777	"	"	"	4	"
0778	3778	5778	"	4	1	2	"
0779	3779	5779	"	"	"	3	"
0780	3780	5780	"	"	"	4	"
0781	3781	5781	"	"	"	5	"
0782	3782	5782	"	"	"	6	"
0783	3783	5783	"	"	"	7	"
0784	3784	5784	"	"	"	8	"
0785	3785	5785	"	"	"	8 1/	"
0786	3786	5786	"	"	2	2	"
0787	3787	5787	"	"	"	3	"
0788	3788	5788	"	"	"	4	"
0789	3789	5789	"	5	1	2	"
0790	3790	5790	"	"	"	3	"
0791	3791	5791	"	"	"	4	"
0792	3792	5792	"	"	"	5	"
0793	3793	5793	"	"	"	6	"
0794	3794	5794	"	"	"	7	"
0795	3795	5795	"	"	"	8	"
0796	3796	5796	"	"	"	8 1/	"
0797	3797	5797	"	"	2	2	"
0798	3798	5798	"	"	"	3	"
0799	3799	5799	"	"	"	4	"
0800	3800	5800	"	6	1	2	"
0801	3801	5801	"	"	"	3	"
0802	3802	5802	"	"	"	4	"
0803	3803	5803	"	"	"	5	"
0804	3804	5804	"	"	"	6	"
0805	3805	5805	"	"	"	7	"
0806	3806	5806	"	"	"	8	"
0807	3807	5807	"	"	"	8 1/	"
0808	3808	5808	"	"	2	2	"
0809	3809	5809	"	"	"	3	"
0810	3810	5810	"	"	"	4	"
0811	3811	5811	"	7	1	2	"
0812	3812	5812	"	"	"	3	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part No. M3786/13- Construction: E Temp. -life char: B	Part No. M3786/13- Construction: E Temp. -life char: C	Part No. M3786/13- Construction: F Temp. -life char: C	Angle of throw	No. of decks	Poles per decks	Pos. per pole	Switching char. (S or NS)
0813	3813	5813	45°	7	1	4	NS
0814	3814	5814	"	"	"	5	"
0815	3815	5815	"	"	"	6	"
0816	3816	5816	"	"	"	7	"
0817	3817	5817	"	"	"	8	"
0818	3818	5818	"	"	"	8 1/	"
0819	3819	5819	"	"	2	2	"
0820	3820	5820	"	"	"	3	"
0821	3821	5821	"	"	"	4	"
0822	3822	5822	"	8	1	2	"
0823	3823	5823	"	"	"	3	"
0824	3824	5824	"	"	"	4	"
0825	3825	5825	"	"	"	5	"
0826	3826	5826	"	"	"	6	"
0827	3827	5827	"	"	"	7	"
0828	3828	5828	"	"	"	8	"
0829	3829	5829	"	"	"	8 1/	"
0830	3830	5830	"	"	2	2	"
0831	3831	5831	"	"	"	3	"
0832	3832	5832	"	"	"	4	"
0833	3833	5833	"	9	1	2	"
0834	3834	5834	"	"	"	3	"
0835	3835	5835	"	"	"	4	"
0836	3836	5836	"	"	"	5	"
0837	3837	5837	"	"	"	6	"
0838	3838	5838	"	"	"	7	"
0839	3839	5839	"	"	"	8	"
0840	3840	5840	"	"	"	8 1/	"
0841	3841	5841	"	"	2	2	"
0842	3842	5842	"	"	"	3	"
0843	3843	5843	"	"	"	4	"
0844	3844	5844	"	10	1	2	"
0845	3845	5845	"	"	"	3	"
0846	3846	5846	"	"	"	4	"
0847	3847	5847	"	"	"	5	"
0848	3848	5848	"	"	"	6	"
0849	3849	5849	"	"	"	7	"
0850	3850	5850	"	"	"	8	"
0851	3851	5851	"	"	"	8 1/	"
0852	3852	5852	"	11	"	2	"
0853	3853	5853	"	"	"	3	"
0854	3854	5854	"	"	"	4	"
0855	3855	5855	"	"	"	5	"
0856	3856	5856	"	"	"	6	"
0857	3857	5857	"	"	"	7	"
0858	3858	5858	"	"	"	8	"
0859	3859	5859	"	"	"	8 1/	"
0860	3860	5860	"	12	"	2	"
0861	3861	5861	"	"	"	3	"
0862	3862	5862	"	"	"	4	"
0863	3863	5863	"	"	"	5	"
0864	3864	5864	"	"	"	6	"
0865	3865	5865	"	"	"	7	"
0866	3866	5866	"	"	"	8	"
0867	3867	5867	"	"	"	8 1/	"
0868	3868	5868	"	1	"	2	S
0869	3869	5869	"	"	"	3	"
0870	3870	5870	"	"	"	4	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 202610-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part No. M3786/13- Construction: E Temp. -life char: B	Part No. M3786/13- Construction: E Temp. -life char: C	Part No. M3786/13- Construction: F Temp. -life char: C	Angle of throw	No. of decks	Poles per decks	Pos. per pole	Switching char. (S or NS)
0871	3871	5871	45°	1	1	5	S
0872	3872	5872	"	"	"	6	"
0873	3873	5873	"	"	"	7	"
0874	3874	5874	"	"	"	8	"
0875	3875	5875	"	"	"	8 1/	"
0876	3876	5876	"	"	2	2	"
0877	3877	5877	"	"	"	3	"
0878	3878	5878	"	"	"	4	"
0879	3879	5879	"	2	1	2	"
0880	3880	5880	"	"	"	3	"
0881	3881	5881	"	"	"	4	"
0882	3882	5882	"	"	"	5	"
0883	3883	5883	"	"	"	6	"
0884	3884	5884	"	"	"	7	"
0885	3885	5885	"	"	"	8	"
0886	3886	5886	"	"	"	8 1/	"
0887	3887	5887	"	"	2	2	"
0888	3888	5888	"	"	"	3	"
0889	3889	5889	"	"	"	4	"
0890	3890	5890	"	3	1	2	"
0891	3891	5891	"	"	"	3	"
0892	3892	5892	"	"	"	4	"
0893	3893	5893	"	"	"	5	"
0894	3894	5894	"	"	"	6	"
0895	3895	5895	"	"	"	7	"
0896	3896	5896	"	"	"	8	"
0897	3897	5897	"	"	"	8 1/	"
0898	3898	5898	"	"	2	2	"
0899	3899	5899	"	"	"	3	"
0900	3900	5900	"	"	"	4	"
0901	3901	5901	"	4	1	2	"
0902	3902	5902	"	"	"	3	"
0903	3903	5903	"	"	"	4	"
0904	3904	5904	"	"	"	5	"
0905	3905	5905	"	"	"	6	"
0906	3906	5906	"	"	"	7	"
0907	3907	5907	"	"	"	8	"
0908	3908	5908	"	"	"	8 1/	"
0909	3909	5909	"	"	2	2	"
0910	3910	5910	"	"	"	3	"
0911	3911	5911	"	"	"	4	"
0912	3912	5912	"	5	1	2	"
0913	3913	5913	"	"	"	3	"
0914	3914	5914	"	"	"	4	"
0915	3915	5915	"	"	"	5	"
0916	3916	5916	"	"	"	6	"
0917	3917	5917	"	"	"	7	"
0918	3918	5918	"	"	"	8	"
0919	3919	5919	"	"	"	8 1/	"
0920	3920	5920	"	"	2	2	"
0921	3921	5921	"	"	"	3	"
0922	3922	5922	"	"	"	4	"
0923	3923	5923	"	6	1	2	"
0924	3924	5924	"	"	"	3	"
0925	3925	5925	"	"	"	4	"
0926	3926	5926	"	"	"	5	"
0927	3927	5927	"	"	"	6	"
0928	3928	5928	"	"	"	7	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 202610-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part No. M3786/13- Construction: E Temp. -life char: B	Part No. M3786/13- Construction: E Temp. -life char: C	Part No. M3786/13- Construction: F Temp. -life char: C	Angle of throw	No. of decks	Poles per decks	Pos. per pole	Switching char. (S or NS)
0929	3929	5929	45°	6	1	8	S
0930	3930	5930	"	"	"	8 1/	"
0931	3931	5931	"	"	2	2	"
0932	3932	5932	"	"	"	3	"
0933	3933	5933	"	"	"	4	"
0934	3934	5934	"	7	1	2	"
0935	3935	5935	"	"	"	3	"
0936	3936	5936	"	"	"	4	"
0937	3937	5937	"	"	"	5	"
0938	3938	5938	"	"	"	6	"
0939	3939	5939	"	"	"	7	"
0940	3940	5940	"	"	"	8	"
0941	3941	5941	"	"	"	8 1/	"
0942	3942	5942	"	"	2	2	"
0943	3943	5943	"	"	"	3	"
0944	3944	5944	"	"	"	4	"
0945	3945	5945	"	8	1	2	"
0946	3946	5946	"	"	"	3	"
0947	3947	5947	"	"	"	4	"
0948	3948	5948	"	"	"	5	"
0949	3949	5949	"	"	"	6	"
0950	3950	5950	"	"	"	7	"
0951	3951	5951	"	"	"	8	"
0952	3952	5952	"	"	"	8 1/	"
0953	3953	5953	"	"	2	2	"
0954	3954	5954	"	"	"	3	"
0955	3955	5955	"	"	"	4	"
0956	3956	5956	"	9	1	2	"
0957	3957	5957	"	"	"	3	"
0958	3958	5958	"	"	"	4	"
0959	3959	5959	"	"	"	5	"
0960	3960	5960	"	"	"	6	"
0961	3961	5961	"	"	"	7	"
0962	3962	5962	"	"	"	8	"
0963	3963	5963	"	"	"	8 1/	"
0964	3964	5964	"	"	2	2	"
0965	3965	5965	"	"	"	3	"
0966	3966	5966	"	"	"	4	"
0967	3967	5967	"	10	1	2	"
0968	3968	5968	"	"	"	3	"
0969	3969	5969	"	"	"	4	"
0970	3970	5970	"	"	"	5	"
0971	3971	5971	"	"	"	6	"
0972	3972	5972	"	"	"	7	"
0973	3973	5973	"	"	"	8	"
0974	3974	5974	"	"	"	8 1/	"
0975	3975	5975	"	11	"	2	"
0976	3976	5976	"	"	"	3	"
0977	3977	5977	"	"	"	4	"
0978	3978	5978	"	"	"	5	"
0979	3979	5979	"	"	"	6	"
0980	3980	5980	"	"	"	7	"
0981	3981	5981	"	"	"	8	"
0982	3982	5982	"	"	"	8 1/	"
0983	3983	5983	"	12	"	2	"
0984	3984	5984	"	"	"	3	"
0985	3985	5985	"	"	"	4	"
0986	3986	5986	"	"	"	5	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 202640-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE IV. Switching characteristics and part numbers - Continued.

Part No. M3786/13- Construction: E Temp. -life char: B	Part No. M3786/13- Construction: E Temp. -life char: C	Part No. M3786/13- Construction: F Temp. -life char: C	Angle of throw	No. of decks	Poles per decks	Pos. per pole	Switching char. (S or NS)
0987	3987	5987	45°	12	1	6	S
0988	3988	5988	"	"	"	7	"
0989	3989	5989	"	"	"	8	"
0990	3990	5990	"	"	"	8 1/	"

1/ Continuous rotation.

Custodians:
Army - ER
Navy - EC
Air Force - 85

Review activities:
Army - AR, MI
Navy - AS, OS
Air Force - 11, 17, 99
DLA - ES

User activities:
Army - AT, AV, ME, SM
Navy - CG, MC
Air Force - 19

Preparing activity:
Air Force - 85

Agent:
DLA - ES

(Project 5930-1362)

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.