
MILITARY SPECIFICATION SHEET

INSTALLING TOOL, SOLDERLESS SPRING CONTACT, TYPE I, COMPOSITION A

This specification is approved for use by the Air Force Acquisition Logistics Division, Directorate of Electronic Support (AFALD/PTS), Gentile AFS, Ohio 45444, Department of the Air Force, and is available for use by all Departments and Agencies of the Department of Defense.

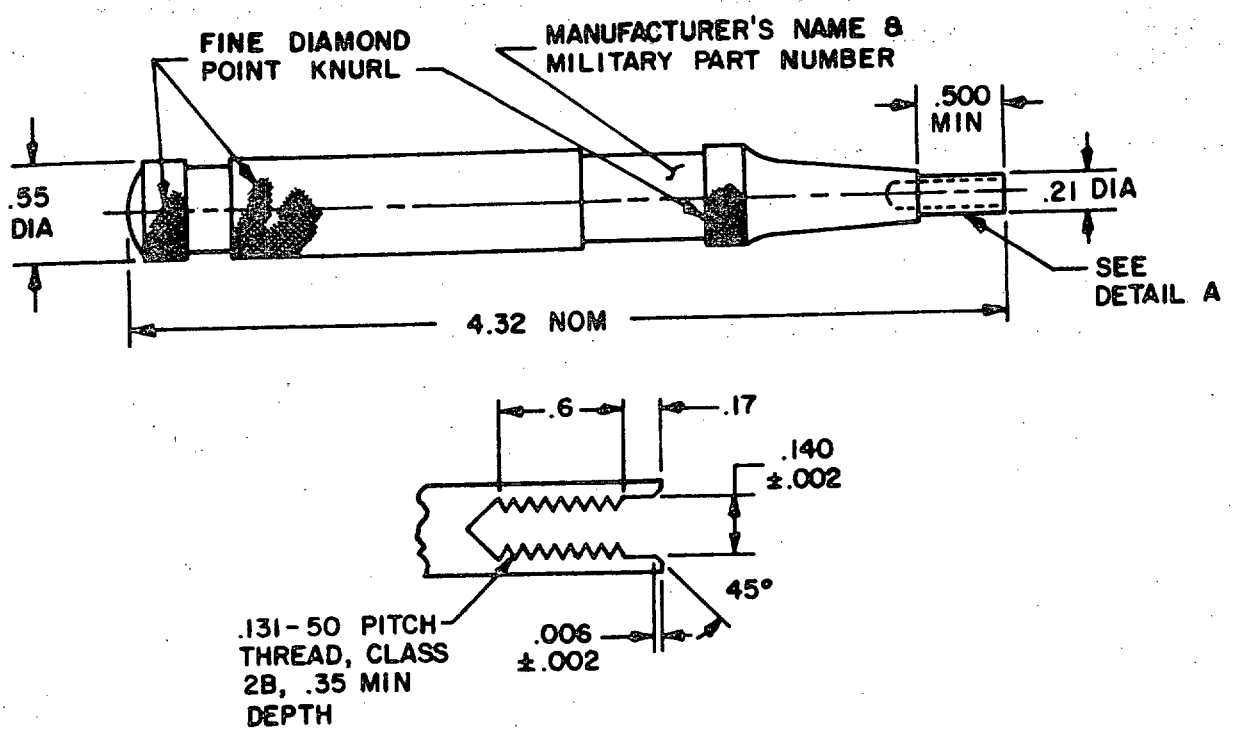


DETAIL A

Handle (including internal hammer - 0001)

INCHES	MM	INCHES	MM	INCHES	MM
.0010	.03	.060	1.52	.187	4.75
.002	.05	.065	1.65	.20	5.1
.003	.08	.07	1.8	.21	5.3
.0045	.110	.093	2.36	.37	9.4
.005	.13	.100	2.54	.500	12.70
.006	.15	.131	3.33	.55	14.0
.010	.25	.140	3.56	.6	15.2
.042	1.07	.17	4.3	.70	17.8
.050	1.27			4.32	109.7

FIGURE 1. Handle and installation tips.


Source: https://assist.dla.mil -- Downloaded: 2026-10-23T06:31Z
Check the source to verify that this is the current version before use.

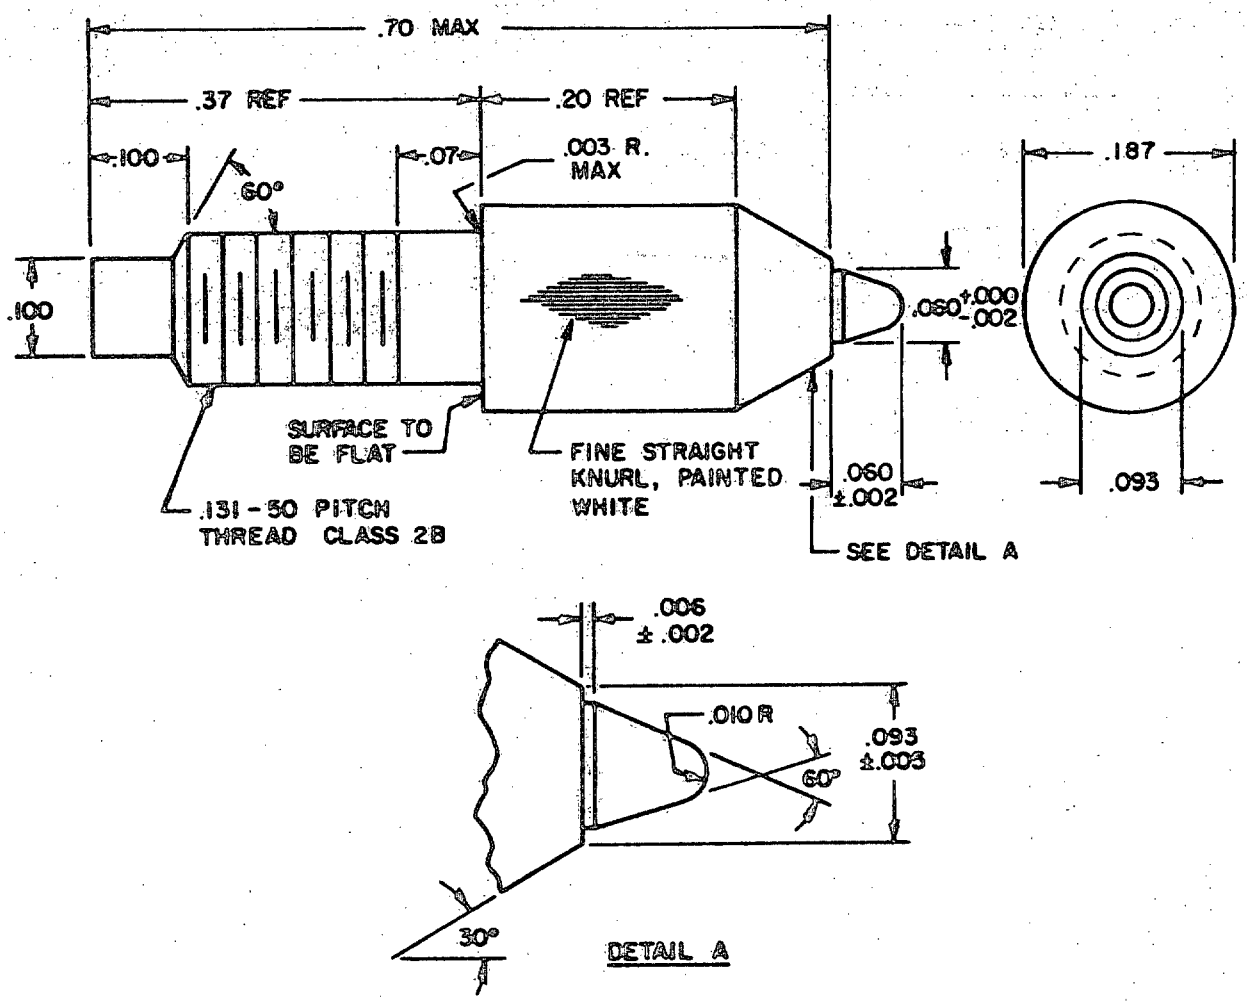

Installation tip - 0002

FIGURE 1. Handle and installation tips - Continued.

Source: https://assist.dla.mil -- Downloaded: 2026-10-23T06:31Z
Check the source to verify that this is the current version before use.

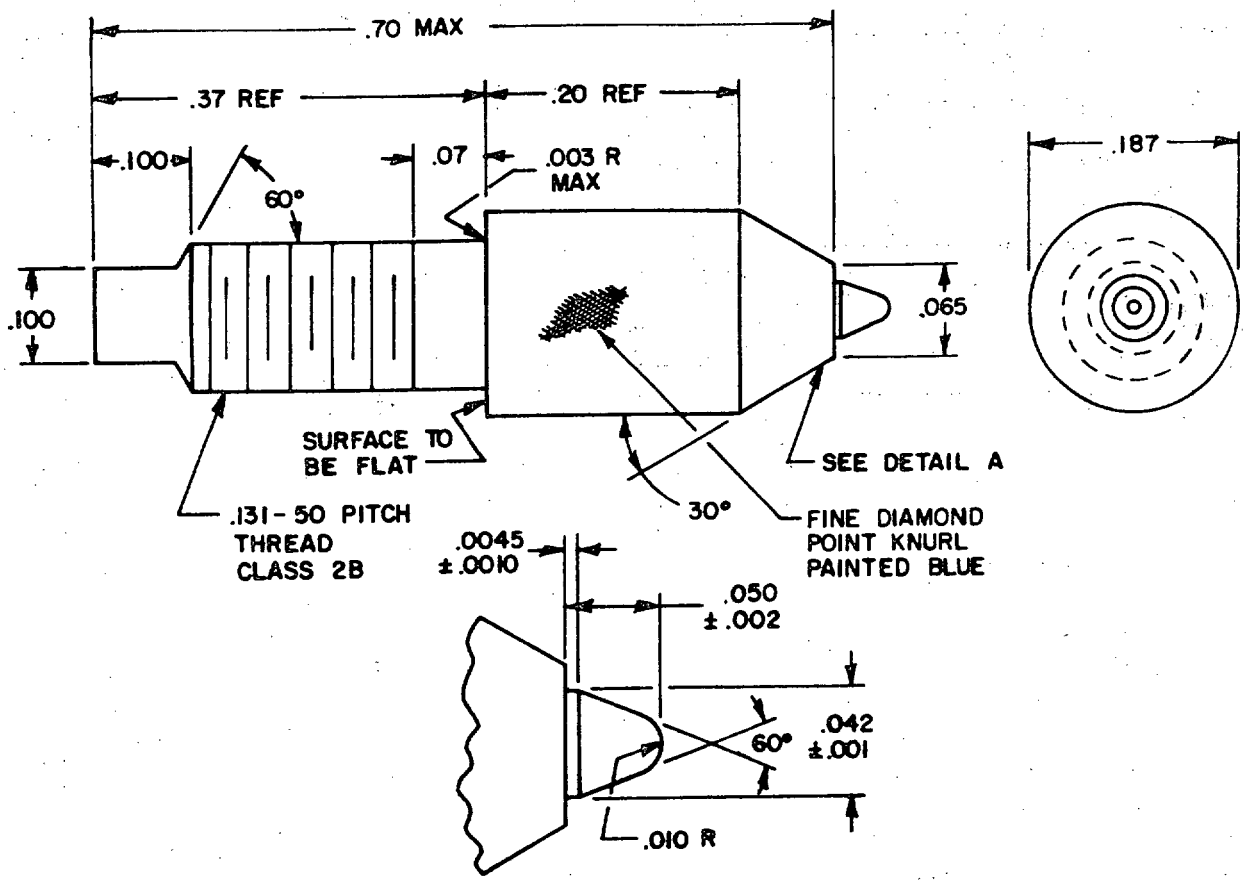


DETAIL A

Installation tip - 0003

NOTES:
1. Dimensions are in inches.
2. Metric equivalents are given for general information only and are based upon 1.00 inch = 25.4mm.
3. Unless otherwise specified, tolerances are ±.005 (.13mm) for three place decimals and ±.02 (.5mm) for two place decimals.
4. Marking: Handle to be marked with manufacturer's name and military part number (M81969/45-0001) as minimum. The tip being too small to be marked properly shall be supplied in an envelope which shall be marked with manufacturer's name and military part number (as a minimum) and color coded, as shown.

FIGURE 1. Handle and installation tips - Continued.

Source: https://assist.dla.mil -- Downloaded: 2026-10-23T06:31Z
Check the source to verify that this is the current version before use.

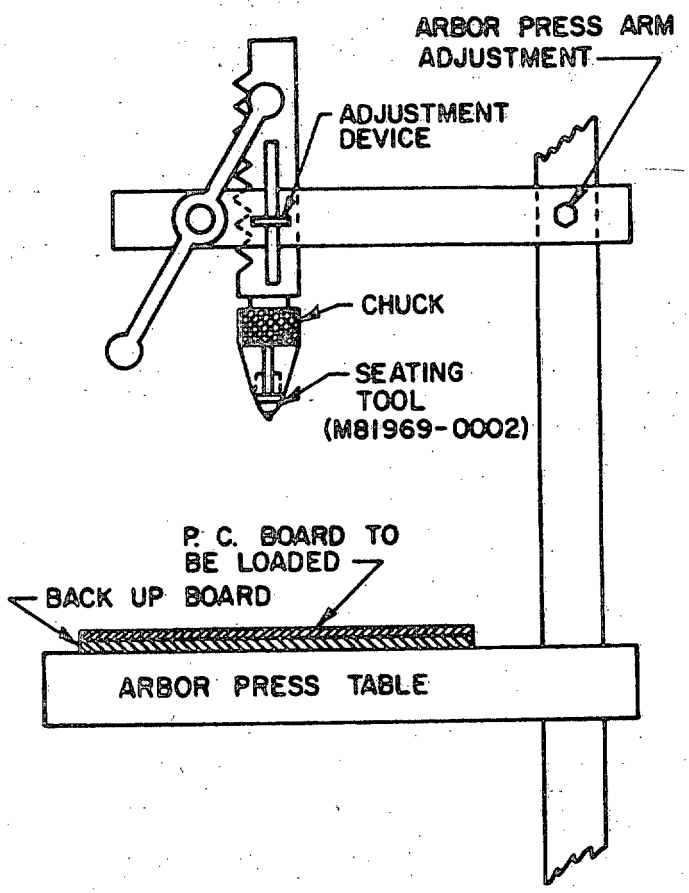

NOTES:

1. Insert M81969/45-0002 tip into the drill chuck of the arbor press. Tighten chuck onto tip.
2. Place P.C. board, which is to have contacts installed on its back-up board with receiving surface of P.C. board facing towards installation tip.
3. Place P.C. board and back-up board under installation tip.
4. Lower installation tip to P.C. board until a flush fit is accomplished; tip should be snug with contacts.
5. Set the arbor press to permit pressure on socket to extend from snug point to fully seated position.
6. Use pressure exerted by arbor press thru tip to socket to seat socket, as required.

FIG. 2. Installation Procedure, using MIL-I-81969/45-0002 installation tip and arbor press to install MIL-S-83505/6-004 sockets in board.

Source: https://assist.dla.mil -- Downloaded: 2026-10-23T06:31Z
Check the source to verify that this is the current version before use.

REQUIREMENTS:

Dimensions and configurations: See figure 1.

Materials:

Handle: AISI-C12L14 Steel

Plunger Shaft (tapped): AISI-W1 (hardened) Steel

Installation tips (-0002 and -0003): AISI-01 Tool Steel, double draw.

Plating: Handle (exterior only): Chrome plate (.0002 - .0005 inch thick) dull.
-0002 tip: Chrome plate .00005 inch minimum.

-0003 tip: Chrome plate .00005 inch minimum.

Hammer Triggering force: 7 pounds minimum (Spring Loaded).

Rotation: Not applicable.

Thrust: Not applicable.

Application: These tools shall be used to install MIL-S-83505/6 sockets as follows:
To install a M83505/6—001 socket, use the handle (M81969/45-0001) and installation tip (M81969/45-0003) assembled.

To install a M83505/6—002 or /6—003 socket, use the handle (M81969/45-0001) and installation tip (M81969/45-0002 assembled.

To install a M83505/6-004 socket use installation tip (81969/45-0002) and arbor press - see drawing and installation procedure on page 4.

Custodian:
Air Force - 85

Review activities:
Air Force - 11, 17, 99
DLA-ES

Preparing activity:
Air Force - 85

(Project 5120-F960)

Source: https://assist.dla.mil -- Downloaded: 2026-10-23T06:31Z
Check the source to verify that this is the current version before use.