MIL-T-85031B(AS)
15 SEPTEMBER 1987
SUPERSEDING
MIL-T-85031A(AS)
7 November 1984

MILITARY SPECIFICATION

TEST SET, GUIDED WEAPON AN/DSM-96B

This specification is approved for use within the Naval Air Systems Command, Department of the Navy, and is available for use by all Departments and Agencies of the Department of Defense.

1. SCOPE

1.1 Scope. This specification establishes the design, performance, and acceptance requirements for the AN/DSM-96B Guided Weapon Test Set herein referred to as the test set. The test set is to be used at shore installations to verify the operability and flight readiness of assembled Walleye Guided Weapons.

2. APPLICABLE DOCUMENTS

2.1 Government documents.

2.1.1 Specifications and standards. The following specifications and standards form a part of this specification to the extent specified herein. Unless otherwise specified, the issues of these documents shall be those listed in the issue of the Department of Defense Index of Specifications and Standards (DODISS) and supplement thereto, cited in the solicitation.

Beneficial comments (recommendations, additions, deletions) and any pertinent data which may be of use in improving this document should be addressed to: Commanding Officer, Naval Air Engineering Center, Systems Engineering and Standardization Department (SESD) Code 53, Lakehurst, NJ 08733-5100, by using the self-addressed Standardization Document Improvement Proposal, (DO Form 1426) appearing at the end of this document or by letter.

AMSC N/A FSC 4935
DISTRIBUTION STATEMENT A. Approved for public release; distribution is unlimited.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

SPECIFICATIONS

MILITARY

MIL-T-17296	Test, Checkout and Evaluation Equipment Guided Missiles (Fixed Installations), General Specification
MIL-E-17555	Electronic and Electrical Equipment, Accessories, and Repair Parts, Packaging and Packing of
MIL-T-18303	Test Procedures; Preproduction, Acceptance, and Life for Aircraft Electronic Equipment, Format for
MIL-T-28800	Test Equipment for Use with Electrical and Electronic Equipment, General Specification for
MIL-T-85472	Test Set, Group OQ-169B/DSM-96A

STANDARDS

MILITARY

MIL-STD-454	Standard, General Requirements for Electronic Equipment
MIL-STD-965	Parts Control Program

2.1.2 Other Government drawings and publications. The following other Government drawings and publications form a part of this specification to the extent specified herein. Unless otherwise specified, the issues shall be those in effect on the date of the solicitation.

DRAWING

NAVAL AIR SYSTEMS COMMAND

DL 130AS200 DL 132AS500 DL 131AS200	Data List for Test Set, AN/DSM-96B and all drawings therein.

MANUALS

NAVAL AIR SYSTEMS COMMAND

NAVAIR 16-30DSM96-3	Technical Manual, Service and Calibration Instructions, Guided Weapon Test Set AN/DSM-96B
NAVAIR 16-30DSM96-4	Illustrated Parts Breakdown for Guided Weapon Test Set AN/DSM-96B

Source: https://assist.dla.mil - Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

(Copies of specifications, standards, drawings, and other Government documents required by the contractors in connection with specific acquisition functions should be obtained from the contracting activity or as directed by the contracting activity.)

2.2 Order of precedence. In the event of a conflict between the text of this specification and the reference cited herein (except for the associated detail specifications, specification sheets or MS standards), the text of this specification shall take precedence. Nothing in this specification, however, shall supersede applicable laws and regulations unless a specific exemption has been obtained.

3. REQUIREMENTS

3.1 Item description. The Guided Weapon Test Set AN/DSM-96B shall consist of the Guided Weapon Test Console OJ-115B/DSM-96, Guided Weapon Test Stand MT-3707C/DSM-74 and cable assemblies. The test set shall be capable of testing all non telemetry Walleye weapons. When used in conjunction with Group OQ-169B/DSM-96A Test Set (see MIL-T-85472), the test sets shall also be capable of testing the Extended Range Data Link, Phase I and Phase II Walleye weapons. The Group OQ-169B/DSM-96A Test Set consists of Guided Weapon Test Console 0J-306B/DSM-96A, Phase I Antenna Shroud, Phase II Antenna Shroud, and Weapon Antenna Attenuator Load. Figure 1 shows the Guided Weapon Test Set AN/DSM-96B and the Group OQ-169B/DSM-96A Test Set interconnected in a weapon test configuration. Detail operational instructions are specified in NAVAIR 16-30DSM96-3 and NAVAIR 16-30DSM96-4.

3.2 Parts and materials.

3.2.1 Nonstandard parts and material approval. Approval for the use of nonstandard parts and materials shall be obtained by the contractor as specified in MIL-STD-965.

3.2.2 Basic conformance. Materials and parts selected for use in the test set shall be as specified in MIL-T-17296. Parts shall be selected from those conforming to MIL-T-28800, unless the parts selected will not perform as required in the intended applications and environments specified herein, in which case 3.2.1 applies.

3.2.3 Interchangeability. The test shall meet the interchangeability requirements of MIL-T-17296. The drawings listed in DL 130AS200 shall be the standard for measuring interchangeability of all applicable units, assemblies, subassemblies, and parts.

3.3 Design and construction. The test set shall be manufactured in accordance with the drawings and subsidiary specifications listed in DL 130AS200, except in so far as errors of omissions or commission on the drawings may be incompatible with the requirements of this specification. In any case, it is a condition of final acceptance that the test set manufactured shall meet all the design, construction, and workmanship requirements of this specification and applicable acceptance test documents.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

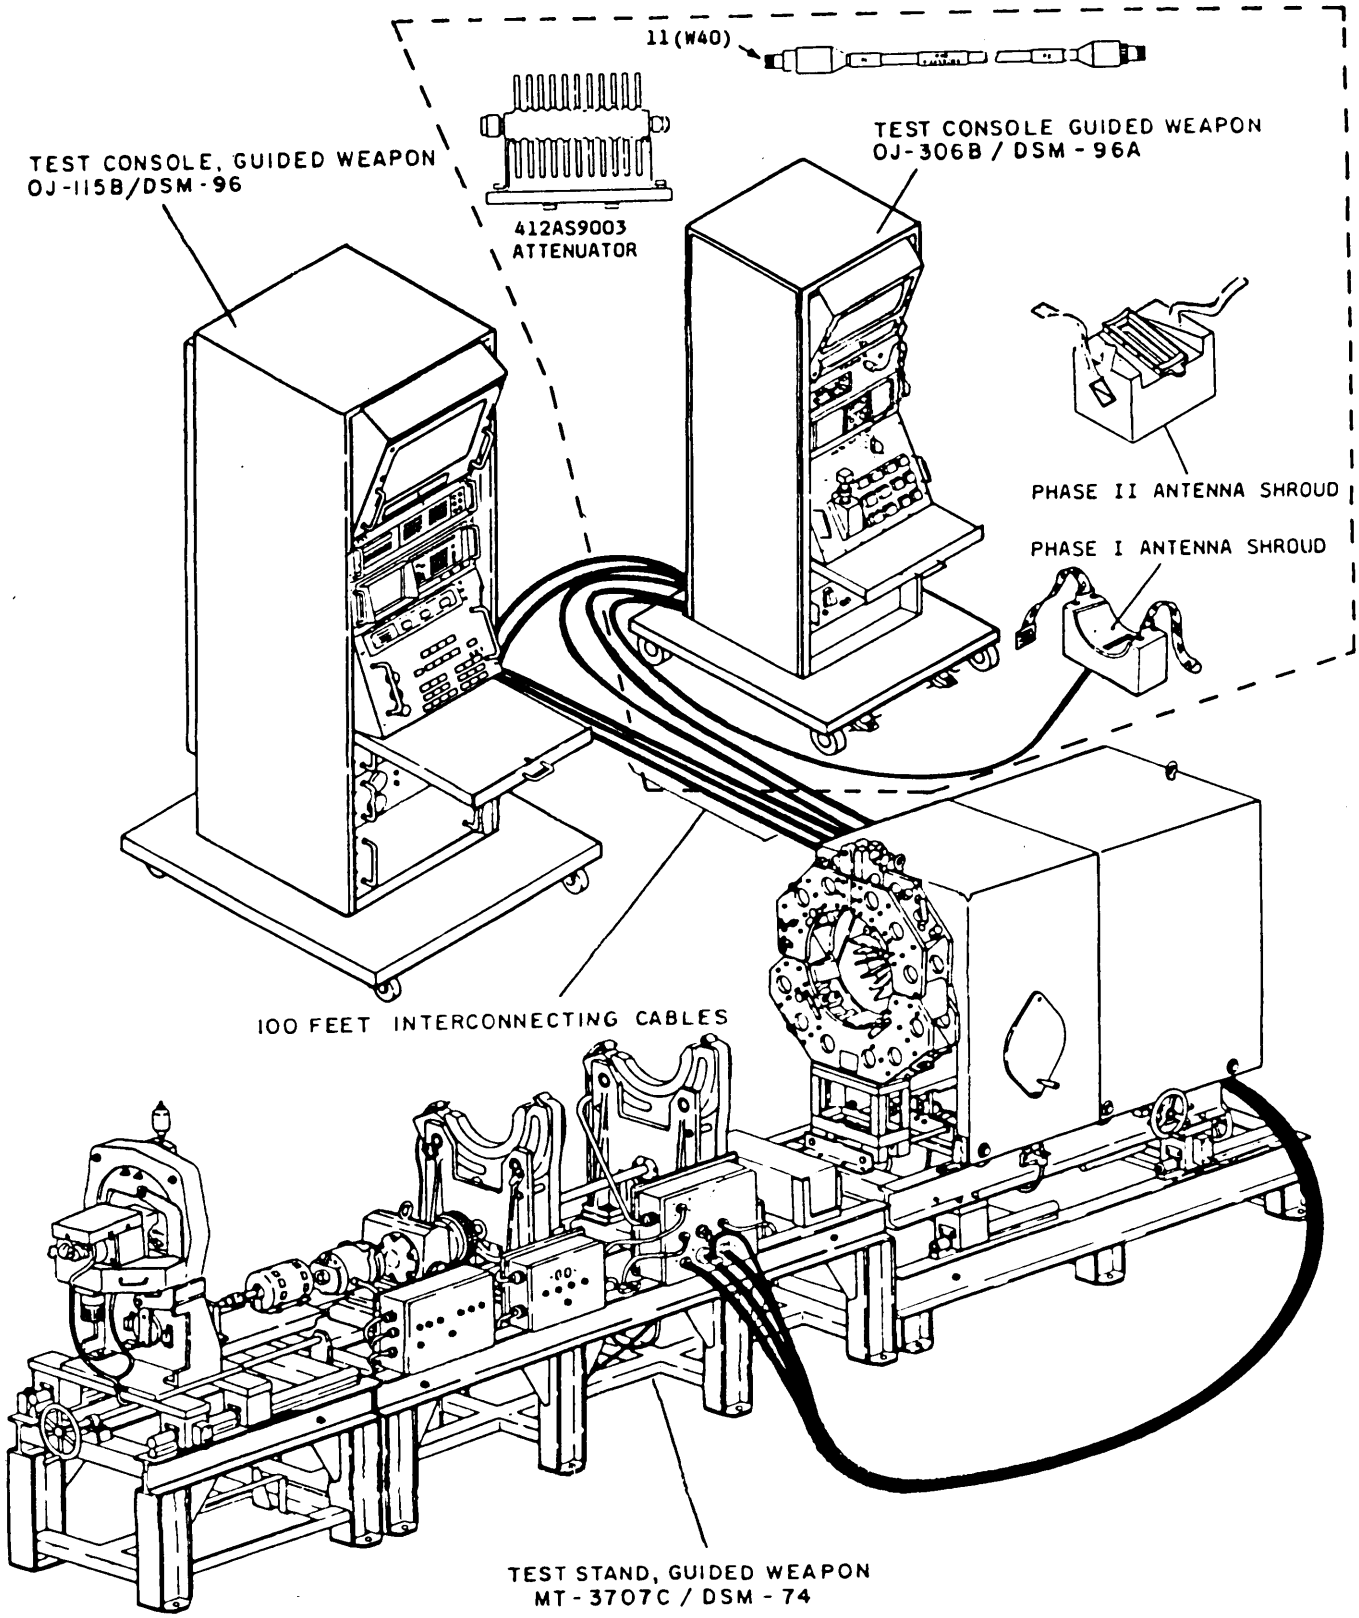


FIGURE 1. Guided Weapon Test Set AN/DSM-96B interconnected with OO-169B/DSM-96A Test Set.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

3.3.1 Reliability.

3.3.1.1 Operational stability. The test set shall operate as required, continuously or intermittently, for a period of at least 200 hours. During this time, it shall not be necessary to readjust any controls that are inaccessible to the operator during normal use.

3.3.1.2 Operating life. The test set shall have a total operating life of 18,000 hours with minimum servicing and replacement of parts.

3.4 Standard conditions. The following conditions shall be used to establish the normal performance characteristics under standard conditions for performing laboratory bench tests:

a. Temperature	Room ambient (25±5°C)
b. Altitude	Normal ground
c. Vibration	None
d. Humidity	Room ambient up to 90 percent relative humidity
e. Input Power	
(1) Console	115 ±11.5 volts ac, 60 ±5 Hz, single phase. 115/200 volts ac ±10 percent, 400 ±40 Hz, three phase (Wye) (phase rotation A-B-C).
(2) Test Stand	115/200 ±11.5 volts ac, 60 +5 Hz, 24,000 VA, three phase (Wye) (phase rotation A-B-C).

3.4.1 Service conditions. The test set shall operate as required under any of the environmental service conditions or combination of these conditions as specified in MIL-T-17296 for shore installation equipment, except as modified in 3.4.1.1 and 3.4.1.2.

3.4.1.1 Temperature. The test set shall meet the specified performance within the ambient temperature limits of 32°F (O°C) and 122°F (50°C).

3.4.1.2 Altitude. The test set shall meet the specified performance at altitudes between O and 10,000 feet (normal ground).

3.4.2 Warm-up time. The time required for the test set (except the target simulator) to warm-up prior to operation shall be not greater than 30 minutes under standard conditions. The time required for the target simulator to warm-up prior to operation shall be not-greater than 2 minutes under standard conditions.

3.4.3 Primary input power. The test set shall be capable of required performance when supplied input power having characteristics as specified herein. The input power shall be of the following types and shall be not greater than the amounts specified, except for transients caused by drive motor start-ups.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

a. Console	AC power single phase, 115 ±11.5 v, 60 Hz, 3,400 VA. AC power, three phase (Wye), 115/200 ±11.5 v, 400 ±40 Hz, 700 VA, (phase rotation A-B-C).
b. Test Stand	AC power, three phase (Wye), 115/200 v, 60 Hz, 24,000 VA, (phase rotation A-B-C).

3.4.3.1 Primary overload protection. The test set shall be capable of required performance when protected against electrical overload as follows:

a. The primary power input shall be fused or equipped with magnetically operated instantaneous-trip circuit breakers.

b. Electric motors of 10 or more horsepower rating shall be equipped with heater overload protective devices.

3.5 Performance. The performance of the test set shall be as specified in 3.5.1 through 3.5.4.1 plus any and all performance requirements specified in DL 130AS200. Unless otherwise specified herein, these requirements shall apply under standard service conditions. When reduced performance requirements for service conditions are acceptable, such variations are specified herein.

3.5.1 Test Set, Guided Weapon AN/DSM-96B. The Test Set, Guided Weapon AN/DSM-96B, shall be manufactured in accordance with DL 130AS200, and shall meet all of the requirements stated therein and in 3.6.1.1. Figure 1 shows the test set.

3.5.1.1 Test set functions (descriptive). The general functions of the test set shall be as follows:

a. Provides inputs (mechanical, electrical, and optical) to the weapon under test (see table I).

b. Verifies the flight-ready condition (GO or NO-GO) of each assembled weapon (less wings and fins) under test thereon, for weapons listed in table I. (Fuze is not electrically checked.)

c. Electrically isolates any control or guidance section of weapons listed (see table I) which exhibits a NO-GO indication for azimuth and elevation guidance signals, but not for azimuth and elevation gimbal angle signals. The optional gravity trim test will isolate between guidance section or control section failures.

d. Rechecks the flight readiness of the reassembled weapon under test when the guidance section or control section has been replaced.

3.5.2 Test Console, Guided Weapon OJ-115B/DSM-96. The Test Console, Guided Weapon OJ-115B/OSM-96, hereinafter referred to as the test set consolel, shall be manufactured in accordance with DL 130AS200, and shall meet all of the requirements stated therein and in 3.5.2.1.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

3.5.2.1 Test set console functions. The general functions of the test set console shall be as follows:

a. Controls all test stand and weapon functions by remote command signals.

b. Indicates the weapon conditions and the test stand functions.

c. Provides measurement and visual display of the weapon video output by the use of an oscilloscope, and provides for a check of resolution and shades of gray on the television monitor.

d. Measures the generated torque at each of the four fin servo shafts, and displays the results as a GO/NO-GO indication with selectable numerical readout.

3.5.3 Stand, Test, Guided Weapon MT-3707C/DSM-74. The Test Stand, Guided Weapon MT-3707C/DSM-74, hereafter referred to as the test stand, shall be manufactured in accordance with DL 132AS500, and shall meet all of the requirements stated therein and in 3.5.3.1.

3.5.3.1 Test stand functions. The functions of the test stand shall be as follows:

a. Provides the necessary supports to mount the weapon under test.

b. Provides electromechanical drive for the ram air turbine (RAT) generator of the weapon under test by use of a 10 horse power (H.P.) synchrogear motor.

c. Provides 20-degree counterclockwise roll for non-data link and 45-degree counterclockwise roll for Phase I and Phase 11 weapon under test (as viewed from the RAT drive motor), while mounted on the test stand.

d. Provides a simulated target display to the seeker of the weapon under test and controls the positioning of the target simulator.

e. Converts the mechanical torque generated at each of the control fin drive pins of the weapon under test to electrical signals for display as a GO/NO-GO indication on the test set console.

f. Provides a common boundary (interface) between the test set console and the weapon under test.

g. Provides target line-of-sight angular measurement along both X and Y axes.

h. Provides automatic test set shutdown in the event weapon vibration or servo temperature exceeds allowable levels.

3.5.3.2 Test stand content. The test stand shall contain the following assemblies:

a. Drive (ram air turbine drive motor) syncogen motor.

b. Weapon support (mounting).

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

c. Target (simulated target) and light source.

3.5.4 Cable assemblies. Cable assemblies shall be manufactured in accordance with DL 130AS200, and shall meet all of the requirements stated therein and in 3.5.4.1.

3.5.4.1 Cable assembly functions. The functions of the cable assemblies shall be as follows:

a. Connects the proper power to the test set.

b. Interconnects the components of the test set.

c. Interconnects the weapon being tested to the test set.

3.6 Detail requirements.

3.6.1 Test Set, Guided Weapon AN/DSM-96B. The test set shall be manufactured in accordance with DL 130AS200 and this specification, and shall meet the requirements of 3.6.1.1 and 3.6.1.1.1.

3.6.1.1 Test set functions. When interconnected in accordance with DL 130AS200 and as shown on table II, with the proper input power applied (see 3.4.3), and when properly connected to the Detailed Functional Requirements Test Circuitry (see figure 2); the Detailed Functional Requirements (see table II) shall be met by the test set.

3.6.1.1.1 Test circuitry. The test circuit setup shown on figure 2 shall be used to determine the GO/NO-GO lamp indications required in table II. Figure 3 provides the lamp "sequence for the Automatic-Track Test. Figure 4 specifies the lamp sequence for the Automatic Torque Test.


3.7 Workmanship. Workmanship shall be in accordance with DL 130AS200 and MIL-STD-454, Requirement 9.

4. QUALITY ASSURANCE PROVISIONS

4.1 Responsibility for inspection. Unless otherwise specified in the contract or purchase order, the contractor is responsible for the performance of all inspection requirements as specified herein. Except as otherwise specified in the contract or purchase order, the contractor may use his own or any other facilities suitable for the performance of the inspection requirements specified herein, unless disapproved by the Government. The Government reserves the right to perform any of the inspections set forth in the specification, where such inspections are deemed necessary to assure supplies and services conform to prescribed requirements.

4.1.1 Responsibility for compliance. All items must meet all requirements of sections 3 and 5. The inspection set forth in this specification shall become a part of the contractor's overall inspection system or quality program. The absence of any inspection requirements in the specification shall not relieve the contractor of the responsibility of assuring that all products or supplies submitted to the Government for acceptance comply with all requirements of the contract. Sampling in quality conformance

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

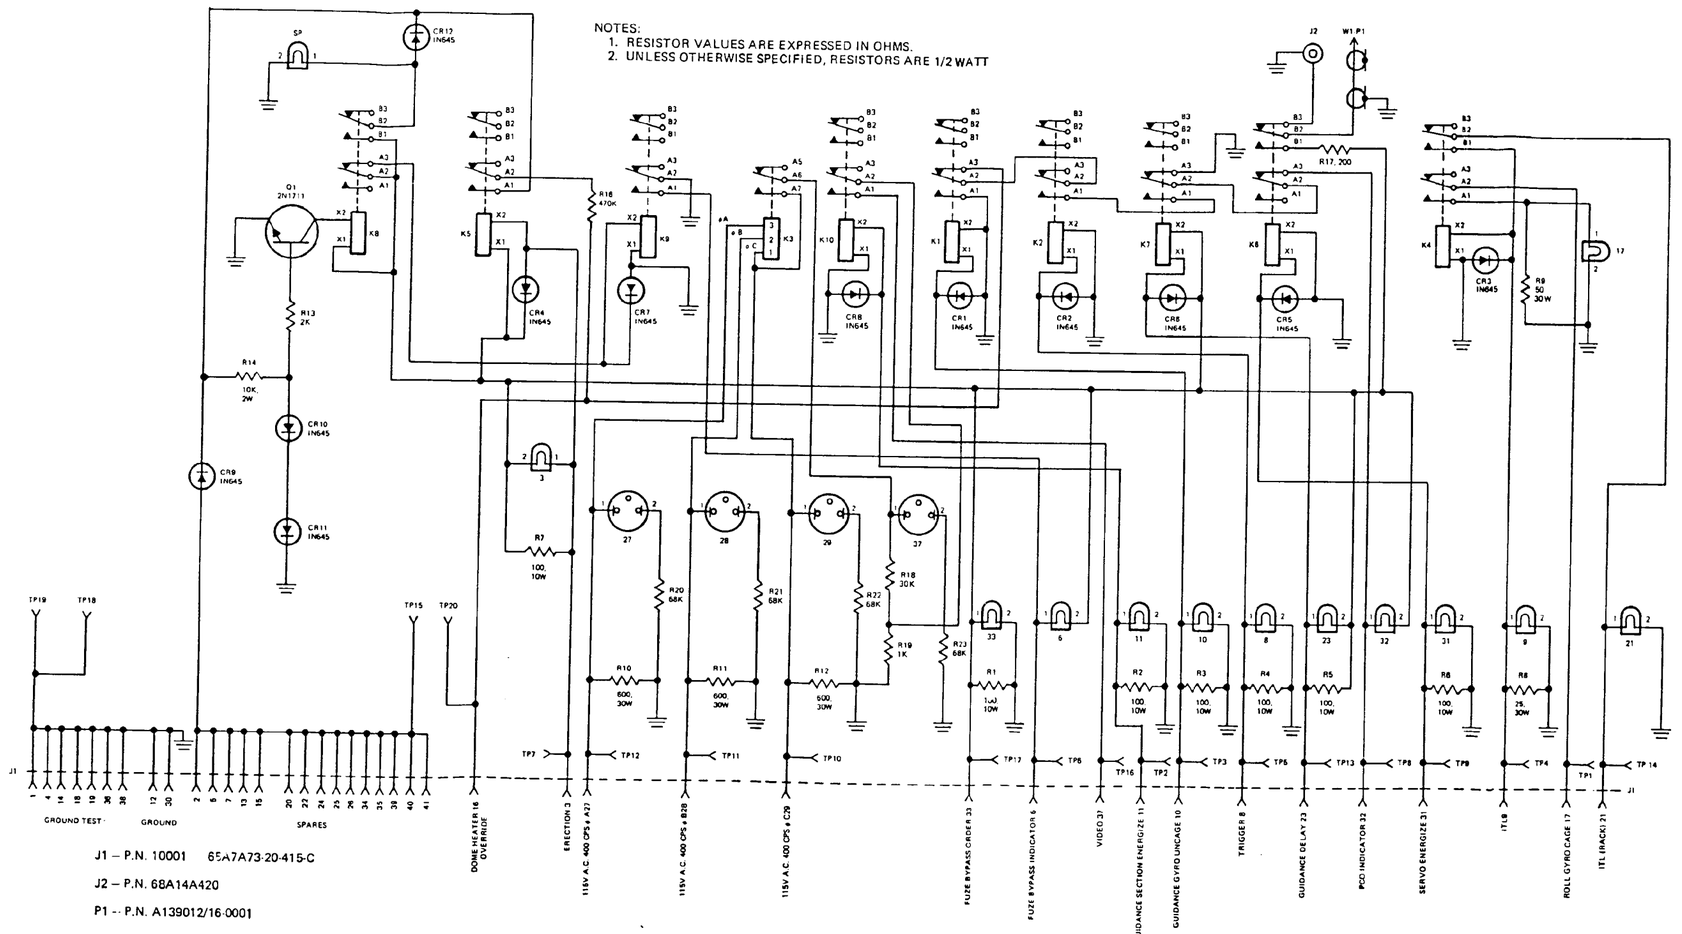

TEST POINT NO.	DESIGNATOR
1	ROLL GYRO CAGE
2	GUIDANCE ENERGIZE
3	GUIDANCE UNCAGE
4	ITL
5	TRIGGER
6	FUZE INDICATOR
7	ERECTION
8	PCO INDICATOR
9	SERVO ENERGIZE
10	ϕ C
11	ϕ B
12	ϕ A
13	GUIDANCE DELAY
14	RACK
15	SPARE
16	VIDEO
17	FUZE ORDER
18	GROUND
19	GROUND TEST
20	DOME HEATER

FIGURE 2. Detailed functional requirements for the test circuitry AN/DSM-96B (Sheet 1 of 2).

Source: https://assist.dla.mil -- Downloaded: 202610-26T04:48Z
Check the source to verify that this is the current version before use.

NOTES:
1. UNLESS OTHERWISE SPECIFIED, ALL RESISTANCE VALUES ARE IN OHMS.
2. ALL DIODES ARE TYPE 1N645.
3. ALL CAPACITANCE VALUES ARE MICROFARADS.
4. PARTIAL REFERENCE DESIGNATIONS SHOWN; FOR COMPLETE DESIGNATIONS, PREFIX WITH 1A1.

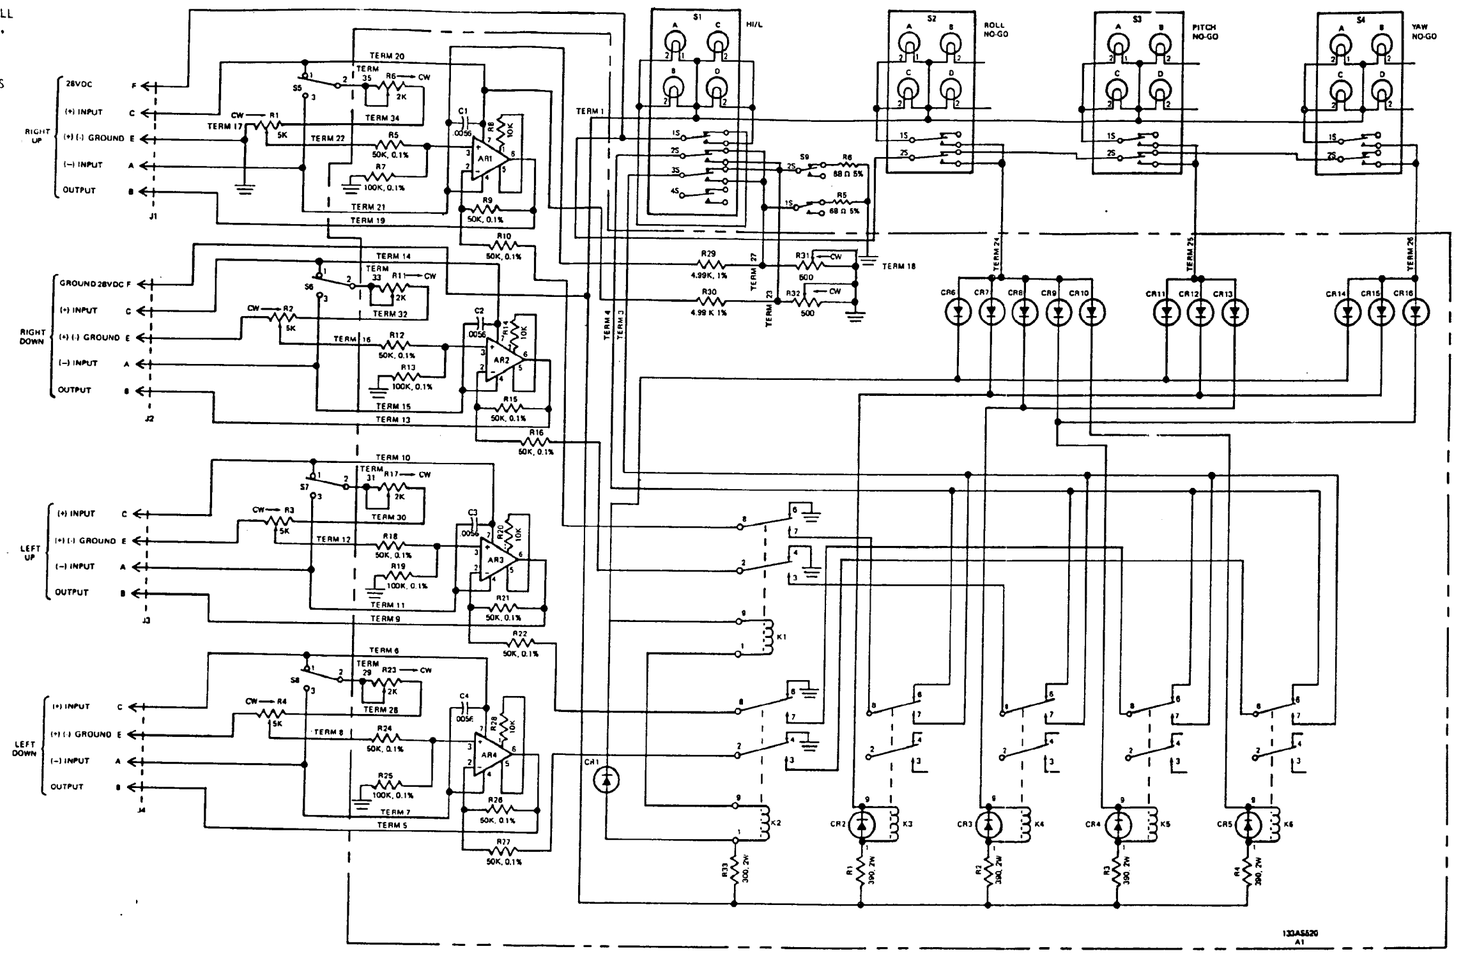


FIGURE 2. Detailed functional requirements for the test circuitry AN/DSM-96B (Sheet 2 of 2).

Source: https://assist.dla.mil -- Downloaded: 202610-26T04:48Z
Check the source to verify that this is the current version before use.

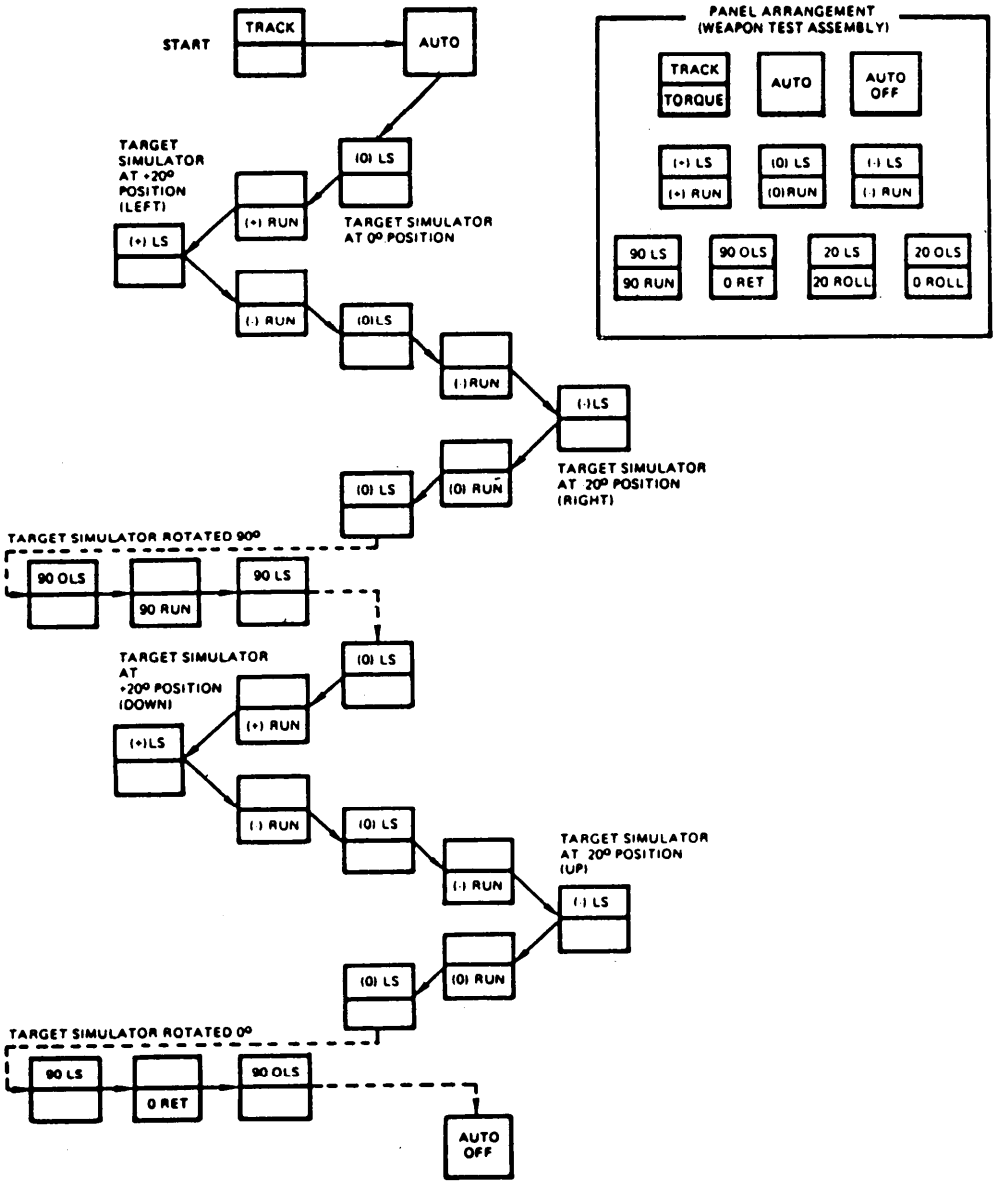


FIGURE 3. Lamp sequence, automatic track test.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

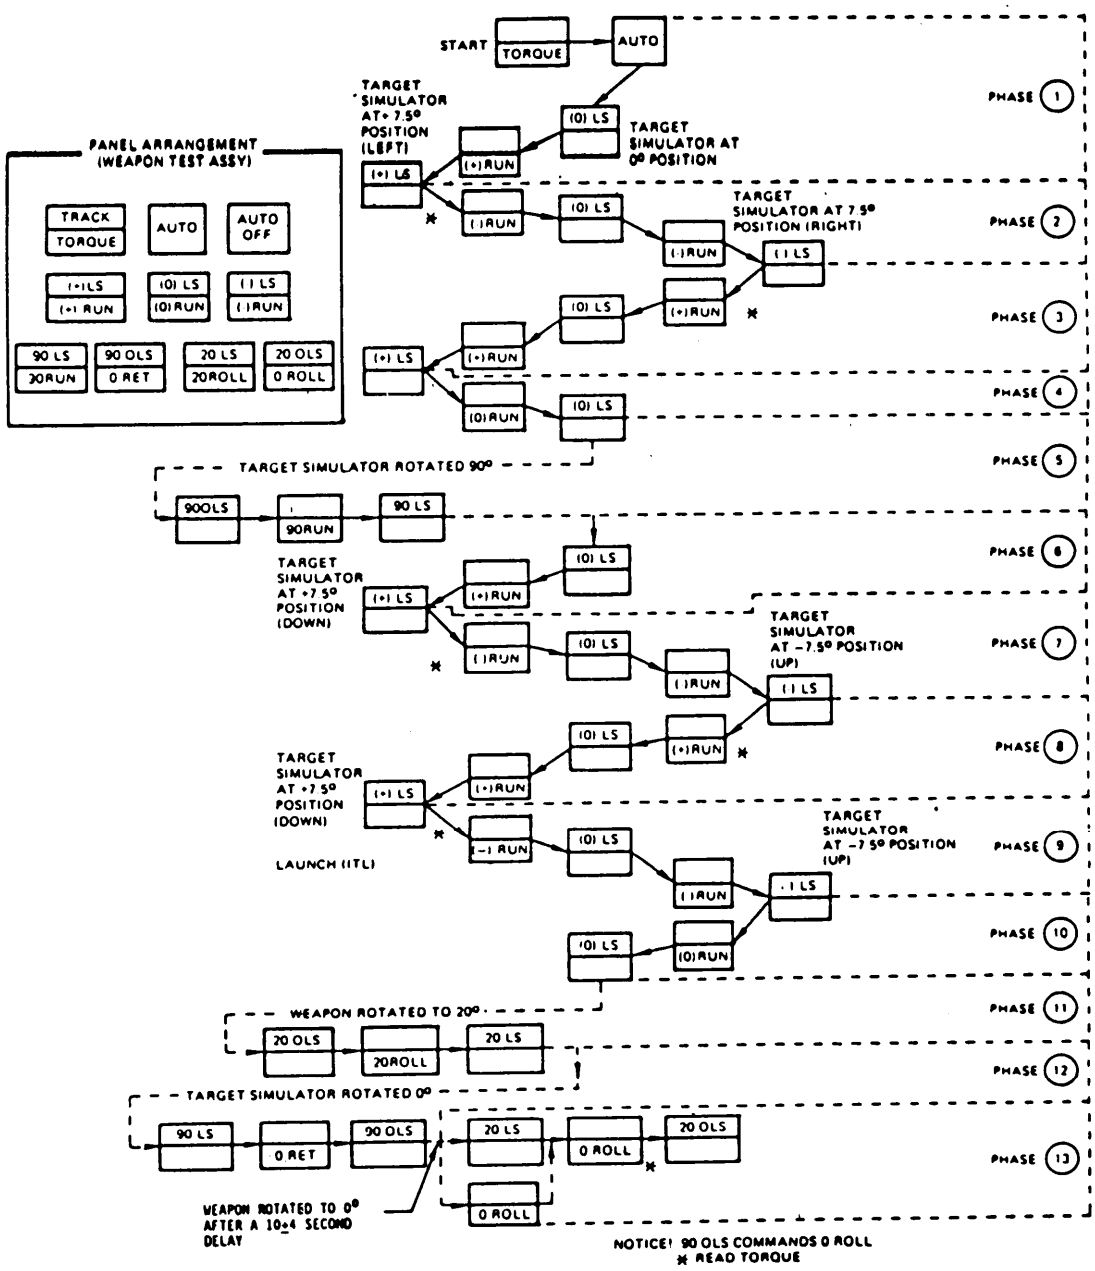


FIGURE 4. Lamp sequence, automatic track test.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

does not authorize submission of known defective material, either indicated or actual, nor does it commit the Government to acceptance of defective material.

4.1.2 Classification of inspection. The inspection requirements specified herein are classified as Quality Conformance Inspections (see 4.2). (First article, initial production, and life tests shall not be required by this specification.)

4.2 Quality conformance inspection. The contractor shall furnish all samples and shall be responsible for accomplishing the quality conformance inspection. All inspection and testing shall be under the supervision of the Government Inspector. Contractors not having testing facilities satisfactory to the procuring activity shall engage the service of a commercial testing laboratory acceptable to the procuring activity. Acceptance or approval of material during the course of manufacture shall not be construed as a guarantee of the acceptance of the finished product. Quality conformance tests shall consist of individual tests, examination of product, and operational tests.

4.2.1 Individual tests. Each test set submitted for acceptance shall be subjected to the individual tests. These tests shall be adequate to determine compliance with the requirements of material, workmanship, operational adequacy and reliability. As a minimum, each test set shall have passed the following tests:

a. Examination of product.

b. Operational test.

4.2.1.1 Examination of product. Each test set shall be examined carefully to determine that the material and workmanship requirements have been met.

4.2.1.2 Operational test. Each test set under test shall be operated within the environmental conditions of 3.4 long enough to permit the test set temperature to stabilize (not less than 30 minutes), to check sufficient characteristics, and record adequate data to assure required test set operation. Required test set operation shall include the performance of a complete operational test and shall meet the detail requirements (see 3.6) without a failure. A complete operational test shall include the steps listed in table II. The requirements shown in part b of table II columns (3) through (6) shall be met while the test set is performing tests tabulated in columns (1) and (2). The operation shall be checked at the test points shown in column (5).

4.2.1.2.1 Malfunction during test. A failure of a test set shall be considered as anything which causes malfunctioning of the test set. Malfunctioning of the test set occurs when the requirements of columns (3) through (6), part b of table II are not met. Should a failure occur, repairs shall be made and the test started over. Should repetitive failures occur, corrective action (see 4.2.3) shall be taken to eliminate the defect(s) from future test sets. A record shall be kept of all failures.

4.2.1.2.2 Adjustments during test. Only those adjustments shall be permitted during the operational test which can be made by using controls and adjusting devices which are accessible to the operator during normal use of the test set.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

4.2.2 Special tests. Special tests shall be conducted on a quantity of test sets to check the effect of any design or material change on the performance of the equipment and to assure quality control.

4.2.2.1 Special test schedule. Selection of a test set for special tests shall be made whenever failure reports or other information indicate additional tests are required. (This will be determined by the procuring activity.)

4.2.2.2 Scope of special tests. Special tests shall consist of tests acceptable to the procuring activity (see 6.2.2).

4.2.3 Test set failure. Should a failure (see 4.2.1.2.1) occur during either the individual tests or special tests, the following action shall be taken:

a. Determine the cause of failure.

b. Determine if the failure is an isolated case or a design defect.

c. If the failure is determined to be a design defect.

Where practical, include a test in the individual tests to check all test sets for this requirement until assurance is obtained that the defect has been corrected.

4.3 Test procedures. The right is reserved by the procuring activity or the Government inspector to modify the tests or require any additional tests deemed necessary to determine compliance with the requirements of this specification and the contract. Test procedures shall be in accordance with MIL-T-18303. When approved test procedures are available from previous contracts such procedures will be provided and may be used when their use is agreeable to the procuring activity. However, the right is reserved by the procuring activity to require modification of such procedures, including additional tests, when deemed necessary (see 6.2.1 and 6.2.2).

4.4 Presubmission testing. No item, part or complete test set shall be submitted by the contractor until it has been previously tested and inspected by the contractor and found to comply with all applicable requirements.

5. PACKAGING

5.1 Packaging. All major units and parts of the test set shall be preserved, packed, and marked for the level of shipment specified in the contract or purchase order in accordance with MIL-E-17555 (see 6.2.1).

6. NOTES

6.1 Intended use. The Guided Weapon Test Set, AN/DSM-96B is intended to be used at shore based military activities to determine the serviceability of the Walleye guided weapons.

Source: https://assist.dla.mil -- Downloaded: 202610-26T04:48Z
Check the source to verify that this is the current version before use.

6.2 Ordering data.

6.2.1 Acquisition requirements. Acquisition documents should specify the following:

a. Title, number, and date of this specification.

b. Selection of applicable levels of packaging and packing (see 5.1).

c. If modification or additional test procedures are required (see 4.3).

6.2.2 Data requirements. When this specification is used in an acquisition and data are required to be delivered, the data requirements identified below shall be developed as specified by approved Data Item Description (DD Form 1664) and delivered in accordance with the approved Contract Data Requirements List (CDRL), incorporated into the contract. When the provisions of DOD FAR Supplement, Part 27, Sub-part 27.410-6 (DD Form 1423) are invoked and the DD Form 1423 is not used, the data specified below shall be delivered by the contractor in accordance with contract or purchase order requirements. Deliverable data required by this specification are cited in the following paragraphs:

Paragraph No.	Data requirement title	Applicable DID No.	Option
4.2	Reports, Production Inspection	DI-T-4904	
4.2.2.2, 4.3	Procedures, Production/Acceptance Inspection	DI-T-4903	
4.2.3	Plan, Failure Data Collection, Analysis and Corrective Action	UDI-T-23719	

(Data item descriptions related to this specification, and identified in section 6 will be approved and listed as such in DOD 5010.12-L, AMSDL. Copies of data item descriptions required by the contractors in connection with specific acquisition functions should be obtained from the Naval Publications and Forms Center or as directed by the contracting officer.)

6.3 Associated equipment. The test set should operate with the following associated equipment:

a. Simulator, Guided Weapon (68A16F1) SM-548/DSM-96.

b. Torque Simulator, Guided Weapon (133AS500) SM-591/DSM-96A.

6.4 Abbreviations.

a. ØI	Phase I Walleye weapons
b. ERDL	Extended Range Data Link
c. GOI	Government of Israel
d. MK	Mark
e. ØII	Phase II Walleye weapons

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

6.5 Subject term (key word) listing.

Antenna Shroud
Extended Range Data Link
Fuze Indicator
Fuze Order
Guidance Delay
Guided Weapon
Test Console
Walleye

Preparing Activity
Navy AS

(Project 4935-NO69)

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

10. SCOPE

10.1 Scope. This appendix contains table I (Weapons to be Tested) and table II (Detailed Functional Requirements for Test Set, Guided Weapon AN/DSM-96B).

TABLE I. Weapons to be tested.

Type	Nomenclature
Tactical	Guided Weapon MK 1 (Walleye I)
Practice	Guided Weapon, Practice MK 2 (Walleye I PGW)
Exercise	Guided Weapon, Exercise MK 3 (Walleye I)
Practice	Guided Weapon, Practice MK 4 (Walleye I PGW)
Tactical	Guided Weapon MK 5 (Walleye II)
Tactical	Guided Weapon MK 21 (Walleye I Phase I)
Tactical	Guided Weapon MK 22 (Walleye I Phase I) (GOI)
Tactical	Guided Weapon MK 23 (Walleye II Phase I)
Practice	Guided Weapon, Practice MK 27 (Walleye I Phase I and II PGW)
Tactical	Guided Weapon MK 29 (Walleye I Phase II)
Tactical	Guided Weapon MK 30 (Walleye II Phase II)
Tactical	Guided Weapon MK 34 (Walleye I Phase II Imp. Vidicon)
Tactical	Guided Weapon MK 35 (Walleye I CRAB/BOUNCE INC. Imp. Vidicon)
Tactical	Guided Weapon MK 36 (Walleye I Phase I, Imp. Vidicon)
Tactical	Guided Weapon MK 37 (Walleye II Phase II, Imp. Vidicon)
Practice	Guided Weapon, Practice MK 38 (Walleye I PGW, Imp. Vidicon)

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B

a. Set-Up Required to Check Test Set Functions Without a Weapon Installed on the Test Set	
Step	Set-Up Procedure
1.	Secure that RAT actuator assembly and the target assembly in the STD-W position.
2.	Ensure that test set is interconnected in accordance with Drawing 30003-130AS200.
3.	Clamp the fin torque, roll and RAT hood interlock switches in their engaged position.
4.	Short the A, B conductors of Cable W8 (P/N 68A19D800), together for door interlock functions.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Continued)

a. Set-Up Required to Check Test Set Functions Without a Weapon Installed on the Test Set	
Step	Set-Up Procedure
5.	Connect P2 of Cable W7 (P/N 68A19F700) to J1 and connect P2 of Cable W10 (P/N 68A19C1000) to J2 of the test circuit (P/N 133AS500) (see figure 2, sheet 1).
6.	Connect P1 of Cable W1 of the test circuit (P/N 68A16F1) to J1 of the temperature probe assembly 30003-68A15D340.
7.	Disconnect cable W11 from fin torque converter.
8.	Connect P2 of Cable W11 (P/N 68A19F1100) to RU connector J1 on torque simulator test box (P/N 133AS500), P3 to RD connector J2, P5 to LU connector J3, and P4 to LD connector J4 (see figure 2, sheet 2).
9.	Set line switches of the digital voltmeter, oscilloscope, and television monitor to ON.
10.	Turn the ON-OFF switch S1 on the master power drawer to the ON position. Proceed to part b of table II.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

b. Consecutive Operations to Observe Test Set Functions					
(1) Step	(2) Test Set Operation (Action Required at Console OJ-115B/DSM-96)	(3) Console Indicator Action (Indicator Changes For)	(4) Test Circuit Indicators ON	(5) Test Point Title and Number	(6) Observation at Test Circuit
1.	A. Set MASTER POWER (DS1) Switch to ON. Depress READY/OFF switch if necessary to illuminate OFF half of READY/OFF.	ON (illuminated) OFF half of READY/OFF DS1 on master power assembly.			
	B. Depress ON/OFF switch.	ON (illuminated) TRACK or TORQUE DOOR/ACCL/ TORQ/HOOD (0) LS CAGE SAFE 90 OLS 20 OLS AUTO OFF ON/OFF 28V Power Supply indicator	6 23 33	FUZE INDICATOR.....6 GUIDANCE DELAY...13 FUZE ORDER.....17	Measure 0±0.1 volt dc Measure 1.25 volts dc max. Measure 29±2 volts dc

Source: https://assist.dla.mil - Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

b. Consecutive Operations to Observe Test Set Functions					
(1) Step	(2) Test Set Operation (Action Required at Console OJ-115B/DSM-96)	(3) Console Indicator Action (Indicator Changes For)	(4) Test Circuit Indicators ON	(5) Test Point Title and Number	(6) Observation at Test Circuit
2.	A. Depress READY/OFF Switch.	ON (illuminated) READY half of READY/OFF OFF OFF half of READY OFF	Target simulator background light intensity shall be 750 (±250) foot-lamberts as recorded with a 1/2 degree field of view spot-brightness meter within 1-inch of the outer lens window with the spot-brightness meter lens focus at infinity.		
	B. (NONE)		View the target of the target simulator with an alignment telescope having a field-of-view angle of 3.4 seconds; an aperture of 4 millimeters, and magnification from 4X to 46X (equivalent focal length approximately 300 millimeters). All lines of the target shall be sharp, all 10 shades of gray shall be distinguishable, and the highest resolution displayed shall be easily resolved.		
	C. Depress READY/OFF Switch.	ON (illuminated) OFF half of READY/OFF Ready half of READY/OFF			

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

b. Consecutive Operations to Observe Test Set Functions					
(1) Step	(2) Test Set Operation (Action Required at Console OJ-115B/DSM-96)	(3) Console Indicator Action (Indicator Changes For)	(4) Test Circuit Indicators ON	(5) Test Point Title and Number	(6) Observation at Test Circuit
3.	A. Set FUNCTION SELECTOR Switch to 1. Set GROUND TEST Switch to 1.				
	B. Adjust CALIBRATE control for test set Digital Voltmeter (DVM) indication of 1±0.05 volt.				
	C. Depress and hold READ Switch. DVM shall indicate 0±0.01 volt.	ON (illuminated) READ		GROUND TEST.....19	Measure ±0.01 volt dc
	D. Release READ Switch	OFF READ		GROUND TEST.....19	Measure 0±0.01 volt dc

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

b. Consecutive Operations to Observe Test Set Functions					
(1) Step	(2) Test Set Operation (Action Required at Console OJ-115B/DSM-96)	(3) Console Indicator Action (Indicator Changes For)	(4) Test Circuit Indicators ON	(5) Test Point Title and Number	(6) Observation at Test Circuit
3. (Cont'd)	E. Repeat steps, 3B, 3C, and 3D with GROUND TEST in positions 2, 3, and 4.				
	F. Return FUNCTION SELECTOR and GROUND TEST Switches to OFF.				
4.	Depress GUID ENER/ENER DLY Switch.	ON (illuminated) ENER DLY DS2 on MASTER POWER L, T, and V lamps glow at VERY LOW level	6 8 23 27 28 29 33 37	FUZE INDICATOR... 6 TRIGGER..... 5 GUIDANCE DELAY...13 ØA.....12 ØB.....11 ØC.....10 FUZE ORDER.....17	Measure 0±0.1 volt dc Measure 27.5±2.5 volts dc Measure 1.25 volts dc max. Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure 29±2 volts dc

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

b. Consecutive Operations to Observe Test Set Functions					
(1) Step	(2) Test Set Operation (Action Required at Console OJ-115B/DSM-96)	(3) Console Indicator Action (Indicator Changes For)	(4) Test Circuit Indicators ON	(5) Test Point Title and Number	(6) Observation at Test Circuit
5.		ON (illuminated) GUID ENER (60±5 seconds after ENER DLY ON) READY half of READY/TRIG PCO SYNC HOLD Horizontal black bars on television monitor OFF ENER DLY (when GUID ENER lights)	 6 8 10 11 23 27 28 29 32 33 37	 FUZE INDICATOR... 6 TRIGGER..... 5 GUIDANCE UNCAGE.. 3 GUIDANCE ENERGIZE 2 GUIDANCE DELAY...13 ØA.....12 ØB.....11 ØC.....10 PCO INDICATOR.... 8 FUZE ORDER.....17 VIDEO.....16	 Measure 0±0.1 volt dc Measure 27.5±2.5 volts dc Measure +28±2 volts dc Measure 28.5±2 volts dc Measure 1.25 volts dc max. Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure 0±0.1 volt dc Measure 29±2 volts dc Measure 0.4±0.2 volt ac
6.	A. Depress and hold RACK/ITL Switch	ON (illuminated) UNCAGE RACK ITL	 6 8 9 17 21 23 27	 FUZE INDICATOR... 6 TRIGGER..... 5 ITL..... 4 ROLL GYRO CAGE... 1 RACK.....14 GUIDANCE DELAY...13 ØA.....12	 Measure 0±0.1 volt dc Measure 27.5±2.5 volts dc Measure 24 volts dc min. Measure 24 volts dc min. Measure 24 volts dc min. Measure 1.25 volts dc max. Measure 115±11.5 volts ac

Source: https://assist.dla.mil -- Downloaded: 2026/10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

b. Consecutive Operations to Observe Test Set Functions					
(1) Step	(2) Test Set Operation (Action Required at Console OJ-115B/DSM-96)	(3) Console Indicator Action (Indicator Changes For)	(4) Test Circuit Indicators ON	(5) Test Point Title and Number	(6) Observation at Test Circuit
6. (Cont'd)	A. (Cont'd)	OFF GUID ENER READY half of READY/TRIG PCO CAGE SYNC HOLD Horizontal black bars on television monitor	28 29 33 37	ØB.....11 ØC.....10 FUZE ORDER.....17	Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure +29±2 volts dc
	B. Release RACK/ITL Switch	ON (illuminated) CAGE OFF UNCAGE RACK ITL	6 8 23 27 28 29 33 37	FUZE INDICATOR... 6 TRIGGER..... 5 GUIDANCE DELAY...13 ØA.....12 ØB.....11 ØC.....10 FUZE ORDER.....17	Measure 0±0.1 volt dc Measure 27.5±2.5 volts dc Measure 1.25 volts dc max. Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure +29.2±2 volts dc

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

b. Consecutive Operations to Observe Test Set Functions					
(1) Step	(2) Test Set Operation (Action Required at Console OJ-115B/DSM-96)	(3) Console Indicator Action (Indicator Changes For)	(4) Test Circuit Indicators ON	(5) Test Point Title and Number	(6) Observation at Test Circuit
7.	A. Depress and hold READ Switch	ON (illuminated) READ PCO	6 8 23 27 28 29 32 33 37	FUZE INDICATOR... 6 TRIGGER..... 5 GUIDANCE DELAY...13 ØA.....12 ØB.....11 ØC.....10 PCO INDICATOR.... 8 FUZE ORDER.....17	Measure 0±0.1 volt dc Measure 27.5±2.5 volts dc Measure 1.25 volts dc max. Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure 0±0.1 volt dc Measure +29±2 volts dc
	B. Release READ Switch	OFF READ PCO	6 8 23 27 28 29 33 37	FUZE INDICATOR... 6 TRIGGER..... 5 GUIDANCE DELAY...13 ØA.....12 ØB.....11 ØC.....10 FUZE ORDER.....17	Measure 0±0.1 volt dc Measure +27.5±2.5 volts dc Measure 1.25 volt dc max. Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure +29±2 volts dc
8.	A. Depress and hold READY/TRIG Switch	ON (illuminated) TRIG	6 8 23 27 28 29 33 37	FUZE INDICATOR... 6 TRIGGER..... 5 GUIDANCE DELAY...13 ØA.....12 ØB.....11 ØC.....10 FUZE ORDER.....17	Measure 0±0.1 volt dc Measure +27.5±2.5 volts dc Measure +1.25 volts dc nom Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure +29±2 volts dc

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

b. Consecutive Operations to Observe Test Set Functions					
(1) Step	(2) Test Set Operation (Action Required at Console OJ-115B/DSM-96)	(3) Console Indicator Action (Indicator Changes For)	(4) Test Circuit Indicators ON	(5) Test Point Title and Number	(6) Observation at Test Circuit
8.	B. Release READY/TRIG	TRIG stays on	6 23 27 28 29 33 37	FUZE INDICATOR... 6 GUIDANCE DELAY... 6 ØA.....12 ØB.....11 ØC.....10 FUZE ORDER.....17	Measure 0±0.1 volt dc Measure +1.25 volts dc max. Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure +29±2 volts dc
9.	Depress CAUTION/RAT (After RAT motor starts, it is permissible to open the torque converter)	ON (illuminated) RAT PCO	6 27 28 29 32 33 37	FUZE INDICATOR... 6 ØA.....12 ØB.....11 ØC.....10 PCO INDICATOR.... 8 FUZE ORDER.....17	Measure 0±0.1 volt dc Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure 0±0.1 volt dc Measure +29±2 volts dc
			RAT motor starts when CAUTION-RAT switch is depressed. RAT actuator motor shall operate at 12,000 (+450, -360) RPM as measured with stroboscope, FSN N6625-223-5130 or equal. Shaft shall rotate clockwise when viewed from the shaft end of motor.		

Source: https://assist.dla.mil - Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

b. Consecutive Operations to Observe Test Set Functions					
(1) Step	(2) Test Set Operation (Action Required at Console OJ-115B/DSM-96)	(3) Console Indicator Action (Indicator Changes For)	(4) Test Circuit Indicators ON	(5) Test Point Title and Number	(6) Observation at Test Circuit
10.	A. Depress and hold PCO/ DLY GND Switch	ON (illuminated) DLY GND OFF PCO	6 23 27 28 29 32 33 37	FUZE INDICATOR... 6 GUIDANCE DELAY...13 ØA.....12 ØB.....11 ØC.....10 PCO INDICATOR.... 8 FUZE ORDER.....17	Measure 0±0.1 volt dc Measure 1.25 volts dc max. Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure 0±0.1 volt dc Measure +29±2 volts dc
	B. Release PCO/DLY GND	ON (illuminated PCO OFF DLY GND	6 27 28 29 32 33 37	FUZE INDICATOR.... 6 ØA.....12 ØB.....11 ØC.....10 PCO INDICATOR..... 8 FUZE ORDER.....17	Measure 0±0.1 volt dc Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure 0±0.1 volt dc Measure +29±2 volts dc
11.	A. Depress and hold SERVO	ON (illuminated SERVO RUN OFF PCO (CAUTION of CAUTION/RAT and RAT OFF-RG CAGE indicators may	6 27 28 29 32 33 37	FUZE INDICATOR.... 6 ØA.....12 ØB.....11 ØC.....10 SERVO ENERGIZE.... 9 FUZE ORDER.....17	Measure 0±0.1 volt dc Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure +28±3 volts dc Measure +29±2 volts dc

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

b. Consecutive Operations to Observe Test Set Functions					
(1) Step	(2) Test Set Operation (Action Required at Console OJ-115B/DSM-96)	(3) Console Indicator Action (Indicator Changes For)	(4) Test Circuit Indicators ON	(5) Test Point Title and Number	(6) Observation at Test Circuit
11. (Cont'd)	A. (Cont'd)	come on if SERVO RUN is held too long.)			
	B. Release SERVO RUN Switch	ON (illuminated) PCO OFF SERVO RUN	6 27 28 29 32 33 37	FUZE INDICATOR... 6 ØA.....12 ØB.....11 ØC.....10 PCO INDICATOR.... 8 FUZE ORDER.....17	Measure 0±0.1 volt dc Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure 0±0.1 volt dc Measure +29±2 volts dc
	C. Depress RAT OFF-RG CAGE Switch (Close torque converter	ON (illuminated) GUID ENER READY/TRIG PCO RAT OFF-RG CAGE SYNC HOLD Horizontal black bars on television monitor OFF RAT GUID	6 8 11 23 27 28 29 32 33 37 10	FUZE INDICATOR... 6 TRIGGER..... 5 GUIDANCE ENERGIZE 2 GUIDANCE DELAY...13 ØA.....12 ØB.....11 ØC.....10 PCO INDICATOR.... 8 FUZE ORDER.....17 VIDEO.....16 GUIDANCE UNCAGE.. 3	Measure 0±0.1 volt dc Measure 27.5±2.5 volts dc Measure 28.5±2 volts dc Measure 1.25 volts dc max. Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure 115±11.5 volts ac Measure 0±0.1 volt dc Measure 29±2 volts dc Measure 0.4±0.2 volt ac Measure +28±2 volts dc

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

b. Consecutive Operations to Observe Test Set Functions					
(1) Step	(2) Test Set Operation (Action Required at Console OJ-115B/DSM-96)	(3) Console Indicator Action (Indicator Changes For)	(4) Test Circuit Indicators ON	(5) Test Point Title and Number	(6) Observation at Test Circuit
12.	A. Depress and hold SYNC HOLD/TRIG OFF	ON (illuminated) TRIG OFF	6 8 23 33	FUZE ORDER.....17 FUZE INDICATOR.... 6 TRIGGER..... 4 GUIDANCE DELAY....13	Measure +29±2 volts dc Measure 0±0.1 volt dc Measure +27.5±2.5 volts dc Measure +1.25 volts dc max.
	B. Release SYNC HOLD/TRIG OFF after TV monitor pattern goes off.	OFF (after 0.5 sec) GUID ENER READY/TRIG PCO SYNC HOLD TRIG OFF DS2 on Master Power Assembly Horizontal black bars on television monitor.	6 8 23 33	FUZE ORDER.....17 FUZE INDICATOR.... 6 TRIGGER..... 4 GUIDANCE DELAY....13	Measure +29±2 volts dc Measure 0±0.1 volt dc Measure +27.5±2.5 volts dc Measure +1.25 volts dc max.
13.	A. Depress and hold ERECTION Switch	All indicators on the Weapon Test Assembly except ARM, OFF half of READY/OFF, and ON/OFF go OFF. (ERECTION will flash.)	3 23 32 33 SP	ERECTION..... 7 GUIDANCE DELAY....13 FUZE ORDER.....17	Measure +0.70 volt dc max. Measure +1.25 volts dc max. Measure +29±2 volts dc

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

b. Consecutive Operations to Observe Test Set Functions					
(1) Step	(2) Test Set Operation (Action Required at Console OJ-115B/DSM-96)	(3) Console Indicator Action (Indicator Changes For)	(4) Test Circuit Indicators ON	(5) Test Point Title and Number	(6) Observation at Test Circuit
13. (Cont'd)	B. Release ERECTION Switch	OFF ERECTION	23 32 33 SP	ERECTION..... 7	Measure +29±2 volts dc
14.	Depress ON/OFF Switch of Weapon Test Drawer	All switch indicators on console except DS1 (master power) and OFF half of READY/OFF are OFF.	All indicators OFF.		Measure 0±0.1 volt dc and ac at all test points.
15.	Set MASTER Power ON OFF Switch (DS1) to OFF.	All console lights OFF.	All indicators OFF.		Measure 0±0.1 volt dc and ac at all test points.
16.	Repeat Test Steps 1 and 4.	Indicators apply.	Lights apply.		
17.	A. Depress TRACK/TORQUE Switch if TRACK half is not lit.	ON (illuminated) TRACK			

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

b. Consecutive Operations to Observe Test Set Functions					
(1) Step	(2) Test Set Operation (Action Required at Console OJ-115B/DSM-96)	(3) Console Indicator Action (Indicator Changes For)	(4) Test Circuit Indicators ON	(5) Test Point Title and Number	(6) Observation at Test Circuit
17. (Cont'd)	B. Depress AUTO Switch	OFF AUTO OFF ON (illuminated) AUTO TRACK RUN and Limit Indicators sequence in accordance with figure 3.		Viewing Target Simulator from the aft end of the test stand (+) RUN is sweep of the Target Simulator to the left (or down); (-) RUN is sweep of the Target Simulator to the right (or up) and 90 RUN is rotation of the Target Simulator counterclockwise.	
18.	A. Depress TRACK/TORQUE Switch	ON (illuminated) TORQUE Indicators should light in sequence per figure 4.			

Source: https://assist.dla.mil - Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

b. Consecutive Operations to Observe Test Set Functions					
(1) Step	(2) Test Set Operation (Action Required at Console OJ-115B/DSM-96)	(3) Console Indicator Action (Indicator Changes For)	(4) Test Circuit Indicators ON	(5) Test Point Title and Number	(6) Observation at Test Circuit
18. (Cont'd)	B. Depress AUTO Switch	ON (illuminated) AUTO TORQUE OFF AUTO OFF Refer to figure 4 for additional indicators.	No change	View target simulator and weapon cradle assemblies for correct and timely movement in accordance with figure 4. "20 ROLL" is counterclockwise rotation of the cradle assembly as viewed from the aft end of the test stand. The target simulator shall sweep at 0.5±0.05 degree/second over an angle of 15±1 degrees. The weapon cradle shall roll through an angle of 20±1 degrees at a rate of 1.35±0.2 degrees/second and stop at the 20 degree position. 10±4 seconds after the 90 OLS indicator lights, the cradle shall begin its return to the zero-degree position.	
	At end of sequence	OFF RACK ITL UNCAGE ON CAGE RAT OFF-RG CAGE			
19.	Proceed to Part (c) of table II				

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

APPENDIX

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cent'd).

c. Consecutive Operations to Check Fin Torque GO/NO-GO Circuits	
Step	Set-Up Procedure
1.	Open fin torque converter: a. Disconnect cable W11 (P/N 68A19F1100) from fin torque converter and temperature probe from weapon self simulator test box (P/N 68A16F1) leaving W10 (P/N 68A19C1000) connected to self test box . b. Connect P2 of cable W11 (P/N 68A19F1100) to RU connector J1 on torque simulator test box (P/N 133AS500), P3 to RD connector J2, P5 to RU connector J3, and P4 to LD connector J4.
2.	Perform steps 1, 2, 4, 8, 9 in table II b.
3.	Install reference assembly 1A4A32 into the weapon test drawer (P/N 131AS450-1).
4.	Make RU, RD, LU, and LD torque settings on torque simulator (P/N 133AS500) test box in accordance with test 1A of group A torque values in table II d.
5.	Push and hold the SERVO RUN switch on the weapon test drawer. Indications on ROLL, PITCH, and YAW indicators should be in accordance with the first row of test 1A in table II d.
6.	Press and hold the ROLL NO-GO switch on the torque simulator test box. Indications on the weapon test drawer ROLL, PITCH, and YAW indicators should be in accordance with the ROLL row of test 1A in table II d.
7.	Press and hold the PITCH NO-GO switch on the torque simulator test box . Indications on the weapon test drawer ROLL, PITCH, and YAW indicators should be in accordance with the PITCH row of test 1A in table II d.
8.	Press and hold the YAW NO-GO switch on the torque simulator test box. Indications on the weapon test drawer ROLL, PITCH, and YAW indicators should be in accordance with the YAW row of test 1A in table II d.
9.	Repeat steps 4 through 8 for test 1B in table II d.
10.	Repeat step 4 for test 2A in table II d.
11.	Perform step 18 in table II b.

Source: https://assist.dla.mil --Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

c. Consecutive Operations to Check Fin Torque GO/NO-GO Circuits	
Step	Set-Up Procedure
12.	When the weapon test drawer is in phase 2 of figure 4, repeat steps 5 through 8 for test 2A of group A torque values in table II d.
13.	When in phase 7, repeat steps 4 through 8 for test 4A in table II d.
14.	When in phase 9, repeat steps 4 through 8 for test 6A in table II d.
15.	Perform steps 11-C, 12, 14, 15, 16, 8, and 9 in table II b.
16.	Repeat step 4 for test 2B of group A torque values in table II d.
17.	Repeat steps 11 through 14 for tests 2B, 4B, and 6B in table II d.
18.	Repeat steps 15 through 17 for 3A (phase 3), 5A (phase 8), 7A (phase 13, 3B, 5B, and 7B in table II d.
19.	Repeat steps 3 through 18 in accordance with group B torque values in table II d, using A33 plug-in.
20.	Repeat steps 3 through 18 in accordance with LSW torque values in table II d, using A34 plug-in.
21.	Repeat steps 3 through 18 in accordance with DL A torque values in table II d, using A35 plug-in.
22.	Repeat steps 3 through 18 in accordance with DL B torque values in table 11 d, using A36 plug-in.
23.	Repeat steps 3 through 18 in accordance with DL C torque values in table II d, using A37 plug-in.
24.	Depress ON/OFF switch on weapon test drawer. All lights on weapon test drawer, except OFF of READY-OFF, should go off.
25.	Set MASTER POWER switch S1 to OFF. All lights on console should go off.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

d. Self Test of Fin Torque GO/NO-GO System									
Test No.	Weapon Torque Simulator (P/N 133AS500)						Weapon Test Drawer Indicators (P/N 131AS400)		
	Torque Polarity and Setting				HI/LO SW. Position	NO-GO Switches	ROLL	PITCH	YAW
	RU	RD	LU	LD					
GROUP A TORQUE VALUES, A32 PLUG-IN									
1A Gravity Trim	+144	+120	-102	-126	HI		GO	GO	GO
						ROLL	NO-GO	GO	GO
						PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO
1B	+67	+91	-109	-85	LO		GO	GO	GO
						ROLL	NO-GO	GO	GO
						PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO
2A Azimuth (-) Run	+37	+233	-209	-13	HI		GO	GO	GO
						ROLL	NO-GO	GO	GO
						PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO
2B	-78	+220	-244	+54	LO		GO	GO	GO
						ROLL	NO-GO	GO	GO
						PITCH	GO	NO-GO	GO
						1/ YAW	GO	GO	NO-GO

1/ Press and hold TOL switch when pressing corresponding ROLL, PITCH, or YAW switch if proper indication is not obtained.

Source: https://assist.dla.mil - Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

d. Self Test of Fin Torque GO/NO-GO System									
Test No.	Weapon Torque Simulator (P/N 133AS500)						Weapon Test Drawer Indicators (P/N 131AS400)		
	Torque Polarity and Setting				HI/LO SW. Position	NO-GO Switches	ROLL	PITCH	YAW
	RU	RD	LU	LD					
3A Azimuth (+) Run	+283	-5	+29	-259	HI	 ROLL PITCH 1/ YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
3B	+179	-37	+13	-203	LO	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
4A Elevation (-) Run	+293	+259	-235	-269	HI	 ROLL 1/ PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
4B	+167	+201	-225	-191	LO	 ROLL 1/ PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO

1/ Press and hold TOL switch when pressing corresponding ROLL, PITCH, or YAW switch if proper indication is not obtained.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

d. Self Test of Fin Torque GO/NO-GO System									
Test No.	Weapon Torque Simulator (P/N 133AS500)						Weapon Test Drawer Indicators (P/N 131AS400)		
	Torque Polarity and Setting				HI/LO SW. Position	NO-GO Switches	ROLL	PITCH	YAW
	RU	RD	LU	LD					
5A Elevation (+) Run	+26	-8	+32	-2	HI		GO	GO	GO
						ROLL	NO-GO	GO	GO
						PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO
5B	-76	-42	+18	+52	LO		GO	GO	GO
						ROLL	NO-GO	GO	GO
						PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO
6A Gain Changer	+628	+564	-500	-564	HI		GO	GO	GO
						ROLL	NO-GO	GO	GO
						1/ PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO
6B	+402	+466	-530	-466	LO		GO	GO	GO
						ROLL	NO-GO	GO	GO
						1/ PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO

1/ Press and hold TOL switch when pressing corresponding ROLL, PITCH, or YAW switch if proper indication is not obtained.

Source: https://assist.dla.mil Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

d. Self Test of Fin Torque GO/NO-GO System									
Test No.	Weapon Torque Simulator (P/N 133AS500)						Weapon Test Drawer Indicators (P/N 131AS400)		
	Torque Polarity and Setting				HI/LO SW. Position	NO-GO Switches	ROLL	PITCH	YAW
	RU	RD	LU	LD					
7A Roll	+343	+309	+89	+55	HI	 1/ ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
7B	+222	+256	+56	+90	LO	 1/ ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
GROUP B TORQUE VALUES, A33 PLUG-IN									
1A Gravity Trim	+158	+134	-116	-140	HI	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
1B	+82	+106	-124	-100	LO	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO

1/ Press and hold TOL switch when pressing corresponding ROLL, PITCH, or YAW switch if proper indication is not obtained.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

d. Self Test of Fin Torque GO/NO-GO System									
Test No.	Weapon Torque Simulator (P/N 133AS500)						Weapon Test Drawer Indicators (P/N 131AS400)		
	Torque Polarity and Setting				HI/LO SW. Position	NO-GO Switches	ROLL	PITCH	YAW
	RU	RD	LU	LD					
2A Azimuth (-) Run	+41	+257	-233	-17	HI	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
2B	-73	+255	-279	+49	LO	 ROLL PITCH 1/ YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
3A Azimuth (+) Run	+308	-10	+34	-284	HI	 ROLL PITCH 1/ YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
3B	+209	-27	+3	-233	LO	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO

1/ Press and hold TOL switch when pressing corresponding ROLL, PITCH, or YAW switch if proper indication is not obtained.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

d. Self Test of Fin Torque GO/NO-GO System									
	Weapon Torque Simulator (P/N 133AS500)						Weapon Test Drawer Indicators (P/N 131AS400)		
	Torque Polarity and Setting								
Test No.	RU	RD	LU	LD	HI/LO SW. Position	NO-GO Switches	ROLL	PITCH	YAW
4A Elevation (-) Run	+328	+294	-270	-304	HI	 ROLL 1/ PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
4B	+192	+226	-250	-216	LO	 ROLL 1/ PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
5A Elevation (+) Run	+36	+2	+22	-12	HI	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
5B	-66	-32	+8	+42	LO	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO

1/ Press and hold TOL switch when pressing corresponding ROLL, PITCH, or YAW switch if proper indication is not obtained.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

d. Self Test of Fin Torque GO/NO-GO System									
Test No.	Weapon Torque Simulator (P/N 133AS500)						Weapon Test Drawer Indicators (P/N 131AS400)		
	Torque Polarity and Setting				HI/LO SW. Position	NO-GO Switches	ROLL	PITCH	YAW
	RU	RD	LU	LB					
6A Gain Changer	+668	+604	-540	-604	HI	 ROLL 1/ PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
6B	+432	+496	-560	-496	LO	 ROLL 1/ PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
7A Roll	+378	+344	+104	+70	HI	 1/ ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
7B	+257	+291	+51	+85	LO	 1/ ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO

1/ Press and hold TOL switch when pressing corresponding ROLL, PITCH, or YAW switch if proper indication is not obtained.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

d. Self Test of Fin Torque GO/NO-GO System									
Test No.	Weapon Torque Simulator (P/N 133AS500)						Weapon Test Drawer Indicators (P/N 131AS400)		
	Torque Polarity and Setting				HI/LO SW. Position	NO-GO Switches	ROLL	PITCH	YAW
	RU	RD	LU	LD					
LSW TORQUE VALUES, A34 PLUG-IN									
1A Gravity Trim	+120	+106	-52	-66	HI	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
1B	+36	+50	-104	-90	LO	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
2A Azimuth (-) Run	+52	+182	-128	+2	HI	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
2B	-46	+122	-176	-8	LO	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO

Source: https://assist.dla.mil - Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

d. Self Test of Fin Torque GO/NO-GO System									
Test No.	Weapon Torque Simulator (P/N 133AS500)						Weapon Test Drawer Indicators (P/N 131AS400)		
	Torque Polarity and Setting				HI/LO SW. Position	NO-GO Switches	ROLL	PITCH	YAW
	RU	RD	LU	LD					
3A Azimuth (+) Run	+201	+33	+21	-147	HI	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
3B	+103	-27	-27	-157	LO	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
4A Elevation (-) Run	+199	+175	-121	-145	HI	 ROLL 1/ PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
4B	+106	+130	-184	-160	LO	 ROLL 1/ PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO

1/ Press and hold TOL switch when pressing corresponding ROLL, PITCH, or YAW switch if proper indication is not obtained.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

d. Self Test of Fin Torque GO/NO-GO System									
Test No.	Weapon Torque Simulator (P/N 133AS500)						Weapon Test Drawer Indicators (P/N 131AS400)		
	Torque Polarity and Setting				HI/LO SW. Position	NO-GO Switches	ROLL	PITCH	YAW
	RU	RD	LU	LD					
5A Elevation (+) Run	+51	+29	+25	+3	HI	ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
5B	-45	-23	-31	-9	LO	ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
6A Gain Changer	+636	+554	-472	-554	HI	ROLL 1/ PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
6B	+364	+446	-528	-446	LO	ROLL 1/ PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO

1/ Press and hold TOL switch when pressing corresponding ROLL, PITCH, or YAW switch if proper indication is not obtained.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

d. Self Test of Fin Torque GO/NO-GO System									
Test No.	Weapon Torque Simulator (P/N 133AS500)						Weapon Test Drawer Indicators (P/N 131AS400)		
	Torque Polarity and Setting				HI/LO SW. Position	NO-GO Switches	ROLL	PITCH	YAW
	RU	RD	LU	LD					
7A Roll	+648	+590	-200	-258	HI	 1/ ROLL 1/ PITCH 1/ YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
7B	+357	+421	-175	-111	LO	 1/ ROLL 1/ PITCH 1/ YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
DL A TORQUE VALUES, A35 PLUG-IN									
1A Gravity Trim	+60	+46	-32	-46	HI	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
1B	+22	+36	-50	-36	LO	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO

1/ Press and hold TOL switch when pressing corresponding ROLL, PITCH, or YAW switch if proper indication is not obtained.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

d. Self Test of Fin Torque GO/NO-GO System									
Test No.	Weapon Torque Simulator (P/N 133AS500)						Weapon Test Drawer Indicators (P/N 131AS400)		
	Torque Polarity and Setting				HI/LO SW. Position	NO-GO Switches	ROLL	PITCH	YAW
	RU	RD	LU	LD					
2A Azimuth (-) Run	+2	+108	-94	+12	HI	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
2B	-62	+116	-130	+48	LO	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
3A Azimuth (+) Run	+144	-34	+48	-130	HI	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
3B	+80	-26	+12	-94	LO	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO

Source: https://assist.dla.mil-Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

d. Self Test of Fin Torque GO/NO-GO System									
Test No.	Weapon Torque Simulator (P/N 133AS500)						Weapon Test Drawer Indicators (P/N 131AS400)		
	Torque Polarity and Setting				HI/LO SW. Position	NO-GO Switches	ROLL	PITCH	YAW
	RU	RD	LU	LD					
4A Elevation (-) Run	+138	+120	-102	-120	HI		GO	GO	GO
						ROLL	NO-GO	GO	GO
						PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO
4B	+88	+106	-124	-106	LO		GO	GO	GO
						ROLL	NO-GO	GO	GO
						PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO
5A Elevation (+) Run	-6	-24	+38	+20	HI		GO	GO	GO
						ROLL	NO-GO	GO	GO
						PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO
5B	-52	-34	+20	+38	LO		GO	GO	GO
						ROLL	NO-GO	GO	GO
						PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

d. Self Test of Fin Torque GO/NO-GO System									
	Weapon Torque Simulator (P/N 133AS500)						Weapon Test Drawer Indicators (P/N 131AS400)		
	Torque Polarity and Setting								
Test No.	RU	RD	LU	LD	HI/LO SW. Position	NO-GO Switches	ROLL	PITCH	YAW
6A Gain Changer	+681	+621	-427	-487	HI	ROLL 1/ PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
6B	+319	+379	-573	-513	LO	ROLL 1/ PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
7A Roll	+739	+625	-237	-351	HI	1/ ROLL 1/ PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
7B	+170	+284	+8	+122	LO	1/ ROLL 1/ PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO

1/ Press and hold TOL switch when pressing corresponding ROLL, PITCH, or YAW switch if proper indication is not obtained.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

d. Self Test of Fin Torque GO/NO-GO System									
Test No.	Weapon Torque Simulator (P/N 133AS500)						Weapon Test Drawer Indicators (P/N 131AS400)		
	Torque Polarity and Setting				HI/LO SW. Position	NO-GO Switches	ROLL	PITCH	YAW
	RU	RD	LU	LD					
DL B TORQUE VALUES, A36 PLUG-IN									
1A Gravity Trim	+49.0	+39.0	-17.0	-27.0	HI	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
1B	+7.0	+17.0	-39.0	-29.0	LO	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
2A Azimuth (-) Run	+4.0	+86.0	-64.0	+18.0	HI	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
2B	-48.0	+70.0	-92.0	+26.0	LO	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

d. Self Test of Fin Torque GO/NO-GO System									
Test No.	Weapon Torque Simulator (P/N 133AS500)						Weapon Test Drawer Indicators (P/N 131AS400)		
	Torque Polarity and Setting				HI/LO SW. Position	NO-GO Switches	ROLL	PITCH	YAW
	RU	RD	LU	LD					
3A Azimuth (+) Run	+104.0	-14.0	+36.0	-82.0	HI	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
3B	+52.0	-30.0	+8.0	-74.0	LO	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
4A Elevation (-) Run	+102.0	+90.0	-66.0	-78.0	HI	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
4B	+106	+130	-184	-160	LO	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO

Source: https://assist.dla.mil - Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

d. Self Test of Fin Torque GO/NO-GO System									
Test No.	Weapon Torque Simulator (P/N 133AS500)						Weapon Test Drawer Indicators (P/N 131AS400)		
	Torque Polarity and Setting				HI/LO SW. Position	NO-GO Switches	ROLL	PITCH	YAW
	RU	RD	LU	LD					
5A Elevation (+) Run	+2.0	-10.0	+32.0	+20.0	HI		GO	GO	GO
						ROLL	NO-GO	GO	GO
						PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO
5B	-45.0	-33.0	+11.0	+23.0	LO		GO	GO	GO
						ROLL	NO-GO	GO	GO
						PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO
6A Gain Changer	+625.0	+535.0	-483.0	-573.0	HI		GO	GO	GO
						ROLL	NO-GO	GO	GO
						1/ PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO
6B	+395.0	+485.0	-537.0	-447.0	LO		GO	GO	GO
						ROLL	NO-GO	GO	GO
						1/ PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO

1/ Press and hold TOL switch when pressing corresponding ROLL, PITCH, or YAW switch if proper indication is not obtained.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

d. Self Test of Fin Torque GO/NO-GO System									
Test No.	Weapon Torque Simulator (P/N 133AS500)						Weapon Test Drawer Indicators (P/N 131AS400)		
	Torque Polarity and Setting				HI/LO SW. Position	NO-GO Switches	ROLL	PITCH	YAW
	RU	RD	LU	LD					
7A Roll	+691.0	+623.0	-231.0	-299.0	HI		GO	GO	GO
						1/ ROLL	NO-GO	GO	GO
						1/ PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO
7B	+465.0	+533.0	-269.0	-201.0	LO		GO	GO	GO
						1/ ROLL	NO-GO	GO	GO
						1/ PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO
DL C TORQUE VALUES, A37 PLUG-IN									
1A Gravity Trim	+60	+50	-6	-16	HI		GO	GO	GO
						ROLL	NO-GO	GO	GO
						PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO
1B	-4	+6	-50	-40	LO		GO	GO	GO
						ROLL	NO-GO	GO	GO
						PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO

1/ Press and hold TOL switch when pressing corresponding ROLL, PITCH, or YAW switch if proper indication is not obtained.

Source: https://assist.dla.mil - Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

d. Self Test of Fin Torque GO/NO-GO System									
Test No.	Weapon Torque Simulator (P/N 133AS500)						Weapon Test Drawer Indicators (P/N 131AS400)		
	Torque Polarity and Setting				HI/LO SW. Position	NO-GO Switches	ROLL	PITCH	YAW
	RU	RD	LU	LD					
2A Azimuth (-) Run	+15	+97	-53	+29	HI	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
2B	-59	+59	-103	+15	LO	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
3A Azimuth (+) Run	+115	-3	+47	-71	HI	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
3B	+41	-41	-3	-85	LO	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

d. Self Test of Fin Torque GO/NO-GO System									
Test No.	Weapon Torque Simulator (P/N 133AS500)						Weapon Test Drawer Indicators (P/N 131AS400)		
	Torque Polarity and Setting				HI/LO SW. Position	NO-GO Switches	ROLL	PITCH	YAW
	RU	RD	LU	LD					
4A Elevation (-) Run	+112	+100	-56	-68	HI	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
4B	+41	+53	-97	-85	LO	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
5A Elevation (+) Run	+13	+1	+43	+31	HI	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO
5B	-56	-44	+0	+12	LO	 ROLL PITCH YAW	GO NO-GO GO GO	GO GO NO-GO GO	GO GO GO NO-GO

Source: https://assist.dla.mil - Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

d. Self Test of Fin Torque GO/NO-GO System									
Test No.	Weapon Torque Simulator (P/N 133AS500)						Weapon Test Drawer Indicators (P/N 131AS400)		
	Torque Polarity and Setting				HI/LO SW. Position	NO-GO Switches	ROLL	PITCH	YAW
	RU	RD	LU	LD					
6A Gain Changer	+633	+543	-475	-565	HI		GO	GO	GO
						ROLL	NO-GO	GO	GO
						1/ PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO
6B	+387	+477	-545	-455	LO		GO	GO	GO
						ROLL	NO-GO	GO	GO
						1/ PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO
7A Roll	+691	+623	-231	-299	HI		GO	GO	GO
						1/ ROLL	NO-GO	GO	GO
						1/ PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO
7B	+465.0	+533.0	-269.0	+201.0	LO		GO	GO	GO
						1/ ROLL	NO-GO	GO	GO
						1/ PITCH	GO	NO-GO	GO
						YAW	GO	GO	NO-GO

1/ Press and hold TOL switch when pressing corresponding ROLL, PITCH, or YAW switch if proper indication is not obtained.

Source: https://assist.dla.mil -- Downloaded: 2026/10-26T04:48Z
Check the source to verify that this is the current version before use.

APPENDIX

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

e. Plug-In Reference Assembly 1A4A32, 33, 34, 35, 36, and 37 Alignment Chart

Note

These measurements shall be taken with the Plug-In Reference Assembly 1A4A32, 33, 34, 35, 36 or 37 plugged into extender module assembly 131AS445. Measurements can then be observed with an external digital voltmeter or rack mounted one (if it is disconnected in the rear).

Board		Pin	Plug-In Voltage (Volts) ±5 mv					
A1			1A4A32	1A4A33	1A4A34	1A4A35	1A4A36	1A4A37
Gravity	R1	7	+0.240	+0.240	+0.600	+0.200	+0.280	+0.500
Trim	R2	4	-0.240	-0.240	-0.600	-0.200	-0.280	-0.500
	R3	8	+2.520	+2.800	+1.780	+0.990	+0.720	+0.720
	R4	3	+1.700	+2.000	+1.340	+0.670	+0.390	+0.390
	R5	9	+0.300	+0.300	+0.200	+0.200	+0.150	+0.150
	R6	2	-0.300	-0.300	-0.200	-0.200	-0.150	-0.150
AZ(-)	R7	H	+0.300	+0.300	+0.600	+0.200	+0.280	+0.500
Run	R8	D	-0.300	-0.300	-0.600	-0.200	-0.280	-0.500
	R9	J	+2.520	+2.800	+1.860	+1.030	+0.730	+0.730
	R10	C	+1.600	+2.000	+1.240	+0.630	+0.370	+0.370
	R11	K	-1.900	-2.100	-1.240	-1.000	-0.760	-0.760
	R12	B	-3.100	-3.400	-1.740	-1.840	-1.240	-1.240
A2								
AZ(+)	R1	7	+0.300	+0.300	+0.600	+0.200	+0.280	+0.500
Run	R2	4	-0.300	-0.300	-0.600	-0.200	-0.280	-0.500
	R3	8	+2.600	+2.800	+1.860	+1.030	+0.730	+0.730
	R4	3	+1.600	+2.000	+1.240	+0.630	+0.370	+0.370
	R5	9	+3.000	+3.300	+1.740	+1.840	+1.240	+1.240
	R6	2	+2.100	+2.300	+1.240	+1.000	+0.760	+0.760
EL(-)	R7	H	+0.300	+0.300	+0.600	+0.240	+0.290	+0.500
	R8	D	-0.300	-0.300	-0.600	-0.240	-0.290	-0.500
	R9	J	+5.400	+6.100	+3.320	+2.460	+1.740	+1.740
	R10	C	+3.800	+4.300	+2.780	+2.060	+1.320	+1.320
	R11	K	+0.400	+0.400	+0.300	+0.240	+0.180	+0.180
	R12	B	-0.400	-0.400	-0.300	-0.240	-0.180	-0.180

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

APPENDIX

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

e. Plug-In Reference Assembly 1A4A32, 33, 34, 35, 36, and 37 Alignment Chart

Board		Pin	Plug-In Voltage (Volts) ±5 mv					
A3			1A4A32	1A4A33	1A4A34	1A4A35	1A4A36	1A4A37
EL(+) Run	R1	7	+0.300	+0.300	+0.600	+0.200	+0.280	+0.500
	R2	4	-0.300	-0.300	-0.600	-0.200	-0.280	-0.500
	R3	8	GND 0	+0.200	+0.320	-0.380	-0.230	-0.230
	R4	3	-1.000	-0.800	-0.200	-0.780	-0.620	-0.620
	R5	9	+0.400	+0.400	+0.280	+0.240	+0.180	+0.180
	R6	2	-0.400	-0.400	-0.280	-0.240	-0.180	-0.180
Gain Changer	R7	H	+0.700	+0.700	+0.880	+2.000	+0.570	+0.740
	R8	D	-0.700	-0.700	-0.880	-2.000	-0.570	-0.740
	R9	J	+11.400	+12.200	+11.200	+11.200	+11.200	+11.200
	R10	C	+9.200	+9.800	+8.800	+8.800	+9.200	+9.200
	R11	K	+0.700	+0.700	+0.880	+0.660	+0.960	+0.960
	R12	B	-0.700	-0.700	-0.880	-0.660	-0.960	-0.960
A4 Roll	R1	7	+4.100	+4.600	+4.020	+4.000	+4.040	+4.040
	R2	4	+3.000	+3.300	+2.400	+2.800	+2.520	+2.520
	R3	8	+2.600	+2.800	+8.600	+9.880	+9.340	+9.340
	R4	3	+1.600	+2.000	+5.200	+1.500	+7.220	+7.220
	R5	9	+0.400	+0.400	+0.800	+1.200	+0.740	+0.740
	R6	2	-0.400	-0.400	-0.700	-1.200	-0.740	-0.740
Spare	R7	H						
	R8	D						
	R9	J						
	R10	C						
	R11	K						
	R12	B						

R1 & R7 Roll High
R2 & R8 Roll Low
R3 & R9 Pitch High
R4 & R10 Pitch Low
R5 & R11 Yaw High
R6 & R12 Yaw Low

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

APPENDIX

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

f. Plug-In Reference Assembly 1A4A32, 33, 34, 35, 36, and 37, voltage measurements with function selector switch in position 7.

$$\frac{\text{Plug-In reference voltage values table II e}}{2} \times 100$$

Board		Pin	Plug-In Voltage (Volts) ±5 mv					
A1			1A4A32	1A4A33	1A4A34	1A4A35	1A4A36	1A4A37
Gravity	R1	7	+0.120	+0.120	+0.300	+0.100	+0.140	+0.250
Trim	R2	4	-0.120	-0.120	-0.300	-0.100	-0.140	-0.140
	R3	8	+1.260	+1.400	+0.890	+0.495	+0.360	+0.360
	R4	3	+0.850	+1.000	+0.670	+0.335	+0.195	+0.195
	R5	9	+0.150	+0.150	+0.100	+0.100	+0.075	+0.075
	R6	2	-0.150	-0.150	-0.100	-0.100	-0.075	-0.075
AZ(-)	R7	H	+0.150	+0.150	+0.300	+0.100	+0.140	+0.250
Run	R8	D	-0.150	-0.150	-0.300	-0.100	-0.140	-0.250
	R9	J	+1.260	+1.400	+0.930	+0.515	+0.365	+0.365
	R10	C	+0.800	+1.000	+0.620	+0.315	+0.185	+0.185
	R11	K	-0.950	-1.050	-0.620	-0.500	-0.380	-0.380
	R12	B	-1.550	-1.700	-0.870	-0.920	-0.620	-0.620
A2	R1	7	+0.150	+0.150	+0.300	+0.100	+0.140	+0.250
AZ(+)	R2	4	+0.150	+0.150	-0.300	-0.100	-0.140	-0.250
Run	R3	8	+1.300	+1.400	+0.930	+0.515	+0.365	+0.365
	R4	3	+0.800	+1.000	+0.620	+0.315	+0.185	+0.185
	R5	9	+1.500	+1.650	+0.870	+0.920	+0.620	+0.620
	R6	2	+1.050	+1.150	+0.620	+0.500	+0.380	+0.380
EL(-)	R7	H	+0.150	+0.150	+0.300	+0.120	+0.145	+0.250
Run	R8	D	-0.150	-0.150	-0.300	-0.120	-0.145	-0.500
	R9	J	+2.700	+3.050	+1.660	+1.230	+0.870	+0.870
	R10	C	+1.900	+2.150	+1.390	+1.030	+0.660	+0.660
	R11	K	+0.200	+0.200	+0.150	+0.120	+0.090	+0.090
	R12	B	-0.200	-0.200	-0.150	-0.120	-0.090	-0.090

Source: https://assist.dla.mil -- Downloaded: 202610-26T04:48Z
Check the source to verify that this is the current version before use.

APPENDIX

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

f. Plug-In Reference Assembly 1A4A32, 33, 34, 35, 36, and 37, voltage measurements with function selector switch in position 7.

$$\frac{\text{Plug-In reference voltage values table II e}}{2} \times 100$$

Board		Pin	Plug-In Voltage (Volts) ±5 mv					
A3			1A4A32	1A4A33	1A4A34	1A4A35	1A4A36	1A4A37
EL(+)	R1	7	+0.150	+0.150	+0.300	+0.100	+0.140	+0.250
Run	R2	4	-0.150	-0.150	-0.300	-0.100	-0.140	-0.250
	R3	8	GND 0	+0.100	+0.160	-0.190	-0.115	-0.115
	R4	3	-0.500	-0.400	-0.100	-0.390	-0.310	-0.310
	R5	9	+0.200	+0.200	+0.140	+0.120	+0.090	+0.090
	R6	2	-0.200	-0.200	-0.140	-0.120	-0.090	-0.090
Gain	R7	H	+0.350	+0.350	+0.440	+1.000	+0.285	+0.370
Changer	R8	D	-0.350	-0.350	-0.440	-1.000	-0.285	-0.370
	R9	J	+5.700	+6.100	+5.600	+5.600	+5.600	+5.600
	R10	C	+4.600	+4.900	+4.400	+4.400	+4.600	+4.600
	R11	K	+0.350	+0.350	+0.440	+0.330	+0.480	+0.480
	R12	B	-0.350	-0.350	-0.440	-0.330	-0.480	-0.480
A4	R1	7	+2.050	+2.300	+2.010	+2.000	+2.020	+2.020
Roll	R2	4	+1.500	+1.650	+1.200	+1.400	+1.260	+1.260
	R3	8	+1.300	+1.400	+4.300	+4.940	+4.670	+4.670
	R4	3	+0.800	+1.000	+2.600	+0.750	+3.610	+3.610
	R5	9	+0.200	+0.200	+0.350	+0.600	+0.370	+0.370
	R6	2	-0.200	-0.200	-0.350	-0.600	-0.370	-0.370

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

APPENDIX

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

g. Data in inch pounds as derived from the following formula:

$$\frac{\text{Plug-In reference voltage values table II e}}{2} \times 100$$

Board		Pin	Plug-In Values Inch Pounds ±.5 inch					
A1			1A4A32	1A4A33	1A4A34	1A4A35	1A4A36	1A4A37
Gravity	R1	7	12	12	30	10	14	25
Trim	R2	4	12	12	30	10	14	25
	R3	8	126	140	89	49.5	31	36
	R4	3	85	100	67	33.5	19.5	19.5
	R5	9	15	15	10	10	7.5	7.5
	R6	2	15	15	10	10	7.5	7.5
AZ(-)	R7	H	15	15	30	10	14	25
Run	R8	D	15	15	30	10	14	25
	R9	J	126	140	93	51.5	36.5	36.5
	R10	C	80	100	62	31.5	18.5	18.5
	R11	K	95	105	62	50	38	38
	R12	B	155	170	87	92	62	62
A2								
AZ(+)	R1	7	15	15	30	10	14	25
Run	R2	4	15	15	30	10	14	25
	R3	8	130	140	93	51.5	36.5	36.5
	R4	3	80	100	62	31.5	18.5	18.5
	R5	9	150	165	87	92	62	62
	R6	2	105	115	62	50	38	38
EL(-)	R7	H	15	15	30	12	14.5	25
Run	R8	D	15	15	30	12	14.5	25
	R9	J	270	305	166	123	87	87
	R10	C	190	215	139	103	66	66
	R11	K	20	20	15	12	9	9
	R12	B	20	20	15	12	9	9

Source: https://assist.dla.mil Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

APPENDIX

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

g. Data in inch pounds as derived from the following formula:

$$\frac{\text{Plug-In reference voltage values table II e}}{2} \times 100$$

Board		Pin	Plug-In Values Inch Pounds ±.5 inch					
A3			1A4A32	1A4A33	1A4A34	1A4A35	1A4A36	1A4A37
EL(+)	R1	7	15	15	30	10	14	25
Run	R2	4	15	15	30	10	14	25
	R3	8	0	10	16	19	11.5	11.5
	R4	3	50	40	10	39	31	31
	R5	9	20	20	14	12	9	9
	R6	2	20	20	14	12	9	9
Gain	R7	H	35	35	44	100	28.5	37
Changer	R8	D	35	35	44	100	28.5	37
	R9	J	570	610	560	560	560	560
	R10	C	460	490	440	440	460	460
	R11	K	35	35	44	33	48	48
	R12	B	35	35	44	33	48	48
A4	R1	7	205	230	201	200	202	202
	R2	4	150	165	120	140	126	126
	R3	8	130	140	430	494	467	467
	R4	3	80	100	260	75	361	361
	R5	9	20	20	35	60	37	37
	R6	2	20	20	35	60	37	37

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

h. Torsion Bar (P/N's 132AS640-1, 2, 3, 4) check out using SA-A-18038						
Procedure Step No.	Function Tested	Nominal	Measured Values First Run	Measured Values Second Run	Out of Tol	Tolerances
1.	Torsion Bar Segment Adapter	0				±.018 V
2.	DVM Readout Positive and Negative Torques for Assy No. 1	+.050 V				±.018 V
3.	(+) 3 lb. weight	+.125 V				±.018 V
	(-) 3 lb.	-.125 V				±.018 V
4.	(+) 3 + 5 lb.	+.250 V				±.018 V
	(-) 3 + 5 lb.	-.250 V				±.018 V
NOTE: It is permissible to perform all positive (+) tests at one time; then perform the negative tests.	(+) 3 + 5 + 10 lb.	+.500 V				±.018 V
	(-) 3 + 5 + 10 lb.	-.500 V				±.018 V
	(+) 3 + 20 lb.	+.625 V				±.018 V
	(-) 3 + 20 lb.	-.625 V				±.018 V
	(+) 3 + 20 + 5 lb.	+.750 V				±.018 V
	(-) 3 + 20 + 5 lb.	-.750 V				±.018 V
	(+) 3 + 20 + 10 lb.	+.875 V				±.018 V
	(-) 3 + 20 + 10 lb.	-.875 V				±.018 V
	(+) 3 + 20 + 10 + 5 lb.	+1.000 V				±.018 V
	(-) 3 + 20 + 10 + 5 lb.	-1.000 V				±.018 V
	(+) 3 + 20 + 20 lb.	+1.125 V				±.018 V
	(-) 3 + 20 + 20 lb.	-1.125 V				±.018 V
	(+) 3 + 20 + 20 + 5 lb.	+1.250 V				±.018 V
	(-) 3 + 20 + 20 + 5 lb.	-1.250 V				±.018 V
	(+) 3 + 20 + 20 + 10 lb.	+1.375 V				±.018 V
	(-) 3 + 20 + 20 + 10 lb.	-1.375 V				±.018 V
5.	Positive and Negative Torques for Assy No. 2					
	(+) 3 lb. weight	+.125 V				±.018 V
	(-) 3 lb.	-.125 V				±.018 V
	(+) 3 + 5 lb.	+.250 V				±.018 V
	(-) 3 + 5 lb.	-.250 V				±.018 V
	(+) 3 + 5 + 10 lb.	+.500 V				±.018 V
	(-) 3 + 5 + 10 lb.	-.500 V				±.018 V
	(+) 3 + 20 lb.	+.625 V				±.018 V
	(-) 3 + 20 lb.	-.625 V				±.018 V

Source: https://assist.dla.mil -- Downloaded: 20261O-26T04:48Z
Check the source to verify that this is the current version before use.

APPENDIX

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

h. Torsion Bar (P/N's 132AS640-1, 2, 3, 4) check out using SA-A-18038						
Procedure Step No.	Function Tested	Nominal	Measured Values: First Run	Measured Values: Second Run	Out of Tol	Tolerances
5. (Cont'd)	Positive and Negative Torques for Assy No. 2					
	(+) 3 + 20 + 5 lb.	+.750 V				±.018 V
	(-) 3 + 20 + 5 lb.	-.750 V				±.018 V
	(+) 3 + 20 + 10 lb.	+.875 V				±.018 V
	(-) 3 + 20 + 10 lb.	-.875 V				±.018 V
	(+) 3 + 20 + 10 + 5 lb.	+1.000 V				±.018 V
	(-) 3 + 20 + 10 + 5 lb.	-1.000 V				±.018 V
	(+) 3 + 20 + 20 lb.	+1.125 V				±.018 V
	(-) 3 + 20 + 20 lb.	-1.125 V				±.018 V
	(+) 3 + 20 + 20 + 5 lb.	+1.250 V				±.018 V
	(-) 3 + 20 + 20 + 5 lb.	-1.250 V				±.018 V
	(+) 3 + 20 + 20 + 10 lb.	+1.375 V				±.018 V
	(-) 3 + 20 + 20 + 10 lb.	-1.375 V				±.018 V
	Positive and Negative Torques for Assy No. 3					
	(+) 3 lb. weight	+.125 V				±.018 V
	(-) 3 lb.	-.125 V				±.018 V
	(+) 3 + 5 lb.	+.250 V				±.018 V
	(-) 3 + 5 lb.	-.250 V				±.018 V
	(+) 3 + 5 + 10 lb.	+.500 V				±.018 V
	(-) 3 + 5 + 10 lb.	-.500 V				±.018 V
	(+) 3 + 20 lb.	+.625 V				±.018 V
	(-) 3 + 20 lb.	-.625 V				±.018 V
	(+) 3 + 20 + 5 lb.	+.750 V				±.018 V
	(-) 3 + 20 + 5 lb.	-.750 V				±.018 V
	(+) 3 + 20 + 10 lb.	+.875 V				±.018 V
	(-) 3 + 20 + 10 lb.	-.875 V				±.018 V
	(+) 3 + 20 + 10 + 5 lb.	+1.000 V				±.018 V
	(-) 3 + 20 + 10 + 5 lb.	-1.000 V				±.018 V
	(+) 3 + 20 + 20 lb.	+1.125 V				±.018 V
	(-) 3 + 20 + 20 lb.	-1.125 V				±.018 V
	(+) 3 + 20 + 20 + 5 lb.	+1.250 V				±.018 V
	(-) 3 + 20 + 20 + 5 lb.	-1.250 V				±.018 V
	(+) 3 + 20 + 20 + 10 lb.	+1.375 V				±.018 V
	(-) 3 + 20 + 20 + 10 lb.	-1.375 V				±.018 V

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

APPENDIX

TABLE II. Detailed functional requirements for Test Set, Guided Weapon AN/DSM-96B (Cont'd).

h. Torsion Bar (P/N's 132AS640-1, 2, 3, 4) check out using SA-A-18038						
Procedure Step No.	Function Tested	Nominal	Measured Values First Run	Measured Values Second Run	Out of Tol	Tolerances
5. (Cont'd)	Positive and Negative Torques for Assy No. 4					
	(+) 3 lb. weight	+.125 V				±.018 V
	(-) 3 lb.	-.125 V				±.018 V
	(+) 3 + 5 lb.	+.250 V				±.018 V
	(-) 3 + 5 lb.	-.250 V				±.018 V
	(+) 3 + 5 + 10 lb.	+.500 V				±.018 V
	(-) 3 + 5 + 10 lb.	-.500 V				±.018 V
	(+) 3 + 20 lb.	+.625 V				±.018 V
	(-) 3 + 20 lb.	-.625 V				±.018 V
	(+) 3 + 20 + 5 lb.	+.750 V				±.018 V
	(-) 3 + 20 + 5 lb.	-.750 V				±.018 V
	(+) 3 + 20 + 10 lb.	+.875 V				±.018 V
	(-) 3 + 20 + 10 lb.	-.875 V				±.018 V
	(+) 3 + 20 + 10 + 5 lb.	+1.000 V				±.018 V
	(-) 3 + 20 + 10 + 5 lb.	-1.000 V				±.018 V
	(+) 3 + 20 + 20 lb.	+1.125 V				±.018 V
	(-) 3 + 20 + 20 lb.	-1.125 V				±.018 V
	(+) 3 + 20 + 20 + 5 lb.	+1.250 V				±.018 V
	(-) 3 + 20 + 20 + 5 lb.	-1.250 V				±.018 V
	(+) 3 + 20 + 20 + 10 lb.	+1.375 V				±.018 V
	(-) 3 + 20 + 20 + 10 lb.	-1.375 V				±.018 V
	RAT Actuator					
6.	Motor Speed	12,000 RPM				+450, -360 RPM
	CAUTION, indicator ON.	2.60 V on DVM (represents 260°F)				±0.13 VDC

*U.S. GOVERNMENT PRINTING OFFICE: 1987 - 505-033-75457

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

INSTRUCTIONS: In a continuing effort to make our standardization documents better, the DoD provides this form for use in submitting comments and suggestions for improvements. All users of military standardization documents are invited to provide suggestions. This form may be detached, folded along the lines indicated, taped along the loose edge *(DO NOT STAPLE)*, and mailed. In block 5, be as specific as possible about particular problem areas such as wording which required interpretation, was too rigid, restrictive, loose, ambiguous, or was incompatible, and give proposed wording changes which would alleviate the problems. Enter in block 6 any remarks not related to a specific paragraph of the document. If block 7 is filled out, an acknowledgement will be mailed to you within 30 days to let you know that your comments were received and are being considered.

NOTE: This form may not be used to request copies of documents, nor to request waivers, deviations, or clarification of specification requirements on current contracts. Comments submitted on this form do not constitute or imply authorization to waive any portion of the referenced document*(s)* or to amend contractual requirements.

(Fold along this line)

(Fold along this line)

DEPARTMENT OF THE ARMY

U.S. ARMY NATICK RESEARCH, DEVELOPMENT
and ENGINEERING CENTER
ATTN: STRNC-ES
Natick, MA 01760-5014

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE $300

NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL
FIRST CLASS PERMIT NO. 12062 WASHINGTON D. C.
POSTAGE WILL BE PAID BY THE DEPARTMENT OF THE ARMY

Commander
Naval Air Systems Command (AIR-51122E)
Washington, DC 20361-5110

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.

STANDARDIZATION DOCUMENT IMPROVEMENT PROPOSAL

(See Instructions – Reverse Side)

1. DOCUMENT NUMBER	2. DOCUMENT TITLE

3a. NAME OF SUBMITTING ORGANIZATION	4. TYPE OF ORGANIZATION *(Mark one)*
	☐ VENDOR
b. ADDRESS *(Street, City, State, ZIP Code)*	☐ USER
	☐ MANUFACTURER
	☐ OTHER *(Specify)*: _____

5. PROBLEM AREAS

a. Paragraph Number and Wording:

b. Recommended Wording:

c. Reason/Rationale for Recommendation:

6. REMARKS

7a. NAME OF SUBMITTER *(Last, First, MI)* – Optional	b. WORK TELEPHONE NUMBER *(Include Area Code)* – Optional
c. MAILING ADDRESS *(Street, City, State, ZIP Code)* – Optional	8. DATE OF SUBMISSION *(YYMMDD)*

DD FORM 82 MAR 1426

PREVIOUS EDITION IS OBSOLETE.

Source: https://assist.dla.mil -- Downloaded: 2026-10-26T04:48Z
Check the source to verify that this is the current version before use.