DETAIL SPECIFICATION SHEET

FUSE BOXES, FEEDER DISTRIBUTION, WITH SWITCHES, TOTALLY ENCLOSED, 125 VOLTS, ALTERNATING CURRENT, SINGLE AND THREE PHASE BUSES, SINGLE AND DOUBLE FEEDER, SINGLE PHASE BRANCHES, 0-30 AMPERE MIDGET FUSES AND SNAP SWITCHES, SYMBOLS 602, 603, 604, 605, 606, 615, 616, 617, 618

This specification is approved for use by all Departments and Agencies of the Department of Defense.

The requirements for acquiring the product described herein shall consist of this specification and MIL-DTL-24646.


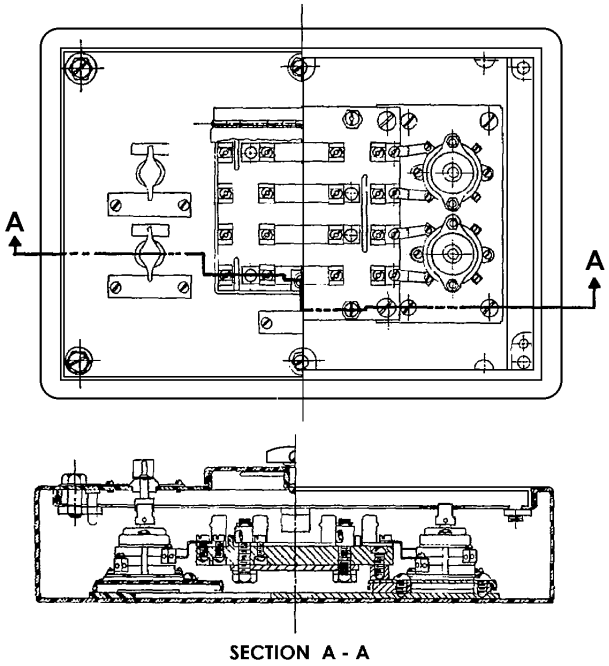


FIGURE 1. Fuse box assembly, typical. Item No. 01, 02, 03, 04, 05, 06, 07, 08, 09 (Symbol 602 shown)

NOTES:
1. Dimensions are in inches.
2. Unless otherwise specified herein, tolerances shall be as follows:
   Two place decimals - plus or minus 0.02.
   Three place decimals - plus or minus 0.005.

DISTRIBUTION STATEMENT A. Approved for public release; distribution is unlimited.


Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:29Z
Check the source to verify that this is the current version before use.

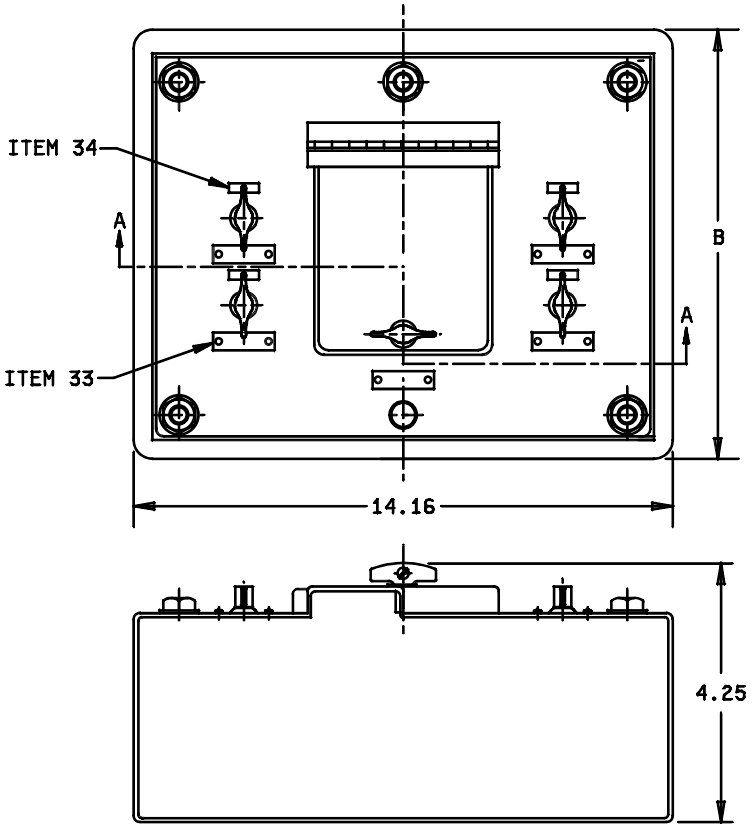

SYMBOL NO	DIMENSIONS (REF)
	B
602	10.16
603	14.16
604	10.16
605	14.16
606	20.19
615	10.16
616	14.16
617	20.16
618	20.16

FIGURE 2. Enclosure, overall dimensions. Item No. 10, 11, 12
(Symbols 602, 603, 604, 605, 606, 615, 616, 617 and 618)

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:29Z
Check the source to verify that this is the current version before use.

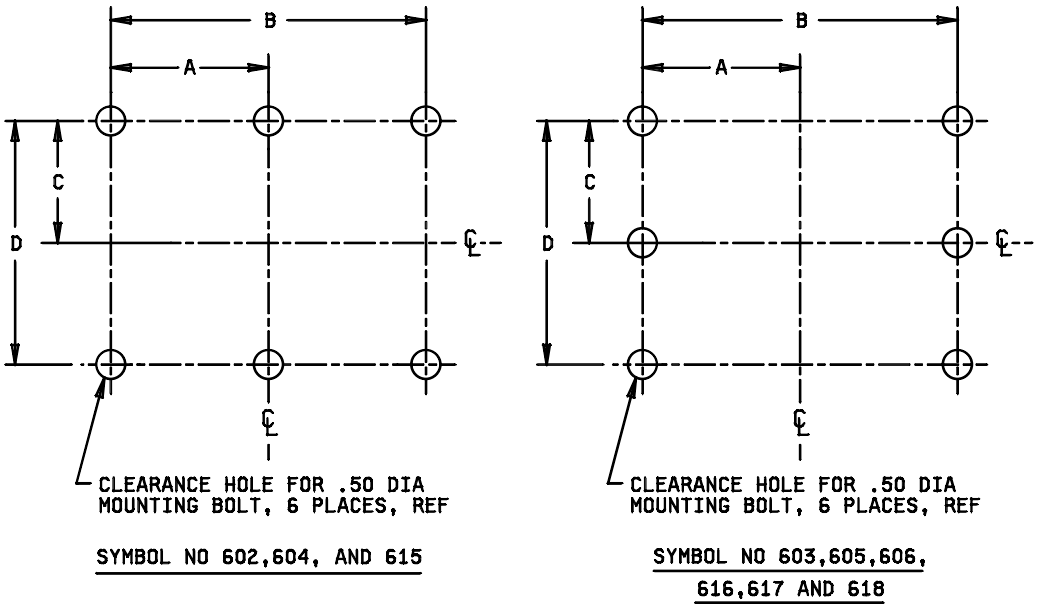

SYMBOL NO	DIMENSIONS			
	A	B	C	D
602	5.00	10.00	4.25	8.50
603	6.25	12.50	5.12	10.25
604	5.00	10.00	4.25	8.50
605	6.25	12.50	5.12	10.25
606	6.25	12.50	8.00	16.00
615	5.00	10.00	4.25	8.50
616	6.25	12.50	5.12	10.25
617	6.25	12.50	8.00	16.00
618	6.25	12.50	8.00	16.00

FIGURE 3. Mounting dimensions, ref.
(Symbols 602, 603, 604, 605, 606, 615, 616, 617 and 618)

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:29Z
Check the source to verify that this is the current version before use.


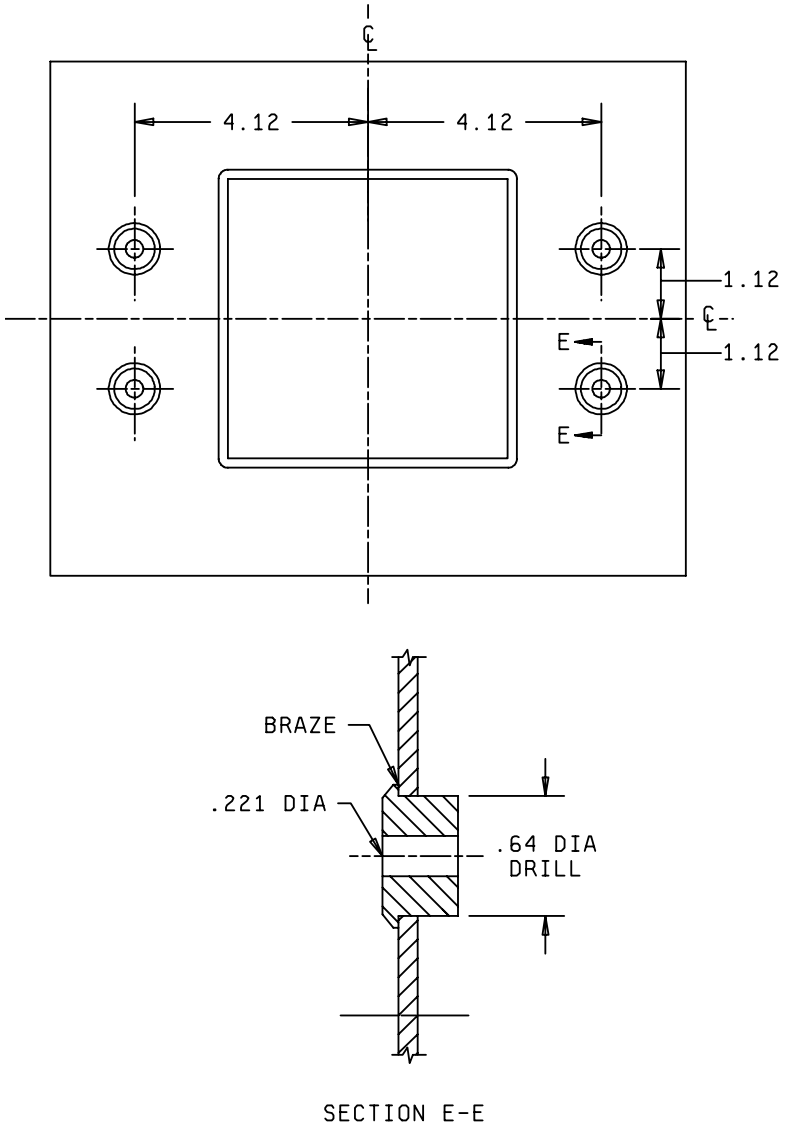


FIGURE 4. Cover assembly, typical.
(Symbols 602, 603, 604, 605, 606, 615, 616, 617 and 618)

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:29Z
Check the source to verify that this is the current version before use.

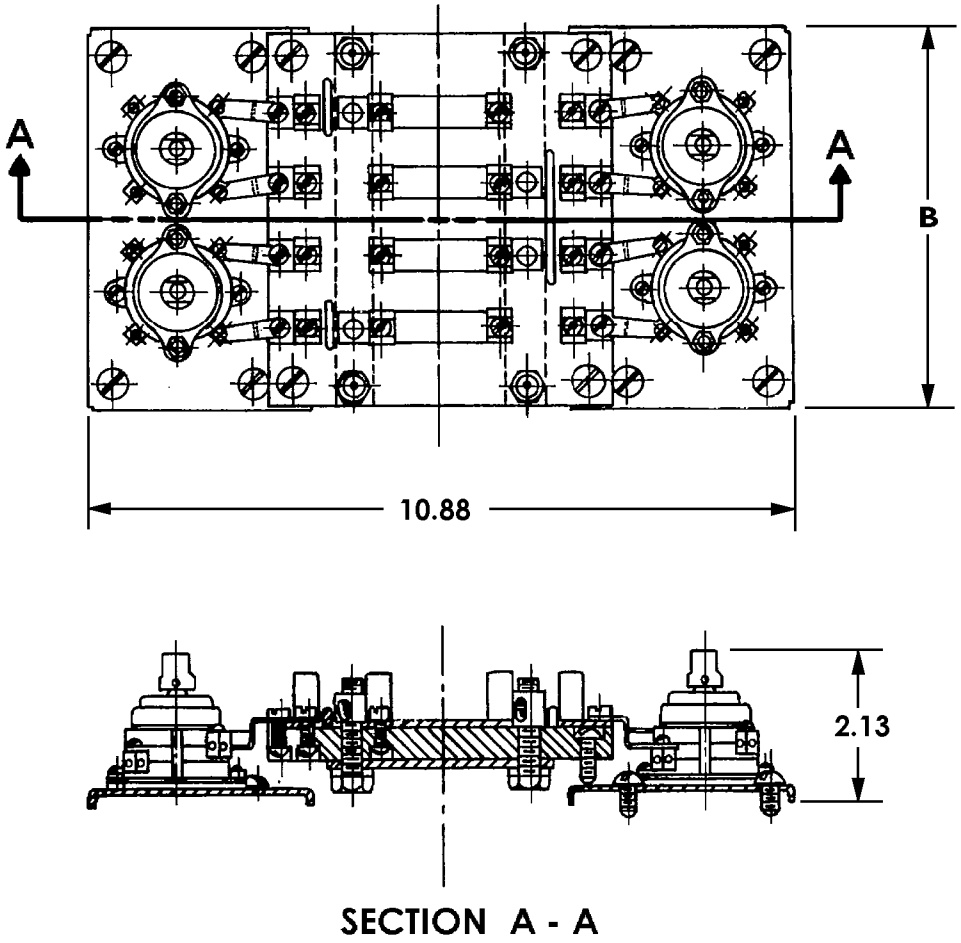


SYMBOL NO	DIMENSIONS B
602	6.00
603	10.88
604	6.00
605	10.88
606	15.19
615	6.00
616	10.88
617	15.19
618	15.19


FIGURE 5. Fuse block, and switch assembly, typical. Item No. 13, 14, 15, 16, 17, 18, 19, 20, 21 (Symbols 602, 603, 604, 605, 606, 615, 616, 617 and 618)

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:29Z
Check the source to verify that this is the current version before use.


A. Four single-phase branches, single feeder (Symbol 602)

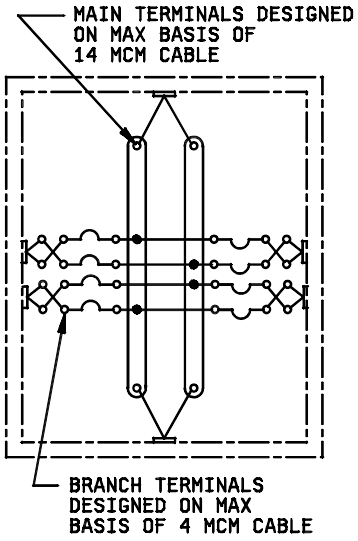

B. Four single-phase branches, double feeder (Symbol 604)

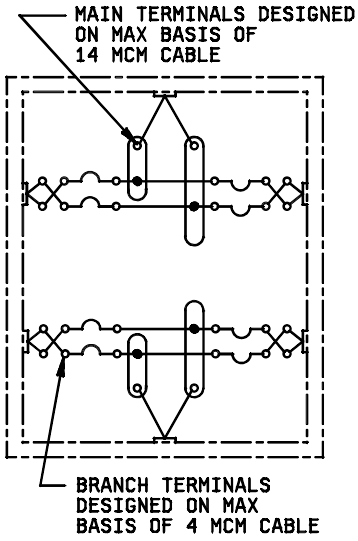

C. Eight single-phase branches, single feeder (Symbol 603)

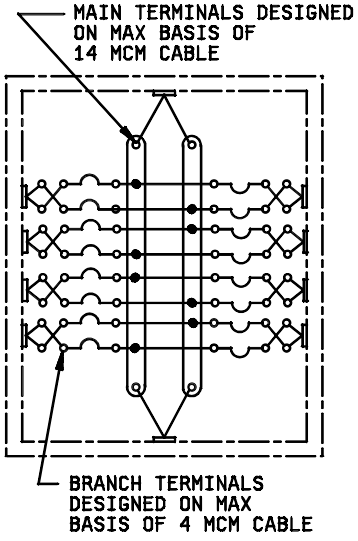

D. Eight single-phase branches, double feeder (Symbol 605)


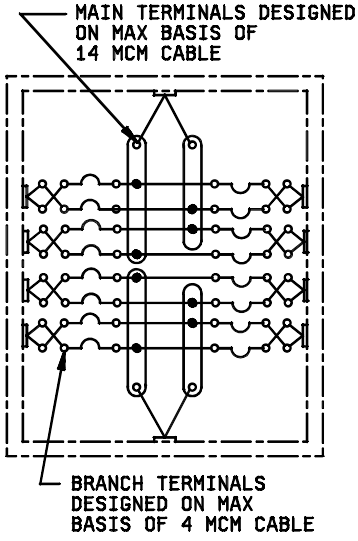



FIGURE 6. Wiring diagrams. Item No. 22, 23, 24, 25, 26, 27, 28, 29, 30


Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:29Z
Check the source to verify that this is the current version before use.

E. Twelve single-phase branches, double feeder (Symbol 606)

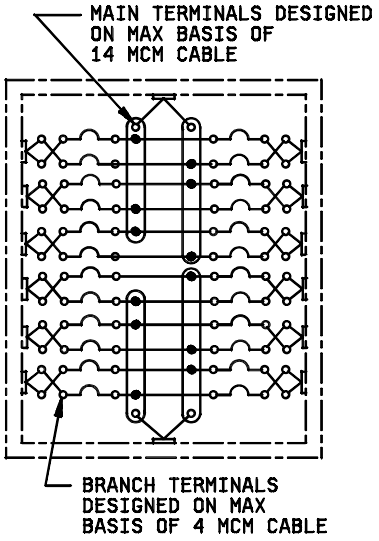

F. Four single-phase branches, single feeder (Symbol 615)

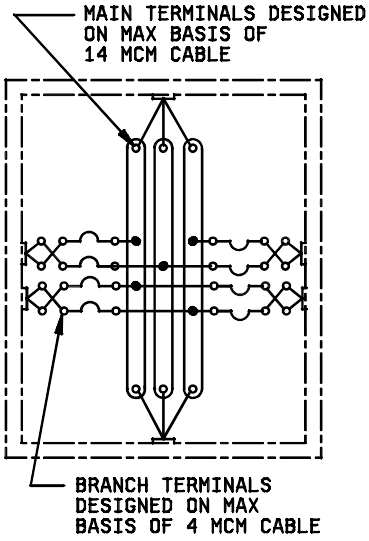

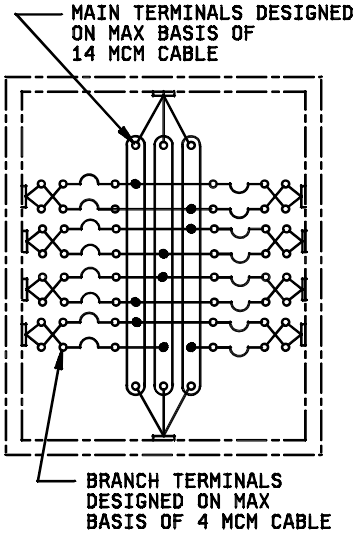


G. Eight single-phase branches, single feeder (Symbol 616)

FIGURE 6. Wiring diagrams. Item No. 22, 23, 24, 25, 26, 27, 28, 29, 30 - Continued.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:29Z
Check the source to verify that this is the current version before use.

H. Twelve single-phase branches, single feeder (Symbol 617)

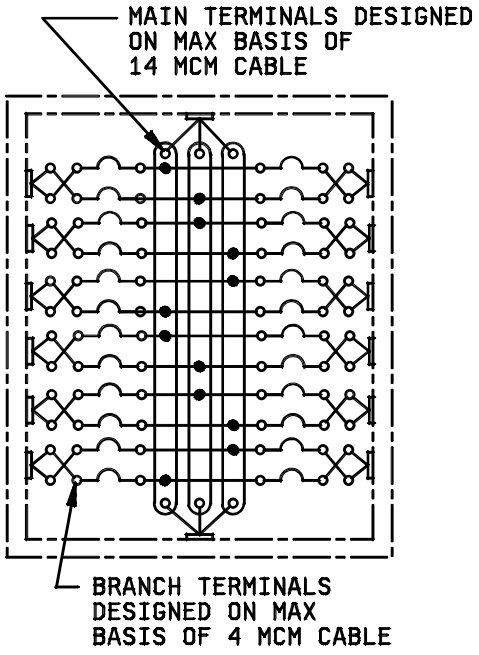

I. Twelve single-phase branches, single feeder (Symbol 618)

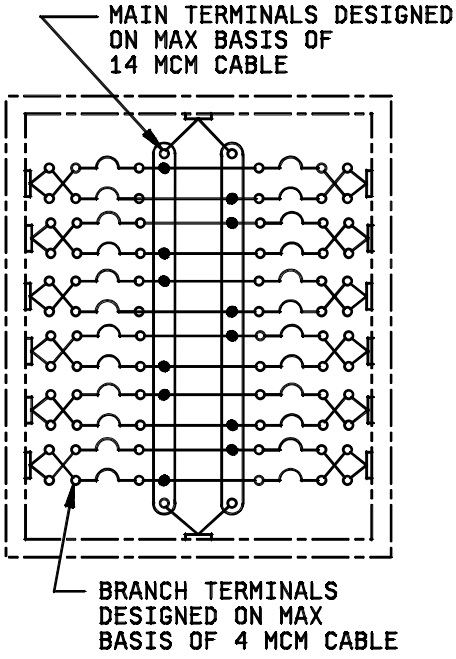


FIGURE 6. Wiring diagrams. Item No. 22, 23, 24, 25, 26, 27, 28, 29, 30 - Continued.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:29Z
Check the source to verify that this is the current version before use.

REQUIREMENTS

Symbol numbers: See table I.

Design:

Electrical rating: 125 volts alternating current, 0-10 ampere, 60 hertz.
Dimensions and configuration: See figures 1, 2, 3 and 5.
Wiring diagrams: See figure 6.
Mounting dimensions: See figure 3.
Degree of enclosure: Totally enclosed.
Designation and marking: See MIL-DTL-24646.
Parts: The parts listed in table II and specified in MIL-DTL-24646 shall be used in the construction of the fuse boxes specified herein.

General information:
Military part numbers and general information are as specified in table I.

TABLE I. Military part numbers and general information.

Military part no.	Symbol no.	Weight in pounds	No. of circuits	Feeder MCM	Branch MCM	Fuse size	Bus bar size	Supersedes	
								Drawing no.	Type
M24646/6-001	602	18.8	4	14	4	midget 0-10A	0.62 x 0.12	9-S-5459-L	D-31A
M24646/6-002	603	21.5	8	14	4	midget 0-10A	0.62 x 0.12	9-S-5460-L	D-33A
M24646/6-003	604	18.8	4	14	4	midget 0-10A	0.62 x 0.12	9-S-5459-L	D-31B
M24646/6-004	605	21.5	8	14	4	midget 0-10A	0.62 x 0.12	9-S-5460-L	D-33B
M24646/6-005	606	29.0	12	14	4	midget 0-10A	0.62 x 0.12	9-S-5461-L	D-61B
M24646/6-006	615	14.5	4	14	4	midget 0-10A	0.62 x 0.12	9-S-4759-L	D-62A
M24646/6-007	616	20.8	8	14	4	midget 0-10A	0.62 x 0.12	9-S-5196-L	D-21A
M24646/6-008	617	30.2	12	14	4	midget 0-10A	0.62 x 0.12	9-S-4761-L	D-17A
M24646/6-009	618	29.0	12	14	4	midget 0-10A	0.62 x 0.12	9-S-5461-L	D-61A

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:29Z
Check the source to verify that this is the current version before use.

TABLE II. Parts list.

Item no. 1/	Description	QTY M /-									Material/ specification	Remarks
		001	002	003	004	005	006	007	008	009		
01	Fuse box assembly (sym 602)	-									MIL-DTL-24646/6	See fig. 1
02	Fuse box assembly (sym 603)		-								MIL-DTL-24646/6	See fig. 1
03	Fuse box assembly (sym 604)			-							MIL-DTL-24646/6	See fig. 1
04	Fuse box assembly (sym 605)				-						MIL-DTL-24646/6	See fig. 1
05	Fuse box assembly (sym 606)					-					MIL-DTL-24646/6	See fig. 1
06	Fuse box assembly (sym 615)						-				MIL-DTL-24646/6	See fig. 1
07	Fuse box assembly (sym 616)							-			MIL-DTL-24646/6	See fig. 1
08	Fuse box assembly (sym 617)								-		MIL-DTL-24646/6	See fig. 1
09	Fuse box assembly (sym 618)									-	MIL-DTL-24646/6	
10	Enclosure (10 x 14 x 3)	1		1			1				M24142/17-001	See fig. 2
11	Enclosure (14 x 14 x 3)		1		1			1			M24142/20-005	See fig. 2
12	Enclosure (14 x 20 x 3)					1			1	1	M24142/20-007	See fig. 2
13	Fuse block and switch assembly	1									MIL-DTL-24646/6	See fig. 5
14	Fuse block and switch assembly		1								MIL-DTL-24646/6	See fig. 5
15	Fuse block and switch assembly			1							MIL-DTL-24646/6	See fig. 5
16	Fuse block and switch assembly				1						MIL-DTL-24646/6	See fig. 5
17	Fuse block and switch assembly					1					MIL-DTL-24646/6	See fig. 5
18	Fuse block and switch assembly						1				MIL-DTL-24646/6	See fig. 5
19	Fuse block and switch assembly							1			MIL-DTL-24646/6	See fig. 5
20	Fuse block and switch assembly								1		MIL-DTL-24646/6	See fig. 5
21	Fuse block and switch assembly									1	MIL-DTL-24646/6	See fig. 5
22	Wiring diagram	1									MIL-E-2036	See fig. 6
23	Wiring diagram		1								MIL-E-2036	See fig. 6
24	Wiring diagram			1							MIL-E-2036	See fig. 6
25	Wiring diagram				1						MIL-E-2036	See fig. 6
26	Wiring diagram					1					MIL-E-2036	See fig. 6
27	Wiring diagram						1				MIL-E-2036	See fig. 6
28	Wiring diagram							1			MIL-E-2036	See fig. 6
29	Wiring diagram								1		MIL-E-2036	See fig. 6
30	Wiring diagram									1	MIL-E-2036	See fig. 6
31	Fuse clip	16	32	16	32	48	18	32	48	48	AA55507/1-04	N/A
32	Snap switch	4	8	4	8	12	4	8	12	12	M15291/3-002	Type 1SR2A4
33	Information plate	4	8	4	8	12	4	8	12	12	Brass, ASTM B36/B36M B121/B121M	See figure 2
34	Switch information plate 2/	4	8	4	8	12	4	8	12	12	Brass, ASTM B36/B36M B121/B121M	See figure 2
35	Identification plate	1	1	1	1	1	1	1	1	1	Brass, ASTM B36/B36M B121/B121M	N/A

1/ Item numbers after the figure titles are the same as the item numbers shown in this table.

2/ As an option, the switch information (“OFF”) may be metal stamped onto the covers in lieu of being placed on an information plate.

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:29Z
Check the source to verify that this is the current version before use.

Custodian:
Navy - SH
DLA - CC

Preparing activity:
DLA - CC

(Project 6110-0444)

Source: https://assist.dla.mil -- Downloaded: 2026-10-20T00:29Z
Check the source to verify that this is the current version before use.