MILITARY SPECIFICATION

TEST SET, WEAPON ELECTRICAL WIRING SYSTEMS AN/AWM-13A

1. SCOPE. This specification covers the requirements for one type of test set designated as the AN/AWM-13A hereafter referred to as the test set.

2. APPLICABLE DOCUMENTS. The following documents of the issue in effect on the date of invitation for bids shall form a part of this specification to the extent specified herein.

SPECIFICATIONS

Military

MIL-I-6181	Interference Control Requirements, Aircraft Equipment
MIL-M-8090	Mobility Requirements, Ground Support Equipment, General Specification For
MIL-E-17555	Electronic and Electrical Equipment and Associated Repair Parts, Preparation for Delivery Of
MIL-T-21200	Test Equipment for Use with Electronic and Fire Control Systems, General Specification For
MIL-D-70327	Drawings, Engineering and Associated Lists

DRAWINGS

Air Force

62D14310-3	Resistor Assembly MX-7304/AWM-13A
62D14320	Remote Control Box
62C14351	Cable Assembly, Remote Control, Electrical (W1)
62C14352	Cable Assembly, Power, Electrical (W2)
62C14353	Cable Assembly, Adapter, Power (W3)
64D13076	Cable Assembly, Special Purpose, Electrical, Branched CX-10065/AWM-13
64D13077	Cable Assembly, Special Purpose, Electrical, Branched CX-10066/AWM-13
64D13078	Cable Assembly, Special Purpose, Electrical, Branched CX-10067/AWM-13
64D13079	Cable Assembly, Special Purpose, Electrical, Branched CX-10068/AWM-13

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

64D13080	Cable Assembly, Special Purpose, Electrical, Branched CX-10069/AWM-13
64D13081	Cable Assembly, Special Purpose, Electrical, Branched CX-10070/AWM-13
65E13203	Control, Electronic Command C-8004/AWM-13A
65J14251	Matrix, Code KY-594/AWM-13A
65E14253	Control, Electronic Command C-7056/AWM-13A
65J14254	Controller, Comparator-Programmer C-7057/AWM-13A
65J14255	Programmer, Test Set C-7055/AWM-13A
65E14256	Power Supply PP-4560/AWM-13A
65J14257	Comparator, Signal CM-344/AWM-13A
65J14258	Test Set, Weapon Electrical Wiring Systems AN/AWM-13A

STANDARDS

Military

MIL-STD-129	Marking for Shipment and Storage
MIL-STD-130	Identification Marking of U. S. Military Property
MIL-STD-810	Environmental Test Methods for Aerospace and Ground Equipment
MIL-STD-831	Test Reports, Preparation Of

TECHNICAL ORDERS

11N-T5015A-2	Technical Manual, Operation and Maintenance Instructions for Test Set, Weapon Electrical Wiring Systems AN/AWM-13A
11N-T5015A-4	Technical Manual, Maintenance Instructions, AN/AWM-13A Test Set

(Copies of documents required by contractors in connection with specific procurement functions should be obtained from the procuring activity or as directed by the contracting officer.)

3. REQUIREMENTS

3.1 PREPRODUCTION. This specification makes provisions for pre-production testing.

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

3.2 COMPONENTS. The test set shall consist of the following major components:

COMPONENT	AIR FORCE DRAWING NUMBER	QUANTITY
Resistor Assembly MX-7304/AWM-13A	62D14310-3	1
Remote Control Box	62D14320	1
Cable Assembly, Remote Control, Electrical (W1)	62C14351	1
Cable Assembly, Power, Electrical (W2)	62C14352	1
Cable Assembly, Adapter, Power (W3)	62C14353	1
Control, Electronic Command C-8004/AWM-13A	65E13203	1
Matrix, Code KY-594/AWM-13A	65J14251	1
Control, Electronic Command C-7056/AWM-13A	65E14253	1
Controller, Comparator-Programmer C-7057/AWM-13A	65J14254	1
Programmer, Test Set C-7055/AWM-13A	65J14255	1
Power Supply PP-4560/AWM-13A	65E14256	1
Comparator, Signal CM-344/AWM-13A	65J14257	1
Printer	Hewlett Packard J20565A or equal	1

3.3 GENERAL SPECIFICATIONS. The requirements of MIL-T-21200 form a part of this specification. In the case of conflict between MIL-T-21200 and this specification, the requirements of this specification shall apply.

3.4 DESIGN AND CONSTRUCTION

3.4.1 TEST SET. The test set shall be designed and constructed in conformance to drawing number 65J14258 and subsidiary drawings.

3.4.2 COMPONENTS. Components of the test set shall be designed and fabricated in conformance to their individual engineering drawings.

3.4.3 WEIGHT. Weight of the test set shall not exceed 750 pounds.

3.4.4 EXTERNAL POWER REQUIRED. The test set shall be capable of operation from the following primary power:

a. 115 vac ± 10V, 400 cps ± 20 cps

b. 115 vac ± 10V, 60 cps ± 4 cps

Source: https://assist.dla.mil -- Downloaded: 20261O-21T15:33Z
Check the source to verify that this is the current version before use.

3.4.5 BASIC CONTROLS

3.4.5.1 TEST SET. The following basic controls shall be provided on the control panel of the test set:

a. Power ON-OFF switch.

b. Tape Transport START button (test sequence START).

c. Tape Transport STOP button (test sequence STOP).

d. Tape FORWARD-REVERSE switch.

e. Four test selector knobs.

f. Test mode selector.

3.4.5.2 REMOTE. The following controls shall be repeated on the remote control box:

a. Tape Transport START button.

b. Tape FORWARD-REVERSE switch.

c. Test set power OFF button.

3.4.6 INDICATORS

3.4.6.1 TEST SET. The following indicators shall be provided on the control panel of the test set:

a. Test number readout (numerical).

b. Power ON light (Green).

c. Ready light (Blue).

d. Fault light (Red).

e. Under temperature light (Amber).

3.4.6.2 REMOTE CONTROL BOX. The following indicators shall be provided on the remote control box:

a. Fault light (Red).

b. Ready light (Blue).

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

3.4.6.3 SUBSIDIARY INDICATORS. Each circuit breaker shall be of the pop-out type. Eight circuit breakers of this type shall be provided as follows:

a. Test set power, 15 amp.

b. Printer and heater, 15 amp.

c. 240V supply, 1 amp.

d. 48V supply, 5 amp.

e. 28V supply, 3 amp.

f. AC supply, 0.5 amp.

g. Comparator, Signal CM-344/AWM-13A, 0.5 amp.

Location and installation shall be in conformance to the design drawings.

3.4.7 INTERCHANGEABILITY. Parts functionally and dimensionally interchangeable shall be identified by the same part number. When parts are not interchangeable, the criteria listed in MIL-D-70327 shall apply and new drawings prepared as required.

3.5 PERFORMANCE

3.5.1 GENERAL. The AN/AWM-13A Test Set shall provide automatic testing of active and passive electrical circuits as specified herein.

3.5.2 MOBILITY. The test set shall have Type I, Class I mobility as specified in MIL-M-8090.

3.5.3 FUNCTIONS. The AN/AWM-13A Test Set shall be capable of performing the following tests automatically, through the use of punched tape controls. NO-GO indication shall be provided for each out-of-tolerance measurement.

3.5.3.1 VOLTAGE. Measurement of average or instantaneous voltages over the range of 10 mv to 1000 volts, DC (either polarity) and 50 cps to 5 KC, between any two test points shall be possible to an accuracy of $\pm$ 3 percent or 1 mv, whichever is larger.

3.5.3.2 RESISTANCE. Measurement of bilateral or unilateral resistance between any two test points over a range of 0.5 ohms to 25 megohms shall be possible to an accuracy of $\pm$ 3 percent or 0.5 ohms, whichever is larger. Maximum test current shall be limited to 10 ma. Internal resistance of the test set shall be 1.5 $\pm$ 0.5 ohms.

Source: https://assist.dla.mil -- Downloaded: 20260-21T15:33Z
Check the source to verify that this is the current version before use.

3.5.3.3 INSULATION RESISTANCE. Measurement of DC insulation resistance between any one of the test points and all other test points (including cases where voltages exist on several of these points) shall be possible over the range of 5 to 25 megohms to an accuracy of 5 percent or 1.5 megohms, whichever is larger.

3.5.3.4 HIGH POTENTIAL. Measurement of leakage resistance over a range of 5 to 200 megohms between any two test points or between any one test point and all other test points shall be provided with excitation voltages of 500 to 1000 VDC. Provisions shall also be made for connecting an external voltage source. Accuracy of this measurement shall be ± 25 percent or 1 megohm, whichever is larger.

3.5.3.5 TIME INTERVAL. Measurements of the time interval between two functions occurring on any two test points when measured with respect to system common ground, or the time interval of a repetitive function on one test point with respect to system ground, shall be provided. Initiation and termination of the timing cycle shall be controlled by sensing the voltage level and polarity of slope of the monitored function. Ranges of interval measurement shall be 10 to 100 msec, 0.1 to 1 second, and 1 to 10 seconds. Accuracy of delay measurement shall be 5 percent or 1 msec, whichever is larger.

3.5.3.6 TIME DELAY. Capability of delaying the time between initiation of test conditions and measurement shall be provided under control of the programmer. Delays of 0.5 sec to 10 minutes shall be provided.

3.5.4 ADDITIONAL CAPABILITIES. In addition to the performance requirements outlined above, the following capabilities shall be provided to add to the versatility of the test set.

3.5.4.1 LOADS. The following resistive loads shall be provided for loading the monitored function under the control of the Programmer, Test Set C-7055/AWM-13A.

a. 300K, 1 watt

b. 40K, 1 watt

c. 7K, 10 watt

d. 1K, 40 watt

e. 500 ohm, 25 watt

f. 25 ohm, 300 watt

g. 6 ohm, 300 watt

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

3.5.5 COMMAND POINTS. Provisions shall be incorporated for furnishing the following voltages as excitation to the system under test under the control of the programmer.

a. 28 volts dc at 5 amps

b. ± 6.3 volts ac at 200 va

c. ± 12.6 volts ac at 200 va

d. 0 to ± 120 VAC in 5 volts ac increments at 200 va

3.5.6 COMMAND LOGIC. Provisions shall be incorporated for connecting the stimuli described under "COMMAND POINTS" through terminal strips, for wiring versatility, to latching relays in order to apply power and control functions to the equipment under test. A total of 60 relays with individual "set" and "reset" controls shall be provided for external control and monitoring. Provisions for connecting an external 28 vdc, 20 amp source to each command unit shall be provided.

3.5.7 FAULT INDICATIONS. Tests which produce an out-of-tolerance result shall be immediately indicated by visual readout on both the Test Set Control panel and on the Remote Control Box. Further, the number of the test producing the out-of-tolerance result shall be printed out by the Printer for future reference. When in the Automatic mode, the fault light shall be energized at the first fault and shall remain lit through the test sequence. In the Semi-Automatic mode, the light shall be deenergized when the test set is commanded to proceed with the test sequence by depressing the Start button.

3.5.8 TEST MODE CONTROLS. A test mode selector shall provide for selection of one of the following five modes of operation:

a. Automatic - In this mode, the test set shall progress through the sequence of tests commanded by the tape, stopping only when commanded by the tape to allow the operator to make adjustments to the system under test. The Fault light shall light at the first out-of-tolerance test and shall remain lit throughout the subsequent sequences of tests. The Printer shall record the test number of each out-of-tolerance test throughout the entire test sequence.

b. Semi-Automatic - In this mode, the testing shall progress as in the Automatic mode excepting (a) that testing shall stop upon encountering an out-of-tolerance result and (b) the Fault light shall be turned off when the command to proceed again is given.

c. Manual - In this mode, the tests shall be performed in the sequence commanded by the tape excepting that the tape shall be advanced one test at a time by the operator by depressing the START button.

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

d. External - In this mode, it shall be possible to monitor, at a set of meter jacks on the control panel, the actual reading of the measurement being monitored by the test set.

e. Search - In this mode, the test set shall proceed to the test number pre-selected by the operator by setting the TEST NUMBER SELECT knobs. No testing is accomplished in this mode.

3.6 ENVIRONMENTAL REQUIREMENTS. The test set shall be capable of proper operation during or after, as applicable, being subjected to the following environmental conditions:

a. High Temperatures:

(1) Operational Ambient, 71°C (160°F)

(2) Storage, 100°C (212°F)

b. Low Temperature, Storage -54°C (-65°F), Operational -25°F

c. Humidity incident to storage or use in damp climates.

d. Altitude to 50,000 feet.

e. Salt Fog likely to be encountered during storage, transportation or use near a large body of salt water.

f. Rain incident to use during inclement weather.

g. Sand and dust incident to use in desert areas.

h. Shock incident to accidental rough handling.

i. Vibration incident to transportation.

j. Radio frequency interference incident to use in the vicinity of transformers, and like electrical installations or other electronic equipment.

3.7 OPERATIONAL RELIABILITY. The test set shall have an MTBF (Mean time before failure) of 150 hours continuous operation.

3.8 IDENTIFICATION OF PRODUCT. The test set, parts, assemblies and accessories shall be marked for identification in accordance with MIL-STD-130.

3.9 WORKMANSHIP. Workmanship shall be in accordance with MIL-T-21200.

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

4. QUALITY ASSURANCE PROVISIONS

4.1 CLASSIFICATION OF TESTS. Inspection and testing of the test set shall be classified as follows:

a. Preproduction tests

b. Acceptance tests

4.2 PREPRODUCTION TESTING

4.2.1 PREPRODUCTION TEST SAMPLES. The preproduction test samples shall be representative of the production test set. They shall be tested at a laboratory designated by the procuring activity, or, when so stated in the contract, at the contractor's plant under the supervision of the procuring activity.

4.2.1.1 PREPRODUCTION TEST REPORT. In the event that preproduction testing is performed at the contractor's plant, the contractor shall, after completion of the preproduction tests, prepare a preproduction test report in accordance with MIL-STD-831 and furnish three complete copies of the report to the procuring activity.

4.2.2 PREPRODUCTION TESTS. Preproduction tests shall consist of all tests described in "4.5 TEST METHODS."

4.3 ACCEPTANCE TESTS. Acceptance tests shall consist of the following individual tests:

a. Examination of product

b. Conformance to drawings

c. Calibration tests

d. Function tests

4.3.1 DEFECTS IN ITEMS ALREADY ACCEPTED. The investigation of a test failure could indicate that defects may exist in items already accepted. If so, the contractor shall fully advise the procuring activity of all defects likely to be found and methods of correcting them.

4.4 TEST CONDITIONS. Test conditions shall be as described for each specific test.

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

4.5 TEST METHODS

4.5.1 TEST EQUIPMENT. The following equipment shall be used in testing the test set.

	ITEM NAME	DESCRIPTION
a.	Multimeter	Triplett 630A or equal
b.	Resistance Bridge	Industrial Instrument RN-1 or equal
c.	Audio Oscillator	Hewlett Packard 200 CD or equal
d.	Oscilloscope	Tektronix 545A or equal
e.	Time Mark Generator	Tektronix 180A or equal
f.	Square Wave Generator	Temco 401-00663 or equal
g.	Differential VTVM (Vacuum Tube Volt Meter)	John Fluke 803 or equal
h.	DC Voltage Standard	Kintel 301 or equal
i.	Resistor Assembly MX-7304/AWM-13A	Conforming to Appendix III
j.	Self-Test Tape	Prepared in accordance with Appendix II
k.	Life Test Tape	Programmed in accordance with Appendix IV
l.	Cable Assemblies, Special Purpose, Electrical, Branched	Conforming to drawing numbers 64D13076 through 64D13081
m.	Decade Resistor	General Radio 1432-M or equal
n.	Decade Resistor	General Radio 1432-P or equal
o.	Resistor	3 megohm $\pm$ 0.5 percent
p.	Resistor	4 megohm $\pm$ 0.5 percent
q.	Resistor	5 megohm $\pm$ 0.5 percent

4.5.2 PREPARATION FOR TESTS. Except when otherwise specified in a specific test, the following shall be performed prior to testing.

a. TEST TAPE INSTALLATION

Step 1 - Turn off power to the unit
Step 2 - Loosen the control unit fasteners and extend the unit from the test set
Step 3 - Place the self test tape on the reels with the silver side up and the drive holes on the tape on the same side of the reel as the key holes in the spools.

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

b. SWITCH POSITION. Prior to performing any operational tests, the following controls and switches shall be positioned as indicated:

Power	OFF
28 VDC Supply CB	OPEN
48 VDC Supply CB	OPEN
240 VDC Supply CB	OPEN
Heater-Printer CB	OPEN
T/S Power CB	OPEN
Overload CB	OPEN
Comparator, Signal CM-344/AWM-13A	OPEN

c. INTERCONNECTION

Step 1 - Connect the test cable to the Test Set using the following schedule:

TEST CABLE CONNECTOR NUMBER	TEST SET CONNECTOR NUMBER
J101	J101
J102	J102
J103	J103
J104	J104
J105	J105
J106	J106
1J206	1J206
2J206	2J206

4.5.3 EXAMINATION OF PRODUCT. Each test set shall be examined visually to determine compliance with all requirements of this specification for which tests are not specified. Failure to meet these requirements shall be cause for rejection.

4.5.4 CONFORMANCE TO DRAWINGS. Each test set shall be inspected to determine compliance to engineering and subsidiary drawings, and all specifications and standards referenced therein. Failure to conform to these criteria shall be cause for rejection.

4.5.5 PREFUNCTIONAL TESTS. The Prefunctional Tests shall be performed on each AN/AWM-13A Test Set prior to performance of the Functional Tests. The Prefunctional Tests shall consist of the following continuity and resistance measurements made with the multimeter. Leave controls in last condition specified until next change.

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

	CONDITIONS	FROM	TO	INDICATION
a.	All Switches and Breakers OFF and only Remote Control Cable and box connected.	J901-C	Chassis	1 ohm or less
			J901-D	100K ohm or more
			J901-B	100K ohm or more
			J901-A	100K ohm or more
			Ground Lug	1 ohm or less
b.	Connect Power Cable W2.	P1-Grd	Ground Lug	1 ohm or less
		P1-Hi	Ground Lug	100K ohm or more
		P1-lo	Ground Lug	100K ohm or more
		P1-lo	P1-Hi	100K ohm or more
c.	T/S Power Breaker ON.	P1-Hi	P1-Low	100K ohm or more
d.	PRINTER and HTR Breaker ON.	P1-Hi	P1-Low	100K ohm or more
e.	All Circuit Breakers ON.	P1-Hi	P1-Low	100K ohm or more
		P1-Hi	P1-Grd	100K ohm or more
f.	Printer POWER switch ON.	P1-Hi	P1-Low	100K ohm or more

Indications other than those specified above shall be cause for rejection.

4.5.6 CALIBRATION TEST. Each test set shall be calibrated as follows:

a. Perform the POWER ON tests of the functional test.

b. Install the Self-Test Tape. Attach Cable W2 to power. Attach CX-10066/AWM-13 to J201 on C-7056/AWM-13A. With the MODE Switch set to the SEARCH position and the TEST NUMBER switches set to the test number 0001, press the START switch to search to the test number selected. Close the Comparator, Signal CM-344/AWM-13A circuit breaker. Allow a five minute stabilization.

c. In the MANUAL MODE advance with the START switch set to test number 0002. Pull the CM-344/AWM-13A from the console on its slides.

WARNING: Care shall be taken tc avoid contact with interior circuits carrying up to 1000 VDC

d. 30 V POWER SUPPLY CALIBRATION. Check for 30 $\pm$ 0.3 VDC from A608-J4 (+) to A608-J3 (-) in the CM-344/AWM-13A with the Differential VTVM. If the voltage is out-of-tolerance, adjust by means of the screw driver adjustment located in the base of Power Supply A614 which is reached from the botton side of the CM-344/AWM-13A chassis.

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the currentversion before use.

e. REFERENCE VOLTAGE CALIBRATION. Check for 3 ± .003 VDC from A608-J5 (+) to A608-J3 (-) with the Differential VTVM. If the voltage is out-of-tolerance, set it to the correct value by means of screw driver adjustment potentiometer R8 on A608.

f. AC AMPLIFIER BALANCE. Check the wave form from A607-J1 (+) to A608-J3 (-) with the oscilloscope. The correct waveform is a full wave rectified square wave with the positive peak of each half cycle of equal amplitude. If the two half cycles are not balanced in amplitude, adjust by means of screw driver adjustment potentiometer R11 on A607.

g. AC MEASUREMENT CALIBRATION. Attach CX-10065/AWM-13 cable to J101. Advance test tape to test number 0036. Apply 4.0 V rms at 400 cps from oscillator to J4 (hi) and J5 (lo) on cable CX-10065/AWM-13. Measure the voltage with the Differential VTVM. In the Manual Mode, step into test number 0037. Increase the input to 4.54 V rms. Check the condition of fault lamp. If the lamp is on, turn potentiometer R12 on A607 counterclockwise until lamp is out. With the fault lamp out, turn R12 on A607 very slowly clockwise until the lamp just comes on. This is a critical adjustment. Repeat procedure as many times as necessary to determine that the potentiometer setting is always the same and the exact trip level has been found. Remove the input from J4 and J5 on CX-10065/AWM-13.

h. DC MEASUREMENT CALIBRATION. Reverse test tape to test number 0024. Apply 4.0 VDC to J4 (+) and J5 (-) on cable CX-10065/AWM-13. Measure the voltage with the Differential VTVM. In the Manual Mode, step into 0025. Increase the input to 4.58 VDC. Check the condition of the fault lamp. If the lamp is on, turn potentiometer R13 on A607 counterclockwise until lamp is out. With the fault lamp out, turn R13 on A607 very slowly clockwise until the lamp just comes on. This is a critical adjustment. Repeat procedure as many times as necessary to determine that the potentiometer setting is always the same and the exact trip level has been found. Remove the input from J4 and J5 on CX-10065/AWM-13.

i. (1) RESISTANCE MEASUREMENT CALIBRATION. Advance test tape to test number 0044. Apply 34.0 ohms from J4 to J5 on cable CX-10065/AWM-13. In Manual Mode, step into test number 0045. Check the condition of the fault lamp. If the lamp is off, turn the voltage adjust potentiometer on power supply A613 counterclockwise until lamp is on. With the fault lamp on, turn potentiometer clockwise until the lamp just goes out. This is a critical adjustment. Step into test number 0045 from 0044 numerous times to assure that the exact trip level has been found. Remove the input from J4 and J5 on CX-10065/AWM-13.

(2) Advance test tape to test number 0060. Apply 4.0 megohm from J4 to J5 on cable CX-10065/AWM-13. In Manual Mode, step into test number 0061. Increase input until fault lamp lights.

Source: https://assist.dla.mil -- Downloaded: 20260-21T15:33Z
Check the source to verify that this is the current version before use.

Repeat this several times to assure that the exact trip point has been determined. This value must be between 4.0 - 4.3 megohms. If the trip point does not all within these limits, go back to test number 0045 and recalibrate this such that both conditions are met. When conditions in this paragraph are satisfied, disconnect the input from J4 to J5 on cable CX-10065/AWM-13.

j. TIME INTERVAL CALIBRATION. Search to test number 0005. In MANUAL MODE advance with the start switch into test number 0006. With the Differential VTVM, there shall be + .2 ± .02 VDC from A611-J1 (+) to A608-J3 (-). If the voltage is wrong, adjust by means of screw driver adjustment potentiometer R19 on A611. Connect the PULSE #2 + output of the square wave generator to J4 and J5 on cable CX-10065/AWM-13 and the ground of the square wave generator to the GROUND lug on the AN/AWM-13A. Connect power to the square wave generator as indicated on the panel.

k. TEN SECOND RANGE CALIBRATION. At test number 0003 and in MANUAL MODE advance with the START switch into test number 0004. Place PULSE switch on the square wave generator to OFF. Apply the "5 sec" output of the time mark generator to the PULSE INPUT of the square wave generator. Place the PULSE switch in RESET momentarily and then place it in the ON position. With the voltage from A611-J1 (+) to A608 (-) monitored with the Differential VTVM, the voltage shall rise to 10 ± .15 VDC and stop. Make the measurement quickly as it will decay with time. If voltage requires adjustment, use screw driver adjustment potentiometer R3 on A610. To increase the voltage on the next time interval, turn R3 clockwise and counter-clockwise to decrease voltage. After adjustment, repeat the 10 second range calibration as many times as required to get the voltage within tolerance.

l. ONE SECOND RANGE CALIBRATION. In MANUAL MODE advance from test number 0004 to 0005 with the START switch while the PULSE switch on the square wave generator is OFF. Apply the "500 msec" output of the time marker generator to the PULSE INPUT of the square wave generator. Place the PULSE switch momentarily in RESET and then ON. The voltage from A611-J1 (+) to A608 (-) shall rise to 10 (±) .15 VDC. If voltage is out-of-tolerance, use same adjustment procedure as in 10 second range calibration with R2 on A610.

m. TENTH SECOND RANGE CALIBRATION. In MANUAL MODE advance from test number 0005 to 0006 with the START switch while the PULSE switch on the square wave generator is OFF. Apply the "50 msec" output of the time marker generator to the PULSE INPUT of the square wave generator. Place the PULSE switch momentarily in RESET and then ON. The voltage from A611-J1 (+) to A608 (-) shall rise to 9.6 ± .150 VDC. If voltage is out-of-tolerance, use same adjustment procedure as in 10 second range calibration with R1 on A610.

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

n. Calibration complete. Disconnect test equipment. Slide Electronics Unit back into cabinet.

4.5.7 FUNCTION TESTS. The Functional Tests shall be performed after the Prefunctional and Calibration Tests. They shall be performed in the sequence listed.

4.5.7.1 POWER ON TESTS. Install the Self-Test Tape. With Power Cable W2 attached to the test set, plug P1 of W2 into a 3 pin twist-lock receptacle so that a 115 V ± 10 percent, 60 or 400 cps power source is applied to J901 as follows with all circuit breakers open.

J901-C to Chassis Ground
J901-A to 115V, 60 cps, HI
J901-B to 115V, 60 cps, LO

4.5.7.1.1 With all circuit breakers open, place the POWER switch in the ON position. The POWER lamp shall not light. Place MODE switch in "MANUAL."

4.5.7.1.2 With the T/S POWER circuit breaker closed, place the POWER switch momentarily in the ON position. The POWER lamp shall not light. Place the POWER switch momentarily in the OFF position.

4.5.7.1.3 With the HTR and PRINTER circuit breaker closed and the Printer POWER switch turned on, the Printer motor shall not run.

4.5.7.1.4 With the T/S POWER, 48 V SUPPLY, 28 V SUPPLY, and the HTR and PRINTER circuit breakers closed, place the POWER switch momentarily in the ON position. The POWER lamp, fan and Printer motor shall come on and shall remain on after the POWER switch is released. Turn the Printer POWER switch OFF. The printer motor shall stop.

4.5.7.1.5 With the 28 V SUPPLY circuit breaker closed, the POWER lamp shall be on. Place the POWER switch momentarily in the OFF position. The POWER lamp shall go out and remain out after the switch is released.

4.5.7.1.6 With the POWER lamp turned on by momentarily placing the POWER switch in ON, the four nixie tubes (Numerical Indicator Tubes) shall light when the 240 V SUPPLY circuit breaker is closed.

4.5.7.1.7 Make the following voltage measurements with the multimeter. Turn power switch momentarily off. Disconnect J902. Turn power switch momentarily on.

FROM (+)	TO (-)	INDICATION
J902-P	J902-N	185-270 V DC
J902-D	J902-N	40-55 V DC
J902-A	J902-N	24-32 V DC

Turn power switch momentarily OFF.

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

4.5.7.1.8 Attach the Remote Control Box and Cable W1 to J902 on the AN/AWM-13A Circuit Test Set. Place the POWER switch momentarily in the ON position. The POWER lamp shall come on. When the POWER OFF switch on the Remote Control Box is depressed, the POWER lamp shall go off and remain off after the switch is released. Place POWER switch on Programmer, Test Set C-7055/AWM-13A in the ON position.

4.5.7.2 MANUAL SEARCH TESTS

4.5.7.2.1 When the TAPE switch on the Programmer, Test Set C-7055/AWM-13A is placed in the FORWARD position, the tape shall move continuously in a forward direction (i.e., the tape shall move from the left-hand reel to the right-hand reel). The tape shall stop moving when the TAPE switch is released. With the TAPE switch in the REVERSE position, the tape shall move continuously in the reverse direction. When the switch is released, the tape shall stop.

4.5.7.2.2 With the TAPE switch on the Remote Control Box in the FWD position, the tape shall move continuously in the forward direction, but shall stop when the switch is released. With the TAPE switch in the REV position, the tape shall move continuously in the reverse direction, but shall stop when the switch is released.

4.5.7.3 AUTOMATIC SEARCH TESTS

4.5.7.3.1 With the MOD switch set to the SEARCH position and the TEST NUMBER switches set to the numbers in the following list, the Tape Reader shall search for and stop at the test number selected. At the end of each search the test number on the nixie tubes shall be the same as the test number selected. If necessary, use the START switch to begin the search. The test numbers are:

0100		
1000	3535	5353
1716	3435	6262
1717	3544	6252
2626	4544	7171
2636	5352	7271

4.5.7.4 PRINTER TESTS

4.5.7.4.1 MANUAL. With the MODE switch set to the SEARCH position and the TEST NUMBER switches set to test number 0100, the Tape Reader shall search to test number 0100. Use the START switch, if necessary, to begin search. With the MODE switch set to the MANUAL position and the Printer POWER switch turned ON, the Printer motor shall run. Advance the tape one frame at a time through the test numbers in the following list by using the START switch. For each test number, hold the Printer RECORD switch down momentarily. The

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Printer shall print the same number shown on the nixie tube. The Printer shall print continuously as long as the switch is held down and shall stop printing when the switch is released. The FAULT lamp shall be on. The test numbers shall be:

0100	2626	3544	6252
1000	2636	4544	6262
1716	3435	5352	7171
1717	3535	5353	7271

Attach Cable CX-10066/AWM-13 to J201 on Control, Electronic Command C-7056/AWM-13A. At the last number in the series (7271), place the RECORD switch up in the ON position. The printer shall print once when the tape is advanced by the START switch. When the Comparator, Signal CM-344/AWM-13A circuit breaker is closed, the FAULT lamp shall go out. When the Comparator, Signal CM-344/AWM-13A circuit breaker is opened, the FAULT lamp shall come on, but the Printer shall not print the test number.

4.5.7.4.2 SEMI-AUTOMATIC. Search to test number 0077. Set the MODE switch to SEMI-AUTOMATIC position. Advance the test tape through the test numbers in the following list by use of the START switch. The tape will advance one frame at a time. The FAULT lamp on both the Programmer, Test Set C-7055/AWM-13A and Remote Control Box shall come on for each number. The Printer shall print each test number once. The test numbers shall be:

0100	2626	3544	6252
1000	2636	4544	6262
1716	3435	5352	7171
1717	3535	5353	7271

4.5.7.4.3 AUTOMATIC. Search to test number 0077. Set the MODE switch to the AUTOMATIC position and press the START switch. The tape shall advance automatically to test number 7271 and stop with the READY lamp on for both the Programmer, Test Set C-7055/AWM-13A and Remote Control Box. The Printer shall print each number listed under "Semi-Automatic" in the Functional Tests once. Return the RECORD switch to its center position. Turn Printer Power switch to OFF position.

4.5.7.5 LOAD TESTS

4.5.7.5.1 Manually advance the tape in a forward direction past test number 7271 to test number 1000. On the Self-Test Tape the test numbers start over again past 7271 and since the number 1000 is lower than 7271, it cannot be reached in the Search Mode.

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

4.5.7.5.2 With the MODE switch in EXTERNAL, advance the tape with the START switch on the Remote Control Box through each test number in the following list. Monitor the METER jacks with the resistance bridge. The resistance corresponding to each test number shall be as shown in the following list with the OVERLOAD circuit breaker closed and greater than two megohms with the circuit breaker open.

TEST NUMBER	RESISTANCE (OHMS)
1001	282 - 318 K
1002	36.6 - 41.4 K
1003	6.74 - 7.46 K
1004	940 - 1060
1005	470 - 532
1006	23.5 - 28.5
1007	5.92 - 8.68

4.5.7.6 DELAY TESTS

4.5.7.6.1 Accuracy of the delays are determined during the Controller, Comparator-Programmer C-7057/AWM-13A checkout. For these tests any watch with a sweep second hand will be sufficient for measuring the delays to the accuracies required.

4.5.7.6.2 With the MODE switch in SEMI-AUTOMATIC, advance the tape with the START switch on the Remote Control Box through each test number in the following list. The time delay associated with each test number is listed opposite the test number. Measure the delay from the time that the START switch is pressed until the FAULT lamp comes on.

TEST NUMBER	DELAY (SEC.)
1010	0.5 - 0.9
1011	1.0 - 2.0
1012	2.5 - 4.0
1013	7.5 - 13
1014	24 - 36
1015	48 - 72
1016	144 - 216
1017	480 - 720

4.5.7.7 EXTERNAL INPUT TESTS

4.5.7.7.1 With the power off, attach P1 of Cable CX-10065/AWM-13 to J101 on the Matrix, Code KY-594/AWM-13A and attach P2 of Cable CX-10066/AWM-13 to J201 on Control, Electronic Command C-7055/AWM-13A.

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

4.5.7.7.2 Turn power on, close all circuit breakers, turn the Printer RECORD switch to ON. Advance the tape to test number 0020 and set the MOD switch to MANUAL.

4.5.7.7.3 During the following voltage and resistance tests, the input corresponding to the test number in the following list shall be applied to P4 (+) and P5 (-) on Cable CX-10065/AWM-13. These two test points correspond to J101-V and J101-K, respectively. On the odd numbered tests the input is gradually increased until the FAULT light comes on. The value of the input shall lie between the limits listed for the test number. For the even numbered tests the FAULT lamp shall not come on. The tape will be advanced manually using the START switch.

Test	Measurement	Input	Limits
0020		.090 VDC	
0021	Under .098 VDC	Increase	95 - 101 mv
0022		.80 VDC	
0023	Under .847 VDC	Increase	.82 - .875 V
0024		4.0 VDC	
0025	Under 4.54 VDC	Increase	4.39 - 4.7 V
0026		20 VDC	
0027	Under 22.65 VDC	Increase	22 - 23.5 V
0030		105 VDC	
0031	Under 113.6 VDC	Increase	110 - 117.5 V
0032		.090 VAC	
0033	Under .098 VAC	Increase	95 - 101 mv
0034		.80 VAC	
0035	Under .847 VAC	Increase	.82 - .875 V
0036		4.0 VAC	
0037	Under 4.54 VAC	Increase	4.39 - 4.7 V
0040		20 VAC	
0041	Under 22.65 VAC	Increase	22 - 23.5 V

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

0042		105 VAC	
0043	Under 113.6 VAC	Increase	110 - 117.5 V
0044		32 Ohms	
0045	Under 34.0 ohms	Increase	32.3 - 35.7 ohms
0046		340 ohms	
0047	Under 356 ohms	Increase	344 - 368 ohms
0050		9 K ohm	
0051	Under 9.39 K	Increase	9 - 9.75 ohms
0052		20 K ohms	
0053	Under 23.25 K	Increase	22.5 - 24 K ohms
0054		100 K ohms	
0055	Under 116.1 K	Increase	112 - 120 K ohms
0056		800 K ohms	
0057	Under 916 K	Increase	880 - 950 K ohms
0060		3.5 megohm	
0061	Under 4.16 M	Increase	4 - 4.3 megohm
0062		2.5 meg	
0063	4 meg hipot V	Increase	3 - 5 megohm
0064		2.5 meg	
0065	4 meg hipot 1000 V	Increase	3 - 5 megohm

4.5.7.8 INTERNAL SELF-TESTS

4.5.7.8.1 With power off, remove the Remote Control Cable from J902. Turn power on, close all circuit breakers, turn on the Printer POWER switch, and set the Printer RECORD switch to ON. Advance the tape to test number 1020 and set the MODE switch to AUTOMATIC. Remove Cable CX-10065/AWM-13 from J101 if attached.

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

4.5.7.8.2 During Internal Self Tests the tape will advance automatically through all the test numbers in the following list. The FAULT lamp shall come on and the Printer shall print only for each test number listed in the Fault column. Press the START switch to initiate the tests.

TEST NUMBER	VALUE MONITORED	LIMIT	FAULT
1020	NONE		
1021	140 VDC	144.2	
1022	140 VDC	144.2	1022
1023	140 VDC	135.8	
1024	140 VDC	135.8	1024
1025	13.65 VDC	14.2	
1026	13.65 VDC	14.2	1026
1027	13.65 VDC	13.1	
1030	13.65 VDC	13.1	1030
1031	0.975 VDC	.995	
1032	0.975 VDC	.995	1032
1033	0.975 VDC	.915	
1034	0.975 VDC	.915	1034
1035	.0975 VDC	.1015	
1036	.0975 VDC	.1015	1036
1037	.0975	.0895	
1040	.0975	.0895	1040
1041	NO TEST		
1042	NO TEST		
1043	140 VAC	119	
1044	140 VAC	119	1044
1045	NO TEST		
1046	NO TEST		

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

1047	13.65 VAC	11.6	
1050	13.65 VAC	11.6	1050
1051	0.975 VAC	1.092	
1052	0.975 VAC	1.092	1052
1053	0.975 VAC	.808	
1054	0.975 VAC	.808	1054
1055	.0935	.1078	
1056	.0935	.1078	1056
1057	.0935	.0795	
1060	.0935		1060
1061	500 VDC	615	
1062	500 VDC	615	1062
1063	500 VDC	385	
1064	500 VDC	385	1064
1065	1000 VDC	1230	
1066	1000 VDC	1230	1066
1067	1000 VDC	770	
1070	1000 VDC	770	1070
1071	300 kilohms	324	
1072	300 kilohms	324	1072
1073	300 kilohms	276	
1074	300 kilohms	276	1074
1075	39 kilohms	42.2	
1076	39 kilohms	42.2	1076
1077	39 kilohms	35.8	
1100	39 kilohms	35.8	1100

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

1101	7.1 kilohms	7.67	
1102	7.1 kilohms	7.67	1102
1103	7.1 kilohms	6.73	
1104	7.1 kilohms	6.73	1104
1105	1000 ohms	1080	
1106	1000 ohms	1080	1106
1107	1000 ohms	920	
1110	1000 ohms	920	1110
1111	5000 ohms	540	
1112	5000 ohms	540	1112
1113	5000 ohms	460	
1114	5000 ohms	460	1114
1115	25 ohms	29	
1116	25 ohms	29	1116
1117	25 ohms	23	
1120	25 ohms	23	1120
1121	6.3 ohms	9.4	
1122	6.3 ohms	9.4	1122
1123	6.3 ohms	5.8	
1124	6.3 ohms	5.8	1124
1125	OPEN CIRCUIT TO ALL TP'S	10 Megohm	
1126	OPEN TO GRD	10 Megohm	
1127	OPEN TO TP #2	10 Megohm	

4.5.7 9 EXTERNAL SELF-TESTS

4.5.7.9.1 With power off, attach the Cable Assemblies to the AN/AWM-13A Circuit Test Set in accordance with the following chart.

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the currentversion before use.

CABLE NUMBER	CONNECTOR P1 TO	CONNECTOR P2 TO	CONNECTOR P3 TO
W4	J101 on MATRIX, Code KY-594/ AWM-13A	J902 (REMOTE CONTROL)	J903
W5	J102 on KY-594/ AWM-13A	J201 (Control, Electronic Command C-7056/ AWM-13A	J206 (Control, Electronic Command C-7056/ AWM-13A
W6	J103 on KY-594/ AWM-13A	J202 (Control, Electronic Command C-8004/ AWM-13A	J203 (Control, Electronic Command C-7056/ AWM-13A
W7	J104 on KY-594/ AWM-13A	J204 (Control, Electronic Command C-7056/ AWM-13A	J205 (Control, Electronic Command C-8004/ AWM-13A
W8	J105 on KY-594/ AWM-13A	J206 (Control, Electronic Command C-8004/ AWM-13A	J204 (Control, Electronic Command C-8004/ AWM-13A
W9	J106 on KY-594/ AWM-13A	J201 (Control, Electronic Command C-8004/ AWM-13A	J203 (Control, Electronic Command C-8004/ AWM-13A

On W4 connect P4 to P5.

4.5.7.9.2 Turn power on, close all circuit breakers, turn on the Printer POWER switch, and set the Printer RECORD switch to ON. Advance the tape to test number 1130 and set mode selector to AUTOMATIC MODE.

4.5.7.9.3 During External Self-Tests, the tape will advance automatically through all the test numbers in the following list. The FAULT lamp shall not come on and the Printer shall not print for any test number listed. Press the START switch to initiate the tests.

Test	Measurement	Test Point 1	Test Point 2
1130	None (Stop)		
1131	Under 3 ohms	J101-V	J101-K
1132		U	J
1133		T	H
1134		S	G
1135		R	F

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

Test	Measurement	Test Point 1	Test Point 2
1136		J101-P	J101-E
1137		O	D
1140		N	C
1141		M	B
1142	Under 3 ohms	J101-L	J101-A
1143		J102-U	J102-U
1144		T	AD
1145		S	AC
1146		R	AB
1147		P	AA
1150		O	z
1151		N	y
1152		M	x
1153		L	w
1154		K	v
1155		J	u
1156		H	t
1157		G	s
1160		F	r
1161		E	q
1162		D	p
1163		-C	-B
1164		J102-AG	J102-A
1165		J103-h	J103-K
1166		g	J

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

Test	Measurement	Test Point 1	Test Point 2
1167		J103-f	J103-H
1170		e	G
1171		d	F
1172		c	E
1173	Under 3 ohms	J103-b	J103-D
1174		a	C
1175		Z	B
1176		Y	A
1177		J104-a	J104-M
1200		Z	L
1201		Y	K
1202		X	J
1203		W	H
1204		p	G
1205		V	F
1206		U	E
1207		T	D
1210		S	C
1211		R	B
1212		P	A
1213		J105-AG	J105-U
1214		AF	U
1215		AE	T
1216		AD	S
1217		AC	R

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test	Measurement	Test Point 1	Test Point 2
1220	Under 3 ohms	J105-AB	J105-P
1221		AA	O
1222		z	N
1223		y	L
1224		x	K
1225		w	J
1226		v	-H
1227		u	G
1230		t	F
1231		s	E
1232		r	D
1233		q	C
1234		p	B
1235		h	A
1236		J106-g	J106-v
1237		f	v
1240		e	u
1241		d	P
1242		c	O
1243		b	N
1244		a	M
1245		Z	L
1246		Y	K
1247		X	J
1250		W	H

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test	Measurement	Test Point 1	Test Point 2
1251	Under 3 ohms	J106-t	J106-G
1252		s	F
1253		V	E
1254		U	D
1255		T	C
1256		S	B
1257		R	A
1260	Less than 32 VDC	J101-AG	J101-AE
1261	Greater than 22 VDC	AG	AE
1262	Less than 55 VDC	AF	AD
1263	Greater than 40 VDC	-AF	AD
1264	Less than 270 VDC	AC	AD
1265	Greater than 200 VDC	AC	AD
1266	Under 3 ohms	AE	Sys Grd
1267	Under 3 ohms	AD	Sys Grd
1270	Less than 1 VDC	-y	J101-AG
1271	Less than 1 VDC	w	
1272	Over 22 VDC	x	
1273	Less than 1 VDC	j	
1274	Less than 1 VDC	g	
1275	Over 22 VDC	J101-h	J101-AG
1276	Over 22 VDC	v	
1277	Over 22 VDC	c	
1300	Under 1 VDC	q	
1301	Over 22 VDC	q	

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test	Measurement	Test Point 1	Test Point 2
1302	Over 22 VDC	J101-r	
1303	Under 1 VDC	s	J101-AG
1304	Over 22 VDC	s	
1305	Under 1 VDC	r	
1306	Under 1 VDC	t	
1307	Under 1 VDC	m	
1310	Under 1 VDC	W	
1311	Over 22 VDC	W	
1312	Over 22 VDC	Z	
1313	Under 1 VDC	a	
1314	Over 22 VDC	a	
1315	Under 1 VDC	Z	
1316	Under 1 VDC	u	
1317	Under 1 VDC	b	
1320	Over 22 VDC	u	
1321	Over 22 VDC	w	
1322	Over 22 VDC	z	
1323	Under 1 VDC	AA	
1324	Under 1 VDC	AB	
1325	Under 1 VDC	f	
1326	Under 1 VDC	e	
1327	Under 1 VDC	m	
1330	Over 22 VDC	m	
1331	Over 22 VDC	-k	
1332	Over 22 VDC	g	

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the currenversion before use.

Test	Measurement	Test Point 1	Test Point 2
1333	Under 1 VDC	J101-c	J101-AG
1334	Over 22 VDC	b	
1335	Over 22 VDC	t	
1336	Under 1 VDC	v	
1337	Under 270 VDC	p	J101-d
1340	Over 200 VDC	p	
1341	Under 55 VDC	n	
1342	Over 40 VDC	n	
1343	Under 3 ohms	J101-d	Sys Com
1344	Under 3 ohms	J102-AF	J102-V
1345	Under 1 VDC	b	J101-AG

Test	Measurement	Command	Test Point 1	Test Point 2
1346	Over 22 VDC	CU1-A2 on	J102-b	J101-AG
1347	Under 1 VDC	CU1-A2 off	b	J101-AG
1350	Under 1 VDC		a	Sys Com
1351	Over 22 VDC	CU1-B10 on	a	Sys Com
1352	Under 1 VDC	CU1-B10 off	a	Sys Com
1353	Over 1 megohm		Z	J102-Y
1354	Under 3 ohms	CU1-B9 on	Z	Y
1355	Under 3 ohms		Z	Y
1356	Over 1 megohm	CU1-B9 off	Z	Y
1357	Under 100 mv AC		X	Sys Com
1360	Over 1.2 VAC	CU1-B8 on	X	
1361	Under 2 VAC		X	
1362	Over 1.2 VAC		W	

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test	Measurement	Command	Test Point 1	Test Point 2
1363	Under 100 mv AC	CU1-B8 off	J102-W	Sys Com
1364	Under 3 ohms		n	
1365	Under 1 VDC		m	J101-AG
1366	Over 22 VDC	CU1-B13 on	m	
1367	Under 1 VDC	CU1-B13 off	m	
1370	Under 1 VDC		k	
1371	Over 22 VDC	CU1-B12 on	k	
1372	Under 1 VDC	CU1-B12 off	k	
1373	Under 1 VDC		j	
1374	Over 22 VDC	CU1-B11 on	j	
1375	Under 1 VDC	CU1-B11-R	j	J101-AG
1376	Under 1 VDC		h	Sys Com
1377	Over 22 VDC	CU1-B10-0	h	Sys Com
1400	Over 22 VDC		J101-y	J101-AG
1401	Under 1 VDC		x	
1402	Over 22 VDC		j	
1403	Under 1 VDC		h	
1404	Under 1 VDC	CU1-B10-R	J102-h	Sys Com
1405	Over 30 K		g	J102-f
1406	Under 3 ohms	CU1-B9-0	g	J102-f
1407	Over 30 K ohms	CU1-B9-R	g	f
1410	Under 100 mv AC	CU1-B9-R	e	Sys Com
1411	Over 1.2 VAC	CU1-B8-0	e	
1412	Over 1.2 VAC		d	
1413	Under 100 mv AC	CU1-B8-R	d	

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test	Measurement	Command	Test Point 1	Test Point 2
1414	Over 1 megohm		J102-c	Sys Com
1415	Under 3 ohms	CU1-A3-0	c	
1416	Over 1 megohm	CU1-A3-R	J102-c	Sys Com
1417	Under 3 ohms		J103-AG	J104-N
1420	Under 3 ohms		AF	Sys Com
1421	Under 1 VAC		AE	
1422	Under 130 VAC	CU2-B15-0	AE	
1423	Over 100 VAC		AE	
1424	Under 1 VAC	CU2-B15-R, .5K LOAD	AE	
1425	Under 1 VDC		AD	
1426	Over 22 VDC	CU2-B7-0	AD	
1427	Under 1 VDC	CU2-B7-R	AD	
1430	Under 1 VDC		AC	
1431	Over 22 VDC	CU2-B6-0	J103-AC	Sys Com
1432	Under 1 VDC	CU2-B6-R	AC	
1433	Under 1 VDC		AB	
1434	Over 22 VDC	CU2-B4-0	AB	
1435	Under 1 VDC	CU2-B4-R	AB	
1436	Under 1 VDC		AA	J101-AG
1437	Over 22 VDC	CU2-A12-0	AA	
1440	Under 1 VDC	CU2-A12-R	AA	
1441	Under 1 VDC		z	
1442	Over 22 VDC	CU2-A11-0	z	
1443	Under 1 VDC	CU2-A11-R	z	

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

Test	Measurement	Command	Test Point 1	Test Point 2
1444	Under 1 VDC		J103-y	Sys Com
1445	Over 22 VDC	CU2-A10-0	y	
1446	Under 1 VDC	CU2-A10-R	y	
1447	Under 1 VDC		x	J101-AG
1450	Over 22 VDC	CU2-A9-0	x	
1451	Under 1 VDC	CU2-A9-R	x	
1452	Under 1 VDC		w	Sys Com
1453	Over 22 VDC	CU2-A8-0	w	
1454	Over 22 VDC		v	
1455	Under 1 VDC	CU2-A8-R	v	
1456	Under 1 VDC		u	J101-AG
1457	Over 22 VDC	CU2-A7-0	u	
1460	Under 1 VDC	CU2-A7-R	u	
1461	Under 1 VDC		t	Sys Com
1462	Under 102 VDC	CU2-A6-0 39K	t	
1463	Over 68 VDC	39K Load	t	
1464	Under 1 VDC	CU2-A6-R	t	
1465	Under 1 VDC		s	J101-AG
1466	Over 22 VDC	CU2-A5-0	s	
1467	Over 22 VDC		r	
1470	Under 1 VDC	CU2-A5-R	r	
1471	Under 1 VDC		p	
1472	Over 22 VDC	CU2-A4-0	p	
1473	Over 22 VDC		q	

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test	Measurement	Command	Test Point 1	Test Point 2
1474	Over 22 VDC		J103-n	J101-AG
1475	Over 22 VDC		m	
1476	Under 1 VDC	CU2-A4-R	m	
1477	Under 1 VDC		k	
1500	Over 22 VDC	CU2-A3-0	k	
1501	Under 1 VDC	CU2-A3-R	k	J101-AG
1502	Under 1 VDC		j	Sys Com
1503	Over 22 VDC	CU2-A2-0	j	
1504	Under 1 VDC	CU2-A2-R	j	
1505	Under 3 ohms		X	J104-0
1506	Under 3 ohms		W	J104-0
1507	Under 3 ohms		V	Sys Com
1510	Under 1 VDC		U	J101-AG
1511	Over 22 VDC	CU1-B7-0	U	
1512	Under 1 VDC	CU1-B7-R	U	
1513	Under 1 VDC		T	
1514	Over 22 VDC	CU1-A10-0	T	
1515	Under 1 VDC	CU1-A10-R	J103-T	J101-AG
1516	Under 1 VDC		S	
1517	Over 22 VDC	CU1-A9-0	S	
1520	Under 1 VDC	CU1-A9-R	S	
1521	Under 1 VDC		R	
1522	Over 22 VDC	CU1-A8-0	R	
1523	Under 1 VDC	CU1-A8-R	R	

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test	Measurement	Command	Test Point 1	Test Point 2
1524	Under 1 VDC		J103-P	J101-AG
1525	Over 22 VDC	CU1-A7-0	P	
1526	Under 1 VDC	CU1-A7-R	P	
1527	Under 1 VDC		O	
1530	Over 22 VDC	CU1-A6-0	O	
1531	Under 1 VDC	CU1-A6-R	O	
1532	Under 1 VDC		N	
1533	Over 22 VDC	CU1-A5-0	N	
1534	Under 1 VDC	CU1-A5-R	N	
1535	Under 1 VDC		M	
1536	Over 22 VDC	CU1-B3-0	M	
1537	Under 1 VDC	CU1-B3-R	M	
1540	Under 1 VDC		L	
1541	Over 22 VDC	CU1-A11-0	L	
1542	Under 1 VDC	CU1-A11-R	J103-L	J101-AG
1543	Under 3 ohms		J104-AG	Sys Com
1544	Over 22 VDC	CU1-A1-0	AF	J101-AG
1545	Under 1 VDC		AF	
1546	Under 1 VDC		AE	
1547	Over 22 VDC	CU1-B12-0	AE	
1550	Under 1 VDC	CU1-B12-R	AE	
1551	Under 1 VDC		AD	
1552	Over 22 VDC	CU1-B11-0	AD	
1553	Under 1 VDC	CU1-B11-R	AD	

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test	Measurement	Command	Test Point 1	Test Point 2
1554	Under 1 VDC		J104-AC	J101-AG
1555	Over 22 VDC	CU1-B7-0	AC	
1556	Under 1 VDC	CU1-B7-R	AC	
1557	Over 22 VDC	CU1-B2-0	AB	
1560	Under 1 VDC	CU1-B2-R	AB	J101-AG
1561	Over 22 VDC	CU1-B14-0	AA	Sys Com
1562	Under 1 VDC	CU1-B14-R	AA	Sys Com
1563	Over 22 VDC	CU1-A15-0	z	J101-AG
1564	Under 1 VDC	CU1-A15-R	z	J101-AG
1565	Over 22 VDC	CU1-B15-0	y	Sys Com
1566	Under 1 VDC	CU1-B15-R	y	Sys Com
1567	Over 22 VDC	CU1-A14-0	x	J101-AG
1570	Under 1 VDC	CU1-A14-R	x	J101-AG
1571	Over 22 VDC	CU2-A2-0	w	Sys Com
1572	Under 1 VDC	CU2-A2-R	w	Sys Com
1573	Over 22 VDC	CU1-A13-0	v	J101-AG
1574	Under 1 VDC	CU1-A13-R	v	J101-AG
1575	Over 22 VDC	CU2-B4-0	u	Sys Com
1576	Under 1 VDC	CU2-B4-R	u	Sys Com
1577	Over 22 VDC	CU1-A12-0	t	J101-AG
1600	Under 1 VDC	CU1-A12-R	t	J101-AG
1601	Over 22 VDC	CU2-B6-0	J104-s	Sys Com
1602	Under 1 VDC	CU2-B6-R	s	
1603	Over 22 VDC	CU2-B7-0	r	

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test	Measurement	Command	Test Point 1	Test Point 2
1604	Under 1 VDC	CU2-B7-R	J104-r	Sys Com
1605	Under 3 ohms		q	Sys Com
1606	Over 22 VDC	CU2-B5-0	n	J101-AG
1607	Under 1 VDC	CU2-B5-R	n	
1610	Over 22 VDC	CU2-B3-0	m	
1611	Under 1 VDC	CU2-B3-R	m	
1612	Over 22 VDC	CU2-B2-0	k	
1613	Under 1 VDC	CU2-B2-R	k	
1614	Over 22 VDC	CU2-A15-0	j	
1615	Under 1 VDC	CU2-A15-R	j	
1616	Over 22 VDC	CU2-A14-0	h	
1617	Under 1 VDC	CU2-A14-R	h	
1620	Under 1 VDC		g	
1621	Over 22 VDC	CU2-A13-0	g	
1622	Over 22 VDC		f	
1623	Over 22 VDC		e	
1624	Over 22 VDC		d	
1625	Under 1 VDC	CU2-A13-R	d	
1626	Over 22 VDC	CU2-A5-0	c	
1627	Under 1 VDC	CU2-A5-R	c	J101-AG
1630	Over 68 VDC	CU2-A6-0	b	Sys Com
1631	Under 1 VDC	CU2-A6-R	J104-b	
1632	Under 3 ohms		J105-n	
1633	Over 22 VDC, 1 sec delay	CU2-B9-0	n	

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the currentversion before use.

Test	Measurement	Command	Test Point 1	Test Point 2
1634	Under 1 VDC	CU2-B9-R	J105-m	Sys Com
1635	Over 22 VDC	CU2-B4-0	k	
1636	Under 1 VDC	CU2-B4-R	k	Sys Com
1637	Over 22 VDC	CU2-B3-0	j	J101-AG
1640	Under 1 VDC	CU2-B3-R	j	
1641	Over 22 VDC	CU2-B2-0	g	
1642	Under 1 VDC	CU2-B2-R	g	J101-AG
1643	Under 3 ohms		f	J105-M
1644	Under 3 ohms		e	J105-n
1645	Over 22 VDC	CU2-B15-0	d	Sys Com
1646	Under 1 VDC	CU2-B15-R	d	
1647	Over 22 VDC	CU2-B9-0	c	
1650	Under 1 VDC	CU2-B9-R	c	
1651	Over 22 VDC	CU2-A10-0	b	
1652	Under 1 VDC	CU2-A10-R	b	Sys Com
1653	Over 22 VDC	CU2-B8-0	a	J101-AG
1654	Over 22 VDC		Z	
1655	Over 22 VDC		Y	
1656	Under 1 VDC	CU2-B8-R	Y	
1657	Over 22 VDC	CU2-A14-0	X	
1660	Under 1 VDC	CU2-A14-R	X	J101-AG
1661	Over 22 VDC	CU2-A2-0	W	Sys Com
1662	Under 1 VDC	CU2-A2-R	W	
1663	Under 1 VDC		V	

Source: https://assist.dla.mil -- Downloaded: 20260-21T15:33Z
Check the source to verify that this is the current version before use.

Test	Measurement	Command	Test Point 1	Test Point 2
1664	Over 68 VDC	CU2-A6-0	J105-V	Sys Com
1665	Under 1 VDC	CU2-A6-R	J105-V	Sys Com
1666	Under 3 ohms		J106-AG	Sys Com
1667	Over 22 VDC	CU2-B14-0	AF	J101-AG
1670	Under 1 VDC	CU2-B14-R	AF	
1671	Over 22 VDC	CU2-B13-0	AE	
1672	Under 1 VDC	CU2-B13-R	AE	
1673	Over 22 VDC	CU2-B12-0	AD	
1674	Under 1 VDC	CU2-B12-R	AD	
1675	Over 22 VDC	CU2-B11-0	AC	
1676	Under 1 VDC	CU2-B11-R	AC	
1677	Over 22 VDC	CU2-B10-0	AB	
1700	Under 1 VDC	CU2-B10-R	AB	
1701	Over 22 VDC	CU2-A5-0	AA	
1702	Under 1 VDC	CU2-A5-R	AA	J101-AG
1703	Under 3 ohms		q	J106-r
1704	Under 3 ohms		p	Sys Com
1705	Over 22 VDC	CU2-B5-0	n	J101-AG
1706	Under 1 VDC	CU2-B5-R	n	
1707	Over 22 VDC	CU2-A15-0	m	
1710	Under 1 VDC	CU2-A15-R	m	
1711	Over 22 VDC	CU2-A9-0	k	
1712	Under 1 VDC	CU2-A9-R	k	
1713	Over 22 VDC	CU2-A7-0	j	

Source: https://assist.dla.mil -- Downloaded: 20260-21T15:33Z
Check the source to verify that this is the current version before use.

Test	Measurement	Command	Test Point 1	Test Point 2
1714	Under 1 VDC	CU2-A7-R	J106-j	J101-AG
1715	Under 1 VDC		h	
1716	Over 22 VDC	CU2-A3-0	h	
1717	Over 22 VDC		z	
1720	Over 22 VDC		y	
1721	Under 1 VDC	CU2-A3-R	y	
1722	Under 1 VDC		z	J101-AG
1723	Over 22 VDC	CU2-A2-0	x	Sys Com
1724	Under 1 VDC	CU2-A2-R	x	
1725	Over 68 VDC	CU2-A6-0	w	
1726	Under 1 VDC	CU2-A6-R	J106-w	Sys Com
1727		CU1-A4-0		
1730	Under 3 ohms	CU1-B10-0	J103-U	Sys Com
1731	Over 1 megohm	CU1-B1-R	J103-U	Sys Com
1732		CU1-A4-0		
1733	Under 3 ohms	CU2-B7-0	J103-U	Sys Com
1734	Over 1 megohm	CU1-B1-R	J103-U	Sys Com
1735		CU2-B7-R		
1736		CU1-A4-0		
1737	Under 3 ohms	CU2-B6-0	J103-U	Sys Com
1740	Over 1 megohm	CU1-B1-R	J103-U	Sys Com
1741		CU2-B6-R		
1742	Over 1 megohm	CU2-B4-0	J103-U	Sys Com
1743	Under 3 ohms	CU1-B4-0	J103-U	Sys Com

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test	Measurement	Command	Test Point 1	Test Point 2
1744		CU2-B4-R		
1745		CU1-B1-R		
1746	Over 1 megohm	CU1-B4-0	J103-U	Sys Com
1747	Under 3 ohms	CU2-A10-0	J103-U	Sys Com
1750		CU2-A10-R		
1751		CU1-B1-R		
1752	Over 1 megohm	CU1-B4-0	J103-U	Sys Com
1753	Under 3 ohms	CU2-A8-0	J103-U	Sys Com
1754		CU2-A8-R		
1755		CU1-B1-R		
1756		CU1-B5-0		
1757	Over 1 megohm	CU1-A4-0	J103-U	Sys Com
1760	Under 3 ohms	CU2-A2-0	J103-U	Sys Com
1761		CU2-A2-R		
1762		CU1-B1-R		
1763		CU1-B5-0		
1764	Over 1 megohm	CU1-B4-0	J104-AC	Sys Com
1765	Under 3 ohms	CU2-B7-0	J104-AC	Sys Com
1766		CU2-B7-R		
1767		CU1-B1-R		
1770		CU1-B5-0		
1771	Over 1 megohm	CU1-B4-0	J104-AC	Sys Com
1772	Under 3 ohms	CU2-B6-0	J104-AC	Sys Com
1773		CU2-B6-R		

Source: https://assist.dla.mil -- Downloaded: 20260-21T15:33Z
Check the source to verify that this is the current version before use.

Test	Measurement	Command	Test Point 1	Test Point 2
1774		CU1-B1-R		
1775		CU1-B6-0		
1776	Over 1 megohm	CU1-B4-0	J104-AC	Sys Com
1777	Under 3 ohms	CU2-B4-0	J104-AC	Sys Com
2000		CU2-B4-R		
2001		CU1-B1-R		
2002		CU1-B6-0		
2003	Over 1 megohm	CU1-B4-0	J104-AC	Sys Com
2004	Under 3 ohms	CU2-A2-0	J104-AC	Sys Com
2005		CU2-A2-R		
2006		CU1-B1-R		
2007	Over 1 megohm	CU1-B15-0	J104-AC	Sys Com
2010		CU1-B6-0		
2011	Under 3 ohms	CU1-B4-0	J104-AC	Sys Com
2012		CU1-B1-R		
2013	Over 1 megohm	CU1-B14-0	J104-AC	Sys Com
2014		CU1-B6-0		
2015	Under 3 ohms	CU1-B4-0	J104-AC	Sys Com
2016	Over 1 megohm	CU1-B1-R	J104-AC	Sys Com
2017	Over 1 megohm	CU1-B10-0	J103-U	Sys Com
2020		CU1-B10-R		
2021	Over 22 VDC	CU1-A6-0	J102-U	J101-AG
2022	Under 1 VDC	CU1-A6-R	J102-U	J101-AG
2023	Over 22 VDC	CU1-B7-0	J102-AE	J101-AG
2024	Under 1 VDC	CU1-B7-R	J102-AE	J101-AG
5000	STOP			

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

4.5.8 TIME INTERVAL TESTS. Set the MODE switch to AUTOMATIC. During the following time interval tests, the input pulse type corresponding to the test number is applied to both P4 and P5 of CX-10065/AWM-13 according to figures 1 through 4. The low or ground side of the pulse input is applied to the GROUND lug on the AN/AWM-13A. Press the START button to initiate each test. The tape will advance automatically, stopping for each test with an asterisk beside it, at which time the READY lamp shall come on. When the READY lamp comes on, the next input called for will be applied from the Time Mark Generator and Square Wave Generator combination, but the PULSE switch on the Square Wave Generator will be left OFF. Press the START switch to start the test. After approximately one second, hold the PULSE switch in RESET momentarily and then place in the ON position. The tape will advance automatically to the next frame with an asterisk. The FAULT lamp will not come on and the Printer will not print for any of the tests listed below:

Test	Measurement	Input
*5046		Pulse Type 1
5047	10 Sec, + to +, 3 V trip, 1st to 3rd	
5050	Over 9.5 VDC	
5051	Under 10.5 VDC	
*5052		Pulse Type 1
5053	10 sec, + to -, 3 V trip, 1st to 3rd	
5054	Over 4.75 VDC	
5055	Under 5.25 VDC	
*5056		Pulse Type 1
5057	10 sec, + to +, 3 V trip, 2nd to 3rd	
5060	Over 4.75 VDC	
5061	Under 5.25 VDC	
*5062		Pulse Type 2
5063	1 sec, + to +, 3 V trip, 1st to 3rd	
5064	Over 9.5 VDC	
5065	Under 10.5 VDC	
*5066		Pulse Type 3
5067	0.1 sec, + to +, 3 V trip, 1st to 3rd	
5070	Over 9.1 VDC	
5071	Under 10.1 VDC	
*5072		Pulse Type 4
5073	10 sec, - to -, 3 V trip, 1st to 3rd	
5074	Over 9.5 VDC	
5075	Under 10.5 VDC	
*5076		Pulse Type 4
5077	10 sec, - to +, 3 V trip, 1st to 3rd	

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the currenversion before use.

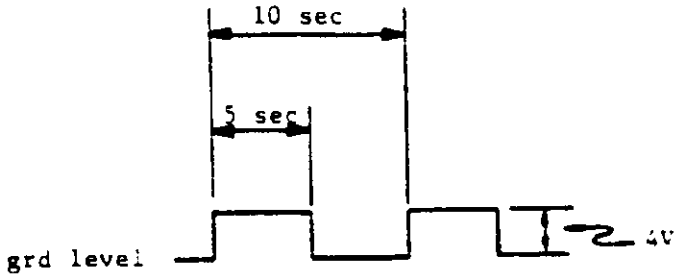


FIGURE 1. PULSE TYPE 1

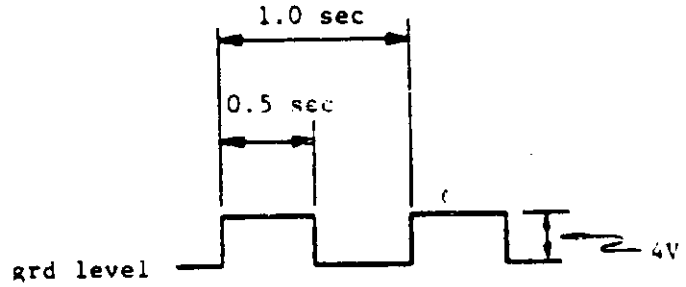


FIGURE 2. PULSE TYPE 2

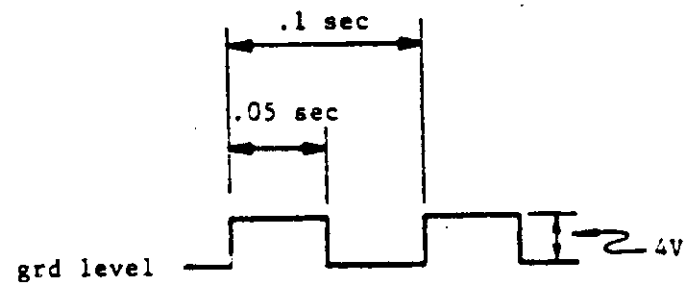


FIGURE 3. PULSE TYPE 3

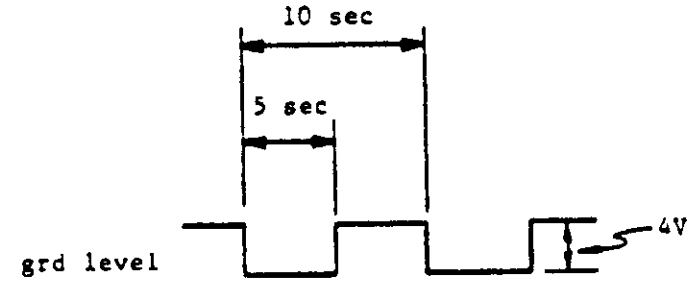


FIGURE 4. PULSE TYPE 4

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

5100	Over 4.75 VDC	
5101	Under 5.25 VDC	
*5102		Pulse Type 4
5103	10 sec, - to -, 3 V trip, 2nd to 3rd	
5104	Over 4.75 VDC	
5105	Under 5.25 VDC	
*5106	STOP	

Failure to meet any requirement of the functional tests shall be cause for rejection.

4.5.9 MOBILITY TEST. The test set shall be tested for Type I class 1 mobility in accordance with MIL-M-8090. Rejection criteria of MIL-M-8090 shall apply.

4.5.10 ENVIRONMENTAL TESTING. Prior to subjection of the test set to each environmental test the check tests shall be performed and results recorded on the data sheets of appendix I. During or after, as applicable, subjection to each environmental test, the check tests shall be again performed and compared with data recorded on the data sheets. Failure to duplicate the acceptable results of the initial check tests within the tolerances listed below shall be cause for rejection:

CHECK TEST	TOLERANCE AFTER ENVIRONMENTAL TEST
Load Select	± 5 percent
Delay Select	± 5 percent
Command Relay	± 5 percent
DC Voltage	± 3 percent
AC Voltage	± 3 percent
Resistance and Hi Pot	± 20 percent
Semi-Auto	None
Auto	None
Search	None
Printer	None

4.5.10.1 CHECK TESTS. The check tests shall be performed in the following steps and sequence:

a. Preparation

Step 1 - Jumper J201-X to J201-Z.
Step 2 - Close all the circuit breakers and turn the power ON. Allow time for the Test Set to warm up. It is at operational temperature when the amber light is out.
Step 3 - Place both the switches on the Printer in the ON position. Be sure there is an ample supply of paper in the Printer. Remove any paper in the Printer that has test numbers printed on it.

Source: https://assist.dla.mil -- Downloaded: 20260-21T15:33Z
Check the source to verify that this is the current version before use.

b. LOAD SELECTION TESTS

Step 1 - Place the MODE SELECT switch in the SEARCH position, and search to test number 1716.

Step 2 - Place the MODE SELECT switch in the MANUAL position and place the Impedance Bridge across TJ501 on the Simulated Load Box. Place switch S-1 to position 1. Record the resistance.

Step 3 - OPEN the OVERLOAD CB. Record the resulting resistance on data sheet number 1. CLOSE the OVERLOAD CB.

Step 4 - Use the START switch to step to Test Number 1717. Place switch S-1 to position 2. Record the resistance reading.

Step 5 - Repeat steps 3 and 4 for the following test numbers and positions of switch S-1.

SWITCH S-1	TEST NUMBER
3	2626
4	2636
5	3435
6	3535
7	3544

Step 6 - Remove the Impedance Bridge.

c. DELAY SELECTION TEST

Step 1 - Search to test number 7300.

Step 2 - Place the MODE SELECT switch to MANUAL.

Step 3 - Press the START button to step into test number 7301. Start the Elapsed Time Meter as soon as the test number appears in the window.

Step 4 - When the FAULT light comes on stop the Elapsed Time Meter and record the elapsed time.

Step 5 - Repeat Steps 3 and 4 for Test Numbers 7302 and 7303.

d. COMMAND RELAY TESTS

Step 1 - Search to Test Number 7311 and place switch S-1 to position 8.

Step 2 - Place the MODE SELECT TO MANUAL.

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Step 3 - Connect the differential VTVM across TJ501 observing polarity and set it for DC voltage measurements.

Step 4 - Press the START switch and step to Test Number 7312. Record the resulting voltage.

Step 5 - Repeat Step 4 for the following Test Numbers and positions of switch S-1. Be sure S-1 is in proper position prior to stepping into the corresponding Test Number.

Switch S-1	Test Number
8	7313
9	7314
9	7315
10	7316
10	7317
11	7320
11	7321

Step 6 - Disconnect the VTVM and place the multimeter across TJ501 and set it for resistance measurements.

Step 7 - Place switch S-1 to position 12, press the START switch and step into Test Number 7322. Record the resulting resistance.

Step 8 - Repeat Step 7 for the following Test Numbers and positions of S-1. Be sure switch S-1 is in the proper position prior to stepping into the corresponding Test Number.

Switch S-1	Test Number
12	7323
13	7324
13	7325
14	7326
14	7327
15	7330
15	7331

Step 9 - Remove the multimeter from TJ501.

e. DC VOLTAGE TESTS

Step 1 - Place S-1 in the T position and S-2 to position 1. Connect the DC power supply to simulated Load Box, observing polarity.

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Step 2 - Connect the VTVM across TJ502, observing polarity, and set it for DC voltage measurements.

Step 3 - Set the DC power supply to approximately 200 VDC and turn the B + ON.

Step 4 - Read approximately 200 VDC on the VTVM. Turn the B + OFF.

Step 5 - Jumper TJ501 (+) to TJ502 (-). Turn the B + ON and adjust it until the voltage is within the input limits specified for Test Number 7332 on data sheet number 1 as read on the VTVM.

Step 6 - Press the START switch and step into Test Number 7332. Record the physical appearance on the FAULT indicator lamp.

Step 7 - Repeat Step 6 for Test Number 7333.

Step 8 - Place S-2 to position 2. Adjust the B + until the voltage is within the input limits specified for Test Number 7334 on data sheet No. 1 as read on the VTVM.

Step 9 - Repeat Steps 6 and 7 for Test Numbers 7334 and 7335, respectively.

Step 10- Repeat Steps 8 and 9 for the following test numbers and positions of S-2. Be sure S-2 is in the proper position prior to stepping into the corresponding test number.

Switch S-2	Test Number
3	7336
3	7337
4	7340
4	7341
5	7342
5	7343

Step 11- Cut the B + OFF and remove all jumpers from TJ501 and TJ502.

f. AC VOLTAGE TESTS

Step 1 - Place S-2 in position 10, connect the VTVM across TJ502 and set it for AC voltages.

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Step 2 - Attach the Variac to the Simulated Load Box, set it to 115 VAC and turn it ON. Check the reading on the VTVM - it should be approximately 115 VAC. Cut the Variac OFF.

Step 3 - Place S-2 in position 6, and jumper TJ501 (+) to TJ502 (+) and TJ501 (-) to TJ502 (-). Turn the Variac ON and adjust it until the voltage is within the input limits specified for Test Number 7344 as read on the VTVM.

Step 4 - Press the START switch and step into Test Number 7344. Record the physical appearance of the FAULT indicator lamp on data sheet number 1.

Step 5 - Repeat Steps 3 and 4 for the following Test Numbers and positions of S-2. Be sure S-2 is in the proper position prior to stepping into the corresponding test number.

Switch S-2	Test Number
6	7342
7	7346
7	7347
8	7350
8	7351
9	7352
9	7353
10	7354
10	7355

Step 6 - With S-2 in position 10 and a test number of 7355 in the window, place the MODE SELECT switch to EXTERNAL. Measure the voltage across the external jacks on the Test Set. This voltage should be 115 VAC. Record this voltage.

Step 7 - Place the MODE SELECT switch to the MANUAL position. Cut the Variac OFF and disconnect the VTVM from the Test Set.

g. RESISTANCE AND HI-POT TESTS

Step 1 - Place S-2 in position 11 and jumper TJ501 (+) to TJ502 (+) and TJ501 (-) to TJ502 (-).

Step 2 - Press the START switch and step into Test Number 7356. Record the physical appearance of the FAULT indicator lamp.

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Step 3 - Repeat Steps 1 and 2 for the following test numbers and positions of S-2. Be sure S-2 is in the proper position prior to stepping into the test numbers.

Switch S-2	Test Number
11	7357
12	7360
12	7361
13	7362
13	7363
14	7364
14	7365
15	7366
15	7367
16	7370
16	7371
17	7372
17	7373
18	7374
18	7375
19	7376
19	7377
20	7400
20	7401
21	7402

Step 4 - Remove the jumpers between TJ501 and TJ502 and place S-2 to the T position.

h. SEMI-AUTOMATIC TEST

Step 1 - Place the MODE SELECT switch in the SEARCH position and search to Test Number 7355.

Step 2 - Place the MODE SELECT switch in the SEMI-AUTOMATIC position. Press the START switch if required. The Test Set should step into Test Number 7356, make a measurement, then step into Test Number 7357. The FAULT indicator lamp should come ON at this time and the operation of the Test Set should stop. Record the results.

i. AUTOMATIC TEST

Step 1 - Place the MODE SELECT switch in the AUTOMATIC position.

Step 2 - Press the START switch, if required. The Test Set should step into Test Number 7360, make a measurement, then step into Test Number 7361. At this

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

time, the FAULT indicator lamp should come ON. The Test Set should continue to step through the programmed tests and the FAULT lamp should remain on.

Step 3 - Press the STOP button when the Test Number in the window is 7402. Record the results of this test.

j. SEARCH TEST

Step 1 - Place the MODE SELECT SWITCH in the SEARCH position, and search to test number 1000. CAUTION: If it appears that the Test Set is not searching properly, press the STOP switch. If the Test Set is not stopped in time, the tape will run off the reel.

Step 2 - Place the MODE SELECT switch in the MANUAL position.

k. PRINTER TEST

Step 1 - Open the door to the printer unit and remove the list of test numbers printed on the sheet.

Step 2 - Check the Test Numbers printed out by the printer against the test numbers of the following list.

Test Number	Test Number	Test Number	Test Number
7301	7341	7355	7371
7302	7343	7357	7373
7303	7345	7361	7375
7333	7347	7363	7377
7335	7351	7365	7401
7337	7353	7367	

All of the above listed test numbers should be on the list printed out by the Printer. Record any discrepancies.

Step 3 - Check the test numbers printed out by the printer against the test numbers of the following list.

Test Number	Test Number	Test Number	Test Number
1716	7315	7327	7350
1717	7316	7330	7352
2626	7317	7331	7354
2636	7320	7332	7356
3435	7321	7334	7360
3535	7322	7336	7362
3544	7323	7340	7364
7312	7324	7342	7366
7313	7325	7344	7370
7314	7326	7346	7400

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

None of the above listed test numbers should be on the list printed out by the Printer. Record any discrepancies.

Step 4 - Place both switches on the Printer to the OFF position.

1. EQUIPMENT SHUT-DOWN

Step 1 - Turn the power OFF and OPEN all of the circuit breakers.

4.5.10-2 ENVIRONMENTAL TESTS. Environmental tests shall consist of the following tests performed in accordance with the Standards, Specifications and exceptions listed below:

TEST	STANDARD OR SPECIFICATION	EXCEPTION
a. High Temperature		
(1) Operational Ambient	MIL-STD-810, Method 501, Procedure I	None
(2) Storage Temperature	MIL-STD-810, Method 501, Procedure I	a
b. Low Temperature	MIL-STD-810, Method 502, Procedure I	None
c. Humidity	MIL-STD-810, Method 507, Procedure I	None
d. Low Pressure	MIL-STD-810, Method 500, Procedure I	b
e. Salt Fog	MIL-STD-810, Method 509, Procedure I	None
f. Rain	MIL-STD-810, Method 506, Procedure I	None
g. Sand and Dust	MIL-STD-810, Method 510, Procedure I	None
h. R.F. Interference	MIL-I-26600, Class I	c
i. Explosion Proof	MIL-STD-810, Method 511, Procedure I	None

a. High temperature shall be 100°C (212°F).

b. Final Test at 10,000 feet

c. "B" test at 25 feet.

4.5.11 OPERATIONAL RELIABILITY TEST. With a test tape programmed in accordance with appendix IV the test set shall be placed in the semi-automatic mode and operated continuously for 500 hours. Any failure prior to the end of 150 hours of continuous operation shall be cause for rejection. A mean time before failure (MTBF) of at least 150 hours must be demonstrated.

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

NOTE: Detailed instructions for preparation of tapes is furnished in section II, T.O. 11N-T5015A-2.

4.5.12 ACTION UPON FAILURE. When a test set under test is rejected, an analysis of the cause of failure shall be made. If the analysis indicates that the failure was a random failure, the failed component shall be replaced and the test resumed. If the analysis indicates that the failure was the result of workmanship or other conditions, under the control of the contractor, the item shall be repaired or reworked and the test resumed. The procuring activity shall be notified of all failures together with their forecast impact on operational performance.

5. PREPARATION FOR DELIVERY. Preparation for delivery shall be in accordance with MIL-E-17555.

5.1 MARKING. Interior and exterior containers shall be marked in accordance with MIL-STD-129. Nomenclature shall be:

TEST SET, WEAPON ELECTRICAL WIRING SYSTEMS AN/AWM-13A

6. NOTES

6.1 INTENDED USE. The AN/AWM-13A is designed and intended for use as an automatic electrical checkout tool for a wide variety of electrical systems, subsystems and equipment. It requires only an analysis of the equipment under test and tape and interconnecting cable preparation to a new test item.

6.2 ORDERING DATA. Procurement documents shall specify the following:

a. Title, number and date of this specification.

b. Whether preproduction tests will be conducted by the procuring activity.

c. Level of preservation, packaging and packing.

d. Provisions for procurement of the following items, used with but not part of, the test set:

64D13076	Cable Assembly, Special Purpose, Electrical, Branched CX-10065/AWM-13
64D13077	Cable Assembly, Special Purpose, Electrical, Branched CX-10066/AWM-13
64D13078	Cable Assembly, Special Purpose, Electrical, Branched CX-10067/AWM-13
64D13079	Cable Assembly, Special Purpose, Electrical, Branched CX-10068/AWM-13

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

64D13080	Cable Assembly, Special Purpose, Electrical, Branched CX-10069/AWM-13
64D13081	Cable Assembly, Special Purpose, Electrical, Branched CX-10070/AWM-13

6.2.1 PREPRODUCTION TEST SAMPLES. It is expected that the contract or purchase order will specify that a minimum of three units representative of the production test set shall be submitted to the procuring activity for test and evaluation. The invitation for bids and the contract or purchase order should specify the point of inspection for these tests.

6.3 PRODUCTION DELIVERY. No production items should be delivered prior to approval of the preproduction samples.

6.4 DEFINITIONS

a. PREPRODUCTION TESTS. Preproduction tests are those tests performed prior to production on representative samples of the production equipment to demonstrate that the equipment meets the requirements of this specification.

b. ACCEPTANCE TESTS. Acceptance tests are those tests accomplished on representative samples of equipment submitted for acceptance under a contract to determine conformance to the requirements of this specification, and to determine that the equipment is equivalent in performance and construction to the approved preproduction samples.

NOTICE: When Government drawings, specifications, or other data are used for any purpose other than in connection with a definitely related Government procurement operation, the United States Government thereby incurs no responsibility nor any obligation whatsoever; and the fact that the Government may have formulated, furnished, or in any way supplied the said drawings, specifications, or other data, is not to be regarded by implication or otherwise as in any manner licensing the holder or any other person or corporation, or conveying any rights or permission to manufacture, use or sell any patented invention that may in any way be related thereto.

Custodian
Air Force - 15
WLIR/EAC/pfg

Preparing Activity
Air Force - 15

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

APPENDIX I

DATA SHEETS

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

APPENDIX I

DATA SHEET NO. 1
Sheet 1 of 6

DATA SHEET NO. 1

Equipment _____ Date _____

Item _____ Serial No. _____ Sheet _____ of _____

Test _____ Start Time _____

Test Conditions _____ Stop Time _____

Test Location _____ Recorded by _____

Test LOAD SELECTION TESTS (Resistor Assembly MX-7304/AWM-13A)

LOAD	TEST NO.	MEASURE FROM	MEASURE TO	MEASUREMENT LIMITS (ohms)	READING OVERLOAD CB CLOSED	READING OVERLOAD CB OPEN	REMARKS
S1-1*	1716	J102-C	J103-C	276k - 324k			
S1-2	1717	J104-D	J105-M	36k - 42k			
S1-3	2626	J106-N	J104-W	6.75k - 7.45k			
S1-4	2636	J105-O	J103-X	.95k - 1.05k			
S1-5	3435	J103-P	J106-Y	475 - 525			
S1-6	3535	J101-R	J103-Z	23.7 - 26.3			
S1-7	3544	J102-a	J102AG	5.95 - 6.65			

* All other switches to be in transfer position "T"

Test DELAY SELECTION TESTS

TEST No.	DELAY LIMITS	READING	REMARKS
7301	8 sec - 12 sec		
7302	48 sec - 72 sec		
7303	2.4 min - 3.6 min		

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test COMMAND RELAY TESTS
(Control, Electronic Command C-7056/AWM-13A and C-8004/AWM-13A)

LOAD	TEST NO.	MEASURE		MEASUREMENT LIMITS	READING	REMARKS
		FROM	TO			
S1-8	7312	1J206-H	1J206-Z	24 - 32 VDC		
S1-8	7313	1J206-H	1J206-Z	0 VDC		
S1-9	7314	2J206-H	2J206-Z	24 - 32 VDC		
S1-9	7315	2J206-H	2J206-Z	0 VDC		
S1-10	7316	1J206-J	1J206-Z	24 - 32 VDC		
S1-10	7317	1J206-J	1J206-Z	0 VDC		
S1-11	7320	2J206-J	2J206-Z	24 - 32 VDC		
S1-11	7321	2J206-J	2J206-Z	0 VDC		
S1-12	7322	1J206-M	1J206-Z	1 ohm or less		
S1-12	7323	1J206-M	1J206-Z	10 meg ohms or more		
S1-13	7324	2J206-M	2J206-Z	1 ohm or less		
S1-13	7325	2J206-M	2J206-Z	10 meg ohms or more		
S1-14	7326	1J206-N	1J206-Z	1 ohm or less		
S1-14	7327	1J206-N	1J206-Z	10 meg ohms or more		
S1-15	7330	2J206-N	2J206-Z	1 ohm or less		
S1-15	7331	2J206-N	2J206-Z	10 meg ohms or more		

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

Test VOLTAGE RESISTANCE AND HIGH POTENTIAL TESTS

DATA SHEET NO. 1
Sheet 3 of 6

LOAD	TEST NO.	INPUT		INPUT LIMITS	INPUT	FAULT LAMP		REMARKS
		FROM	TO			OFF	ON	
S2-1	7332	J101-AG	J101-AF	199-201 VDC				
S2-1	7333	J101-AG	J101-AF	199-201 VDC				
S2-2	7334	J101-AD	J101-AE	49.75 - 50.25 VDC				
S2-2	7335	J101-AD	J101-AE	49.75 - 50.25 VDC				
S2-3	7336	J101-AB	J101-AC	2.49 - 2.51 VDC				
S2-3	7337	J101-AB	J101-AC	2.49 - 2.51 VDC				
S2-4	7340	J101-AA	J101-B	398 - 402 m VDC				
S2-4	7341	J101-AA	J101-B	79.6 - 80.4 m VDC				
S2-5	7342	J101-y	J101-B	79.6 - 80.4 m VDC				
S2-5	7343	J101-y	J101-B	79.6 - 80.4 m VDC				
S2-6	7344	J101-w	J101-x	79.6 - 80.4 m VAC				
S2-6	7345	J101-W	J101-x	79.6 - 80.4 m VAC				
S2-7	7346	J101-t	J101-u	398 - 402 m VAC				
S2-7	7347	J101-t	J101-u	398 - 402 m VAC				
S2-8	7350	J101-r	J101-s	2.49 - 2.51 VAC				
S2-8	7351	J101-r	J101-s	2.49 - 2.51 VAC				
S2-9	7352	J101-q	J101-B	49.75 - 50.25 VAC				

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test VOLTAGE RESISTANCE AND HIGH POTENTIAL TESTS, contd. DATA SHEET NO. 1
Sheet 4 of 6

LOAD	TEST NO.	INPUT FROM	INPUT TO	INPUT LIMITS	INPUT	FAULT LAMP OFF	FAULT LAMP ON	REMARKS
S2-9	7353	J101-q	J101-B	49.75 - 50.25 VAC				
S2-10	7354	J101-n	J103-B	114.5 - 115.5 VAC				
S2-10	7355	J101-n	J103-B	114.5 - 115.5 VAC				
S2-10	7355	J101-n	J103-B	114.5 - 115.5 VAC				External Meter Check
S2-11	7356	J103-j	J103-k	99.5 - 100.5 ohm				
S2-11	7357	J103-j	J103-k	99.5 - 100.5 ohm				
S2-12	7360	J103-k	J103-g	9.95 - 10.05 k ohm				
S2-12	7361	J103-k	J103-g	9.95 - 10.05 k ohm				
S2-13	7362	J103-e	J103-f	99.5 - 100.5 k ohm				
S2-13	7363	J103-e	J103-f	99.5 - 100.5 k ohm				
S2-14	7364	J103-c	J103-d	.995 - 1.005 meg ohm				
S2-14	7365	J103-c	J103-d	.995 - 1.005 meg ohm				
S2-15	7366	J103-a	J103-B	99.5 - 100.5 ohm				
S2-15	7367	J103-a	J103-B	99.5 - 100.5 ohm				
S2-16	7370	J103-Y	J103-A	9.95 - 10.05 meg ohm				
S2-16	7371	J103-Y	J103-A	9.95 - 10.05 meg ohm				
S2-17	7372	J103-W	J103-X	21.89 - 22.11 meg ohm				

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test VOLTAGE RESISTANCE AND HIGH POTENTIAL TESTS, contd.

DATA SHEET NO. 1
Sheet 5 of 6

LOAD	TEST NO.	INPUT FROM	INPUT TO	INPUT LIMITS	INPUT	FAULT LAMP OFF	FAULT LAMP ON	REMARKS
S2-17	7373	J103-W	J103-X	21.89 - 22.11 meg ohm				
S2-18	7374	J102-U	J102-V	21.89 - 22.11 meg ohm				
S2-18	7375	J102-U	J102-V	21.89 - 22.11 meg ohm				
S2-19	7376	J102-S	J102-B	21.89 - 22.11 meg ohm				
S2-19	7377	J102-S	J102-B	21.89 - 22.11 meg ohm				
S2-20	7400	J102-N	J102-O	21.89 - 22.11 meg ohm				
S2-20	7401	J102-N	J102-O	21.89 - 22.11 meg ohm				
S2-21	7402	J102-L	J102-M	Short				

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

PARAGRAPH	TEST	RESULTS
3.5.5	Semi-Automatic Test	
3.5.6	Automatic Test	
3.5.7	Search Test	
3.5.8	Printer Test	

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

APPENDIX I

DATA SHEET NO. 2

Equipment _____ Date _____

Item _____ Serial No. _____ Sheet _____ of _____

Test High Temperature _____ Start Time _____

Test Conditions _____ Stop Time _____

Test Location _____ Recorded by _____

TIME	Thermocouple Temperature						REMARKS
	1	2	3	4	5	6	

Instruments Used

Witnesses: _____ _____

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

APPENDIX I

DATA SHEET NO. 3

Equipment _____ Date _____

Item _____ Serial No. _____ Sheet _____ of _____

Test Low Temperature Start Time _____

Test Conditions _____ Stop Time _____

Test Location _____ Recorded by _____

TIME	Thermocouple Temperature						REMARKS
	1	2	3	4	5	6	

Instruments Used

Witnesses: _____ _____

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

APPENDIX I

DATA SHEET NO. 4

Equipment _____ Date _____

Item _____ Serial No. _____ Sheet _____ of _____

Test Humidity Start Time _____

Test Conditions _____ Stop Time _____

Test Location _____ Recorded by _____

Date	Time	Temperature	Humidity	Remarks

Instruments Used:

Witnesses: _____ _____

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

APPENDIX I

DATA SHEET NO. 5

Equipment _____ Date _____

Item _____ Serial No. _____ Sheet _____ of _____

Test Altitude _____ Start Time _____

Test Conditions _____ Stop Time _____

Test Location _____ Recorded by _____

Time	Altitude	Temperature	Remarks

Instruments used:

Witnesses: _____ _____

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

APPENDIX I

DATA SHEET NO. 6

Equipment _____ Date _____

Item _____ Serial No. _____ Sheet _____ of _____

Test Vibration _____ Start Time _____

Test Conditions _____ Stop Time _____

Test Location _____ Recorded by _____

Plane	Time	Frequency or Range	Amplitude or G's				Remarks
			Input	1	2	3	

Instruments Used:

Witnesses: _____ _____

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

APPENDIX I

DATA SHEET NO. 7

Equipment _____ Date _____

Item _____ Serial No. _____ Sheet _____ of _____

Test Rain _____ Start Time _____

Test Conditions _____ Stop Time _____

Test Location _____ Recorded by _____

Time	Temperature Water	Rainfall (Inches per Hour)	Remarks

Instruments Used:

Witnesses: _____ _____

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

APPENDIX I

DATA SHEET NO. 8

Equipment _____ Date _____

Item _____ Serial No. _____ Sheet _____ of _____

Test Salt Fog _____ Start Time _____

Test Conditions _____ Stop Time _____

Test Location _____ Recorded by _____

Time	Temperature	Rate	Solution Composition		Remarks
			NaCl	H_2O	

Instruments Used:

Witnesses: _____ _____

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

APPENDIX I

DATA SHEET NO. 9

Equipment _____ Date _____

Item _____ Serial No. _____ Sheet _____ of _____

Test Sand and Dust _____ Start Time _____

Test Conditions _____ Stop Time _____

Test Location _____ Recorded by _____

Time	Density	Composition	Velocity	Temperature	Relative Humidity	Remarks

Instruments Used:

Witnesses: _____ _____

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

APPENDIX I

DATA SHEET NO. 10

Equipment _____ Date _____

Item _____ Serial No. _____ Sheet _____ of _____

Test Shock Start Time _____

Test Conditions _____ Stop Time _____

Test Location _____ Recorded by _____

Plane	Time	Impact Duration	G's	Drop	Remarks

Instruments Used:

Witnesses: _____ _____

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

APPENDIX I

DATA SHEET NO. 11

Equipment _____ Date _____

Item _____ Serial No. _____ Sheet _____ of _____

Test Explosion Proof _____ Start Time _____

Test Conditions _____ Stop Time _____

Test Location _____ Recorded by _____

Time	Altitude	Temperature	Air - Vapor Ratio	Remarks

Instruments Used:

Witnesses: _____ _____

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

APPENDIX I

DATA SHEET NO. 12

Equipment _____ Date _____

Item _____ Serial No. _____ Sheet _____ of _____

Test Physical Examination Start Time _____

Test Conditions _____ Stop Time _____

Test Location _____ Recorded by _____

Date	Test	Appearance

Witnesses: _____ _____

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

APPENDIX II

TEST TAPE PREPARATION

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

TEST TAPE PREPARATION

1. INTRODUCTION. The AN/AWM-13A Test Set is controlled by a punched tape from which 80 bits of information are read in parallel for each test programmed. Information is transmitted to the Test Set by the presence or absence of a hole in the tape at the location of each information bit.

2. PURPOSE. The Test Tape, as prepared in paragraph 3, shall be used to program the AN/AWM-13A Test Set through a representative number of its basic functions and capabilities. The tests were selected from paragraph 4.3, the Acceptance Tests. The tests selected cover the basic capabilities and functions of the Test Set and will serve as an indication of the operational performance of the Test Set under environmental stresses.

3. TEST TAPE PREPARATION. The Test Tape shall be prepared from the information given in Table I. One Test Tape shall be prepared for each unit under test. The Test Tape preparation procedure is set forth in SECTION II - PROGRAMMING, of the AN/AWM-13A Handbook T.O. 11N-T5015A-2 and in SECTION VI, T.O. 11N-T5015A-4.

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

TABLE I

TEST TAPE PROGRAMMING

The function is not to be programmed if space is blank

Frame No.	Test No.	Test Point #1	Test Point #2	Limit Select	Command	Measurement Select	Load Select	Delay	Stop	Index
1	1000								X	X
2	1716	J102-C	J103-C				300 K			X
3	1717	J104-D	J105-M				39 K			X
4	2626	J106-N	J104-W				7.1 K			X
5	2636	J105-0	J103-X				1 K			X
6	3435	J103-P	J106-Y				500 ohm			X
7	3535	J101-R	J103-Z				25 ohm			X
8	3544	J102-a	J102-AG				6.3 ohm			
9	7300								X	X
10	7301							10 sec		X
11	7302							60 sec		X
12	7303							3 min		X
13	7311								X	X
14	7312	LJ206-H	LJ206-Z		28 VDC					X
15	7313	LJ206-H	LJ206-Z		0 VDC					X

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

TABLE I (Contd.)

TEST TAPE PROGRAMMING

Frame No.	Test No.	Test Point #1	Test Point #2	Limit Select	Command	Measurement Select	Load Select	Delay	Stop	Index
16	7314	2J206-H	2J206-Z		28 VDC					X
17	7315	2J206-H	2J206-Z		0 VDC					X
18	7316	1J206-J	1J206-Z		28 VDC					X
19	7317	1J206-J	1J206-Z		0 VDC					X
20	7320	2J206-J	2J206-Z		28 VDC					X
21	7321	2J206-J	2J206-Z		0 VDC					X
22	7322	1J206-M	1J206-Z		$\leq$ 1 ohm					X
23	7323	1J206-M	1J206-Z		$\geq$ 10 meg					X
24	7324	2J206-M	2J206-Z		$\leq$ 1 ohm					X
25	7325	2J206-M	2J206-Z		$\geq$ 10 meg					X
26	7326	1J206-N	1J206-Z		$\leq$ 1 ohm					X
27	7327	1J206-N	1J206-Z		$\geq$ 10 meg					X
28	7330	2J206-N	2J206-Z		$\leq$ 1 ohm					X
29	7331	2J206-N	2J206-Z		$\geq$ 10 meg				X	X
30	7332	J101-AG	J101-AF	Under 206 VDC		DC Voltage				X
31	7333	J101-AG	J101-AF	Over 194 VDC		DC Voltage				X

Source: https://assist.dla.mil -- Downloaded: 2026-02-21T15:33Z
Check the source to verify that this is the current version before use.

TABLE 1 (Contd.)

TEST TAPE PROGRAMMING

Frame No.	Test No.	Test Point #1	Test Point #2	Limit Select	Command	Measurement Select	Load Select	Delay	Stop	Index
32	7334	J101-AD	J101-AE	Under 51.5 VDC		DC Voltage				X
33	7335	J101-AD	J101-AE	Over 48.5 VDC		DC Voltage				X
34	7336	J101-AB	J101-AC	Under 2.575 VDC		DC Voltage				X
35	7337	J101-AB	J101-AC	Over 2.425 VDC		DC Voltage				X
36	7340	J101-AA	J101-B	Under 412 M VDC		DC Voltage				X
37	7341	J101-AA	J101-B	Over 388 M VDC		DC Voltage				X
38	7342	J101-y	J101-B	Under 82.4 M VDC		DC Voltage				X
39	7343	J101-y	J101-B	Over 77.6 M VDC		DC Voltage				X
40	7344	J101-2	J101-x	Under 82.4 M VAC		AC Voltage				X
41	7345	J101-w	J101-x	Over 77.6 M VAC		AC Voltage				X
42	7346	J101-t	J101-u	Under 412 M VAC		AC Voltage				X
43	7347	J101-t	J101-u	Over 388 M VAC		AC Voltage				X
44	7350	J101-r	J101-s	Under 2.575 VAC		AC Voltage				X
45	7351	J101-r	J101-s	Over 2.425 VAC		AC Voltage				X
46	7352	J101-q	J101-B	Under 51.5 VAC		AC Voltage				X
47	7353	J101-q	J101-B	Over 48.5 VAC		AC Voltage				X

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

TABLE I (Contd.)

TEST TAPE PROGRAMMING

Frame No.	Test No.	Test Point #1	Test Point #2	Limit Select	Command	Measurement Select	Load Select	Delay	Stop	Index
48	7354	J101-n	J103-B	Under 118.5 VAC		AC Voltage				X
49	7355	J101-n	J103-B	Over 111.5 VAC		AC Voltage				X
50	7356	J103-j	J103-k	Under 103 ohm		Resistance				X
51	7356	J103-j	J103-k	Over 97 ohm		Resistance				X
52	7360	J103-k	J103-g	Under 10.3 K		Resistance				X
53	7361	J103-k	J103-g	Over 9.7 K		Resistance				X
54	7362	J103-e	J103-f	Under 103 K		Resistance				X
55	7363	J103-e	J103-f	Over 97 K		Resistance				X
56	7364	J103-c	J103-d	Under 1.03 meg		Resistance				X
57	7365	J103-c	J103-d	Over .97 meg		Resistance				X
58	7366	J103-a	J103-B	Under 103 ohm		Resistance				X
59	7367	J103-a	J103-B	Over 97 ohm		Resistance				X
60	7370	J103-Y	J103-Z	Under 10.3 meg		Resistance				X
61	7371	J103-Y	J103-Z	Over 9.7 meg		Resistance				X
62	7372	J103-W	J103-X	Under 22.7 meg		Resistance				X
63	7373	J103-W	J103-X	Over 21.3 meg		Resistance				X

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

TABLE I (Contd.)

TEST TAPE PROGRAMMING

Frame No.	Test No.	Test Point #1	Test Point #2	Limit Select	Command	Measurement Select	Load Select	Delay	Stop	Index
64	7374	J102-U	J102-V	Under 22.7 meg		Resistance				X
65	7375	J102-U	J102-V	Over 21.3 meg		Resistance				X
66	7376	J102-S	J102-B	Under 22.7 meg		Resistance				X
67	7377	J102-S	J102-B	Over 21.3 meg		Resistance				X
68	7400	J102-N	J102-O	Under 22.7 meg		Resistance				X
69	7401	J102-N	J102-O	Over 21.3 meg		Resistance				X
70	7402	J102-L	J102-M	Under 1/2 ohm		Resistance				X
71	7403	J102-L	J102-M	Over 0 ohm		Resistance				X
72	7404								X	X

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

OPERATION OF THE RESISTOR ASSEMBLY MX-7304/AWM-13A

1. PURPOSE. The Resistor Assembly MX-7304/AWM-13A was designed to facilitate the performance of the operational tests on the AN/AWM-13A throughout the qualification test program. It is to be used for operational checkout and quality verification of the AN/AWM-13A.

2. FUNCTIONS

2.1 SWITCHING CIRCUIT. The MX-7304/AWM-13A is basically a manual switching circuit. It selects those two pin points on the Matrix Unit corresponding to a given test number and brings them to TJ501 on the control panel of the Load Box. Having the two pin points at TJ501, the operator can perform the test on these two pin points as required by the operational test procedure. The switch positions of the Load Box along with the Test Number and corresponding pin points are given in Table I.

2.2 LOAD CIRCUIT. A load circuit consisting of DC voltages, AC voltages and resistances is provided to supply the loads to the AN/AWM-13A as required in the Operational Tests. The AC and DC voltages utilize a voltage divider network and adjustable supplies for fine control of the input load to the AN/AWM-13A. The resistances are fixed resistances and are within one half of one percent of the required value of the Operational Tests.

3. CIRCUITRY

3.1 SWITCHING CIRCUIT. The switching circuit portion of the MX-7304/AWM-13A consists of three (TJ101, TJ102, TJ103) CA-6502-24-2SP-112 connectors, one (2-1) 2 pole - 17 position - non-shorting switch, and one (S-2) 4 pole - 23 position - non-shorting switch. These two switches and three connectors are wired as shown in Table II and Table III.

3.2 LOAD CIRCUIT. The load circuit shown in Figure 1 is wired into Decks 3 and 4 of S-2. Switch S-2 transfers the selected load to TJ502 where it can be jumpered into TJ501 and from there into the Test Set. The load circuit only selects one load at a time and is capable of putting this load across pre-selected test points. There is no possibility of applying a selected load to the wrong pair of test points.

4. TEST CABLE. One test cable is supplied with each MX-7304/AWM-13A. The end of the cable that connects into the MX-7304/AWM-13A has three connectors according to the following schedule:

TJ101 - MS3106B24-28S
TJ102 - MS3106B24-28S
TJ103 - MS3106B24-28S

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the currentversion before use.

The end of the cable that connects into the Test Set has eight connectors according to the following schedule:

J101	-	MS3106R32-2010-10PZ
J102	-	MS3106R32-2010-10S
J103	-	MS3I06R32-2010-10PY
J104	-	MS3106R32-2010-10PX
J105	-	MS3106R32-2010-10PW
J106	-	MS3106R32-2010-10P
J206	-	MS3106R24-28S
J206	-	MS3106R24-28S

The connectors listed above are wired according to the schedule given in Table IV.

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

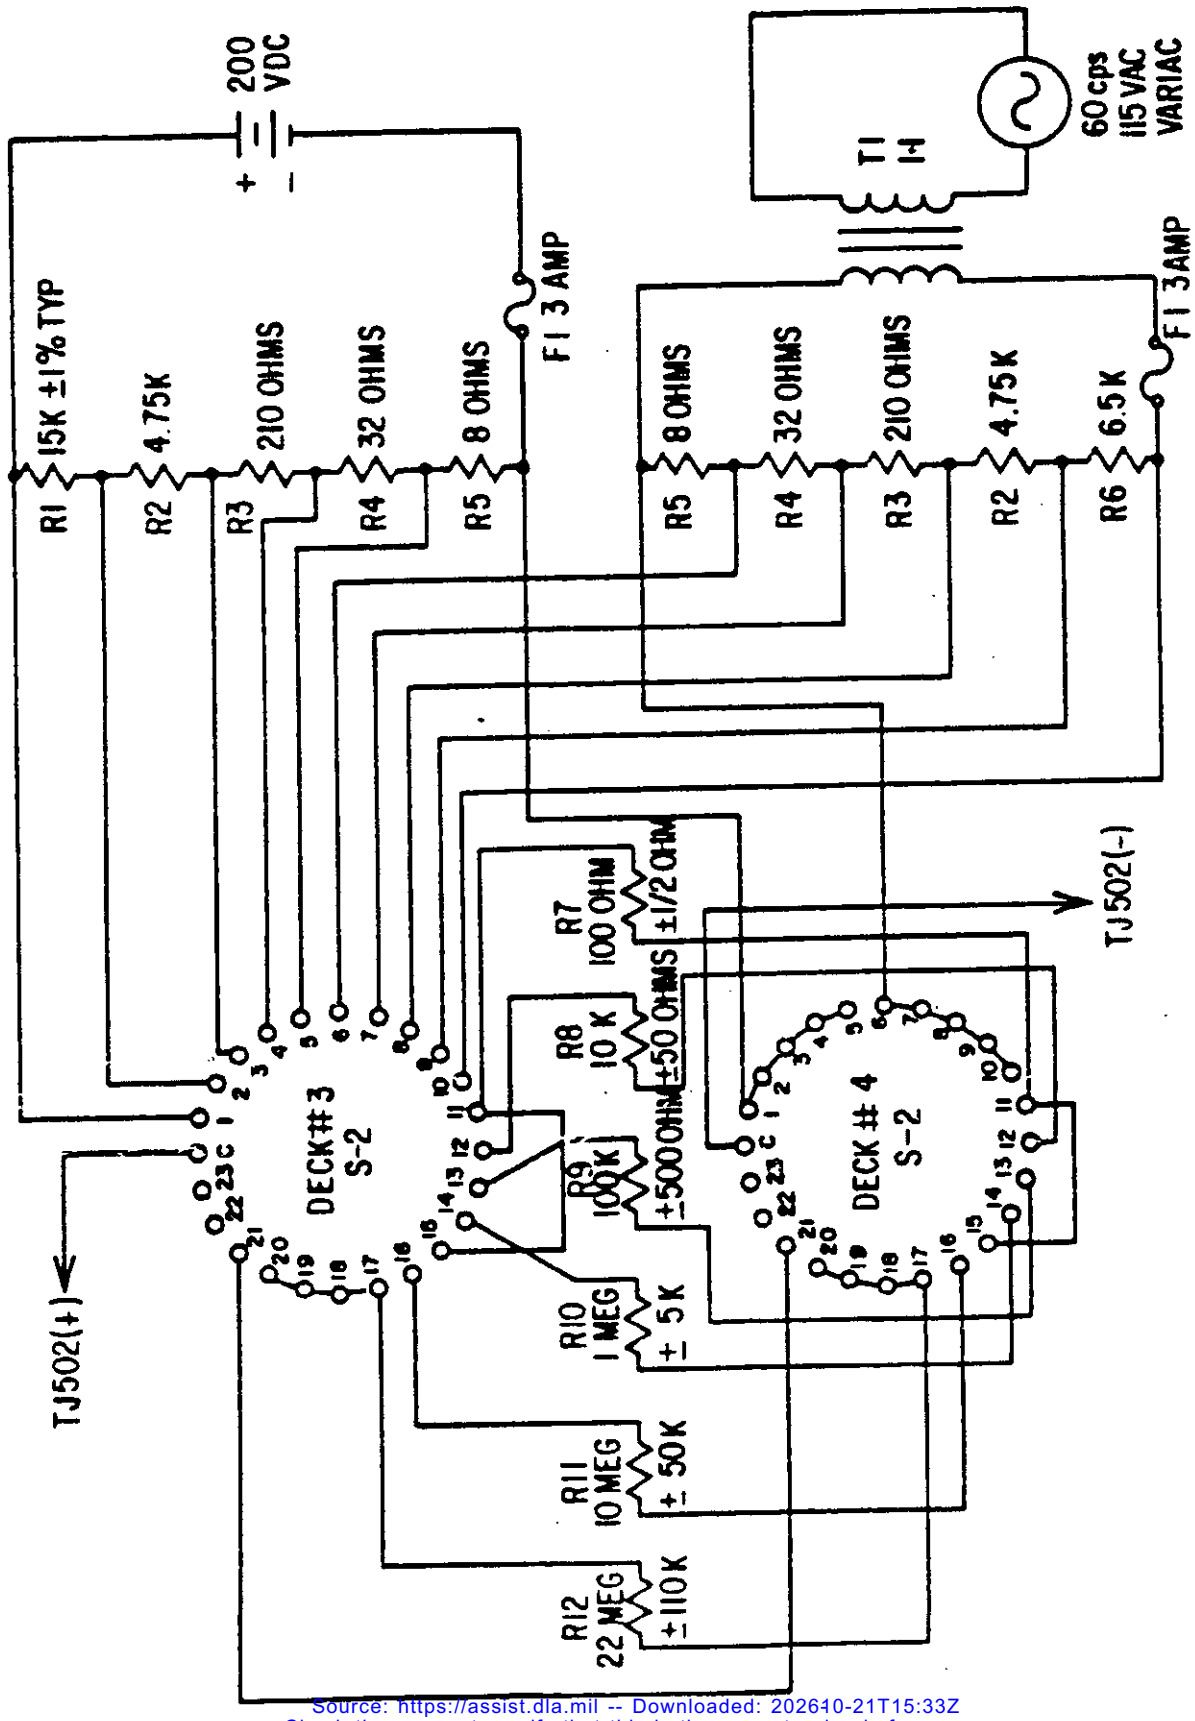


FIGURE 2 LOAD CIRCUIT, S-2, RESISTOR ASSEMBLY MX-7304/AWM-13A

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

TABLE I

AN/AWM-13A TEST CIRCUIT

Test No.	Switch Position	Test Points	
		From	To
1716	S1-1*	J102-C	J103-C
1717	S1-2	J104-D	J105-M
2626	S1-3	J106-N	J104-W
2636	S1-4	J105-0	J103-X
3435	S1-5	J103-P	J106-Y
3535	S1-6	J101-R	J103-Z
3544	S1-7	J102-a	J102-AG
7312	S1-8	1J206-H	1J206-Z
7313	S1-8	1J206-H	1J206-Z
7314	S1-9	2J206-H	2J206-Z
7315	S1-9	2J206-H	2J206-Z
7316	S1-10	1J206-J	1J206-Z
7317	S1-10	1J206-J	1J206-Z
7320	S1-11	2J206-J	2J206-Z
7321	S1-11	2J206-J	2J206-Z
7322	S1-12	1J206-M	1J206-Z
7323	S1-12	1J206-M	1J206-Z
7324	S1-13	2J206-M	2J206-Z
7325	S1-13	2J206-M	2J206-Z
7326	S1-14	1J206-N	1J206-Z
7327	S1-14	1J206-N	1J206-Z
7330	S1-15	2J206-N	2J206-Z
7331	S1-15	2J206-N	2J206-Z
7332	S2-1	J101-AG	J101-AF
7333	S2-1	J101-AG	J101-AF
7334	S2-2	J101-AD	J101-AE
7335	S2-2	J101-AD	J101-AE
7336	S2-3	J101-AB	J101-AC
7337	S2-3	J101-AB	J101-AC
7340	S2-4	J101-AA	J101-B
7341	S2-4	J101-AA	J101-B
7342	S2-5	J101-v	J101-B
7343	S2-5	J101-y	J101-B
7344	S2-6	J101-w	J101-x
7345	S2-6	J101-w	J101-x
7346	S2-7	J101-t	J101-u
7347	S2-7	J101-t	J101-u
7350	S2-8	J101-r	J101-s
7351	S2-8	J101-r	J101-s
7352	S2-9	J101-q	J101-B

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

TABLE I (Contd.)

AN/AWM-13A TEST CIRCUIT

Test No.	Switch Position	Test Points	
		From	To
7353	S2-9	J101-q	J101-B
7354	S2-10	J103-n	J103-B
7355	S2-10	J103-n	J103-B
7356	S2-11	J103-j	J103-k
7357	S2-11	J103-j	J103-k
7360	S2-12	J103-h	J103-g
7361	S2-12	J103-h	J103-g
7362	S2-13	J103-e	J103-f
7363	S2-13	J103-e	J103-f
7364	S2-14	J103-c	J103-d
7365	S2-14	J103-c	J103-d
7366	S2-15	J103-a	J103-B
7367	S2-15	J103-a	J103-B
7370	S2-16	J103-Y	J103-Z
7371	S2-16	J103-Y	J103-Z
7372	S2-17	J103-W	J103-X
7373	S2-17	J103-W	J103-X
7374	S2-18	J102-U	J102-V
7375	S2-18	J102-U	J102-V
7376	S2-19	J102-S	J102-B
7377	S2-19	J102-S	J102-B
7400	S2-20	J102-N	J102-O
7401	S2-20	J102-N	J102-O
7402	S2-21	J102-L	J102-M

* Switch S-2 has to be in position 23 when S-1 is being used.

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

TABLE II

WIRING SCHEDULE FOR SWITCH S-1

Deck #1		Deck #2	
Position	Connector and Pin Number	Position	Connector and Pin Number
1	TJ101-A	1	TJ101-M
2	TJ101-B	2	TJ101-N
3	TJ101-C	3	TJ101-P
4	TJ101-D	4	TJ101-Q
5	TJ101-E	5	TJ101-R
6	TJ101-F	6	TJ101-S
7	TJ101-G	7	TJ101-T
8	TJ101-H	8	TJ101-U
9	TJ101-J	9	TJ101-V
10	TJ101-K	10	S1-D2-P8
11	TJ101-L	11	S1-D2-P9
12	TJ101-W	12	S1-D2-P10
13	TJ101-X	13	S1-D2-P11
14	TJ101-Y	14	S1-D2-P12
15	TJ101-Z	15	S1-D2-P13
16	Open	16	Open
17	Open	17	Open
C	S2-D1-P23	C	S2-D2-P23

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

TABLE III

WIRING SCHEDULE FOR SWITCH S-2

Deck #1		Deck #2		Deck #3		Deck #4	
Position	Connector and Pin Number	Position	Connector and Pin Number	Position	Connector and Pin Number	Position	Connector and Pin Number
1	TJ102-K	1	TJ102-E	1		1	
2	TJ102-J	2	TJ102-D	2		2	
3	TJ102-H	3	TJ102-C	3		3	
4	TJ102-G	4	TJ102-B	4		4	
5	TJ102-F	5	TJ102-A	5		5	
6	TJ102-Q	6	TJ102-V	6		6	
7	TJ102-P	7	TJ102-U	7	See	7	See
8	TJ102-N	8	TJ102-T	8		8	
9	TJ102-M	9	TJ102-S	9	Figure	9	Figure
10	TJ102-L	10	TJ102-R	10		10	
11	TJ103-E	11	TJ103-J	11	1	11	1
12	TJ103-D	12	TJ103-H	12		12	
13	TJ103-C	13	TJ103-G	13		13	
14	TJ103-B	14	TJ103-F	14		14	
15	TJ103-A	15	S2-D2-P10	15		15	
16	TJ103-P	16	S1-D2-P6	16		16	
17	TJ103-N	17	S1-D2-P4	17		17	
18	TJ103-M	18	TJ103-S	18		18	
19	TJ103-L	19	TJ103-R	19		19	
20	TJ103-W	20	TJ103-U	20		20	
21	TJ103-V	21	TJ103-T	21		21	
22	Open	22	Open	22	Open	22	Open
23	S1-D1-C	23	S1-D2-C	23	Open	23	Open
C	TJ501 (+)	C	TJ501 (-)	C	TJ502 (+)	C	TJ502 (-)

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

TABLE IV

TEST CABLE WIRING SCHEDULE

Connector and Pin Number	Wire Number	Connector and Pin Number
TJ101-A	1	J102-C
TJ101-B	2	J104-D
TJ101-C	3	J106-N
TJ101-D	4	J105-0
TJ101-E	5	J103-P
TJ101-F	7	J101-R
TJ101-G	8	J102-a
TJ101-H	10	1J206-H
TJ101-J	11	2J206-H
TJ101-K	12	1J206-J
TJ101-L	13	2T206-J
TJ101-M	14	J103-C
TJ101-N	15	J105-M
TJ101-P	17	J104-W
TJ101-Q	20	J103-X
TJ101-R	21	J106-Y
TJ101-S	22	J103-Z
TJ101-T	23	J102-AG
TJ101-U	24	1J206-Z
TJ101-V	25	2J206-Z
TJ101-W	26	1J206-M
TJ101-X	27	2J206-M
TJ101-Y	28	1J206-N
TJ101-Z	29	2J206-N
TJ102-A	Open	See Note
TJ102-B	30	J101-B
TJ102-C	31	J101-AC
TJ102-D	32	J101-AE
TJ102-E	33	J101-AF
TJ102-F	34	J101-y
TJ102-G	35	J101-AA
TJ102-H	36	J101-AB
TJ102-J	37	J101-AD
TJ102-K	38	J101-AG
TJ102-L	39	J103-n
TJ102-M	40	J101-q
TJ102-N	41	J101-r
TJ102-P	42	J101-t
TJ102-Q	43	J101-v

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

TABLE IV (Contd.)

TEST CABLE WIRING SCHEDULE

Connector and Pin Number	Wire Number	Connector and Pin Number
TJ102-R	44	J103-B
TJ102-S	Open	-
TJ102-T	45	J101-s
TJ102-U	46	J101-u
TJ102-V	47	J101-x
TJ102-W	Open	-
TJ102-X	Open	-
TJ102-Y	Open	-
TJ102-Z	Open	-
TJ103-A	48	J103-a
TJ103-B	49	J103-c
TJ103-C	50	J103-e
TJ103-D	51	J103-h
TJ103-E	52	J103-j
TJ103-F	53	J103-d
TJ103-G	54	J103-f
TJ103-H	55	J103-g
TJ103-J	56	J103-k
TJ103-K	Open	-
TJ103-L	57	J102-S
TJ103-M	58	J102-U
TJ103-N	59	J103-W
TJ103-P	60	J103-Y
TJ103-Q	Open	-
TJ103-R	62	J102-B
TJ103-S	63	J102-V
TJ103-T	64	J102-M
TJ103-U	65	J102-O
TJ103-V	67	J102-L
TJ103-W	70	J102-N
TJ103-X	Open	-
TJ103-Y	Open	-
TJ103-Z	Open	-

NOTE: All points not listed in this column are open.

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
0001	1	H	0006	1	H
	2	F		2	DE
	3			3	C
	4			4	ACE
	5			5	C
	6			6	ACE
	7			7	C
	8			8	ABC
	9			9	ABCFH
	10	H		10	
0002	1	H	0007	1	H
	2	E		2	DEF
	3	C		3	
	4	ACE		4	
	5	C		5	
	6	ACE		6	
	7	E		7	
	8	BCDH		8	
	9	E		9	
	10	G		10	
0003	1	H	0010	1	H
	2	EF		2	C
	3	C		3	
	4	ACE		4	
	5			5	
	6			6	
	7	CE		7	
	8	BDCH		8	
	9	BF		9	
	10	G		10	
0004	1	H	0011	1	H
	2	D		2	CF
	3	C		3	
	4	ACE		4	
	5	C		5	
	6	ACE		6	
	7	C		7	
	8	ABC		8	
	9	CFH		9	
	10			10	
0005	1	H	0012	1	H
	2	DF		2	CF
	3	C		3	
	4	ACE		4	
	5	C		5	
	6	ACE		6	
	7	C		7	
	8	ABC		8	
	9	BCFH		9	
	10			10	

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
0013	1	H	0020	1	H
	2	CEF		2	B
	3			3	C
	4			4	ACE
	5			5	C
	6			6	ABD
	7			7	
	8			8	
	9			9	
	10			10	H
0014	1	H	0021	1	H
	2	CD		2	BF
	3			3	C
	4			4	ACE
	5			5	C
	6			6	ABD
	7			7	ACF
	8			8	D
	9			9	
	10			10	
0015	1	H	0022	1	H
	2	CDF		2	BE
	3			3	C
	4			4	ACE
	5			5	C
	6			6	ABD
	7			7	
	8			8	
	9			9	
	10			10	
0016	1	H	0023	1	H
	2	CDE		2	BEF
	3			3	C
	4			4	ACE
	5			5	C
	6			6	ABD
	7			7	ABCDE
	8			8	DH
	9			9	
	10			10	
0017	1	H	0024	1	H
	2	CDEF		2	BD
	3			3	C
	4			4	ACE
	5			5	C
	6			6	ABD
	7			7	
	8			8	
	9			9	
	10			10	

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the currentversion before use.

Test No.	Program		Test No.	Program	
0025	1	H	0032	1	H
	2	BDF		2	BCE
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7	BC		7	
	8	CG		8	
	9			9	
	10			10	
0026	1	H	0033	1	H
	2	BDE		2	BCEF
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7			7	ACF
	8			8	D
	9			9	B
	10			10	
0027	1	H	0034	1	H
	2	BDEF		2	BCD
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7	C		7	
	8	BF		8	
	9			9	
	10			10	
0030	1	H	0035	1	H
	2	BC		2	BCDF
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7			7	ABCDE
	8			8	DH
	9			9	B
	10			10	
0031	1	H	0036	1	H
	2	BCF		2	BCDE
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7			7	
	8	ABCEFG		8	
	9			9	
	10			10	

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the currentversion before use.

Test No.	Program		Test No.	Program	
0037	1	H	0044	1	H
	2	BCDEF		2	AD
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7	BC		7	
	8	C		8	
	9	B		9	
	10			10	
0040	1	H	0045	1	H
	2	A		2	ADF
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7			7	AC
	8			8	BG
	9			9	ABE
	10			10	
0041	1	H	0046	1	H
	2	AF		2	ADE
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7	C		7	
	8	BF		8	
	9	B		9	
	10			10	
0042	1	H	0047	1	H
	2	AE		2	ADEF
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7			7	ACE
	8			8	BG
	9			9	AE
	10			10	
0043	1	H	0050	1	H
	2	AEF		2	AC
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7			7	
	8	ABCEFG		8	
	9	B		9	
	10			10	

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
0051	1	H	0056	1	H
	2	ACF		2	ACDE
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7	AC		7	
	8	ABCEFG		8	
	9	AE		9	
	10			10	
0052	1	H	0057	1	H
	2	ACE		2	ACDEF
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7			7	ABC
	8			8	ABCEFG
	9			9	BE
	10			10	
0053	1	H	0060	1	H
	2	ACEF		2	AB
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7	BC		7	
	8	CG		8	
	9	BE		9	
	10			10	
0054	1	H	0061	1	H
	2	ACD		2	ABF
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7			7	C
	8			8	CG
	9			9	E
	10			10	
0055	1	H	0062	1	H
	2	ACDF		2	ABE
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7	ABCDE		7	
	8	DH		8	
	9	BE		9	
	10			10	

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
0063	1	H	0070	1	H
	2	ABEF		2	ABC
	3	C		3	
	4	ACE		4	
	5	C		5	
	6	ABD		6	
	7			7	
	8	BC		8	
	9	DE		9	
	10			10	
0064	1	H	0077	1	H
	2	ABD		2	ABCDEF
	3	C		3	
	4	ACE		4	
	5	C		5	
	6	ABD		6	
	7			7	
	8			8	
	9			9	
	10			10	H
0065	1	H	0100	1	FH
	2	ABDF		2	
	3	C		3	
	4	ACE		4	
	5	C		5	
	6	ABD		6	
	7			7	
	8	CD		8	
	9	ADE		9	
	10			10	
0066	1	H	1000	1	CH
	2	ABDE		2	
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
0067	1	H	1716	1	CDEFH
	2	ABDEF		2	CDE
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1717	1	CDEFH	3544	1	BCDFH
	2	CDEF		2	AD
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
2626	1	BDEH	4544	1	ADFH
	2	BDE		2	AD
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
2636	1	BDEH	5352	1	ACEFH
	2	BCDE		2	ACE
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
3435	1	BCDH	5353	1	ACEFH
	2	BCDF		2	ACEF
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
3535	1	BCDFH	6252	1	ABEH
	2	BCDF		2	ACE
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
6262	1	ABEH	1002	1	CH
	2	ABE		2	E
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	AC
7171	1	ABCFH	1003	1	CH
	2	ABCF		2	EF
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	AB
7271	1	ABCEH	1004	1	CH
	2	ABCF		2	D
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10	H		10	A
1000	1	CH	1005	1	CH
	2			2	DF
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10	H		10	BC
1001	1	CH	1006	1	CH
	2	F		2	DE
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10	ABC		10	B

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
1007	1	CH	1014	1	CH
	2	DEF		2	CD
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10	CH		10	D
1010	1	CH	1015	1	CH
	2	C		2	CDF
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	DF
1011	1	CH	1016	1	CH
	2	CF		2	CDE
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10	F		10	DE
1012	1	CH	1017	1	CH
	2	CE		2	CDEF
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10	E		10	DEF
1013	1	CH	1020	1	CH
	2	CEF		2	B
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10	EF		10	H

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
1021	1	CH	1026	1	CH
	2	BF		2	BDE
	3	C		3	C
	4	ABE		4	ABE
	5	C		5	C
	6	ABE		6	ABE
	7	E		7	CE
	8	BCEFGH		8	BDCH
	9	E		9	BE
	10	G		10	
1022	1	CH	1027	1	CH
	2	BE		2	BDEF
	3	C		3	C
	4	ABE		4	ABE
	5	C		5	C
	6	ABE		6	ABE
	7	E		7	CDE
	8	BCEFGH		8	BCDFG
	9	E		9	BE
	10			10	
1023	1	CH	1030	1	CH
	2	BEF		2	BC
	3	C		3	C
	4	ABE		4	ABE
	5	C		5	C
	6	ABE		6	ABE
	7	EF		7	CDE
	8	BDCGH		8	BCDFG
	9	E		9	BE
	10			10	G
1024	1	CH	1031	1	CH
	2	BD		2	BCF
	3	C		3	C
	4	ABE		4	ABE
	5	C		5	C
	6	ABE		6	ABE
	7	EF		7	ABC
	8	BDCGH		8	D
	9	E		9	AE
	10	G		10	G
1025	1	CH	1032	1	CH
	2	BDF		2	BCE
	3	C		3	C
	4	ABE		4	ABE
	5	C		5	C
	6	ABE		6	ABE
	7	CE		7	ABC
	8	BCDH		8	D
	9	BE		9	AE
	10	G		10	

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
1033	1	CH	1040	1	CH
	2	BCEF		2	A
	3	C		3	C
	4	ABE		4	ABE
	5	C		5	C
	6	ABE		6	ABE
	7	ABCF		7	ACF
	8	DH		8	DH
	9	AE		9	ABE
	10			10	G
1034	1	CH	1041	1	CH
	2	BCD		2	AF
	3	C		3	C
	4	ABE		4	ABE
	5	C		5	C
	6	ABE		6	ABE
	7	ABCF		7	
	8	DH		8	
	9	AE		9	
	10	G		10	
1035	1	CH	1042	1	CH
	2	BCDF		2	AE
	3	C		3	C
	4	ABE		4	ABE
	5	C		5	C
	6	ABE		6	ABE
	7	ABCF		7	
	8	ABCDF		8	
	9	ABE		9	
	10	G		10	
1036	1	CH	1043	1	CH
	2	BCDE		2	AEF
	3	C		3	C
	4	ABE		4	ABE
	5	C		5	C
	6	ABE		6	ABE
	7	ABCF		7	
	8	ABCDF		8	ABCF
	9	ABE		9	CE
	10			10	
1037	1	CH	1044	1	CH
	2	BCDEF		2	AD
	3	C		3	C
	4	ABE		4	ABE
	5	C		5	C
	6	ABE		6	ABE
	7	ACF		7	
	8	DH		8	ABCF
	9	ABE		9	CE
	10			10	G

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the currentversion before use.

Test No.	Program		Test No.	Program	
1045	1	CH	1052	1	CH
	2	ADF		2	ACE
	3	C		3	C
	4	ABE		4	ABE
	5	C		5	C
	6	ABE		6	ABE
	7			7	BCEF
	8			8	ABCDH
	9			9	ACE
	10			10	
1046	1	CH	1053	1	CH
	2	ADE		2	ACEF
	3	C		3	C
	4	ABE		4	ABE
	5	C		5	C
	6	ABE		6	ABE
	7			7	ABCE
	8			8	DG
	9			9	ACE
	10			10	
1047	1	CH	1054	1	CH
	2	ADEF		2	ACD
	3	C		3	C
	4	ABE		4	ABE
	5	C		5	C
	6	ABE		6	ABE
	7	CF		7	ABCE
	8	ABCFG		8	DG
	9	BCE		9	ACE
	10			10	G
1050	1	CH	1055	1	CH
	2	AC		2	ACDF
	3	C		3	C
	4	ABE		4	ABE
	5	C		5	C
	6	ABE		6	ABE
	7	CF		7	ABCDE
	8	ABCFG		8	ABCG
	9	BCE		9	ABCE
	10	G		10	G
1051	1	CH	1056	1	CH
	2	ACF		2	ACDE
	3	C		3	C
	4	ABE		4	ABE
	5	C		5	C
	6	ABE		6	ABE
	7	BCEF		7	ABCDE
	8	ABCDH		8	ABCG
	9	ACE		9	ABCE
	10	G		10	

Source: https://assist.dla.mil -- Downloaded: 20260-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
1057	1	CH	1064	1	CH
	2	ACDEF		2	ABD
	3	C		3	C
	4	ABE		4	ABE
	5	C		5	C
	6	ABE		6	ABE
	7	ACEF		7	
	8	DG		8	CFG
	9	ABCE		9	DE
	10			10	G
1060	1	CH	1065	1	CH
	2	AB		2	ABDF
	3	C		3	C
	4	ABE		4	ABE
	5	C		5	C
	6	ABE		6	ABE
	7	ACEF		7	F
	8	DG		8	EFG
	9	ABCE		9	ADE
	10	G		10	G
1061	1	CH	1066	1	CH
	2	ABF		2	ABDE
	3	C		3	C
	4	ABE		4	ABE
	5	C		5	C
	6	ABE		6	ABE
	7	F		7	F
	8	DFG		8	EFG
	9	DE		9	ADE
	10	G		10	
1062	1	CH	1067	1	CH
	2	ABE		2	ABDEF
	3	C		3	C
	4	ABE		4	ABE
	5	C		5	C
	6	ABE		6	ABE
	7	F		7	
	8	DFG		8	DGH
	9	DE		9	ADE
	10			10	
1063	1	CH	1070	1	CH
	2	ABEF		2	ABC
	3	C		3	C
	4	ABE		4	ABE
	5	C		5	C
	6	ABE		6	ABE
	7			7	
	8	CFG		8	DGH
	9	DE		9	ADE
	10			10	G

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1071	1	CH	1076	1	CH
	2	ABCF		2	ABCDE
	3	C		3	C
	4	ACE		4	ACE
	5			5	
	6			6	
	7	ABCEF		7	BCDE
	8	CDH		8	CDGH
	9	BEF		9	BEF
	10	ABC		10	ACG
1072	1	CH	1077	1	CH
	2	ABCE		2	ABCDEF
	3	C		3	C
	4	ACE		4	ACE
	5			5	
	6			6	
	7	ABCEF		7	BC
	8	CDH		8	CD
	9	BEF		9	BEF
	10	ABCG		10	ACG
1073	1	CH	1100	1	CFH
	2	ABCEF		2	
	3	C		3	C
	4	ACE		4	ACE
	5			5	
	6			6	
	7	ABCF		7	BC
	8	CFGH		8	CD
	9	BEF		9	BEF
	10	ABCG		10	AC
1074	1	CH	1101	1	CFH
	2	ABCD		2	F
	3	C		3	C
	4	ACE		4	ACE
	5			5	
	6			6	
	7	ABCF		7	AC
	8	CFGH		8	BCDG
	9	BEF		9	AEF
	10	ABC		10	AB
1075	1	CH	1102	1	CFH
	2	ABCDF		2	E
	3	C		3	C
	4	ACE		4	ACE
	5			5	
	6			6	
	7	BCDE		7	AC
	8	CDGH		8	BCDG
	9	BEF		9	AEF
	10	AC		10	ABG

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the currenversion before use.

Test No.		Program	Test No.		Program
1103	1	CFH	1110	1	CFH
	2	EF		2	C
	3	C		3	C
	4	ACE		4	ACE
	5			5	
	6			6	
	7	ACE		7	ABCF
	8	BCGH		8	ABCDGH
	9	AEF		9	AEF
	10	ABG		10	A
1104	1	CFH	1111	1	CFH
	2	D		2	CF
	3	C		3	C
	4	ACE		4	ACE
	5			5	
	6			6	
	7	ACE		7	ABC
	8	BCGH		8	BDEFGH
	9	AEF		9	AEF
	10	AB		10	BC
1105	1	CFH	1112	1	CFH
	2	DF		2	CE
	3	C		3	C
	4	ACE		4	ACE
	5			5	
	6			6	
	7	AC		7	ABC
	8	DH		8	BDEFGH
	9	AEF		9	AEF
	10	A		10	BCG
1106	1	CFH	1113	1	CFH
	2	DE		2	CEF
	3	C		3	C
	4	ACE		4	ACE
	5			5	
	6			6	
	7	AC		7	ABCDE
	8	DH		8	BDH
	9	AEF		9	AEF
	10	AG		10	BCG
1107	1	CFH	1114	1	CFH
	2	DEF		2	CD
	3	C		3	C
	4	ACE		4	ACE
	5			5	
	6			6	
	7	ABCF		7	ABCDE
	8	ABCDGH		8	BDH
	9	AEF		9	AEF
	10	AG		10	BC

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
1115	1	CFH	1122	1	CFH
	2	CDF		2	BE
	3	C		3	C
	4	ACE		4	ACE
	5			5	
	6			6	
	7	ACEF		7	ACDE
	8	CDFG		8	DFG
	9	ABEF		9	ABEF
	10	B		10	CG
1116	1	CFH	1123	1	CFH
	2	CDE		2	BEF
	3	C		3	C
	4	ACE		4	ACE
	5			5	
	6			6	
	7	ACEF		7	ACE
	8	CDFG		8	DFH
	9	ABEF		9	ABEF
	10	BG		10	CG
1117	1	CFH	1124	1	CFH
	2	CDEF		2	BD
	3	C		3	C
	4	ACE		4	ACE
	5			5	
	6			6	
	7	AC		7	ACE
	8	CDH		8	DFH
	9	ABEF		9	ABEF
	10	BG		10	C
1120	1	CFH	1125	1	CFH
	2	B		2	BDF
	3	C		3	C
	4	ACE		4	ACE
	5			5	
	6			6	
	7	AC		7	CDE
	8	CDH		8	BG
	9	ABEF		9	EFG
	10	B		10	G
1121	1	CFH	1126	1	CFH
	2	BF		2	BDE
	3	C		3	C
	4	ACE		4	ACE
	5			5	
	6			6	
	7	ACDE		7	CDE
	8	DFG		8	BG
	9	ABEF		9	EF
	10	C		10	G

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
1127	1	CFH	1134	1	CFH
	2	BDEF		2	BCD
	3	C		3	C
	4	ACE		4	ACDF
	5	C		5	C
	6	ABD		6	ABDEF
	7	CDE		7	AC
	8	BG		8	DG
	9	E		9	ABE
	10	G		10	
1130	1	CFH	1135	1	CFH
	2	BC		2	BCDF
	3			3	C
	4			4	ACDE
	5			5	C
	6			6	ABC
	7			7	AC
	8			8	DGH
	9			9	ABE
	10	H		10	
1131	1	CFH	1136	1	CFH
	2	BCF		2	BCDE
	3	C		3	C
	4	ACE		4	ACDEF
	5	C		5	C
	6	ABD		6	ABCF
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1132	1	CFH	1137	1	CFH
	2	BCE		2	BCDEF
	3	C		3	C
	4	ACEF		4	AB
	5	C		5	C
	6	ABDF		6	ABCE
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1133	1	CFH	1140	1	CFH
	2	BCEF		2	A
	3	C		3	C
	4	ACD		4	ABF
	5	C		5	C
	6	ABDE		6	ABCEF
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1141	1	CFH	1146	1	CFH
	2	AF		2	ADE
	3	C		3	CD
	4	ABE		4	ACDE
	5			5	C
	6			6	CDF
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABEF		9	ABE
	10			10	
1142	1	CFH	1147	1	CFH
	2	AE		2	ADEF
	3	C		3	CD
	4	ABEF		4	ACDEF
	5			5	C
	6			6	CDE
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABEF		9	ABE
	10			10	
1143	1	CFH	1150	1	CFH
	2	AEF		2	AC
	3	CD		3	CD
	4	ACEF		4	AB
	5	CD		5	C
	6	ACEF		6	CDEF
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1144	1	CFH	1151	1	CFH
	2	AD		2	ACF
	3	CD		3	CD
	4	ACD		4	ABF
	5	C		5	C
	6	CEF		6	B
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1145	1	CFH	1152	1	CFH
	2	ADF		2	ACE
	3	CD		3	CD
	4	ACDF		4	ABE
	5	C		5	C
	6	CD		6	BF
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
1153	1	CFH	1160	1	CFH
	2	ACEF		2	AB
	3	CD		3	CD
	4	ABEF		4	ABC
	5	C		5	C
	6	BE		6	BDEF
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1154	1	CFH	1161	1	CFH
	2	ACD		2	ABF
	3	CD		3	CD
	4	ABD		4	ABCF
	5	C		5	C
	6	BEF		6	BC
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1155	1	CFH	1162	1	CFH
	2	ACDF		2	ABE
	3	CD		3	CD
	4	ABDF		4	ABCE
	5	C		5	CF
	6	BD		6	BCF
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1156	1	CFH	1163	1	CFH
	2	ACDE		2	ABEF
	3	CD		3	CD
	4	ABDE		4	ABCEF
	5	C		5	
	6	BDF		6	
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABEF
	10			10	
1157	1	CFH	1164	1	CFH
	2	ACDEF		2	ABD
	3	CD		3	C
	4	ABDEF		4	C
	5	C		5	
	6	BDE		6	
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABEF
	10			10	

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1165	1	CFH	1172	1	CFH
	2	ABDF		2	ABCE
	3	CD		3	CD
	4	BCDE		4	AEF
	5	CF		5	CF
	6	ABD		6	ABCF
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1166	1	CFH	1173	1	CFH
	2	ABDE		2	ABCEF
	3	CD		3	CD
	4	BCDEF		4	AD
	5	CF		5	CF
	6	ABDF		6	ABCE
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1167	1	CFH	1174	1	CFH
	2	ABDEF		2	ABCD
	3	CD		3	CD
	4	A		4	ADF
	5	CF		5	CF
	6	ABDE		6	ABCEF
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1170	1	CFH	1175	1	CFH
	2	ABC		2	ABCDF
	3	CD		3	CD
	4	AF		4	ADE
	5	CF		5	
	6	ABDEF		6	
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABEF
	10			10	
1171	1	CFH	1176	1	CFH
	2	ABCF		2	ABCDE
	3	CD		3	CD
	4	AE		4	ADEF
	5	CF		5	
	6	ABC		6	
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABEF
	10			10	

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
1177	1	CFH	1204	1	CEH
	2	ABCDEF		2	D
	3	CEF		3	CEF
	4	ADF		4	BCF
	5	CDF		5	CDF
	6	ABE		6	ABDEF
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1200	1	CEH	1205	1	CEH
	2			2	DF
	3	CEF		3	CDF
	4	ADE		4	ACE
	5	CDF		5	CDF
	6	ABEF		6	ABC
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1201	1	CEH	1206	1	CEH
	2	F		2	DE
	3	CEF		3	CDF
	4	ADEF		4	ACEF
	5	CDF		5	CDF
	6	ABD		6	ABCF
	7	ACDE		7	AC
	8	DH		8	DGH
	9	ABE		9	ABE
	10			10	
1202	1	CEH	1207	1	CEH
	2	E		2	DEF
	3	CEF		3	CDF
	4	AC		4	ACD
	5	CDF		5	CDF
	6	ABDF		6	ABCE
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1203	1	CEH	1210	1	CEH
	2	EF		2	C
	3	CEF		3	CDF
	4	ACF		4	ACDF
	5	CDF		5	CDF
	6	ABDE		6	ABCEF
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	

Source: https://assist.dla.mil -- Downloaded: 20261 0-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1211	1	CEH	1216	1	CEH
	2	CF		2	CDE
	3	CDF		3	CDF
	4	ACDE		4	CEF
	5			5	CE
	6			6	ACDF
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABEF		9	ABE
	10			10	
1212	1	CEH	1217	1	CEH
	2	CE		2	CDEF
	3	CDF		3	CDF
	4	ACDEF		4	CD
	5			5	CE
	6			6	ACDE
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABEF		9	ABE
	10			10	
1213	1	CEH	1220	1	CEH
	2	CEF		2	B
	3	CDF		3	CDF
	4	C		4	CDF
	5	CE		5	CE
	6	ACEF		6	ACDEF
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1214	1	CEH	1221	1	CEH
	2	CD		2	BF
	3	CDF		3	CDF
	4	CF		4	CDE
	5	CE		5	CE
	6	ACEF		6	AB
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1215	1	CEH	1222	1	CEH
	2	CDF		2	BE
	3	CDF		3	CDF
	4	CE		4	CDEF
	5	CE		5	CE
	6	ACD		6	ABF
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
1223	1	CEH	1230	1	CEH
	2	BEF		2	BC
	3	CDF		3	CDF
	4	B		4	BDF
	5	CE		5	CE
	6	ABEF		6	ABC
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1224	1	CEH	1231	1	CEH
	2	BD		2	BCF
	3	CDF		3	CDF
	4	BF		4	BDE
	5	CE		5	CE
	6	ABD		6	ABCF
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1225	1	CEH	1232	1	CEH
	2	BDF		2	BCE
	3	CDF		3	CDF
	4	BE		4	BDEF
	5	CE		5	CE
	6	ABDF		6	ABCE
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1226	1	CEH	1233	1	CEH
	2	BDE		2	BCEF
	3	CDF		3	CDF
	4	BEF		4	BC
	5	CE		5	CE
	6	ABDE		6	ABCEF
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1227	1	CEH	1234	1	CEH
	2	BDEF		2	BCD
	3	CDF		3	CE
	4	BD		4	BCF
	5	CE		5	
	6	ABDEF		6	
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABEF
	10			10	

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the currenversion before use.

Test No.		Program	Test No.		Program
1235	1	CEH	1242	1	CEH
	2	BCDF		2	AE
	3	CE		3	CDF
	4	BCDE		4	AEF
	5			5	CEF
	6			6	AB
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABEF		9	ABE
	10			10	
1236	1	CEH	1243	1	CEH
	2	BCDE		2	AEF
	3	CDF		3	CDF
	4	BCDEF		4	AD
	5	CEF		5	CEF
	6	BEF		6	ABF
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1237	1	CEH	1244	1	CEH
	2	BDCEF		2	AD
	3	CDF		3	CDF
	4	A		4	ADF
	5	CEF		5	CEF
	6	BEF		6	ABE
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1240	1	CEH	1245	1	CEH
	2	A		2	ADF
	3	CDF		3	CDF
	4	AF		4	ADE
	5	CEF		5	CEF
	6	BD		6	ABEF
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1241	1	CEH	1246	1	CEH
	2	AF		2	ADE
	3	CDF		3	CDF
	4	AE		4	ADEF
	5	CEF		5	CEF
	6	ACDEF		6	ABD
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
1247	1	CEH	1254	1	CEH
	2	ADEF		2	ACD
	3	CDF		3	CEF
	4	AC		4	ACEF
	5	CEF		5	CEF
	6	ABDF		6	ABCE
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1250	1	CEH	1255	1	CEH
	2	AC		2	ACDF
	3	CDF		3	CEF
	4	ACF		4	ACD
	5	CEF		5	CEF
	6	ABDE		6	ABCEF
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABE
	10			10	
1251	1	CEH	1256	1	CEH
	2	ACF		2	ACDE
	3	CEF		3	CEF
	4	BDF		4	ACDF
	5	CEF		5	
	6	ABDEF		6	
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABEF
	10			10	
1252	1	CEH	1257	1	CEH
	2	ACE		2	ACDEF
	3	CEF		3	CEF
	4	BDE		4	ACDE
	5	CEF		5	
	6	ABC		6	
	7	AC		7	AC
	8	DGH		8	DGH
	9	ABE		9	ABEF
	10			10	
1253	1	CEH	1260	1	CEH
	2	ACEF		2	AB
	3	CEF		3	CD
	4	ACE		4	C
	5	CEF		5	CD
	6	ABCF		6	CE
	7	AC		7	CF
	8	DGH		8	CDH
	9	ABE		9	
	10			10	

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1261	1	CEH	1266	1	CEH
	2	ABF		2	ABDE
	3	CD		3	CD
	4	C		4	CE
	5	CD		5	
	6	CE		6	
	7	CE		7	AC
	8	BFH		8	DGH
	9			9	ABEF
	10	G		10	
1262	1	CEH	1267	1	CEH
	2	ABE		2	ABDEF
	3	CD		3	CD
	4	CF		4	CEF
	5	CD		5	
	6	CEF		6	
	7	CF		7	AC
	8	DEFG		8	DGH
	9			9	ABEF
	10			10	
1263	1	CEH	1270	1	CEH
	2	ABEF		2	ABC
	3	CD		3	CD
	4	CF		4	B
	5	CD		5	CD
	6	CEF		6	C
	7	C		7	ABC
	8	CFH		8	D
	9			9	
	10	G		10	BC
1264	1	CEH	1271	1	CEH
	2	ABD		2	ABCF
	3	CD		3	CD
	4	CD		4	BE
	5	CD		5	CD
	6	CEF		6	C
	7			7	ABC
	8	CDFGH		8	D
	9			9	
	10			10	BC
1265	1	CEH	1272	1	CEH
	2	ABDF		2	ABCE
	3	CD		3	CD
	4	CD		4	BF
	5	CD		5	CD
	6	CEF		6	C
	7			7	CE
	8	BDF		8	BFH
	9			9	
	10	G		10	BCG

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1273	1	CEH	1300	1	CEFH
	2	ABCEF		2	
	3	C		3	CD
	4	BCDF		4	BC
	5	CD		5	CD
	6	C		6	C
	7	ABC		7	ABC
	8	D		8	D
	9			9	
	10	BC		10	BC
1274	1	CEH	1301	1	CEFH
	2	ABCD		2	F
	3	C		3	CD
	4	BCDEF		4	BC
	5	CD		5	CD
	6	C		6	C
	7	ABC		7	CE
	8	D		8	BFH
	9			9	
	10	BC		10	BCG
1275	1	CEH	1302	1	CEFH
	2	ABCDF		2	E
	3	C		3	CD
	4	BCDE		4	BDEF
	5	CD		5	CD
	6	C		6	C
	7	CE		7	CE
	8	BFH		8	BFH
	9			9	
	10	BCG		10	BCG
1276	1	CEH	1303	1	CEFH
	2	ABCDE		2	EF
	3	CD		3	CD
	4	BEF		4	BDE
	5	CD		5	CD
	6	C		6	C
	7	CE		7	ABC
	8	BFH		8	D
	9			9	
	10	BCG		10	BC
1277	1	CEH	1304	1	CEFH
	2	ABCDEF		2	D
	3	C		3	CD
	4	AEF		4	BDE
	5	CD		5	CD
	6	C		6	C
	7	CE		7	CE
	8	BFH		8	BFH
	9			9	
	10	BCG		10	BCG

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1305	1	CEFH	1312	1	CEFH
	2	DF		2	CE
	3	CD		3	C
	4	BDEF		4	ADE
	5	CD		5	CD
	6	C		6	C
	7	ABC		7	CE
	8	D		8	BFH
	9			9	
	10	BC		10	BCG
1306	1	CEFH	1313	1	CEFH
	2	DE		2	CEF
	3	CD		3	C
	4	BDF		4	ADF
	5	CD		5	CD
	6	C		6	C
	7	ABC		7	ABC
	8	D		8	D
	9			9	
	10	BC		10	BC
1307	1	CEFH	1314	1	CEFH
	2	DEF		2	CD
	3	C		3	C
	4	BCEF		4	ADF
	5	CD		5	CD
	6	C		6	C
	7	ABC		7	CE
	8	D		8	BFH
	9			9	
	10	BC		10	BCG
1310	1	CEFH	1315	1	CEFH
	2	C		2	CDF
	3	C		3	C
	4	ACF		4	ADE
	5	CD		5	CD
	6	C		6	C
	7	ABC		7	ABC
	8	D		8	D
	9			9	
	10	BC		10	BC
1311	1	CEFH	1316	1	CEFH
	2	CF		2	CDE
	3	C		3	CD
	4	ACF		4	BD
	5	CD		5	CD
	6	C		6	C
	7	CE		7	ABC
	8	BFH		8	D
	9			9	
	10	BCG		10	BC

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
1317	1	CEFH	1324	1	CEFH
	2	CDEF		2	BD
	3	C		3	CD
	4	AD		4	CDF
	5	CD		5	CD
	6	C		6	C
	7	ABC		7	ABC
	8	D		8	D
	9			9	
	10	BC		10	BC
1320	1	CEFH	1325	1	CDFH
	2	B		2	BDF
	3	CD		3	C
	4	BD		4	A
	5	CD		5	CD
	6	C		6	C
	7	CE		7	ABC
	8	BFH		8	D
	9			9	
	10	BCG		10	BC
1321	1	CEFH	1326	1	CEFH
	2	BF		2	BDE
	3	CD		3	C
	4	BE		4	AF
	5	CD		5	CD
	6	C		6	C
	7	CE		7	ABC
	8	BFH		8	D
	9			9	
	10	BCG		10	BC
1322	1	CEFH	1327	1	CEFH
	2	BE		2	BDEF
	3	CD		3	C
	4	CDEF		4	BCEF
	5	CD		5	CD
	6	C		6	C
	7	CE		7	ABC
	8	BFH		8	D
	9			9	
	10	BCG		10	BC
1323	1	CEFH	1330	1	CEFH
	2	BEF		2	BC
	3	CD		3	C
	4	CDE		4	BCEF
	5	CD		5	CD
	6	C		6	C
	7	ABC		7	CE
	8	D		8	BFH
	9			9	
	10	BC		10	BCG

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1331	1	CEFH	1336	1	CEFH
	2	BCF		2	BCDE
	3	C		3	CD
	4	BCD		4	BEF
	5	CD		5	CD
	6	C		6	C
	7	CE		7	ABC
	8	BFH		8	D
	9			9	
	10	BCG		10	BC
1332	1	CEFH	1337	1	CEFH
	2	BCE		2	BCDEF
	3	C		3	C
	4	BCDEF		4	BCF
	5	CD		5	C
	6	C		6	AE
	7	CE		7	
	8	BFH		8	CDFGH
	9			9	
	10	BCG		10	
1333	1	CEFH	1340	1	CEFH
	2	BCEF		2	A
	3	C		3	C
	4	AEF		4	BCF
	5	CD		5	C
	6	C		6	AE
	7	ABC		7	
	8	D		8	BD
	9			9	
	10	BC		10	G
1334	1	CEFH	1341	1	CEFH
	2	BCD		2	AF
	3	C		3	C
	4	AD		4	BCE
	5	CD		5	C
	6	C		6	AE
	7	CE		7	CF
	8	BFH		8	DEFG
	9			9	
	10	BCG		10	
1335	1	CEFH	1342	1	CEFH
	2	BCDF		2	AE
	3	CD		3	C
	4	BDF		4	BCE
	5	CD		5	C
	6	C		6	AE
	7	CE		7	C
	8	BFH		8	CFH
	9			9	
	10	BCG		10	G

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1343	1	CEFH	1350	1	CEFH
	2	AEF		2	AC
	3	C		3	CF
	4	AE		4	ADF
	5			5	
	6			6	
	7	AC		7	ABC
	8	DGH		8	D
	9	ABEF		9	F
	10			10	
1344	1	CEFH	1351	1	CEFH
	2	AD		2	ACF
	3	C		3	CF
	4	CF		4	ADFGH
	5	CD		5	G
	6	ACE		6	G
	7	AC		7	CE
	8	DGH		8	BFH
	9	ABE		9	F
	10			10	G
1345	1	CEFH	1352	1	CEFH
	2	ADF		2	ACE
	3	CF		3	CF
	4	AD		4	ADFG
	5	CD		5	G
	6	C		6	G
	7	ABC		7	ABC
	8	D		8	D
	9			9	F
	10	BC		10	F
1346	1	CEFH	1353	1	CEFH
	2	ADE		2	ACEF
	3	CF		3	CF
	4	ADH		4	ADE
	5	CD		5	CF
	6	CG		6	ADEF
	7	CE		7	ABC
	8	BFH		8	ABCDFG
	9			9	BE
	10	BCG		10	G
1347	1	CEFH	1354	1	CEFH
	2	ADEF		2	ACD
	3	CF		3	CF
	4	AD		4	ADEGH
	5	CD		5	CFG
	6	CG		6	ADEFH
	7	ABC		7	AC
	8	D		8	DGH
	9			9	ABE
	10	BCF		10	

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1355	1	CEFH	1362	1	CEFH
	2	ACDF		2	ABE
	3	CF		3	CF
	4	ADE		4	ACF
	5	CF		5	
	6	ADEF		6	
	7	AC		7	BC
	8	DGH		8	ABCGH
	9	ABE		9	BF
	10			10	G
1356	1	CEFH	1363	1	CEFH
	2	ACDE		2	ABEF
	3	CF		3	CF
	4	ADEG		4	ACFG
	5	CFG		5	G
	6	ADEFH		6	
	7	ABC		7	AC
	8	ABCDFG		8	D
	9	BE		9	BF
	10	GF		10	F
1357	1	CEFH	1364	1	CEFH
	2	ACDEF		2	ABD
	3	CF		3	CF
	4	AC		4	BCE
	5			5	
	6			6	
	7	AC		7	AC
	8	D		8	DGH
	9	BF		9	ABEF
	10			10	
1360	1	CEFH	1365	1	CEFH
	2	AB		2	ABDF
	3	CF		3	CF
	4	ACGH		4	BCEF
	5	G		5	CD
	6			6	C
	7	BC		7	ABC
	8	ABCGH		8	D
	9	BF		9	
	10	G		10	BC
1361	1	CEFH	1366	1	CEFH
	2	ABF		2	ABDE
	3	CF		3	CF
	4	AC		4	BCEFGH
	5			5	CDGH
	6			6	CH
	7	BC		7	CE
	8	BD		8	BFH
	9	BF		9	
	10			10	BCG

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
1367	1	CEFH	1374	1	CEFH
	2	ABDEF		2	ABCD
	3	CF		3	CF
	4	BCEFG		4	BCDFGH
	5	CDGH		5	CDG
	6	CH		6	CGH
	7	ABC		7	CE
	8	D		8	BFH
	9			9	
	10	BCF		10	BCG
1370	1	CEFH	1375	1	CEFH
	2	ABC		2	ABCDF
	3	CF		3	CF
	4	BCD		4	BCDFG
	5	CD		5	CDG
	6	C		6	CGH
	7	ABC		7	ABC
	8	D		8	D
	9			9	
	10	BC		10	BCF
1371	1	CEFH	1376	1	CEFH
	2	ABCF		2	ABCDE
	3	CF		3	CF
	4	BCDGH		4	BCDE
	5	CDGH		5	
	6	C		6	
	7	CE		7	ABC
	8	BFH		8	D
	9			9	F
	10	BCG		10	
1372	1	CEFH	1377	1	CEFH
	2	ABCE		2	ABCDEF
	3	CF		3	CF
	4	BCDG		4	BCDEGH
	5	CDGH		5	G
	6	C		6	G
	7	ABC		7	CE
	8	D		8	BFH
	9			9	F
	10	BCF		10	G
1373	1	CEFH	1400	1	CDH
	2	ABCEF		2	
	3	CF		3	CD
	4	BCDF		4	B
	5	CD		5	CD
	6	C		6	C
	7	ABC		7	CE
	8	D		8	BFH
	9			9	
	10	BC		10	BCG

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1401	1	CDH	1406	1	CDH
	2	F		2	DE
	3	CD		3	CF
	4	BF		4	BCDEFGH
	5	CD		5	CFG
	6	C		6	AH
	7	ABC		7	AC
	8	D		8	DGH
	9			9	ABE
	10	BC		10	
1402	1	CDH	1407	1	CDH
	2	E		2	DEF
	3	C		3	CF
	4	BCDF		4	BCDEFG
	5	CD		5	CFG
	6	C		6	AH
	7	CE		7	BC
	8	BFH		8	CFH
	9			9	BE
	10	BCG		10	GF
1403	1	CDH	1410	1	CDH
	2	EF		2	C
	3	C		3	CF
	4	BCDE		4	AF
	5	CD		5	
	6	C		6	
	7	ABC		7	AC
	8	D		8	D
	9			9	BF
	10	BC		10	
1404	1	CDH	1411	1	CDH
	2	D		2	CF
	3	CF		3	CF
	4	BCDEG		4	AFGH
	5	G		5	G
	6	G		6	
	7	ABC		7	BC
	8	D		8	ABCGH
	9	F		9	BF
	10	F		10	G
1405	1	CDH	1412	1	CDH
	2	DF		2	CE
	3	CF		3	CF
	4	BCDEF		4	AE
	5	CF		5	
	6	A		6	
	7	BC		7	BC
	8	CFH		8	ABCGH
	9	BE		9	BF
	10	G		10	G

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1413	1	CDH	1420	1	CDH
	2	CEF		2	B
	3	CF		3	CF
	4	AEG		4	CF
	5	G		5	
	6			6	
	7	AC		7	AC
	8	D		8	DGH
	9	BF		9	ABEF
	10	F		10	
1414	1	CDH	1421	1	CDH
	2	CD		2	BF
	3	CF		3	CF
	4	AEF		4	CE
	5			5	
	6			6	
	7	ABC		7	ABC
	8	ABCDFG		8	D
	9	BEF		9	BF
	10	G		10	
1415	1	CDH	1422	1	CDH
	2	CDF		2	BE
	3	CF		3	CF
	4	AEFH		4	CEGH
	5			5	GH
	6	GH		6	GH
	7	AC		7	H
	8	DGH		8	BCDEGH
	9	ABEF		9	BE
	10			10	
1416	1	CDH	1423	1	CDH
	2	CDE		2	BEF
	3	CF		3	CF
	4	AEF		4	CE
	5			5	
	6	GH		6	
	7	ABC		7	C
	8	ABCDFG		8	D
	9	BEF		9	BF
	10	GF		10	G
1417	1	CDH	1424	1	CDH
	2	CDEF		2	BD
	3	CF		3	CF
	4	C		4	CEG
	5	CDF		5	GH
	6	ABF		6	GH
	7	AC		7	ABCH
	8	DGH		8	D
	9	ABE		9	BF
	10			10	BCEF

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the currentversion before use.

Test No.	Program		Test No.	Program	
1425	1	CDH	1432	1	CDH
	2	BDF		2	BCE
	3	CF		3	CF
	4	CEF		4	CDG
	5			5	H
	6			6	G
	7	ABC		7	ABCH
	8	D		8	D
	9	BF		9	F
	10			10	F
1426	1	CDH	1433	1	CDH
	2	BDE		2	BCEF
	3	CF		3	CDF
	4	CEFGH		4	
	5	H		5	
	6	GH		6	
	7	CEH		7	ABC
	8	BFH		8	D
	9	F		9	F
	10	G		10	
1427	1	CDH	1434	1	CDH
	2	BDEF		2	BCD
	3	CF		3	CF
	4	CEFG		4	CDFGH
	5	H		5	H
	6	GH		6	
	7	ABCH		7	CEH
	8	D		8	BFH
	9	F		9	F
	10	F		10	G
1430	1	CDH	1435	1	CDH
	2	BC		2	BCDF
	3	CF		3	CF
	4	CD		4	CDFG
	5			5	H
	6			6	
	7	ABC		7	ABCH
	8	D		8	D
	9	F		9	F
	10			10	F
1431	1	CDH	1436	1	CDH
	2	BCF		2	BCDE
	3	CF		3	CF
	4	CDGH		4	CDE
	5	H		5	CD
	6	G		6	C
	7	CEH		7	ABC
	8	BFH		8	D
	9	F		9	
	10	G		10	BC

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
1437	1	CDH	1444	1	CDH
	2	BCDEF		2	AD
	3	CF		3	CF
	4	CDEH		4	B
	5	CDGH		5	
	6	C		6	
	7	CEH		7	ABC
	8	BFH		8	D
	9			9	F
	10	BCG		10	
1440	1	CDH	1445	1	CDH
	2	A		2	ADF
	3	CF		3	CF
	4	CDE		4	BH
	5	CDGH		5	G
	6	C		6	G
	7	ABCH		7	CEH
	8	D		8	BFH
	9			9	F
	10	BCF		10	G
1441	1	CDH	1446	1	CDH
	2	AF		2	AED
	3	CF		3	CF
	4	CDEF		4	B
	5	CD		5	G
	6	C		6	G
	7	ABC		7	ABCH
	8	D		8	D
	9			9	F
	10	BC		10	F
1442	1	CDH	1447	1	CDH
	2	AE		2	ADEF
	3	CF		3	CF
	4	CDEFH		4	BF
	5	CDG		5	CD
	6	CGH		6	C
	7	CEH		7	ABC
	8	BFH		8	D
	9			9	
	10	BCG		10	BC
1443	1	CDH	1450	1	CDH
	2	AEF		2	AC
	3	CF		3	CF
	4	CDEF		4	BFH
	5	CDG		5	CDG
	6	CGH		6	CH
	7	ABCH		7	CEH
	8	D		8	BFH
	9			9	
	10	BCF		10	BCG

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
1451	1	CDH	1456	1	CDH
	2	ACF		2	ACDE
	3	CF		3	CF
	4	BF		4	BD
	5	CDG		5	CD
	6	CH		6	C
	7	ABCH		7	ABC
	8	D		8	D
	9			9	
	10	BCF		10	BC
1452	1	CDH	1457	1	CDH
	2	ACE		2	ACDEF
	3	CF		3	CF
	4	BE		4	BDH
	5			5	CDH
	6			6	CGH
	7	ABC		7	CEH
	8	D		8	BFH
	9	F		9	
	10			10	BCG
1453	1	CDH	1460	1	CDH
	2	ACEF		2	AB
	3	CF		3	CF
	4	BEH		4	BD
	5	G		5	CDH
	6			6	CGH
	7	CEH		7	ABCH
	8	BFH		8	D
	9	F		9	
	10	G		10	BCF
1454	1	CDH	1461	1	CDH
	2	ACD		2	ABF
	3	CF		3	CF
	4	BEF		4	BDF
	5			5	
	6			6	
	7	CE		7	ABC
	8	BFH		8	D
	9	F		9	F
	10	G		10	
1455	1	CDH	1462	1	CDH
	2	ACDF		2	ABE
	3	CF		3	CF
	4	BEF		4	BDFH
	5	G		5	H
	6			6	G
	7	ABCH		7	EFH
	8	D		8	ABCDEFG
	9	F		9	F
	10	F		10	AC

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
1463	1	CDH	1470	1	CDH
	2	ABEF		2	ABC
	3	CF		3	CF
	4	BDF		4	BDEF
	5			5	CDH
	6			6	CH
	7	CDE		7	ABCH
	8	DF		8	D
	9	F		9	
	10	ACG		10	BCF
1464	1	CDH	1471	1	CDH
	2	ABD		2	ABCF
	3	CF		3	CD
	4	BDF		4	BCF
	5	H		5	CD
	6	G		6	C
	7	ABCH		7	ABC
	8	D		8	D
	9	F		9	
	10	F		10	BC
1465	1	CDH	1472	1	CDH
	2	ABDF		2	ABCE
	3	CF		3	CD
	4	BDE		4	BCFH
	5	CD		5	CDH
	6	C		6	C
	7	ABC		7	CEH
	8	D		8	BFH
	9			9	
	10	BC		10	BCG
1466	1	CDH	1473	1	CDH
	2	ABDE		2	ABCEF
	3	CF		3	CF
	4	BDEH		4	BC
	5	CDH		5	CD
	6	CH		6	C
	7	CEH		7	CE
	8	BFH		8	BFH
	9			9	
	10	BCG		10	BCG
1467	1	CDH	1474	1	CDH
	2	ABDEF		2	ABCD
	3	CF		3	CD
	4	BDEF		4	BCE
	5	CD		5	CD
	6	C		6	C
	7	CE		7	CE
	8	BFH		8	BFH
	9			9	
	10	BCG		10	BCG

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1475	1	CDH	1502	1	CDEH
	2	ABCDF		2	E
	3	CD		3	CD
	4	BCEF		4	BCDF
	5	CD		5	
	6	C		6	
	7	CE		7	ABC
	8	BFH		8	D
	9			9	F
	10	BCG		10	
1476	1	CDH	1503	1	CDFH
	2	ABCDE		2	EF
	3	CD		3	CD
	4	BCEF		4	BCDFH
	5	CDH		5	
	6	C		6	G
	7	ABCH		7	CEH
	8	D		8	BFH
	9			9	F
	10	BCF		10	G
1477	1	CDH	1504	1	CDFH
	2	ABCDEF		2	D
	3	CD		3	CD
	4	BCD		4	BCDF
	5	CD		5	
	6	C		6	G
	7	ABC		7	ABCH
	8	D		8	D
	9			9	F
	10	BC		10	F
1500	1	CDFH	1505	1	CDFH
	2			2	DF
	3	CD		3	CD
	4	BCDH		4	AC
	5	CD		5	CDF
	6	CGH		6	AB
	7	CEH		7	AC
	8	BFH		8	DGH
	9			9	ABE
	10	BCG		10	
1501	1	CDFH	1506	1	CDFH
	2	F		2	DE
	3	CD		3	CD
	4	BCD		4	ACF
	5	CD		5	CDF
	6	CGH		6	AB
	7	ABCH		7	AC
	8	D		8	DGH
	9			9	ABE
	10	BCF		10	

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
1507	1	CDFH	1514	1	CDFH
	2	DEF		2	CD
	3	CF		3	CF
	4	ACE		4	ACDH
	5			5	CDG
	6			6	CG
	7	AC		7	CE
	8	DGH		8	BFH
	9	ABEF		9	
	10			10	BCG
1510	1	CDFH	1515	1	CDFH
	2	C		2	CDF
	3	CF		3	CF
	4	ACEF		4	ACD
	5	CD		5	CDG
	6	C		6	CG
	7	ABC		7	ABC
	8	D		8	D
	9			9	
	10	BC		10	BCF
1511	1	CDFH	1516	1	CDFH
	2	CF		2	CDE
	3	CF		3	CF
	4	ACEFGH		4	ACDF
	5	CDH		5	CD
	6	CGH		6	C
	7	CE		7	ABC
	8	BFH		8	D
	9			9	
	10	BCG		10	BC
1512	1	CDFH	1517	1	CDFH
	2	CE		2	CDEF
	3	CF		3	CF
	4	ACEFG		4	ACDFH
	5	CDH		5	CDG
	6	CGH		6	CH
	7	ABC		7	CE
	8	D		8	BFH
	9			9	
	10	BCF		10	BDG
1513	1	CDFH	1520	1	CDFH
	2	CEF		2	B
	3	CF		3	CF
	4	ACD		4	ACDF
	5	CD		5	CDG
	6	C		6	CH
	7	ABC		7	ABC
	8	D		8	D
	9			9	
	10	BC		10	BCF

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
1521	1	CDFH	1526	1	CDFH
	2	BF		2	BDE
	3	CF		3	CF
	4	ACDE		4	ACDEF
	5	CD		5	CDH
	6	C		6	CGH
	7	ABC		7	ABC
	8	D		8	D
	9			9	
	10	BC		10	BCF
1522	1	CDFH	1527	1	CDFH
	2	BE		2	BDEF
	3	CF		3	CF
	4	ACDEH		4	AB
	5	CDG		5	CD
	6	C		6	C
	7	CE		7	ABC
	8	BFH		8	D
	9			9	
	10	BCG		10	BC
1523	1	CDFH	1530	1	CDFH
	2	BEF		2	BC
	3	CF		3	CF
	4	ACDE		4	ABH
	5	CDG		5	CDH
	6	C		6	CG
	7	ABC		7	CE
	8	D		8	BFH
	9			9	
	10	BCF		10	BCG
1524	1	CDFH	1531	1	CDFH
	2	BD		2	BDF
	3	CF		3	CF
	4	ACDEF		4	AB
	5	CD		5	CDH
	6	C		6	CG
	7	ABC		7	ABC
	8	D		8	D
	9			9	
	10	BC		10	BCF
1525	1	CDFH	1532	1	CDFH
	2	BDF		2	BCE
	3	CF		3	CF
	4	ACDEFH		4	ABF
	5	CDH		5	CD
	6	CGH		6	C
	7	CE		7	ABC
	8	BFH		8	D
	9			9	
	10	BCG		10	BC

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1533	1	CDFH	1540	1	CDFH
	2	BCEF		2	A
	3	CF		3	CF
	4	ABFH		4	ABEF
	5	CDH		5	CD
	6	CH		6	C
	7	CE		7	ABC
	8	BFH		8	D
	9			9	
	10	BCG		10	BC
1534	1	CDFH	1541	1	CDFH
	2	BCD		2	AF
	3	CF		3	CF
	4	ABF		4	ABEFH
	5	CDH		5	CDG
	6	CH		6	CGH
	7	ABC		7	CE
	8	D		8	BFH
	9			9	
	10	BCF		10	BCG
1535	1	CDFH	1542	1	CDFH
	2	BCDF		2	AE
	3	CF		3	CF
	4	ABE		4	ABEF
	5	CD		5	CDG
	6	C		6	CGH
	7	ABC		7	ABC
	8	D		8	D
	9			9	
	10	BC		10	BCF
1536	1	CDFH	1543	1	CDFH
	2	BCDE		2	AEF
	3	CF		3	CE
	4	ABEGH		4	C
	5	CD		5	
	6	CGH		6	
	7	CE		7	AC
	8	BFH		8	DGH
	9			9	ABEF
	10	BCG		10	
1537	1	CDFH	1544	1	CDFH
	2	BCDEF		2	AD
	3	CF		3	CE
	4	ABEG		4	CFH
	5	CD		5	CD
	6	CGH		6	CH
	7	ABC		7	CE
	8	D		8	BFH
	9			9	
	10	BCF		10	BCG

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
1545	1	CDFH	1552	1	CDFH
	2	ADF		2	ACE
	3	CE		3	CE
	4	CF		4	CEFGH
	5	CD		5	CDG
	6	C		6	CGH
	7	ABC		7	CE
	8	D		8	BFH
	9			9	
	10	BC		10	BCG
1546	1	CDFH	1553	1	CDFH
	2	ADE		2	ACEF
	3	CE		3	CE
	4	CE		4	CEFG
	5	CD		5	CDG
	6	C		6	CGH
	7	ABC		7	ABC
	8	D		8	D
	9			9	
	10	BC		10	BCF
1547	1	CDFH	1554	1	CDFH
	2	ADEF		2	ACD
	3	CE		3	CE
	4	CEGH		4	CD
	5	CDGH		5	CD
	6	C		6	C
	7	CE		7	ABC
	8	BFH		8	D
	9			9	
	10	BCG		10	BC
1550	1	CDFH	1555	1	CDFH
	2	AC		2	ACDF
	3	CE		3	CE
	4	CEG		4	CDGH
	5	CDGH		5	CDH
	6	C		6	CGH
	7	ABC		7	CE
	8	D		8	BFH
	9			9	
	10	BCF		10	BCG
1551	1	CDFH	1556	1	CDFH
	2	ACF		2	ACDE
	3	CE		3	CE
	4	CEF		4	CDG
	5	CD		5	CDH
	6	C		6	CGH
	7	ABC		7	ABC
	8	D		8	D
	9			9	
	10	BC		10	BCF

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1557	1	CDFH	1564	1	CDFH
	2	ACDEF		2	ABD
	3	CE		3	CE
	4	CDFGH		4	CDEF
	5	CD		5	CDGH
	6	CG		6	CGH
	7	CE		7	ABC
	8	BFH		8	D
	9			9	
	10	BCG		10	BCF
1560	1	CDFH	1565	1	CDFH
	2	AB		2	ABDF
	3	CE		3	CE
	4	CDFG		4	BGH
	5	CD		5	GH
	6	CG		6	GH
	7	ABC		7	CE
	8	D		8	BFH
	9			9	F
	10	BCF		10	G
1561	1	CDFH	1566	1	CDFH
	2	ABF		2	ABDE
	3	CE		3	CE
	4	CDEGH		4	BG
	5	GH		5	GH
	6	G		6	GH
	7	CE		7	ABC
	8	BFH		8	D
	9	F		9	F
	10	G		10	F
1562	1	CDFH	1567	1	CDFH
	2	ABE		2	ABDEF
	3	CE		3	CE
	4	CDEG		4	BFH
	5	GH		5	CDGH
	6	G		6	CG
	7	ABC		7	CE
	8	D		8	BFH
	9	F		9	
	10	F		10	BCG
1563	1	CDFH	1570	1	CDFH
	2	ABEF		2	ABC
	3	CE		3	CE
	4	CDEFH		4	BF
	5	CDGH		5	CDGH
	6	CGH		6	CG
	7	CE		7	ABC
	8	BFH		8	D
	9			9	
	10	BCG		10	BCF

Source: https://assist.dla.mil -- Downloaded: 20260-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1571	1	CDFH	1576	1	CDEH
	2	ABCF		2	ABCDE
	3	CE		3	CE
	4	BEH		4	BDG
	5			5	H
	6	G		6	
	7	CEH		7	ABCH
	8	BFH		8	D
	9	F		9	F
	10	G		10	F
1572	1	CDFH	1577	1	CDFH
	2	ABCE		2	ABCDEF
	3	CE		3	CE
	4	BE		4	BDFH
	5			5	CDGH
	6	G		6	C
	7	ABCH		7	CE
	8	D		8	BFH
	9	F		9	
	10	F		10	BCG
1573	1	CDFH	1600	1	CDEH
	2	ABCEF		2	
	3	CE		3	CE
	4	BEFH		4	BDE
	5	CDGH		5	CDGH
	6	CH		6	C
	7	CE		7	ABC
	8	BFH		8	D
	9			9	
	10	BCG		10	BCF
1574	1	CDFH	1601	1	CDEH
	2	ABCD		2	F
	3	CE		3	CE
	4	BEF		4	BDEGH
	5	CDGH		5	H
	6	CH		6	G
	7	ABC		7	CEH
	8	D		8	BFH
	9			9	F
	10	BCF		10	G
1575	1	CDFH	1602	1	CDEH
	2	ABCDF		2	F
	3	CE		3	CE
	4	BDGH		4	BDEG
	5	H		5	H
	6			6	G
	7	CEH		7	ABCH
	8	BFH		8	D
	9	F		9	F
	10	G		10	F

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1603	1	CDEH	1610	1	CDEH
	2	EF		2	C
	3	CE		3	CEF
	4	BDEFGH		4	BCEFGH
	5	H		5	CD
	6	GH		6	CGH
	7	CEH		7	CEH
	8	BFH		8	BFH
	9	F		9	
	10	G		10	BCG
1604	1	CDEH	1611	1	CDEH
	2	D		2	CF
	3	CE		3	CEF
	4	BDEFG		4	BCEFG
	5	H		5	CD
	6	GH		6	CGH
	7	ABCH		7	ABCH
	8	D		8	D
	9	F		9	
	10	F		10	BCF
1605	1	CDEH	1612	1	CDEH
	2	DF		2	CE
	3	CE		3	CEF
	4	BC		4	BCDGH
	5			5	CD
	6			6	CG
	7	AC		7	CEH
	8	DGH		8	BFH
	9	ABEF		9	
	10			10	BCG
1606	1	CDEH	1613	1	CDEH
	2	DE		2	CEF
	3	CEF		3	CEF
	4	BCEGH		4	BCDG
	5	CDH		5	CD
	6	CH		6	CG
	7	CEH		7	ABCH
	8	BFH		8	D
	9			9	
	10	BCG		10	BCF
1607	1	CDEH	1614	1	CDEH
	2	DEF		2	CD
	3	CEF		3	CEF
	4	BCEG		4	BCDFH
	5	CDH		5	CDGH
	6	CH		6	CGH
	7	ABCH		7	CEH
	8	D		8	BFH
	9			9	
	10	BCF		10	BCG

Source: https://assist.dla.mil -- Downloaded: 20261O-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1615	1	CDEH	1622	1	CEDH
	2	CDF		2	BE
	3	CEF		3	CEF
	4	BCDF		4	A
	5	CDGH		5	CD
	6	CGH		6	C
	7	ABCH		7	CE
	8	D		8	BFH
	9			9	
	10	BCF		10	BCG
1616	1	CDEH	1623	1	CDEH
	2	CDE		2	BEF
	3	CEF		3	CEF
	4	BCDEH		4	AE
	5	CDGH		5	CD
	6	CG		6	C
	7	CEH		7	CE
	8	BFH		8	BFH
	9			9	
	10	BCG		10	BCG
1617	1	CDEH	1624	1	CDEH
	2	CDEF		2	BD
	3	CEF		3	CEF
	4	BCDE		4	AE
	5	CDGH		5	CD
	6	CG		6	C
	7	ABCH		7	CE
	8	D		8	BFH
	9			9	
	10	BCF		10	BCG
1620	1	CDEH	1625	1	CDEH
	2	B		2	BDF
	3	CEF		3	CEF
	4	BCDEF		4	AE
	5	CD		5	CDGH
	6	C		6	CH
	7	ABC		7	ABCH
	8	D		8	D
	9			9	
	10	BC		10	BCF
1621	1	CDEH	1626	1	CDEH
	2	BF		2	BDE
	3	CEF		3	CEF
	4	BCDEFH		4	AEFH
	5	CDGH		5	CDH
	6	CH		6	CH
	7	CEH		7	CEH
	8	BFH		8	BFH
	9			9	
	10	BCG		10	BCG

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1627	1	CDEH	1634	1	CDEH
	2	BDEF		2	BCD
	3	CEF		3	CE
	4	AEF		4	BCEFG
	5	CDH		5	G
	6	CH		6	H
	7	ABCH		7	ABCH
	8	D		8	D
	9			9	F
	10	BCF		10	F
1630	1	CDEH	1635	1	CDEH
	2	BC		2	BCDF
	3	CEF		3	CE
	4	ADH		4	BCDGH
	5	H		5	H
	6	G		6	
	7	CDEH		7	CEH
	8	DF		8	BFH
	9	F		9	F
	10	ACG		10	G
1631	1	CDEH	1636	1	CDEH
	2	BCF		2	BCDE
	3	CEF		3	CE
	4	AD		4	BCDG
	5	H		5	H
	6	G		6	
	7	ABGH		7	ABCH
	8	D		8	D
	9	F		9	F
	10	ACF		10	F
1632	1	CDEH	1637	1	CDEH
	2	BCE		2	BCDEF
	3	CE		3	CE
	4	BCE		4	BCDFGH
	5			5	CD
	6			6	CGH
	7	AC		7	CEH
	8	DGH		8	BFG
	9	ABEF		9	
	10			10	BCG
1633	1	CDEH	1640	1	CDEH
	2	BCEF		2	A
	3	CE		3	CE
	4	BCEGH		4	BCDFG
	5	G		5	CD
	6	H		6	CGH
	7	CEH		7	ABCH
	8	BFH		8	D
	9	F		9	
	10	FG		10	BCF

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1641	1	CDEH	1646	1	CDEH
	2	AF		2	ADE
	3	CE		3	CE
	4	BCDEFGH		4	AEG
	5	CD		5	GH
	6	CG		6	GH
	7	CEH		7	ABCH
	8	BFH		8	D
	9			9	F
	10	BCG		10	F
1642	1	CDEH	1647	1	CDEH
	2	AE		2	ADEF
	3	CE		3	CE
	4	BCDEFG		4	AEFGH
	5	CD		5	G
	6	CG		6	H
	7	ABCH		7	CEH
	8	D		8	BFH
	9			9	F
	10	BCF		10	G
1643	1	CDEH	1650	1	CDEH
	2	AEF		2	AC
	3	CE		3	CE
	4	A		4	AEFG
	5	CE		5	G
	6	ABE		6	H
	7	AC		7	ABCH
	8	DGH		8	D
	9	ABE		9	F
	10			10	F
1644	1	CDEH	1651	1	CDEH
	2	AD		2	ACF
	3	CE		3	CE
	4	AF		4	ADH
	5	CE		5	G
	6	BCE		6	G
	7	AC		7	CEH
	8	DGH		8	BFH
	9	ABE		9	F
	10			10	G
1645	1	CDEH	1652	1	CDEH
	2	ADF		2	ACE
	3	CE		3	CE
	4	AEGH		4	AD
	5	GH		5	G
	6	GH		6	G
	7	CEH		7	ABCH
	8	BFH		8	D
	9	F		9	F
	10	G		10	F

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1653	1	CDEH	1660	1	CDEH
	2	ACEF		2	AB
	3	CE		3	CE
	4	ADFGH		4	AC
	5	CDG		5	CDGH
	6	C		6	CC
	7	CEH		7	ABCH
	8	BFH		8	D
	9			9	
	10	BCG		10	BCF
1654	1	CDEH	1661	1	CDEH
	2	ACD		2	ABF
	3	CE		3	CE
	4	ADE		4	ACFH
	5	CD		5	
	6	C		6	G
	7	CE		7	CEH
	8	BFH		8	BFH
	9			9	F
	10	BCG		10	G
1655	1	CDEH	1662	1	CDEH
	2	ACDF		2	ABE
	3	CE		3	CE
	4	ADEF		4	ACF
	5	CD		5	
	6	C		6	G
	7	CE		7	ABCH
	8	BFH		8	D
	9			9	F
	10	BCG		10	F
1656	1	CDEH	1663	1	CDEH
	2	ACDE		2	ABEF
	3	CE		3	CE
	4	ADEFG		4	ACE
	5	CDG		5	
	6	C		6	
	7	ABCH		7	ABC
	8	D		8	D
	9			9	F
	10	BCF		10	
1657	1	CDEH	1664	1	CDEH
	2	ACDEF		2	ABD
	3	CE		3	CE
	4	ACH		4	ACEH
	5	CDGH		5	H
	6	CG		6	G
	7	CEH		7	CDEH
	8	BFH		8	DF
	9			9	F
	10	BCG		10	G

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1665	1	CDEH	1672	1	CDEH
	2	ABDF		2	ABCE
	3	CE		3	CEF
	4	ACE		4	CEG
	5	H		5	CDGH
	6	G		6	CH
	7	ABCH		7	ABCH
	8	D		8	D
	9	F		9	
	10	F		10	BCF
1666	1	CDEH	1673	1	CDEH
	2	ABDE		2	ABCEF
	3	CEF		3	CEF
	4	C		4	CEFGH
	5			5	CDGH
	6			6	C
	7	AC		7	CEH
	8	DGH		8	BFH
	9	ABEF		9	
	10			10	BCG
1667	1	CDEH	1674	1	CDEH
	2	ABDEF		2	ABCD
	3	CEF		3	CEF
	4	CFGH		4	CEFG
	5	CDGH		5	CDGH
	6	CG		6	C
	7	CEH		7	ABCH
	8	BFH		8	D
	9			9	
	10	BCG		10	BCF
1670	1	CDEH	1675	1	CDEH
	2	ABC		2	ABCDF
	3	CEF		3	CEF
	4	CFG		4	CDGH
	5	CDGH		5	CDG
	6	CG		6	CGH
	7	ABCH		7	CEH
	8	D		8	BFH
	9			9	
	10	BCF		10	BCG
1671	1	CDEH	1676	1	CDEH
	2	ABCF		2	ABCDE
	3	CEF		3	CEF
	4	CEGH		4	CDG
	5	CDGH		5	CDG
	6	CH		6	CGH
	7	CEH		7	ABCH
	8	BFH		8	D
	9			9	
	10	BCG		10	BCF

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program
1677	1	CDEH
	2	ABCDEF
	3	CEF
	4	CDFGH
	5	CDG
	6	CG
	7	CEH
	8	BFH
	9	
	10	BCG
1700	1	CDEFH
	2	
	3	CEF
	4	CDGF
	5	CDG
	6	CG
	7	ABCH
	8	D
	9	
	10	BCF
1701	1	CDEFH
	2	F
	3	CEF
	4	CDEH
	5	CDH
	6	CH
	7	CEH
	8	BFH
	9	
	10	BCG
1702	1	CDEFH
	2	E
	3	CEF
	4	CDE
	5	CDH
	6	CH
	7	ABCH
	8	D
	9	
	10	BCF
1703	1	CDEFH
	2	EF
	3	CEF
	4	BC
	5	CEF
	6	BDEF
	7	AC
	8	DGH
	9	ABE
	10	
1704	1	CDEFH
	2	D
	3	CDF
	4	BCF
	5	
	6	
	7	AC
	8	DGH
	9	ABEF
	10	
1705	1	CDEFH
	2	DF
	3	CDF
	4	BCEGH
	5	CDH
	6	CH
	7	CEH
	8	BFH
	9	
	10	BCG
1706	1	CDEFH
	2	DE
	3	CDF
	4	BCEG
	5	CDH
	6	CH
	7	ABCH
	8	D
	9	
	10	BCF
1707	1	CDEFH
	2	DEF
	3	CDF
	4	BCEFH
	5	CDGH
	6	CGH
	7	CEH
	8	BFH
	9	
	10	BCG
1710	1	CDEFH
	2	C
	3	CDF
	4	BCEF
	5	CDGH
	6	CGH
	7	ABCH
	8	D
	9	
	10	BCF

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1711	1	CDEFH	1716	1	CDEFH
	2	CF		2	CDE
	3	CDF		3	CDF
	4	BCDH		4	BCDEH
	5	CDG		5	CD
	6	CH		6	CGH
	7	CEH		7	CEH
	8	BFH		8	BFH
	9			9	
	10	BCG		10	BCG
1712	1	CDEFH	1717	1	CDEFH
	2	CE		2	CDEF
	3	CDF		3	CEF
	4	BCD		4	CDEF
	5	CDG		5	CD
	6	CH		6	C
	7	ABCH		7	CE
	8	D		8	BFH
	9			9	
	10	BCF		10	BCG
1713	1	CDEFH	1720	1	CDEFH
	2	CEF		2	B
	3	CDF		3	CEF
	4	BCDFH		4	B
	5	CDH		5	CD
	6	CGH		6	C
	7	CEH		7	CE
	8	BFH		8	BFH
	9			9	
	10	BCG		10	BCG
1714	1	CDEFH	1721	1	CDEFH
	2	CD		2	BF
	3	CDF		3	CEF
	4	BCDF		4	B
	5	CDH		5	CD
	6	CGH		6	CGH
	7	ABCH		7	ABCH
	8	D		8	D
	9			9	
	10	BCF		10	BCF
1715	1	CDEFH	1722	1	CDEFH
	2	CDF		2	BE
	3	CDF		3	CEF
	4	BCDE		4	CDEF
	5	CD		5	CD
	6	C		6	C
	7	ABC		7	ABC
	8	D		8	D
	9			9	
	10	BC		10	BC

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1723	1	CDEFH	1730	1	CDEFH
	2	BEF		2	BC
	3	CEF		3	CF
	4	BFH		4	ACEFGH
	5			5	G
	6	G		6	G
	7	CEH		7	AC
	8	BFH		8	DGH
	9	F		9	ABEF
	10	G		10	
1724	1	CDEFH	1731	1	CDEFH
	2	BD		2	BCF
	3	CEF		3	CF
	4	BF		4	ACEFG
	5			5	
	6	G		6	H
	7	ABCH		7	ABC
	8	D		8	ABCDFG
	9	F		9	BEF
	10	F		10	GF
1725	1	CDEFH	1732	1	CDEFH
	2	BDF		2	BCE
	3	CEF		3	
	4	BEH		4	H
	5	H		5	H
	6	G		6	
	7	CDEH		7	
	8	DF		8	
	9	F		9	
	10	G		10	
1726	1	CDEFH	1733	1	CDEFH
	2	BDE		2	BCEF
	3	CEF		3	CF
	4	BE		4	ACEFGH
	5	H		5	H
	6	G		6	GH
	7	ABCH		7	ACH
	8	D		8	DGH
	9	F		9	ABEF
	10	F		10	
1727	1	CDEFH	1734	1	CDEFH
	2	BDEF		2	BCD
	3			3	CF
	4	H		4	ACEFG
	5	H		5	
	6			6	H
	7			7	ABC
	8			8	ABCDFG
	9			9	BEF
	10			10	GF

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program
1735	1	CDEFH
	2	BCDF
	3	
	4	G
	5	H
	6	GH
	7	H
	8	
	9	
	10	
1736	1	CDEFH
	2	BCDE
	3	
	4	H
	5	H
	6	
	7	
	8	
	9	
	10	
1737	1	CDEFH
	2	BCDEF
	3	CF
	4	ACEFGH
	5	H
	6	G
	7	ACH
	8	DGH
	9	ABEF
	10	
1740	1	CDEFH
	2	A
	3	CF
	4	ACEFG
	5	
	6	H
	7	ABC
	8	ABCDFG
	9	BEF
	10	GF
1741	1	CDEFH
	2	AF
	3	
	4	G
	5	H
	6	G
	7	H
	8	
	9	
	10	

Test No.		Program
1742	1	CDEFH
	2	AE
	3	CF
	4	ACEFGH
	5	H
	6	
	7	ABCH
	8	ABCDFG
	9	BEF
	10	G
1743	1	CDEFH
	2	AEF
	3	CF
	4	ACEFGH
	5	H
	6	
	7	AC
	8	DGH
	9	ABEF
	10	
1744	1	CDEFH
	2	AD
	3	
	4	G
	5	H
	6	
	7	H
	8	
	9	
	10	
1745	1	CDEFH
	2	ADF
	3	
	4	G
	5	
	6	H
	7	
	8	
	9	
	10	
1746	1	CDEFH
	2	ADE
	3	CF
	4	ACEFGH
	5	H
	6	
	7	ABC
	8	ABCDFG
	9	BEF
	10	G

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
1747	1	CDEFH	1754	1	CDEFH
	2	ADEF		2	ACD
	3	CF		3	
	4	ACEFH		4	
	5	G		5	G
	6	G		6	
	7	ACH		7	H
	8	DGH		8	
	9	ABEF		9	
	10			10	
1750	1	CDEFH	1755	1	CDEFH
	2	AC		2	ACDF
	3			3	
	4			4	G
	5	G		5	
	6	G		6	H
	7	H		7	
	8			8	
	9			9	
	10			10	
1751	1	CDEFH	1756	1	CDEFH
	2	ACF		2	ACDE
	3			3	
	4	G		4	GH
	5			5	H
	6	H		6	H
	7			7	
	8			8	
	9			9	
	10			10	
1752	1	CDEFH	1757	1	CDEFH
	2	ACE		2	ACDEF
	3	CF		3	CF
	4	ACEFGH		4	ACEFH
	5	H		5	H
	6			6	
	7	ABC		7	ABC
	8	ABCDFG		8	ABCDFG
	9	BEF		9	BEF
	10	G		10	G
1753	1	CDEFH	1760	1	CDEFH
	2	ACEF		2	AB
	3	CF		3	CF
	4	ACEFH		4	ACEFH
	5	G		5	
	6			6	G
	7	ACH		7	ACH
	8	DGH		8	DGH
	9	ABEF		9	ABEF
	10			10	

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1761	1	CDEFH	1766	1	CDEFH
	2	ABF		2	ABDE
	3			3	
	4			4	G
	5			5	H
	6	G		6	GH
	7	H		7	H
	8			8	
	9			9	
	10			10	
1762	1	CDEFH	1767	1	CDEFH
	2	ABE		2	ABDEF
	3			3	
	4	G		4	G
	5			5	
	6	H		6	H
	7			7	
	8			8	
	9			9	
	10			10	
1763	1	CDEFH	1770	1	CDEFH
	2	ABEF		2	ABC
	3			3	
	4	GH		4	GH
	5	H		5	H
	6	H		6	H
	7			7	
	8			8	
	9			9	
	10			10	
1764	1	CDEFH	1771	1	CDEFH
	2	ABD		2	ABCF
	3	CE		3	CE
	4	CDGH		4	CDGH
	5	H		5	H
	6			6	
	7	ABC		7	ABC
	8	ABCDFG		8	ABCDFG
	9	BEF		9	BEF
	10	G		10	G
1765	1	CDEFH	1772	1	CDEFH
	2	ABDF		2	ABCE
	3	CE		3	CE
	4	CDGH		4	CDGH
	5	H		5	H
	6	GH		6	G
	7	ACH		7	ACH
	8	DGH		8	DGH
	9	ABEF		9	ABEF
	10			10	

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
1773	1	CDEFH	2000	1	BH
	2	ABCEF		2	
	3			3	
	4	G		4	G
	5	H		5	H
	6	G		6	
	7	H		7	H
	8			8	
	9			9	
	10			10	
1774	1	CDEFH	2001	1	BH
	2	ABCD		2	F
	3			3	
	4	G		4	G
	5			5	
	6	H		6	H
	7			7	
	8			8	
	9			9	
	10			10	
1775	1	CDEFH	2002	1	BH
	2	ABCDF		2	E
	3			3	
	4	GH		4	GH
	5	H		5	H
	6	H		6	G
	7			7	
	8			8	
	9			9	
	10			10	
1776	1	CDEFH	2003	1	BH
	2	ABCDE		2	EF
	3	CE		3	CE
	4	CDGH		4	CDGH
	5	H		5	H
	6			6	
	7	ABC		7	ABC
	8	ABCDFG		8	ABCDFG
	9	BEF		9	BEF
	10	G		10	G
1777	1	CDEFH	2004	1	BH
	2	ABCDEF		2	D
	3	CE		3	CE
	4	CDGH		4	CDH
	5	H		5	
	6			6	G
	7	ACH		7	ACH
	8	DGH		8	DGH
	9	ABEF		9	ABEF
	10			10	

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
2005	1	BH	2012	1	BH
	2	DF		2	CE
	3			3	
	4			4	G
	5			5	
	6	G		6	H
	7	H		7	
	8			8	
	9			9	
	10			10	
2006	1	BH	2013	1	BH
	2	DE		2	CEF
	3			3	CE
	4	G		4	CDGH
	5			5	GH
	6	H		6	G
	7			7	ABC
	8			8	ABCDFG
	9			9	BEF
	10			10	G
2007	1	BH	2014	1	BH
	2	DEF		2	CD
	3	CE		3	
	4	DGH		4	GH
	5	GH		5	H
	6	GH		6	G
	7	ABC		7	
	8	ABCDFG		8	
	9	BEF		9	
	10	G		10	
2010	1	BH	2015	1	BH
	2	C		2	CDF
	3			3	CE
	4	GH		4	CDGH
	5	H		5	H
	6	G		6	
	7			7	AC
	8			8	DGH
	9			9	ABEF
	10			10	
2011	1	BH	2016	1	BH
	2	CF		2	CDE
	3	CE		3	CE
	4	CDGH		4	CDG
	5	H		5	
	6			6	H
	7	AC		7	ABC
	8	DGH		8	ABCDFG
	9	ABEF		9	BEF
	10			10	EG

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
2017	1	BH	2024	1	BH
	2	CDEF		2	BD
	3	CF		3	C
	4	ACEFGH		4	CEG
	5	G		5	H
	6	G		6	GH
	7	ABC		7	ABC
	8	ABCDFG		8	ABCDFG
	9	BEF		9	BE
	10	G		10	EG
2020	1	BH	5000	1	ACH
	2	B		2	
	3			3	
	4	G		4	
	5	G		5	
	6	G		6	
	7			7	
	8			8	
	9			9	
	10			10	H
2021	1	BH	5046	1	ACH
	2	BF		2	ADE
	3	CD		3	C
	4	ACEFH		4	ACE
	5	CDH		5	C
	6	CG		6	ABD
	7	CE		7	
	8	BFH		8	
	9			9	
	10	BCG		10	H
2022	1	BH	5047	1	ACH
	2	BE		2	ADEF
	3	CD		3	C
	4	ACEF		4	ACE
	5	CDH		5	C
	6	CG		6	ABD
	7	ABC		7	C
	8	ABCDFG		8	ABCD
	9	BE		9	CDF
	10	EG		10	
2023	1	BH	5050	1	ACH
	2	BEF		2	AC
	3	C		3	C
	4	CEGH		4	ACE
	5	CDH		5	C
	6	CGH		6	ABD
	7	CE		7	BCEF
	8	BFH		8	D
	9			9	
	10	BCG		10	G

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
5051	1	ACH	5056	1	ACH
	2	ACF		2	ACDE
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7	CF		7	
	8	ABCDFH		8	
	9			9	
	10			10	H
5052	1	ACH	5057	1	ACH
	2	ACE		2	ACDEF
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7			7	C
	8			8	ABCD
	9			9	CF
	10	H		10	
5053	1	ACH	5060	1	ACH
	2	ACEF		2	AB
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7	C		7	BCF
	8	ABCD		8	CH
	9	CDFH		9	
	10			10	G
5054	1	ACH	5061	1	ACH
	2	ACD		2	ABF
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7	BCF		7	BC
	8	CH		8	DEFGH
	9			9	
	10	G		10	
5055	1	ACH	5062	1	ACH
	2	ACDF		2	ABE
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7	BC		7	
	8	DEFGH		8	
	9			9	
	10			10	H

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
5063	1	ACH	5070	1	ACH
	2	ABEF		2	ABC
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7	C		7	BC
	8	ABCD		8	DH
	9	BCDF		9	
	10			10	G
5064	1	ACH	5071	1	ACH
	2	ABD		2	ABCF
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7	BCEF		7	C
	8	D		8	ABCDEFGH
	9			9	
	10	G		10	
5065	1	ACH	5072	1	ACH
	2	ABDF		2	ABCE
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7	CF		7	
	8	ABCDFH		8	
	9			9	
	10			10	H
5066	1	ACH	5073	1	ACH
	2	ABDE		2	ABCEF
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7			7	C
	8			8	ABCD
	9			9	CDFH
	10	H		10	G
5067	1	ACH	5074	1	ACH
	2	ABDEF		2	ABCD
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7	C		7	BCEF
	8	ABCD		8	D
	9	ABCDF		9	
	10			10	G

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
5075	1	ACH	5102	1	ACFH
	2	ABCDF		2	E
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7	CF		7	
	8	ABCDFH		8	
	9			9	
	10			10	H
5076	1	ACH	5103	1	ACFH
	2	ABCDE		2	EF
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7			7	C
	8			8	ABCD
	9			9	CFH
	10	H		10	G
5077	1	ACH	5104	1	ACFH
	2	ABCDEF		2	D
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7	C		7	BCF
	8	ABCD		8	CH
	9	CDF		9	
	10	G		10	G
5100	1	ACFH	5105	1	ACFH
	2			2	DF
	3	C		3	C
	4	ACE		4	ACE
	5	C		5	C
	6	ABD		6	ABD
	7	BCF		7	BC
	8	CH		8	DEFGH
	9			9	
	10	G		10	
5101	1	ACFH	5106	1	ACFH
	2	F		2	DE
	3	C		3	
	4	ACE		4	
	5	C		5	
	6	ABD		6	
	7	BC		7	
	8	DEFGH		8	
	9			9	F
	10			10	H

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
5107	1	ACFH	5114	1	ACFH
	2	DEF		2	CD
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5110	1	ACFH	5115	1	ACFH
	2	C		2	CDF
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5111	1	ACFH	5116	1	ACFH
	2	CF		2	CDE
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5112	1	ACFH	5117	1	ACFH
	2	CE		2	CDEF
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5113	1	ACFH	5120	1	ACFH
	2	CEF		2	B
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
5121	1	ACFH	5126	1	ACFH
	2	BF		2	BDE
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5122	1	ACFH	5127	1	ACFH
	2	BE		2	BDEF
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5123	1	ACFH	5130	1	ACFH
	2	BEF		2	BC
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5124	1	ACFH	5131	1	ACFH
	2	BD		2	BCF
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5125	1	ACFH	5132	1	ACFH
	2	BDF		2	BCE
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
5133	1	ACFH	5140	1	ACFH
	2	BCEF		2	A
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5134	1	ACFH	5141	1	ACFH
	2	BCD		2	AF
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5135	1	ACFH	5142	1	ACFH
	2	BCDF		2	AE
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5136	1	ACFH	5143	1	ACFH
	2	BCDE		2	AEF
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5137	1	ACFH	5144	1	ACFH
	2	BCDEF		2	AD
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	

Source: https://assist.dla.mil -- Downloaded: 202640-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
5145	1	ACFH	5152	1	ACFH
	2	ADF		2	ACE
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5146	1	ACFH	5153	1	ACFH
	2	ADE		2	ACEF
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5147	1	ACFH	5154	1	ACFH
	2	ADEF		2	ACD
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5150	1	ACFH	5155	1	ACFH
	2	AC		2	ACDF
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5151	1	ACFH	5156	1	ACFH
	2	ACF		2	ACDE
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
5157	1	ACFH	5164	1	ACFH
	2	ACDEF		2	ABD
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5160	1	ACFH	5165	1	ACFH
	2	AB		2	ABDF
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5161	1	ACFH	5166	1	ACFH
	2	ABF		2	ABDE
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5162	1	ACFH	5167	1	ACFH
	2	ABE		2	ABDEF
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5163	1	ACFH	5170	1	ACFH
	2	ABEF		2	ABC
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	

Source: https://assist.dla.mil -- Downloaded: 20261O-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.	Program		Test No.	Program	
5171	1	ACFH	5176	1	ACFH
	2	ABCF		2	ABCDE
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5172	1	ACFH	5177	1	ACFH
	2	ABCE		2	ABCDEF
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5173	1	ACFH	5200	1	ACEH
	2	ABCEF		2	
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5174	1	ACFH	5201	1	ACEH
	2	ABCD		2	F
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5175	1	ACFH	5202	1	ACEH
	2	ABCDF		2	E
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	

Source: https://assist.dla.mil -- Downloaded: 202610-21T15:33Z
Check the source to verify that this is the current version before use.

Test No.		Program	Test No.		Program
5203	1	ACEH	5210	1	ACEH
	2	EF		2	C
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5204	1	ACEH	7777	1	ABCDEFH
	2	D		2	ABCDEF
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5205	1	ACEH		1	
	2	DF		2	
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5206	1	ACEH		1	
	2	DE		2	
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	
5207	1	ACEH		1	
	2	DEF		2	
	3			3	
	4			4	
	5			5	
	6			6	
	7			7	
	8			8	
	9			9	
	10			10	

Source: https://assist.dla.mil -- Downloaded: 2026-10-21T15:33Z
Check the source to verify that this is the current version before use.