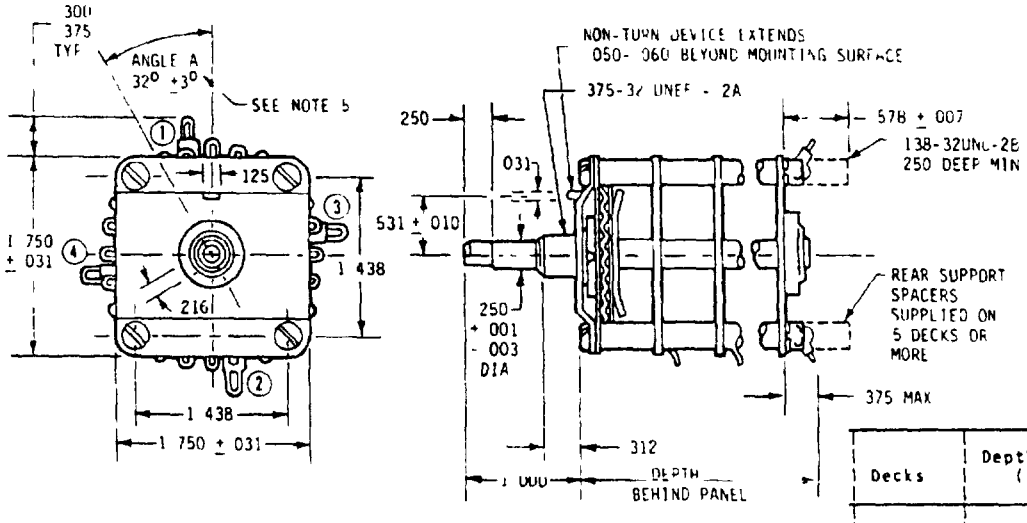
MILITARY SPECIFICATION

SWITCH, ROTARY, OPEN CONSTRUCTION, 1/2 AMPERE AND LOW LEVEL

STYLE SR40

This specification is approved for use by all Departments and Agencies of the Department of Defense.

The complete requirements for acquiring the switch described herein shall consist of this specification and the latest issue of MIL-S-3786.



Decks	Depth behind panel (inches-max) (mm)
1	1.187 (30 15)
2	1 760 (44 70)
3	2.333 (59.26)
4	2 906 (73.81)
5	3 479 (88.37)
6	4 262 (108 25)
7	4 835 (122 81)
8	5 408 (137 36)
9	5 981 (151 92)
10	6 554 (166 47)

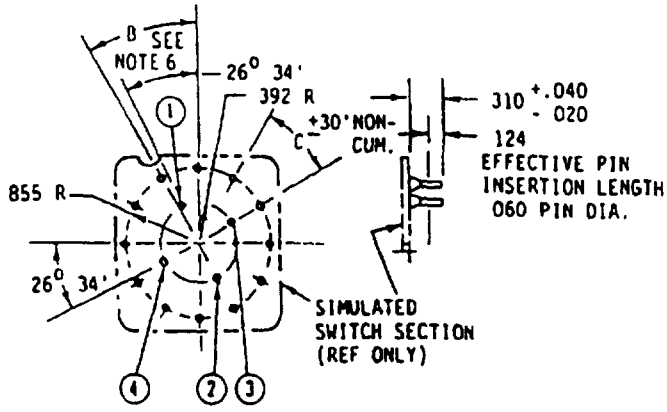
INCHES	MM	INCHES	MM	INCHES	MM	INCHES	MM
.001	.03	.040	1.02	.300	7.62	.578	14.68
.003	.08	.050	1.27	.310	7.87	.699	17.48
.007	.18	.060	1.52	.312	7.92	.755	19.18
.010	.25	.124	3.15	.350	8.89	.797	20.24
.015	.38	.125	3.18	.375	9.53	.855	21.72
.020	.51	.138	3.51	.392	9.96	1.000	25.40
.025	.64	.216	5.49	.531	13.49	1.375	34.93
.031	79	.250	6.35	.563	14.30	1.438	36.53
						1.750	44.45

NOTES:
1. Dimensions are in inches
2. Metric equivalents are given for general information only and are based upon 1.00 inch = 25.4 mm.
3. Unless otherwise specified, tolerances are ±.015 (.38 mm) for three place decimals.
4. The number of decks is as specified. See table V.
5. Angle A is formed by two lines which intersect at the center of the shaft - one through the center of the projected non-turn device, the other perpendicular to the shaft flat with the shaft in position 1.
6. Angle B locates #1 position from center lines as shown. Angle B is 30° for switches with angle of throw of 15° or 30°. Angle B is 33° 45' for switches with angle of throw of 11.25° or 22.5°.
7. Unless otherwise specified, angular tolerance is ±1°

FIGURE 1. Style SR40 switches.

FSC 5930

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.



1. Common terminal #1.
2. Common terminal #2.
3. Common terminal #3.
4. Common terminal #4. Common #1 (only) required for one pole switch. Commons #1 and #2 (only) required for two pole switch. Common #1, #2, #3, and #4 required for four pole switch.

VIEW LOOKING FROM FRONT OF SWITCH

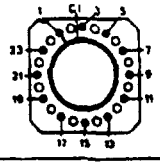
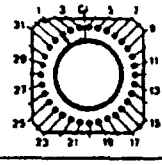
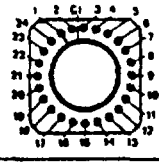
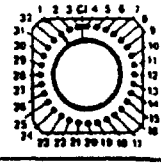
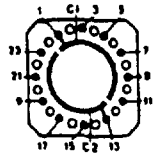
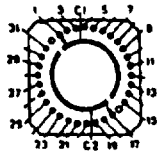
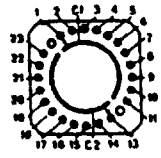
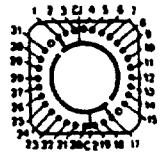
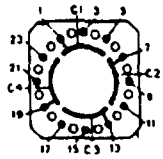
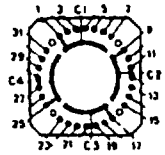
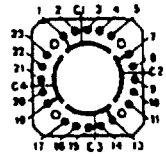
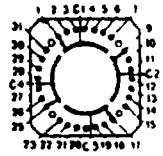
RECOMMENDED PC BOARD HOLE PATTERN

Switching characteristics	Angle of throw	C Angle between holes	Required number of PC board holes 1/
Shorting	30°	15°	24
Non Shorting	30°	30°	12
Shorting	15°	15°	24
Snorting	22°30'	11°15'	32
Non Shorting	22°30'	22°30'	16
Shorting	11°15'	11°15'	32

1/ Plus required common terminal holes.

FIGURE 2. PC board hole locations and pattern.

TABLE I. Terminal locations.

POLES PER DECK	INDEXING ANGLE			
	30°	22.5°	15°	11.25°
1				
2				
4				

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

REQUIREMENTS:

Dimensions and configuration: See figures 1 and 2, and table I.

Angle of throw: 11.25°, 15°, 22.5°, or 30°, as applicable. See table V.

Terminals: The terminal tabs shall be bent at an angle of 0° ± 15° from the plane of the section, except that the common and corner terminals shall be bent at an angle of 45° ± 15° from the plane of the section. Printed circuit terminals shall be parallel to the shaft.

Orientation: The periphery of the stator shall have a notch adjacent to terminal 1.

Marking: All contact positions, including contacts not provided with terminals, shall be marked with consecutive numbers from 1 through 24 or 1 through 32.

Rear support: Switches which have six sections or more shall be supplied with four 6-32UNC-2B rear support spacers tapped to 1/4 minimum depth to be used for rear support.

Construction type: Symbol N. Open construction without sealed shaft and panel seal.
Symbol S. Open construction with sealed shaft and panel seal.

Insulation material: Symbol G (glass laminate).

Temperature-life characteristic: Symbol E. 50,000 cycles at 65°C to +125°C.

Altitude: Symbol 0 (up to 10,000 feet).

Rotational torque: The values of shaft rotational torque shall be within the limits shown in table II. Table II applies only to switches with one pole per deck. After life test, the change in torque shall not exceed 35 percent of its initial value.

TABLE II. Rotational-torque limits.

Construction type	Temperature	Torque (lb-in)		
		Minimum	Maximum	
			5 sections or less	More than 5 sections
N or S	Room	1.5	6	10
N	Minimum	1.5	8	13
S	Minimum	1.5	10	15

Shaft stops: Switches which contain stops shall withstand the following torques applied against the stops in both the clockwise and counterclockwise directions

Switches with shaft and bushing seals: 25 lb-in.
Switches without shaft and bushing seals: 50 lb-in.

Contact resistance: Contact resistance shall not exceed the following values:

Initial and after vibration and shock: 5 milliohms
After moisture-resistance and salt spray: 5 milliohms
After initial soak and completion of life test: 10 milliohms
Low level circuit is applicable.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

Vibration grade. Symbol 3 (10-2000 Hz).

Shock type: Symbol M (medium impact) and H (high impact).

Dielectric withstanding voltage: Applicable, using 1,500 volts throughout, except voltage shall be reduced to 1,000 volts after life and low level switching tests.

Life rotational: See table III.

Special features: Symbol A (both high and low level contact load rating and both shaft grounding and EMI/RFI capability).

TABLE III. Electrical loads.

Environmental condition	Inductive load (2.8 H)		Resistive loads	
	mA	V	mA	V
At atmospheric pressure	50	28 dc	10 max	0.030 dc max or peak ac 1/
			500	28 dc
			125	115 V rms
			50	300 V rms

1/ Low level switching is applicable. Low level shall be conducted as one of the electrical loads tested during life (rotational) testing. The test circuit, power source, and monitoring apparatus shall be in accordance with method 311 of MIL-STD-202. Contact resistance shall not exceed 7.5 milliohms. At the beginning of the test and every 5,000 cycles thereafter, the contact resistance shall be measured.

Test samples to be used for qualification testing (4 each):

M3786/40-0626
M3786/40-1625
M3786/40-0734
M3786/40-1118

Part number: See table V. The military part number shall consist of the prefix M3786/40- and a dash number consisting of four numbers sequentially assigned. The numbers fall into the general pattern outlined on table IV:

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

TABLE IV. Dash number identification.

Dash numbers Construction: N	Dash numbers Construction: S	Angle of throw	Poles per deck	Pos. per pole	Switch characteristic	PC term.
0001-0086	1001-1086	30°	1, 2, 4	2-12	N	---
0087-0122	1087-1122	22.5°	2, 4	2-8	N	---
0123-0202	1123-1202	22.5°	1	9-16	N	---
0203-0254	1203-1254	15°	2, 4	2-11	S	---
0255-0384	1255-1384	15°	1	12-24	S	---
0385-0408	1385-1408	11.25°	4	2-7	S	---
0409-0456	1409-1456	11.25°	2	8-15	S	---
0457-0626	1457-1626	11.25°	1	16-32	S	---
0627-0672	1627-1672	30°	1, 2, 4	2-12	N	Yes
0673-0734	1673-1734	22.5°	1, 2, 4	2-16	N	Yes
0735-0831	1735-1831	15°	1, 2, 4	2-24	S	Yes
0832-0960	1832-1960	11.25°	1, 2, 4	2-32	S	Yes

TABLE V. Switching characteristics and part numbers.

Part no. M3786/40- Construction: N	Part no. M3786/40- Construction: S	Angle of throw	Poles per deck	No. of decks	No. of poles	Pos. per pole	Switch characteristic N or S
0001	1001	30°	4	1	4	2	N
0002	1002	"	"	"	"	3	"
0003	1003	"	"	2	8	2	"
0004	1004	"	"	"	"	3	"
0005	1005	"	"	3	12	2	"
0006	1006	"	"	"	"	3	"
0007	1007	"	"	4	16	2	"
0008	1008	"	"	"	"	3	"
0009	1009	"	2	1	2	4	"
0010	1010	"	"	"	"	5	"
0011	1011	"	"	"	"	6	"
0012	1012	"	"	2	4	4	"
0013	1013	"	"	"	"	5	"
0014	1014	"	"	"	"	6	"
0015	1015	"	"	3	6	4	"
0016	1016	"	"	"	"	5	"
0017	1017	"	"	"	"	6	"
0018	1018	"	"	4	8	4	"
0019	1019	"	"	"	"	5	"
0020	1020	"	"	"	"	6	"

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

TABLE V. Switching characteristics and part numbers - Continued.

Part no. M3786/40- Construction: N	Part no. M3786/40- Construction: S	Angle of throw	Poles per deck	No. of decks	No. of poles	Pos. per pole	Switch characteristic N or S
0021	1021	30°	2	5	10	4	N
0022	1022	"	"	"	"	5	"
0023	1023	"	"	"	"	6	"
0024	1024	"	"	6	12	4	"
0025	1025	"	"	"	"	5	"
0026	1026	"	"	"	"	6	"
0027	1027	"	1	1	1	7	"
0028	1028	"	"	"	"	8	"
0029	1029	"	"	"	"	9	"
0030	1030	"	"	"	"	10	"
0031	1031	"	"	"	"	11	"
0032	1032	"	"	"	"	12 1/	"
0033	1033	"	"	2	2	7	"
0034	1034	"	"	"	"	8	"
0035	1035	"	"	"	"	9	"
0036	1036	"	"	"	"	10	"
0037	1037	"	"	"	"	11	"
0038	1038	"	"	"	"	12 1/	"
0039	1039	"	"	3	3	7	"
0040	1040	"	"	"	"	8	"
0041	1041	"	"	"	"	9	"
0042	1042	"	"	"	"	10	"
0043	1043	"	"	"	"	11	"
0044	1044	"	"	"	"	12 1/	"
0045	1045	"	"	4	4	7	"
0046	1046	"	"	"	"	8	"
0047	1047	"	"	"	"	9	"
0048	1048	"	"	"	"	10	"
0049	1049	"	"	"	"	11	"
0050	1050	"	"	"	"	12 1/	"
0051	1051	"	"	5	5	7	"
0052	1052	"	"	"	"	8	"
0053	1053	"	"	"	"	9	"
0054	1054	"	"	"	"	10	"
0055	1055	"	"	"	"	11	"
0056	1056	"	"	"	"	12 1/	"
0057	1057	"	"	6	6	7	"
0058	1058	"	"	"	"	8	"
0059	1059	"	"	"	"	9	"
0060	1060	"	"	"	"	10	"
0061	1061	"	"	"	"	11	"
0062	1062	"	"	"	"	12 1/	"
0063	1063	"	"	7	7	7	"
0064	1064	"	"	"	"	8	"
0065	1065	"	"	"	"	9	"
0066	1066	"	"	"	"	10	"
0067	1067	"	"	"	"	11	"
0068	1068	"	"	"	"	12 1/	"
0069	1069	"	"	8	8	7	"
0070	1070	"	"	"	"	8	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

TABLE V. Switching characteristics and part numbers - Continued.

Part no. M3786/40- Construction: N	Part no. M3786/40- Construction: S	Angle of throw	Poles per deck	No. of decks	No. of poles	Pos. per pole	Switch charac-teristic N or S
0071	1071	30°	1	8	8	9	N
0072	1072	"	"	"	"	10	"
0073	1073	"	"	"	"	11	"
0074	1074	"	"	"	"	12 1/	"
0075	1075	"	"	9	9	7	"
0076	1076	"	"	"	"	8	"
0077	1077	"	"	"	"	9	"
0078	1078	"	"	"	"	10	"
0079	1079	"	"	"	"	11	"
0080	1080	"	"	"	"	12 1/	"
0081	1081	"	"	10	10	7	"
0082	1082	"	"	"	"	8	"
0083	1083	"	"	"	"	9	"
0084	1084	"	"	"	"	10	"
0085	1085	"	"	"	"	11	"
0086	1086	"	"	"	"	12 1/	"
0087	1087	22-1/2°	4	1	4	2	"
0088	1088	"	"	"	"	3	"
0089	1089	"	"	"	"	4	"
0090	1090	"	"	2	8	2	"
0091	1091	"	"	"	"	3	"
0092	1092	"	"	"	"	4	"
0093	1093	"	"	3	12	2	"
0094	1094	"	"	"	"	3	"
0095	1095	"	"	"	"	4	"
0096	1096	"	"	4	16	2	"
0097	1097	"	"	"	"	3	"
0098	1098	"	"	"	"	4	"
0099	1099	"	2	1	2	5	"
0100	1100	"	"	"	"	6	"
0101	1101	"	"	"	"	7	"
0102	1102	"	"	"	"	8	"
0103	1103	"	"	2	4	5	"
0104	1104	"	"	"	"	6	"
0105	1105	"	"	"	"	7	"
0106	1106	"	"	"	"	8	"
0107	1107	"	"	3	6	5	"
0108	1108	"	"	"	"	6	"
0109	1109	"	"	"	"	7	"
0110	1110	"	"	"	"	8	"
0111	1111	"	"	4	8	5	"
0112	1112	"	"	"	"	6	"
0113	1113	"	"	"	"	7	"
0114	1114	"	"	"	"	8	"
0115	1115	"	"	5	10	5	"
0116	1116	"	"	"	"	6	"
0117	1117	"	"	"	"	7	"
0118	1118	"	"	"	"	8	"
0119	1119	"	"	6	12	5	"
0120	1120	"	"	"	"	6	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

TABLE V. Switching characteristics and part numbers - Continued.

Part no. M3786/40- Construction: N	Part no. M3786/40- Construction: S	Angle of throw	Poles per deck	No. of decks	No. of poles	Pos. per pole	Switch characteristic N or S
0121	1121	22-1/2°	2	6	12	7	N
0122	1122	"	"	"	"	8	"
0123	1123	"	1	1	1	9	"
0124	1124	"	"	"	"	10	"
0125	1125	"	"	"	"	11	"
0126	1126	"	"	"	"	12	"
0127	1127	"	"	"	"	13	"
0128	1128	"	"	"	"	14	"
0129	1129	"	"	"	"	15	"
0130	1130	"	"	"	"	16 1/	"
0131	1131	"	"	2	2	9	"
0132	1132	"	"	"	"	10	"
0133	1133	"	"	"	"	11	"
0134	1134	"	"	"	"	12	"
0135	1135	"	"	"	"	13	"
0136	1136	"	"	"	"	14	"
0137	1137	"	"	"	"	15	"
0138	1138	"	"	"	"	16 1/	"
0139	1139	"	"	3	3	9	"
0140	1140	"	"	"	"	10	"
0141	1141	"	"	"	"	11	"
0142	1142	"	"	"	"	12	"
0143	1143	"	"	"	"	13	"
0144	1144	"	"	"	"	14	"
0145	1145	"	"	"	"	15	"
0146	1146	"	"	"	"	16 1/	"
0147	1147	"	"	4	4	9	"
0148	1148	"	"	"	"	10	"
0149	1149	"	"	"	"	11	"
0150	1150	"	"	"	"	12	"
0151	1151	"	"	"	"	13	"
0152	1152	"	"	"	"	14	"
0153	1153	"	"	"	"	15	"
0154	1154	"	"	"	"	16 1/	"
0155	1155	"	"	5	5	9	"
0156	1156	"	"	"	"	10	"
0157	1157	"	"	"	"	11	"
0158	1158	"	"	"	"	12	"
0159	1159	"	"	"	"	13	"
0160	1160	"	"	"	"	14	"
0161	1161	"	"	"	"	15	"
0162	1162	"	"	"	"	16 1/	"
0163	1163	"	"	6	6	9	"
0164	1164	"	"	"	"	10	"
0165	1165	"	"	"	"	11	"
0166	1166	"	"	"	"	12	"
0167	1167	"	"	"	"	13	"
0168	1168	"	"	"	"	14	"
0169	1169	"	"	"	"	15	"
0170	1170	"	"	"	"	16 1/	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

TABLE V. Switching characteristics and part numbers - Continued.

Part no. M3786/40- Construction: N	Part no. M3786/40- Construction: S	Angle of throw	Poles per deck	No. of decks	No. of poles	Pos. per pole	Switch characteristic N or S
0171	1171	22-1/2°	1	7	7	9	N
0172	1172	"	"	"	"	10	"
0173	1173	"	"	"	"	11	"
0174	1174	"	"	"	"	12	"
0175	1175	"	"	"	"	13	"
0176	1176	"	"	"	"	14	"
0177	1177	"	"	"	"	15	"
0178	1178	"	"	"	"	16 1/	"
0179	1179	"	"	8	8	9	"
0180	1180	"	"	"	"	10	"
0181	1181	"	"	"	"	11	"
0182	1182	"	"	"	"	12	"
0183	1183	"	"	"	"	13	"
0184	1184	"	"	"	"	14	"
0185	1185	"	"	"	"	15	"
0186	1186	"	"	"	"	16 1/	"
0187	1187	"	"	9	9	9	"
0188	1188	"	"	"	"	10	"
0189	1189	"	"	"	"	11	"
0190	1190	"	"	"	"	12	"
0191	1191	"	"	"	"	13	"
0192	1192	"	"	"	"	14	"
0193	1193	"	"	"	"	15	"
0194	1194	"	"	"	"	16 1/	"
0195	1195	"	"	10	10	9	"
0196	1196	"	"	"	"	10	"
0197	1197	"	"	"	"	11	"
0198	1198	"	"	"	"	12	"
0199	1199	"	"	"	"	13	"
0200	1200	"	"	"	"	14	"
0201	1201	"	"	"	"	15	"
0202	1202	"	"	"	"	16 1/	"
0203	1203	15°	4	1	4	2	S
0204	1204	"	"	"	"	3	"
0205	1205	"	"	"	"	4	"
0206	1206	"	"	"	"	5	"
0207	1207	"	"	2	8	2	"
0208	1208	"	"	"	"	3	"
0209	1209	"	"	"	"	4	"
0210	1210	"	"	"	"	5	"
0211	1211	"	"	3	12	2	"
0212	1212	"	"	"	"	3	"
0213	1213	"	"	"	"	4	"
0214	1214	"	"	"	"	5	"
0215	1215	"	"	4	16	2	"
0216	1216	"	"	"	"	3	"
0217	1217	"	"	"	"	4	"
0218	1218	"	"	"	"	5	"
0219	1219	"	2	1	2	6	"
0220	1220	"	"	"	"	7	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

TABLE V. Switching characteristics and part numbers - Continued.

Part no. M3786/40-Construction N	Part no. M3786/40-Construction: S	Angle of throw	Poles per deck	No. of decks	No. of poles	Pos. per pole	Switch characteristic N or S
0221	1221	15°	2	1	2	8	S
0222	1222	"	"	"	"	9	"
0223	1223	"	"	"	"	10	"
0224	1224	"	"	"	"	11	"
0225	1225	"	"	2	4	6	"
0226	1226	"	"	"	"	7	"
0227	1227	"	"	"	"	8	"
0228	1228	"	"	"	"	9	"
0229	1229	"	"	"	"	10	"
0230	1230	"	"	"	"	11	"
0231	1231	"	"	3	6	6	"
0232	1232	"	"	"	"	7	"
0233	1233	"	"	"	"	8	"
0234	1234	"	"	"	"	9	"
0235	1235	"	"	"	"	10	"
0236	1236	"	"	"	"	11	"
0237	1237	"	"	4	8	6	"
0238	1238	"	"	"	"	7	"
0239	1239	"	"	"	"	8	"
0240	1240	"	"	"	"	9	"
0241	1241	"	"	"	"	10	"
0242	1242	"	"	"	"	11	"
0243	1243	"	"	5	10	6	"
0244	1244	"	"	"	"	7	"
0245	1245	"	"	"	"	8	"
0246	1246	"	"	"	"	9	"
0247	1247	"	"	"	"	10	"
0248	1248	"	"	"	"	11	"
0249	1249	"	"	6	12	6	"
0250	1250	"	"	"	"	7	"
0251	1251	"	"	"	"	8	"
0252	1252	"	"	"	"	9	"
0253	1253	"	"	"	"	10	"
0254	1254	"	"	"	"	11	"
0255	1255	"	1	1	1	12	"
0256	1256	"	"	"	"	13	"
0257	1257	"	"	"	"	14	"
0258	1258	"	"	"	"	15	"
0259	1259	"	"	"	"	16	"
0260	1260	"	"	"	"	17	"
0261	1261	"	"	"	"	18	"
0262	1262	"	"	"	"	19	"
0263	1263	"	"	"	"	20	"
0264	1264	"	"	"	"	21	"
0265	1265	"	"	"	"	22	"
0266	1266	"	"	"	"	23	"
0267	1267	"	"	"	"	24 1/	"
0268	1268	"	"	2	2	12	"
0269	1269	"	"	"	"	13	"
0270	1270	"	"	"	"	14	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

TABLE V. Switching characteristics and part numbers - Continued.

Part no. M3786/40- Construction: N	Part no. M3786/40- Construction: S	Angle of throw	Poles per deck	No. of decks	No. of poles	Pos. per pole	Switch characteristic N or S
0271	1271	15°	1	2	2	15	S
0272	1272	"	"	"	"	16	"
0273	1273	"	"	"	"	17	"
0274	1274	"	"	"	"	18	"
0275	1275	"	"	"	"	19	"
0276	1276	"	"	"	"	20	"
0277	1277	"	"	"	"	21	"
0278	1278	"	"	"	"	22	"
0279	1279	"	"	"	"	23	"
0280	1280	"	"	"	"	24 1/	"
0281	1281	"	"	3	3	12	"
0282	1282	"	"	"	"	13	"
0283	1283	"	"	"	"	14	"
0284	1284	"	"	"	"	15	"
0285	1285	"	"	"	"	16	"
0286	1286	"	"	"	"	17	"
0287	1287	"	"	"	"	18	"
0288	1288	"	"	"	"	19	"
0289	1289	"	"	"	"	20	"
0290	1290	"	"	"	"	21	"
0291	1291	"	"	"	"	22	"
0292	1292	"	"	"	"	23	"
0293	1293	"	"	"	"	24 1/	"
0294	1294	"	"	4	4	12	"
0295	1295	"	"	"	"	13	"
0296	1296	"	"	"	"	14	"
0297	1297	"	"	"	"	15	"
0298	1298	"	"	"	"	16	"
0299	1299	"	"	"	"	17	"
0300	1300	"	"	"	"	18	"
0301	1301	"	"	"	"	19	"
0302	1302	"	"	"	"	20	"
0303	1303	"	"	"	"	21	"
0304	1304	"	"	"	"	22	"
0305	1305	"	"	"	"	23	"
0306	1306	"	"	"	"	24 1/	"
0307	1307	"	"	5	5	12	"
0308	1308	"	"	"	"	13	"
0309	1309	"	"	"	"	14	"
0310	1310	"	"	"	"	15	"
0311	1311	"	"	"	"	16	"
0312	1312	"	"	"	"	17	"
0313	1313	"	"	"	"	18	"
0314	1314	"	"	"	"	19	"
0315	1315	"	"	"	"	20	"
0316	1316	"	"	"	"	21	"
0317	1317	"	"	"	"	22	"
0318	1318	"	"	"	"	23	"
0319	1319	"	"	"	"	24 1/	"
0320	1320	"	"	6	6	12	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

TABLE V. Switching characteristics and part numbers - Continued.

Part no. M3786/40- Construction: N	Part no. M3786/40- Construction: S	Angle of throw	Poles per deck	No. of decks	No. of poles	Pos. per pole	Switch characteristic N or S
0321	1321	15°	1	6	6	13	S
0322	1322	"	"	"	"	14	"
0323	1323	"	"	"	"	15	"
0324	1324	"	"	"	"	16	"
0325	1325	"	"	"	"	17	"
0326	1326	"	"	"	"	18	"
0327	1327	"	"	"	"	19	"
0328	1328	"	"	"	"	20	"
0329	1329	"	"	"	"	21	"
0330	1330	"	"	"	"	22	"
0331	1331	"	"	"	"	23	"
0332	1332	"	"	"	"	24 1/	"
0333	1333	"	"	7	7	12	"
0334	1334	"	"	"	"	13	"
0335	1335	"	"	"	"	14	"
0336	1336	"	"	"	"	15	"
0337	1337	"	"	"	"	16	"
0338	1338	"	"	"	"	17	"
0339	1339	"	"	"	"	18	"
0340	1340	"	"	"	"	19	"
0341	1341	"	"	"	"	20	"
0342	1342	"	"	"	"	21	"
0343	1343	"	"	"	"	22	"
0344	1344	"	"	"	"	23	"
0345	1345	"	"	"	"	24 1/	"
0346	1346	"	"	8	8	12	"
0347	1347	"	"	"	"	13	"
0348	1348	"	"	"	"	14	"
0349	1349	"	"	"	"	15	"
0350	1350	"	"	"	"	16	"
0351	1351	"	"	"	"	17	"
0352	1352	"	"	"	"	18	"
0353	1353	"	"	"	"	19	"
0354	1354	"	"	"	"	20	"
0355	1355	"	"	"	"	21	"
0356	1356	"	"	"	"	22	"
0357	1357	"	"	"	"	23	"
0358	1358	"	"	"	"	24 1/	"
0359	1359	"	"	9	9	12	"
0360	1360	"	"	"	"	13	"
0361	1361	"	"	"	"	14	"
0362	1362	"	"	"	"	15	"
0363	1363	"	"	"	"	16	"
0364	1364	"	"	"	"	17	"
0365	1365	"	"	"	"	18	"
0366	1366	"	"	"	"	19	"
0367	1367	"	"	"	"	20	"
0368	1368	"	"	"	"	21	"
0369	1369	"	"	"	"	22	"
0370	1370	"	"	"	"	23	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

TABLE V. Switching characteristics and part numbers - Continued.

Part no. M3786/40- Construction: N	Part no. M3786/40- Construction: S	Angle of throw	Poles per deck	No. of decks	No. of poles	Pos. per pole	Switch characteristic N or S
0371	1371	15°	1	9	9	24 1/	S
0372	1372	"	"	10	10	12	"
0373	1373	"	"	"	"	13	"
0374	1374	"	"	"	"	14	"
0375	1375	"	"	"	"	15	"
0376	1376	"	"	"	"	16	"
0377	1377	"	"	"	"	17	"
0378	1378	"	"	"	"	18	"
0379	1379	"	"	"	"	19	"
0380	1380	"	"	"	"	20	"
0381	1381	"	"	"	"	21	"
0382	1382	"	"	"	"	22	"
0383	1383	"	"	"	"	23	"
0384	1384	"	"	"	"	24 1/	"
0385	1385	11.25°	4	1	4	2	"
0386	1386	"	"	"	"	3	"
0387	1387	"	"	"	"	4	"
0388	1388	"	"	"	"	5	"
0389	1389	"	"	"	"	6	"
0390	1390	"	"	"	"	7	"
0391	1391	"	"	2	8	2	"
0392	1392	"	"	"	"	3	"
0393	1393	"	"	"	"	4	"
0394	1394	"	"	"	"	5	"
0395	1395	"	"	"	"	6	"
0396	1396	"	"	"	"	7	"
0397	1397	"	"	3	12	2	"
0398	1398	"	"	"	"	3	"
0399	1399	"	"	"	"	4	"
0400	1400	"	"	"	"	5	"
0401	1401	"	"	"	"	6	"
0402	1402	"	"	"	"	7	"
0403	1403	"	"	4	16	2	"
0404	1404	"	"	"	"	3	"
0405	1405	"	"	"	"	4	"
0406	1406	"	"	"	"	5	"
0407	1407	"	"	"	"	6	"
0408	1408	"	"	"	"	7	"
0409	1409	"	2	1	2	8	"
0410	1410	"	"	"	"	9	"
0411	1411	"	"	"	"	10	"
0412	1412	"	"	"	"	11	"
0413	1413	"	"	"	"	12	"
0414	1414	"	"	"	"	13	"
0415	1415	"	"	"	"	14	"
0416	1416	"	"	"	"	15	"
0417	1417	"	"	2	4	8	"
0418	1418	"	"	"	"	9	"
0419	1419	"	"	"	"	10	"
0420	1420	"	"	"	"	11	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

TABLE V. Switching characteristics and part numbers - Continued.

Part no. M3786/40- Construction: N	Part no. M3786/40- Construction: S	Angle of throw	Poles per deck	No. of decks	No. of poles	Pos. per pole	Switch charac-teristic N or S
0421	1421	11.25°	2	2	4	12	S
0422	1422	"	"	"	"	13	"
0423	1423	"	"	"	"	14	"
0424	1424	"	"	"	"	15	"
0425	1425	"	"	3	6	8	"
0426	1426	"	"	"	"	9	"
0427	1427	"	"	"	"	10	"
0428	1428	"	"	"	"	11	"
0429	1429	"	"	"	"	12	"
0430	1430	"	"	"	"	13	"
0431	1431	"	"	"	"	14	"
0432	1432	"	"	"	"	15	"
0433	1433	"	"	4	8	8	"
0434	1434	"	"	"	"	9	"
0435	1435	"	"	"	"	10	"
0436	1436	"	"	"	"	11	"
0437	1437	"	"	"	"	12	"
0438	1438	"	"	"	"	13	"
0439	1439	"	"	"	"	14	"
0440	1440	"	"	"	"	15	"
0441	1441	"	"	5	10	8	"
0442	1442	"	"	"	"	9	"
0443	1443	"	"	"	"	10	"
0444	1444	"	"	"	"	11	"
0445	1445	"	"	"	"	12	"
0446	1446	"	"	"	"	13	"
0447	1447	"	"	"	"	14	"
0448	1448	"	"	"	"	15	"
0449	1449	"	"	6	12	8	"
0450	1450	"	"	"	"	9	"
0451	1451	"	"	"	"	10	"
0452	1452	"	"	"	"	11	"
0453	1453	"	"	"	"	12	"
0454	1454	"	"	"	"	13	"
0455	1455	"	"	"	"	14	"
0456	1456	"	"	"	"	15	"
0457	1457	"	1	1	1	16	"
0458	1458	"	"	"	"	17	"
0459	1459	"	"	"	"	18	"
0460	1460	"	"	"	"	19	"
0461	1461	"	"	"	"	20	"
0462	1462	"	"	"	"	21	"
0463	1463	"	"	"	"	22	"
0464	1464	"	"	"	"	23	"
0465	1465	"	"	"	"	24	"
0466	1466	"	"	"	"	25	"
0467	1467	"	"	"	"	26	"
0468	1468	"	"	"	"	27	"
0469	1469	"	"	"	"	28	"
0470	1470	"	"	"	"	29	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

TABLE V. Switching characteristics and part numbers - Continued.

Part no. M3786/40- Construction: N	Part no. M3786/40- Construction. S	Angle of throw	Poles per deck	No. of decks	No. of poles	Pos. per pole	Switch characteristic N or S
0471	1471	11.25°	1	1	1	30	S
0472	1472	"	"	"	"	31	"
0473	1473	"	"	"	"	32 1/	"
0474	1474	"	"	2	2	16	"
0475	1475	"	"	"	"	17	"
0476	1476	"	"	"	"	18	"
0477	1477	"	"	"	"	19	"
0478	1478	"	"	"	"	20	"
0479	1479	"	"	"	"	21	"
0480	1480	"	"	"	"	22	"
0481	1481	"	"	"	"	23	"
0482	1482	"	"	"	"	24	"
0483	1483	"	"	"	"	25	"
0484	1484	"	"	"	"	26	"
0485	1485	"	"	"	"	27	"
0486	1486	"	"	"	"	28	"
0487	1487	"	"	"	"	29	"
0488	1488	"	"	"	"	30	"
0489	1489	"	"	"	"	31	"
0490	1490	"	"	"	"	32 1/	"
0491	1491	"	"	3	3	16	"
0492	1492	"	"	"	"	17	"
0493	1493	"	"	"	"	18	"
0494	1494	"	"	"	"	19	"
0495	1495	"	"	"	"	20	"
0496	1496	"	"	"	"	21	"
0497	1497	"	"	"	"	22	"
0498	1498	"	"	"	"	23	"
0499	1499	"	"	"	"	24	"
0500	1500	"	"	"	"	25	"
0501	1501	"	"	"	"	26	"
0502	1502	"	"	"	"	27	"
0503	1503	"	"	"	"	28	"
0504	1504	"	"	"	"	29	"
0505	1505	"	"	"	"	30	"
0506	1506	"	"	"	"	31	"
0507	1507	"	"	"	"	32 1/	"
0508	1508	"	"	4	4	16	"
0509	1509	"	"	"	"	17	"
0510	1510	"	"	"	"	18	"
0511	1511	"	"	"	"	19	"
0512	1512	"	"	"	"	20	"
0513	1513	"	"	"	"	21	"
0514	1514	"	"	"	"	22	"
0515	1515	"	"	"	"	23	"
0516	1516	"	"	"	"	24	"
0517	1517	"	"	"	"	25	"
0518	1518	"	"	"	"	26	"
0519	1519	"	"	"	"	27	"
0520	1520	"	"	"	"	28	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

TABLE V. Switching characteristics and part numbers - Continued.

Part no. M3786/40-Construction N	Part no. M3786/40-Construction S	Angle of throw	Poles per deck	No. of decks	No. of poles	Pos. per pole	Switch characteristic N or S
0521	1521	11.25°	1	4	4	29	S
0522	1522	"	"	"	"	30	"
0523	1523	"	"	"	"	31	"
0524	1524	"	"	"	"	32 1/	"
0525	1525	"	"	5	5	16	"
0526	1526	"	"	"	"	17	"
0527	1527	"	"	"	"	18	"
0528	1528	"	"	"	"	19	"
0529	1529	"	"	"	"	20	"
0530	1530	"	"	"	"	21	"
0531	1531	"	"	"	"	22	"
0532	1532	"	"	"	"	23	"
0533	1533	"	"	"	"	24	"
0534	1534	"	"	"	"	25	"
0535	1535	"	"	"	"	26	"
0536	1536	"	"	"	"	27	"
0537	1537	"	"	"	"	28	"
0538	1538	"	"	"	"	29	"
0539	1539	"	"	"	"	30	"
0540	1540	"	"	"	"	31	"
0541	1541	"	"	"	"	31 1/	"
0542	1542	"	"	6	6	16	"
0543	1543	"	"	"	"	17	"
0544	1544	"	"	"	"	18	"
0545	1545	"	"	"	"	19	"
0546	1546	"	"	"	"	20	"
0547	1547	"	"	"	"	21	"
0548	1548	"	"	"	"	22	"
0549	1549	"	"	"	"	23	"
0550	1550	"	"	"	"	24	"
0551	1551	"	"	"	"	25	"
0552	1552	"	"	"	"	26	"
0553	1553	"	"	"	"	27	"
0554	1554	"	"	"	"	28	"
0555	1555	"	"	"	"	29	"
0556	1556	"	"	"	"	30	"
0557	1557	"	"	"	"	31	"
0558	1558	"	"	"	"	32 1/	"
0559	1559	"	"	7	7	16	"
0560	1560	"	"	"	"	17	"
0561	1561	"	"	"	"	18	"
0562	1562	"	"	"	"	19	"
0563	1563	"	"	"	"	20	"
0564	1564	"	"	"	"	21	"
0565	1565	"	"	"	"	22	"
0566	1566	"	"	"	"	23	"
0567	1567	"	"	"	"	24	"
0568	1568	"	"	"	"	25	"
0569	1569	"	"	"	"	26	"
0570	1570	"	"	"	"	27	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

TABLE V. Switching characteristics and part numbers - Continued.

Part no. M3786/40- Construction: N	Part no. M3786/40- Construction: S	Angle of throw	Poles per deck	No. of decks	No. of poles	Pos. per pole	Switch characteristic N or S
0571	1571	11.25°	1	7	7	28	S
0572	1572	"	"	"	"	29	"
0573	1573	"	"	"	"	30	"
0574	1574	"	"	"	"	31	"
0575	1575	"	"	"	"	32 1/	"
0576	1576	"	"	8	8	16	"
0577	1577	"	"	"	"	17	"
0578	1578	"	"	"	"	18	"
0579	1579	"	"	"	"	19	"
0580	1580	"	"	"	"	20	"
0581	1581	"	"	"	"	21	"
0582	1582	"	"	"	"	22	"
0583	1583	"	"	"	"	23	"
0584	1584	"	"	"	"	24	"
0585	1585	"	"	"	"	25	"
0586	1586	"	"	"	"	26	"
0587	1587	"	"	"	"	27	"
0588	1588	"	"	"	"	28	"
0589	1589	"	"	"	"	29	"
0590	1590	"	"	"	"	30	"
0591	1591	"	"	"	"	31	"
0592	1592	"	"	"	"	32 1/	"
0593	1593	"	"	9	9	16	"
0594	1594	"	"	"	"	17	"
0595	1595	"	"	"	"	18	"
0596	1596	"	"	"	"	19	"
0597	1597	"	"	"	"	20	"
0598	1598	"	"	"	"	21	"
0599	1599	"	"	"	"	22	"
0600	1600	"	"	"	"	23	"
0601	1601	"	"	"	"	24	"
0602	1602	"	"	"	"	25	"
0603	1603	"	"	"	"	26	"
0604	1604	"	"	"	"	27	"
0605	1605	"	"	"	"	28	"
0606	1606	"	"	"	"	29	"
0607	1607	"	"	"	"	30	"
0608	1608	"	"	"	"	31	"
0609	1609	"	"	"	"	32 1/	"
0610	1610	"	"	10	10	16	"
0611	1611	"	"	"	"	17	"
0612	1612	"	"	"	"	18	"
0613	1613	"	"	"	"	19	"
0614	1614	"	"	"	"	20	"
0615	1615	"	"	"	"	21	"
0616	1616	"	"	"	"	22	"
0617	1617	"	"	"	"	23	"
0618	1618	"	"	"	"	24	"
0619	1619	"	"	"	"	25	"
0620	1620	"	"	"	"	26	"

See footnote at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

TABLE V. Switching characteristics and part numbers - Continued.

Part no. M3786/40- Construction: N	Part no. M3786/40- Construction: S	Angle of throw	Poles per deck	No. of decks	No. of poles	Pos. per pole	Switch characteristic N or S
0621	1621	11.25°	1	10	10	27	S
0622	1622	"	"	"	"	28	"
0623	1623	"	"	"	"	29	"
0624	1624	"	"	"	"	30	"
0625	1625	"	"	"	"	31	"
0626	1626	"	"	"	"	32 1/	"
0627	1627	30°	4	1 2/	4	2	N
0628	1628	"	"	"	"	3	"
0629	1629	"	"	2 3/	8	2	"
0630	1630	"	"	"	"	3	"
0631	1631	"	2	1 2/	2	4	"
0632	1632	"	"	"	"	5	"
0633	1633	"	"	"	"	6	"
0634	1634	"	"	2 3/	4	4	"
0635	1635	"	"	"	"	5	"
0636	1636	"	"	"	"	6	"
0637	1637	"	"	3 3/	6	4	"
0638	1638	"	"	"	"	5	"
0639	1639	"	"	"	"	6	"
0640	1640	"	"	4 3/	8	4	"
0641	1641	"	"	"	"	5	"
0642	1642	"	"	"	"	6	"
0643	1643	"	1	1 2/	1	7	"
0644	1644	"	"	"	"	8	"
0645	1645	"	"	"	"	9	"
0646	1646	"	"	"	"	10	"
0647	1647	"	"	"	"	11	"
0648	1648	"	"	"	"	12 1/	"
0649	1649	"	"	2 3/	2	7	"
0650	1650	"	"	"	"	8	"
0651	1651	"	"	"	"	9	"
0652	1652	"	"	"	"	10	"
0653	1653	"	"	"	"	11	"
0654	1654	"	"	"	"	12 1/	"
0655	1655	"	"	3 3/	3	7	"
0656	1656	"	"	"	"	8	"
0657	1657	"	"	"	"	9	"
0658	1658	"	"	"	"	10	"
0659	1659	"	"	"	"	11	"
0660	1660	"	"	"	"	12 1/	"
0661	1661	"	"	4 3/	4	7	"
0662	1662	"	"	"	"	8	"
0663	1663	"	"	"	"	9	"
0664	1664	"	"	"	"	10	"
0665	1665	"	"	"	"	11	"
0666	1666	"	"	"	"	12 1/	"
0667	1667	"	"	5 3/	5	7	"
0668	1668	"	"	"	"	8	"
0669	1669	"	"	"	"	9	"
0670	1670	"	"	"	"	10	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

TABLE V. Switching characteristics and part numbers - Continued.

Part no. M3786/40- Construction: N	Part no. M3786/40- Construction: S	Angle of throw	Poles per deck	No. of decks	No. of poles	Pos. per pole	Switch characteristic N or S
0671	1671	30°	1	5 3/	5	11	N
0672	1672	"	"	"	"	12 1/	"
0673	1673	22.5°	4	1 2/	4	2	"
0674	1674	"	"	"	"	3	"
0675	1675	"	"	"	"	4	"
0676	1676	"	"	2 3/	8	2	"
0677	1677	"	"	"	"	3	"
0678	1678	"	"	"	"	4	"
0679	1679	"	2	1 2/	2	5	"
0680	1680	"	"	"	"	6	"
0681	1681	"	"	"	"	7	"
0682	1682	"	"	"	"	8	"
0683	1683	"	"	2 3/	4	5	"
0684	1684	"	"	"	"	6	"
0685	1685	"	"	"	"	7	"
0686	1686	"	"	"	"	8	"
0687	1687	"	"	3 3/	6	5	"
0688	1688	"	"	"	"	6	"
0689	1689	"	"	"	"	7	"
0690	1690	"	"	"	"	8	"
0691	1691	"	"	4 3/	8	5	"
0692	1692	"	"	"	"	6	"
0693	1693	"	"	"	"	7	"
0694	1694	"	"	"	"	8	"
0695	1695	"	1	1 2/	1	9	"
0696	1696	"	"	"	"	10	"
0697	1697	"	"	"	"	11	"
0698	1698	"	"	"	"	12	"
0699	1699	"	"	"	"	13	"
0700	1700	"	"	"	"	14	"
0701	1701	"	"	"	"	15	"
0702	1702	"	"	"	"	16 1/	"
0703	1703	"	"	2 3/	2	9	"
0704	1704	"	"	"	"	10	"
0705	1705	"	"	"	"	11	"
0706	1706	"	"	"	"	12	"
0707	1707	"	"	"	"	13	"
0708	1708	"	"	"	"	14	"
0709	1709	"	"	"	"	15	"
0710	1710	"	"	"	"	16 1/	"
0711	1711	"	"	3 3/	3	9	"
0712	1712	"	"	"	"	10	"
0713	1713	"	"	"	"	11	"
0714	1714	"	"	"	"	12	"
0715	1715	"	"	"	"	13	"
0716	1716	"	"	"	"	14	"
0717	1717	"	"	"	"	15	"
0718	1718	"	"	"	"	16 1/	"
0719	1719	"	"	4 3/	4	9	"
0720	1720	"	"	"	"	10	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

TABLE V. Switching characteristics and part numbers - Continued.

Part no. M3786/40- Construction: N	Part no. M3786/40- Construction: S	Angle of throw	Poles per deck	No. of decks	No. of poles	Pos. per pole	Switch characteristic N or S
0721	1721	22.5°	1	4 3/	4	11	N
0722	1722	"	"	"	"	12	"
0723	1723	"	"	"	"	13	"
0724	1724	"	"	"	"	14	"
0725	1725	"	"	"	"	15	"
0726	1726	"	"	"	"	16 1/	"
0727	1727	"	"	5 3/	5	9	"
0728	1728	"	"	"	"	10	"
0729	1729	"	"	"	"	11	"
0730	1730	"	"	"	"	12	"
0731	1731	"	"	"	"	13	"
0732	1732	"	"	"	"	14	"
0733	1733	"	"	"	"	15	"
0734	1734	"	"	"	"	16 1/	"
0735	1735	15°	4	1 2/	4	2	S
0736	1736	"	"	"	"	3	"
0737	1737	"	"	"	"	4	"
0738	1738	"	"	"	"	5	"
0739	1739	"	"	2 3/	8	2	"
0740	1740	"	"	"	"	3	"
0741	1741	"	"	"	"	4	"
0742	1742	"	"	"	"	5	"
0743	1743	"	2	1 2/	2	6	"
0744	1744	"	"	"	"	7	"
0745	1745	"	"	"	"	8	"
0746	1746	"	"	"	"	9	"
0747	1747	"	"	"	"	10	"
0748	1748	"	"	"	"	11	"
0749	1749	"	"	2 3/	4	6	"
0750	1750	"	"	"	"	7	"
0751	1751	"	"	"	"	8	"
0752	1752	"	"	"	"	9	"
0753	1753	"	"	"	"	10	"
0754	1754	"	"	"	"	11	"
0755	1755	"	"	3 3/	6	6	"
0756	1756	"	"	"	"	7	"
0757	1757	"	"	"	"	8	"
0758	1758	"	"	"	"	9	"
0759	1759	"	"	"	"	10	"
0760	1760	"	"	"	"	11	"
0761	1761	"	"	4 3/	8	6	"
0762	1762	"	"	"	"	7	"
0763	1763	"	"	"	"	8	"
0764	1764	"	"	"	"	9	"
0765	1765	"	"	"	"	10	"
0766	1766	"	"	"	"	11	"
0767	1767	"	1	1 2/	1	12	"
0768	1768	"	"	"	"	13	"
0769	1769	"	"	"	"	14	"
0770	1770	"	"	"	"	15	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

TABLE V. Switching characteristics and part numbers - Continued.

Part no. M3786/40- Construction: N	Part no. M3786/40- Construction: S	Angle of throw	Poles per deck	No. of decks	No. of poles	Pos. per pole	Switch characteristic N or S
0771	1771	15°	1	1 2/	1	16	S
0772	1772	"	"	"	"	17	"
0773	1773	"	"	"	"	18	"
0774	1774	"	"	"	"	19	"
0775	1775	"	"	"	"	20	"
0776	1776	"	"	"	"	21	"
0777	1777	"	"	"	"	22	"
0778	1778	"	"	"	"	23	"
0779	1779	"	"	"	"	24 1/	"
0780	1780	"	"	2 3/	2	12	"
0781	1781	"	"	"	"	13	"
0782	1782	"	"	"	"	14	"
0783	1783	"	"	"	"	15	"
0784	1784	"	"	"	"	16	"
0785	1785	"	"	"	"	17	"
0786	1786	"	"	"	"	18	"
0787	1787	"	"	"	"	19	"
0788	1788	"	"	"	"	20	"
0789	1789	"	"	"	"	21	"
0790	1790	"	"	"	"	22	"
0791	1791	"	"	"	"	23	"
0792	1792	"	"	"	"	24 1/	"
0793	1793	"	"	3 3/	3	12	"
0794	1794	"	"	"	"	13	"
0795	1795	"	"	"	"	14	"
0796	1796	"	"	"	"	15	"
0797	1797	"	"	"	"	16	"
0798	1798	"	"	"	"	17	"
0799	1799	"	"	"	"	18	"
0800	1800	"	"	"	"	19	"
0801	1801	"	"	"	"	20	"
0802	1802	"	"	"	"	21	"
0803	1803	"	"	"	"	22	"
0804	1804	"	"	"	"	23	"
0805	1805	"	"	"	"	24 1/	"
0806	1806	"	"	4 3/	4	12	"
0807	1807	"	"	"	"	13	"
0808	1808	"	"	"	"	14	"
0809	1809	"	"	"	"	15	"
0810	1810	"	"	"	"	16	"
0811	1811	"	"	"	"	17	"
0812	1812	"	"	"	"	18	"
0813	1813	"	"	"	"	19	"
0814	1814	"	"	"	"	20	"
0815	1815	"	"	"	"	21	"
0816	1816	"	"	"	"	22	"
0817	1817	"	"	"	"	23	"
0818	1818	"	"	"	"	24 1/	"
0819	1819	"	"	5 3/	5	12	"
0820	1820	"	"	"	"	13	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

TABLE V. Switching characteristics and part numbers - Continued.

Part no. M3786/40- Construction: N	Part no. M3786/40- Construction: S	Angle of throw	Poles per deck	No. of decks	No. of poles	Pos. per pole	Switch characteristic N or S
0821	1821	15°	1	5 3/	5	14	S
0822	1822	"	"	"	"	15	"
0823	1823	"	"	"	"	16	"
0824	1824	"	"	"	"	17	"
0825	1825	"	"	"	"	18	"
0826	1826	"	"	"	"	19	"
0827	1827	"	"	"	"	20	"
0828	1828	"	"	"	"	21	"
0829	1829	"	"	"	"	22	"
0830	1830	"	"	"	"	23	"
0831	1831	"	"	"	"	24 1/	"
0832	1832	11.25°	4	1 2/	4	2	"
0833	1833	"	"	"	"	3	"
0834	1834	"	"	"	"	4	"
0835	1835	"	"	"	"	5	"
0836	1836	"	"	"	"	6	"
0837	1837	"	"	"	"	7	"
0838	1838	"	"	2 3/	8	2	"
0839	1839	"	"	"	"	3	"
0840	1840	"	"	"	"	4	"
0841	1841	"	"	"	"	5	"
0842	1842	"	"	"	"	6	"
0843	1843	"	"	"	"	7	"
0844	1844	"	2	1 2/	2	8	"
0845	1845	"	"	"	"	9	"
0846	1846	"	"	"	"	10	"
0847	1847	"	"	"	"	11	"
0848	1848	"	"	"	"	12	"
0849	1849	"	"	"	"	13	"
0850	1850	"	"	"	"	14	"
0851	1851	"	"	"	"	15	"
0852	1852	"	"	2 3/	4	8	"
0853	1853	"	"	"	"	9	"
0854	1854	"	"	"	"	10	"
0855	1855	"	"	"	"	11	"
0856	1856	"	"	"	"	12	"
0857	1857	"	"	"	"	13	"
0858	1858	"	"	"	"	14	"
0859	1859	"	"	"	"	15	"
0860	1860	"	"	3 3/	6	8	"
0861	1861	"	"	"	"	9	"
0862	1862	"	"	"	"	10	"
0863	1863	"	"	"	"	11	"
0864	1864	"	"	"	"	12	"
0865	1865	"	"	"	"	13	"
0866	1866	"	"	"	"	14	"
0867	1867	"	"	"	"	15	"
0868	1868	"	"	4 3/	8	8	"
0869	1869	"	"	"	"	9	"
0870	1870	"	"	"	"	10	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

TABLE V. Switching characteristics and part numbers - Continued.

Part no. M3786/40- Construction: N	Part no. M3786/40- Construction: S	Angle of throw	Poles per deck	No. of decks	No. of poles	Pos. per pole	Switch characteristic N or S
0871	1871	11.25°	2	4 3/	8	11	S
0872	1872	"	"	"	"	12	"
0873	1873	"	"	"	"	13	"
0874	1874	"	"	"	"	14	"
0875	1875	"	"	"	"	15	"
0876	1876	"	1	1 2/	1	16	"
0877	1877	"	"	"	"	17	"
0878	1878	"	"	"	"	18	"
0879	1879	"	"	"	"	19	"
0880	1880	"	"	"	"	20	"
0881	1881	"	"	"	"	21	"
0882	1882	"	"	"	"	22	"
0883	1883	"	"	"	"	23	"
0884	1884	"	"	"	"	24	"
0885	1885	"	"	"	"	25	"
0886	1886	"	"	"	"	26	"
0887	1887	"	"	"	"	27	"
0888	1888	"	"	"	"	28	"
0889	1889	"	"	"	"	29	"
0890	1890	"	"	"	"	30	"
0891	1891	"	"	"	"	31	"
0892	1892	"	"	"	"	32 1/	"
0893	1893	"	"	2 3/	2	16	"
0894	1894	"	"	"	"	17	"
0895	1895	"	"	"	"	18	"
0896	1896	"	"	"	"	19	"
0897	1897	"	"	"	"	20	"
0898	1898	"	"	"	"	21	"
0899	1899	"	"	"	"	22	"
0900	1900	"	"	"	"	23	"
0901	1901	"	"	"	"	24	"
0902	1902	"	"	"	"	25	"
0903	1903	"	"	"	"	26	"
0904	1904	"	"	"	"	27	"
0905	1905	"	"	"	"	28	"
0906	1906	"	"	"	"	29	"
0907	1907	"	"	"	"	30	"
0908	1908	"	"	"	"	31	"
0909	1909	"	"	"	"	32 1/	"
0910	1910	"	"	3 3/	3	16	"
0911	1911	"	"	"	"	17	"
0912	1912	"	"	"	"	18	"
0913	1913	"	"	"	"	19	"
0914	1914	"	"	"	"	20	"
0915	1915	"	"	"	"	21	"
0916	1916	"	"	"	"	22	"
0917	1917	"	"	"	"	23	"
0918	1918	"	"	"	"	24	"
0919	1919	"	"	"	"	25	"
0920	1920	"	"	"	"	26	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

TABLE V. Switching characteristics and part numbers - Continued.

Part no. M3786/40- Construction: N	Part no. M3786/40- Construction: S	Angle of throw	Poles per deck	No. of decks	No. of poles	Pos. per pole	Switch characteristic N or S
0921	1921	11.25°	1	3 3/	3	27	S
0922	1922	"	"	"	"	28	"
0923	1923	"	"	"	"	29	"
0924	1924	"	"	"	"	30	"
0925	1925	"	"	"	"	31	"
0926	1926	"	"	"	"	32 1/	"
0927	1927	"	"	4 3/	4	16	"
0928	1928	"	"	"	"	17	"
0929	1929	"	"	"	"	18	"
0930	1930	"	"	"	"	19	"
0931	1931	"	"	"	"	20	"
0932	1932	"	"	"	"	21	"
0933	1933	"	"	"	"	22	"
0934	1934	"	"	"	"	23	"
0935	1935	"	"	"	"	24	"
0936	1936	"	"	"	"	25	"
0937	1937	"	"	"	"	26	"
0938	1938	"	"	"	"	27	"
0939	1939	"	"	"	"	28	"
0940	1940	"	"	"	"	29	"
0941	1941	"	"	"	"	30	"
0942	1942	"	"	"	"	31	"
0943	1943	"	"	"	"	32 1/	"
0944	1944	"	"	5 3/	5	16	"
0945	1945	"	"	"	"	17	"
0946	1946	"	"	"	"	18	"
0947	1947	"	"	"	"	19	"
0948	1948	"	"	"	"	20	"
0949	1949	"	"	"	"	21	"
0950	1950	"	"	"	"	22	"
0951	1951	"	"	"	"	23	"
0952	1952	"	"	"	"	24	"
0953	1953	"	"	"	"	25	"
0954	1954	"	"	"	"	26	"
0955	1955	"	"	"	"	27	"
0956	1956	"	"	"	"	28	"
0957	1957	"	"	"	"	29	"
0958	1958	"	"	"	"	30	"
0959	1959	"	"	"	"	31	"
0960	1960	"	"	"	"	32 1/	"

1/ Continuous rotation (no stops)

2/ PC terminals

3/ Rear deck has PC terminals.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

Revision letters are not used to denote changes due to the extensiveness of the changes.

Custodians:
Army - ER
Navy - EC
Air Force - 85

Review activities:
Army - MI, AR
Navy - AS, OS
Air Force - 11, 17
DLA - ES

User activities:
Army - ME, AT, SM
Navy - MC, CG
Air Force - 19

Agent:
DLA - ES

Preparing activity:
Air Force - 85

(Project 5930-1214-2)

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

FOLD

DEPARTMENT OF THE AIR FORCE

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE $300

NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO. 73236 WASHINGTON D. C.

POSTAGE WILL BE PAID BY THE DEPARTMENT OF THE AIR FORCE

AFALD/PTS Standardization
Gentile AFS OH 45444

FOLD

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.

STANDARDIZATION DOCUMENT IMPROVEMENT PROPOSAL

INSTRUCTIONS. This form is provided to solicit beneficial comments which may improve this document and enhance its use. DoD contractors, government activities, manufacturers, vendors, or other prospective users of the document are invited to submit comments to the government. Fold on lines on reverse side, staple in corner, and send to preparing activity. Attach any pertinent data which may be of use in improving this document. If there are additional papers, attach to form and place both in an envelope addressed to preparing activity A response will be provided to the submitter, when name and address is provided, within 30 days indicating that the 1426 was received and when any appropriate action on it will be completed.

NOTE This form shall not be used to submit requests for waivers, deviations or clarification of specification requirements on current contracts. Comments submitted on this form do not constitute or imply authorization to waive any portion of the referenced document(s) or to amend contractual requirements

DOCUMENT IDENTIFIER *(Number)* AND TITLE MIL-S-3786/40A - Switch, Rotary, Open Construction, 1/2 Ampere and Low Level Style SR40

NAME OF ORGANIZATION AND ADDRESS OF SUBMITTER

☐ VENDOR ☐ USER ☐ MANUFACTURER

1 ☐ HAS ANY PART OF THE DOCUMENT CREATED PROBLEMS OR REQUIRED INTERPRETATION IN PROCUREMENT USE? ☐ IS ANY PART OF IT TOO RIGID, RESTRICTIVE, LOOSE OR AMBIGUOUS? PLEASE EXPLAIN BELOW.

A GIVE PARAGRAPH NUMBER AND WORDING

B RECOMMENDED WORDING CHANGE

C REASON FOR RECOMMENDED CHANGE(S)

2 REMARKS

SUBMITTED BY *(Printed or typed name and address — Optional)*	TELEPHONE NO.
	DATE

DD FORM 1 OCT 76 1426 PREVIOUS EDITION WILL BE USED.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:41Z
Check the source to verify that this is the current version before use.