
MILITARY SPECIFICATION

SWITCH, ROTARY, OPEN CONSTRUCTION, .5 AMPERE, LOW LEVEL, POSITIVE SHAFT GROUNDING, EMI/RFI, STYLE SR15

This specification is approved for use by all Departments and Agencies of the Department of Defense.

The requirements for acquiring the switch described herein shall consist of this specification and the latest issue of MIL-S-3786.

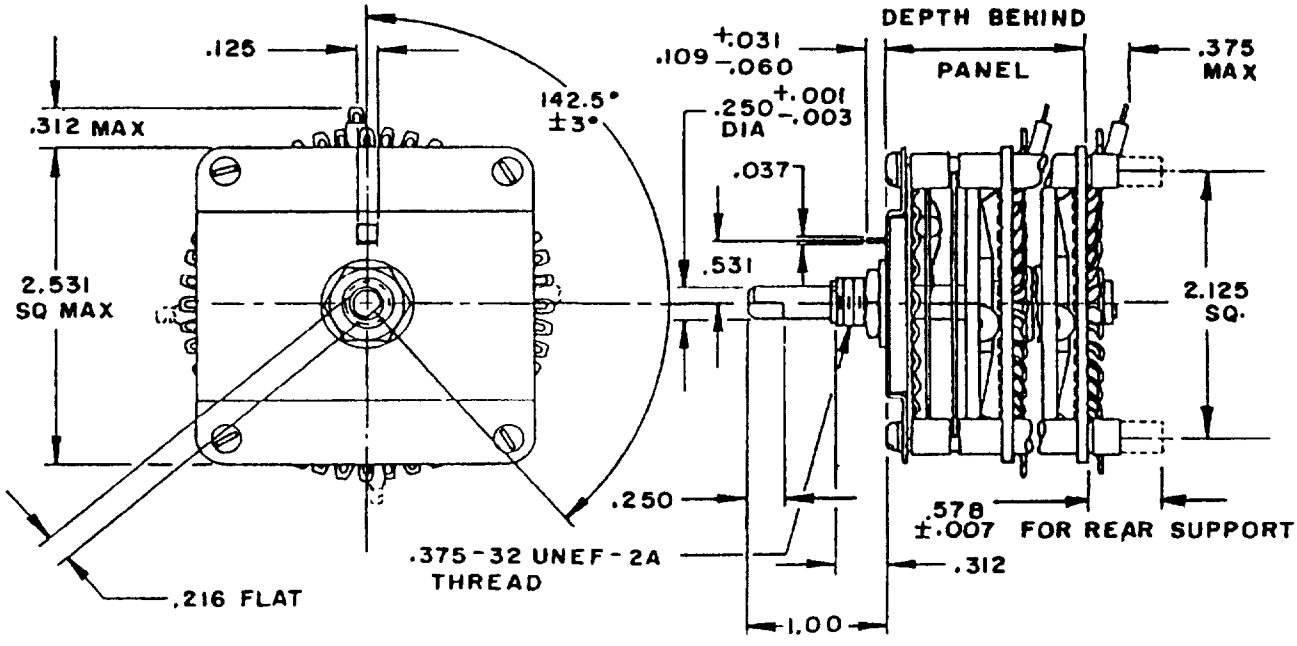

Inches	mm	Inches	mm
001	0 03	.216	5 49
003	0.08	250	6.35
007	0.18	.312	7 94
031	0 79	.375	9.53
.037	0.94	.531	13 49
.060	1 52	578	14.68
.109	2 78	2.125	53.98
.125	3.18	2.531	64.29


NOTES
1. Dimensions are in inches
2. Unless otherwise specified, tolerance is ±.015 (0.38 mm).
3. Metric equivalents are given for general information only.
4. The number of decks is optional. Refer to table I for the depth behind panel dimensions.
5 The 142.5° shaft-flat angle is the angle between a line through the center of the shaft and perpendicular to the shaft flat

FIGURE 1. Style SR15 switch


(F) denotes changes

DISTRIBUTION STATEMENT A. Approved for public release; distribution is unlimited.
Source: https://assist.dla.mil -- Downloaded: 2026-10-16 12:21:36Z
Check the source to verify that this is the current version before use.

1 POLE PER DECK

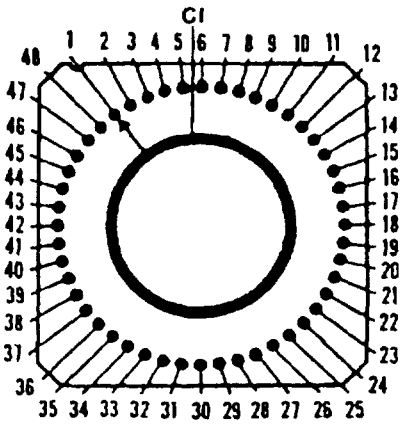


7-1/20 angle of throw
2 to 48 positions
shorting (S) contacts

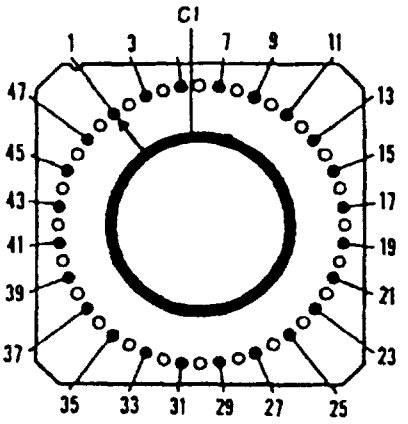


150 angle of throw
2 to 24 positions
nonshorting (N) contacts

2 POLES PER DECK

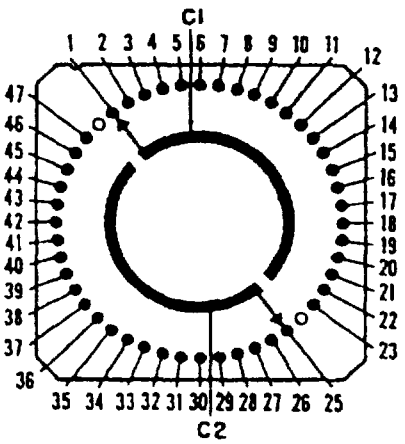


7-1/20 angle of throw
2 to 23 positions
shorting (S) contacts

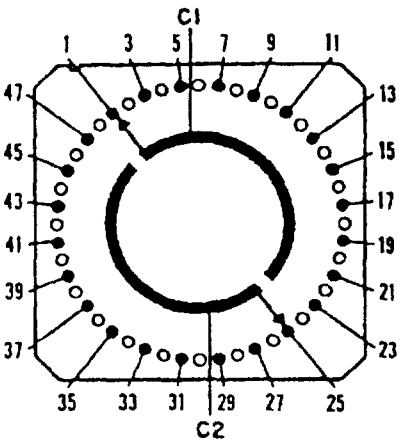


150 angle of throw
2 to 12 positions
nonshorting (N) contacts

4 POLES PER DECK

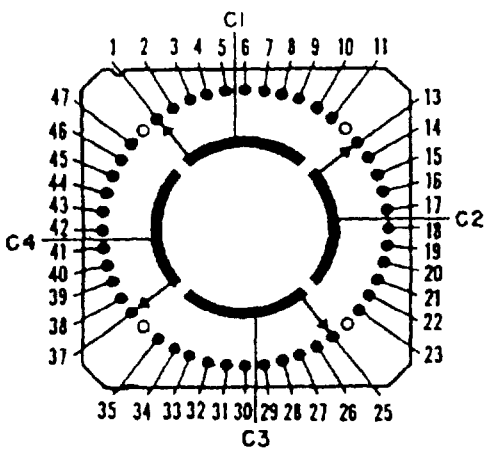

7-1/20 angle of throw
2 to 11 positions
shorting (S) contacts

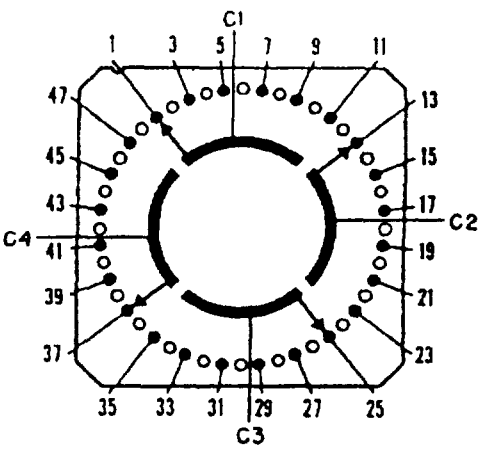

150 angle of throw
2 to 6 positions
nonshorting (N) contacts

FIGURE 2. Rear view of deck layout, terminal configurations, terminal locations, and switching characteristics (N or S)

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

REQUIREMENTS:

Dimensions and configuration: See figures 1 and 2 and table I.

TABLE I. Depth behind panel.

Decks	Depth behind panel (inches-maximum)
1	1.286
2	1.959
3	2.432
4	3.005
5	3.788
6	4.361
7	4.934
8	5.507
9	6.080
10	6.653

Terminals: The terminal tabs shall be bent at an angle of 0° ±15° from the plane of the section, except that the common and corner terminals shall be bent at an angle of 30° ±15° from the plane of the section.

Marking: All contact positions, including contacts not provided with terminals, shall be marked with consecutive numbers as shown on figure 2. Marking between terminals 1 and 2 will be provided on stators only. Contact number 1 location shall be the first possible assembly point of a contact in a counterclockwise direction from the top right-hand assembly screw.

Rear support. Switches which have five sections or more shall be supplied with four .138-32UNC-2B rear support spacers tapped to .25-inch minimum depth to be used for rear support.

Rotational torque: The minimum and maximum values of torque determined for shaft rotation shall be within the limits shown in table II.

TABLE II. Rotational-torque limits.

Temperature	Torque (lb-in)		
		5 sections and less	Over 5 sections
	Minimum	Maximum	Maximum
Room	1-1/2	6	16
Minimum	1-1/2	8	20

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

Torque (stops). Single shaft switches containing stops shall withstand a torque of 50 inch-pounds applied to the shaft against the stops in clockwise and counterclockwise directions. Switches with shaft seal containing stops shall withstand a torque of 25 inch-pounds applied to the shaft against the stops in clockwise and counterclockwise direction.

Construction:
Symbol N - Open construction without sealed shaft and panel seal.
Symbol S - Open construction with sealed shaft and panel seal.

Temperature-life characteristic: Symbol C - 25,000 cycles at -65°C to +125°C. After life, the torque shall change not more than 35 percent of its initial value. A cycle shall consist of 360 degrees minus the degrees in one throw in a clockwise direction and an equal number of degrees in a counterclockwise direction. The test loads for the applicable circuit conditions shall be as shown in table III. Each condition shall be switched at least one rotor contact of the switch.

Vibration grade: Symbol 3 (10 to 2,000 Hz).

Shock type: Symbol M (medium impact) and H (high impact).

Insulation. Symbol G (glass laminate).

Altitude: Symbol U (up to 10,000 feet).

Special features: Symbol A (both high and low contact rating and both shaft grounding and EMI/RFI capability).

TABLE III. Electrical loads.

Environmental condition	Inductive load (2.8 Henries)		Resistive loads	
	Milliamperes	Volts	Milliamperes	Volts
At atmospheric pressure and elevated temperature (125°C)	50	28 dc	500 125 50 10	28 dc 115 V rms 300 V rms .030 dc or peak ac maximum 1/

(F) 1/ Low level life is applicable. Low level shall be conducted as one of the electrical loads tested during life (rotational) testing. Contact resistance shall not exceed 7.5 milliohms. At the beginning of the test and every 5,000 cycles thereafter, the contact resistance shall be measured.

Dielectric withstanding voltage: The applicable test voltage specified in table IV shall be applied between the specified switch elements, except test voltage will be reduced to 1,000 volts, rms after life test.

TABLE IV. Dielectric-test voltages.

Altitude	Test voltage (Volts, rms)
At atmospheric pressure	1,500

Mounting hardware. Each switch shall be supplied with one each hexagon nut in accordance with MS25082-B20 or equivalent, and one internal-tooth lockwasher in accordance with MS35333-76 or equivalent.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

Contact resistance: Contact resistance shall not exceed the following values:

Initial and after vibration and shock: 5 milliohms
After moisture-resistance and salt spray: 5 milliohms
After initial soak and completion of life test: 10 milliohms
Low level; initial and after test: 7.5 milliohms

Test samples to be used for qualification testing (8 each):

M3786/15-1280
M3786/15-1430

Part number: The military part number shall consist of the prefix M3786/15- and a dash number consisting of four numbers sequentially assigned (see table VI). The numbers fall into the general pattern outlined in table V:

TABLE V. Dash number identification.

Construction: N Dash numbers	Construction: S Dash numbers	Pages	Poles per deck	Positions	Switch characteristics
0001-0060	1001-1060	6-7	4	2-11	S
0061-0180	1061-1180	7-9	2	11-23	S
0181-0430	1181-1430	9-14	1	24-48	S
(F) 0431-0460	1431-1460	14-15	4	2-6	N
0461-0520	1461-1520	15-16	2	7-12	N
0521-0640	1521-1640	16-18	1	13-24	N

Ordering data: Acquisition documents should specify the following:

a. Title, number, and date of this specification sheet, and the military part number as listed in table VI.
b. For switches not listed in table VI, acquisition shall be in accordance with the ordering data of MIL-S-3786. (For switches covered by specification sheets).
c. Switches covered by table VI are style SR15.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE VI. Switching characteristics and part numbers.

Construction: N Part number M3786/15-	Construction: S Part number M3786/15-	Angle of throw	Poles per deck	Number of decks	Number of poles	Position per pole	Switch characteristic N or S
0001	1001	7.5°	4	1	4	2	S
0002	1002	"	"	"	"	3	"
0003	1003	"	"	"	"	4	"
0004	1004	"	"	"	"	5	"
0005	1005	"	"	"	"	6	"
0006	1006	"	"	"	"	7	"
0007	1007	"	"	"	"	8	"
0008	1008	"	"	"	"	9	"
0009	1009	"	"	"	"	10	"
0010	1010	"	"	"	"	11 1/	"
0011	1011	"	"	2	8	2	"
0012	1012	"	"	"	"	3	"
0013	1013	"	"	"	"	4	"
0014	1014	"	"	"	"	5	"
0015	1015	"	"	"	"	6	"
0016	1016	"	"	"	"	7	"
0017	1017	"	"	"	"	8	"
0018	1018	"	"	"	"	9	"
0019	1019	"	"	"	"	10	"
0020	1020	"	"	"	"	11 1/	"
0021	1021	"	"	3	12	2	"
0022	1022	"	"	"	"	3	"
0023	1023	"	"	"	"	4	"
0024	1024	"	"	"	"	5	"
0025	1025	"	"	"	"	6	"
0026	1026	"	"	"	"	7	"
0027	1027	"	"	"	"	8	"
0028	1028	"	"	"	"	9	"
0029	1029	"	"	"	"	10	"
0030	1030	"	"	"	"	11 1/	"
0031	1031	"	"	4	16	2	"
0032	1032	"	"	"	"	3	"
0033	1033	"	"	"	"	4	"
0034	1034	"	"	"	"	5	"
0035	1035	"	"	"	"	6	"
0036	1036	"	"	"	"	7	"
0037	1037	"	"	"	"	8	"
0038	1038	"	"	"	"	9	"
0039	1039	"	"	"	"	10	"
0040	1040	"	"	"	"	11 1/	"
0041	1041	"	"	5	20	2	"
0042	1042	"	"	"	"	3	"
0043	1043	"	"	"	"	4	"
0044	1044	"	"	"	"	5	"
0045	1045	"	"	"	"	6	"
0046	1046	"	"	"	"	7	"
0047	1047	"	"	"	"	8	"
0048	1048	"	"	"	"	9	"
0049	1049	"	"	"	"	10	"
0050	1050	"	"	"	"	11 1/	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE VI. Switching characteristics and part numbers - Continued.

Construction: N Part number M3786/15-	Construction: S Part number M3786/15-	Angle of throw	Poles per deck	Number of decks	Number of poles	Position per pole	Switch characteristic N or S
0051	1051	7.5°	4	6	24	2	S
0052	1052	"	"	"	"	3	"
0053	1053	"	"	"	"	4	"
0054	1054	"	"	"	"	5	"
0055	1055	"	"	"	"	6	"
0056	1056	"	"	"	"	7	"
0057	1057	"	"	"	"	8	"
0058	1058	"	"	"	"	9	"
0059	1059	"	"	"	"	10	"
0060	1060	"	"	"	"	11 1/	"
0061	1061	"	2	1	2	12	"
0062	1062	"	"	"	"	13	"
0063	1063	"	"	"	"	14	"
0064	1064	"	"	"	"	15	"
0065	1065	"	"	"	"	16	"
0066	1066	"	"	"	"	17	"
0067	1067	"	"	"	"	18	"
0068	1068	"	"	"	"	19	"
0069	1069	"	"	"	"	20	"
0070	1070	"	"	"	"	21	"
0071	1071	"	"	"	"	22	"
0072	1072	"	"	"	"	23 2/	"
0073	1073	"	"	2	4	12	"
0074	1074	"	"	"	"	13	"
0075	1075	"	"	"	"	14	"
0076	1076	"	"	"	"	15	"
0077	1077	"	"	"	"	16	"
0078	1078	"	"	"	"	17	"
0079	1079	"	"	"	"	18	"
0080	1080	"	"	"	"	19	"
0081	1081	"	"	"	"	20	"
0082	1082	"	"	"	"	21	"
0083	1083	"	"	"	"	22	"
(F) 0084	1084	"	"	"	"	23 2/	"
0085	1085	"	"	3	6	12	"
0086	1086	"	"	"	"	13	"
0087	1087	"	"	"	"	14	"
0088	1088	"	"	"	"	15	"
0089	1089	"	"	"	"	16	"
0090	1090	"	"	"	"	17	"
0091	1091	"	"	"	"	18	"
0092	1092	"	"	"	"	19	"
0093	1093	"	"	"	"	20	"
0094	1094	"	"	"	"	21	"
0095	1095	"	"	"	"	22	"
0096	1096	"	"	"	"	23 2/	"
0097	1097	"	"	4	8	12	"
0098	1098	"	"	"	"	13	"
0099	1099	"	"	"	"	14	"
0100	1100	"	"	"	"	15	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE VI. Switching characteristics and part numbers - Continued.

Construction. N Part number M3785/15-	Construction: S Part number M3786/15-	Angle of throw	Poles per deck	Number of decks	Number of poles	Position per pole	Switch characteristic N or S
0101	1101	7.5°	2	4	8	16	S
0102	1102	"	"	"	"	17	"
0103	1103	"	"	"	"	18	"
0104	1104	"	"	"	"	19	"
0105	1105	"	"	"	"	20	"
0106	1106	"	"	"	"	21	"
0107	1107	"	"	"	"	22	"
0108	1108	"	"	"	"	23 2/	"
0109	1109	"	"	5	10	12	"
0110	1110	"	"	"	"	13	"
0111	1111	"	"	"	"	14	"
0112	1112	"	"	"	"	15	"
0113	1113	"	"	"	"	16	"
0114	1114	"	"	"	"	17	"
0115	1115	"	"	"	"	18	"
0116	1116	"	"	"	"	19	"
0117	1117	"	"	"	"	20	"
0118	1118	"	"	"	"	21	"
0119	1119	"	"	"	"	22	"
0120	1120	"	"	"	"	23 2/	"
0121	1121	"	"	6	12	12	"
0122	1122	"	"	"	"	13	"
0123	1123	"	"	"	"	14	"
0124	1124	"	"	"	"	15	"
0125	1125	"	"	"	"	16	"
0126	1126	"	"	"	"	17	"
0127	1127	"	"	"	"	18	"
0128	1128	"	"	"	"	19	"
0129	1129	"	"	"	"	20	"
0130	1130	"	"	"	"	21	"
0131	1131	"	"	"	"	22	"
0132	1132	"	"	"	"	23 2/	"
0133	1133	"	"	7	14	12	"
0134	1134	"	"	"	"	13	"
0135	1135	"	"	"	"	14	"
0136	1136	"	"	"	"	15	"
0137	1137	"	"	"	"	16	"
0138	1138	"	"	"	"	17	"
0139	1139	"	"	"	"	18	"
0140	1140	"	"	"	"	19	"
0141	1141	"	"	"	"	20	"
0142	1142	"	"	"	"	21	"
0143	1143	"	"	"	"	22	"
0144	1144	"	"	"	"	23 2/	"
0145	1145	"	"	8	16	12	"
0146	1146	"	"	"	"	13	"
0147	1147	"	"	"	"	14	"
0148	1148	"	"	"	"	15	"
0149	1149	"	"	"	"	16	"
0150	1150	"	"	"	"	17	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE VI. Switching characteristics and part numbers - Continued.

Construction: N Part number M3786/15-	Construction: S Part number M3786/15-	Angle of throw	Poles per deck	Number of decks	Number of poles	Position per pole	Switch characteristic N or S
0151	1151	7.5°	2	8	16	18	S
0152	1152	"	"	"	"	19	"
0153	1153	"	"	"	"	20	"
0154	1154	"	"	"	"	21	"
0155	1155	"	"	"	"	22	"
0156	1156	"	"	"	"	23 2/	"
0157	1157	"	"	9	18	12	"
0158	1158	"	"	"	"	13	"
0159	1159	"	"	"	"	14	"
0160	1160	"	"	"	"	15	"
0161	1161	"	"	"	"	16	"
0162	1162	"	"	"	"	17	"
0163	1163	"	"	"	"	18	"
0164	1164	"	"	"	"	19	"
0165	1165	"	"	"	"	20	"
0166	1166	"	"	"	"	21	"
0167	1167	"	"	"	"	22	"
0168	1168	"	"	"	"	23 2/	"
0169	1169	"	"	10	20	12	"
0170	1170	"	"	"	"	13	"
0171	1171	"	"	"	"	14	"
0172	1172	"	"	"	"	15	"
0173	1173	"	"	"	"	16	"
0174	1174	"	"	"	"	17	"
0175	1175	"	"	"	"	18	"
0176	1176	"	"	"	"	19	"
0177	1177	"	"	"	"	20	"
0178	1178	"	"	"	"	21	"
0179	1179	"	"	"	"	22	"
0180	1180	"	"	"	"	23 2/	"
0181	1181	"	1	1	1	24	"
0182	1182	"	"	"	"	25	"
0183	1183	"	"	"	"	26	"
0184	1184	"	"	"	"	27	"
0185	1185	"	"	"	"	28	"
0186	1186	"	"	"	"	29	"
0187	1187	"	"	"	"	30	"
0188	1188	"	"	"	"	31	"
0189	1189	"	"	"	"	32	"
0190	1190	"	"	"	"	33	"
0191	1191	"	"	"	"	34	"
0192	1192	"	"	"	"	35	"
0193	1193	"	"	"	"	36	"
0194	1194	"	"	"	"	37	"
0195	1195	"	"	"	"	38	"
0196	1196	"	"	"	"	39	"
0197	1197	"	"	"	"	40	"
0198	1198	"	"	"	"	41	"
0199	1199	"	"	"	"	42	"
0200	1200	"	"	"	"	43	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE VI. Switching characteristics and part number - Continued.

Construction: N Part number M3786/15-	Construction: S Part number M3786/15-	Angle of throw	Poles per deck	Number of decks	Number of poles	Position per pole	Switch characteristic N or S
0201	1201	7.5°	1	1	1	44	S
0202	1202	"	"	"	"	45	"
0203	1203	"	"	"	"	46	"
0204	1204	"	"	"	"	47	"
0205	1205	"	"	"	"	48 3/	"
0206	1206	"	"	2	2	24	"
0207	1207	"	"	"	"	25	"
0208	1208	"	"	"	"	26	"
0209	1209	"	"	"	"	27	"
0210	1210	"	"	"	"	28	"
0211	1211	"	"	"	"	29	"
0212	1212	"	"	"	"	30	"
0213	1213	"	"	"	"	31	"
0214	1214	"	"	"	"	32	"
0215	1215	"	"	"	"	33	"
0216	1216	"	"	"	"	34	"
0217	1217	"	"	"	"	35	"
0218	1218	"	"	"	"	36	"
0219	1219	"	"	"	"	37	"
0220	1220	"	"	"	"	38	"
0221	1221	"	"	"	"	39	"
0222	1222	"	"	"	"	40	"
0223	1223	"	"	"	"	41	"
0224	1224	"	"	"	"	42	"
0225	1225	"	"	"	"	43	"
0226	1226	"	"	"	"	44	"
0227	1227	"	"	"	"	45	"
0228	1228	"	"	"	"	46	"
0229	1229	"	"	"	"	47	"
0230	1230	"	"	"	"	49 3/	"
0231	1231	"	"	3	3	24	"
0232	1232	"	"	"	"	25	"
0233	1233	"	"	"	"	26	"
0234	1234	"	"	"	"	27	"
0235	1235	"	"	"	"	28	"
0236	1236	"	"	"	"	29	"
0237	1237	"	"	"	"	30	"
0238	1238	"	"	"	"	31	"
0239	1239	"	"	"	"	32	"
0240	1240	"	"	"	"	33	"
0241	1241	"	"	"	"	34	"
0242	1242	"	"	"	"	35	"
0243	1243	"	"	"	"	36	"
0244	1244	"	"	"	"	37	"
0245	1245	"	"	"	"	38	"
0246	1246	"	"	"	"	39	"
0247	1247	"	"	"	"	40	"
0248	1248	"	"	"	"	41	"
0249	1249	"	"	"	"	42	"
0250	1250	"	"	"	"	43	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE VI. Switching characteristics and part numbers - Continued.

Construction: N Part number M3786/15-	Construction: S Part number M3786/15-	Angle of throw	Poles per deck	Number of decks	Number of poles	Position per pole	Switch characteristic N or S
0251	1251	7.5°	1	3	3	44	S
0252	1252	"	"	"	"	45	"
0253	1253	"	"	"	"	46	"
0254	1254	"	"	"	"	47	"
0255	1255	"	"	"	"	48 3/	"
0256	1256	"	"	4	4	24	"
0257	1257	"	"	"	"	25	"
0258	1258	"	"	"	"	26	"
0259	1259	"	"	"	"	27	"
0260	1260	"	"	"	"	28	"
0261	1261	"	"	"	"	29	"
0262	1262	"	"	"	"	30	"
0263	1263	"	"	"	"	31	"
0264	1264	"	"	"	"	32	"
0265	1265	"	"	"	"	33	"
0266	1266	"	"	"	"	34	"
0267	1267	"	"	"	"	35	"
0268	1268	"	"	"	"	36	"
0269	1269	"	"	"	"	37	"
0270	1270	"	"	"	"	38	"
0271	1271	"	"	"	"	39	"
0272	1272	"	"	"	"	40	"
0273	1273	"	"	"	"	41	"
0274	1274	"	"	"	"	42	"
0275	1275	"	"	"	"	43	"
0276	1276	"	"	"	"	44	"
0277	1277	"	"	"	"	45	"
0278	1278	"	"	"	"	46	"
0279	1279	"	"	"	"	47	"
0280	1280	"	"	"	"	48 3/	"
0281	1281	"	"	5	5	24	"
0282	1282	"	"	"	"	25	"
0283	1283	"	"	"	"	26	"
0284	1284	"	"	"	"	27	"
0285	1285	"	"	"	"	28	"
0286	1286	"	"	"	"	29	"
0287	1287	"	"	"	"	30	"
0288	1288	"	"	"	"	31	"
0289	1289	"	"	"	"	32	"
0290	1290	"	"	"	"	33	"
0291	1291	"	"	"	"	34	"
0292	1292	"	"	"	"	35	"
0293	1293	"	"	"	"	36	"
0294	1294	"	"	"	"	37	"
0295	1295	"	"	"	"	38	"
0296	1296	"	"	"	"	39	"
0297	1297	"	"	"	"	40	"
0298	1298	"	"	"	"	41	"
0299	1299	"	"	"	"	42	"
0300	1300	"	"	"	"	43	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE VI. Switching characteristics and part numbers - Continued.

Construction: N Part number M3785/15-	Construction: S Part number M3786/15-	Angle of throw	Poles per deck	Number of decks	Number of poles	Position per pole	Switch characteristic N or S
0301	1301	7.5°	1	5	5	44	S
0302	1302	"	"	"	"	45	"
0303	1303	"	"	"	"	46	"
0304	1304	"	"	"	"	47	"
0305	1305	"	"	"	"	48 3/	"
0306	1306	"	"	6	6	24	"
0307	1307	"	"	"	"	25	"
0308	1308	"	"	"	"	26	"
0309	1309	"	"	"	"	27	"
0310	1310	"	"	"	"	28	"
0311	1311	"	"	"	"	29	"
0312	1312	"	"	"	"	30	"
0313	1313	"	"	"	"	31	"
0314	1314	"	"	"	"	32	"
0315	1315	"	"	"	"	33	"
0316	1316	"	"	"	"	34	"
0317	1317	"	"	"	"	35	"
0318	1318	"	"	"	"	36	"
0319	1319	"	"	"	"	37	"
0320	1320	"	"	"	"	38	"
0321	1321	"	"	"	"	39	"
0322	1322	"	"	"	"	40	"
0323	1323	"	"	"	"	41	"
0324	1324	"	"	"	"	42	"
0325	1325	"	"	"	"	43	"
0326	1326	"	"	"	"	44	"
0327	1327	"	"	"	"	45	"
0328	1328	"	"	"	"	46	"
0329	1329	"	"	"	"	47	"
0330	1330	"	"	"	"	48 3/	"
0331	1331	"	"	7	7	24	"
0332	1332	"	"	"	"	25	"
0333	1333	"	"	"	"	26	"
0334	1334	"	"	"	"	27	"
0335	1335	"	"	"	"	28	"
0335	1336	"	"	"	"	29	"
0337	1337	"	"	"	"	30	"
0338	1338	"	"	"	"	31	"
0339	1339	"	"	"	"	32	"
0340	1340	"	"	"	"	33	"
0341	1341	"	"	"	"	34	"
0342	1342	"	"	"	"	35	"
0343	1343	"	"	"	"	36	"
0344	1344	"	"	"	"	37	"
0345	1345	"	"	"	"	38	"
0346	1345	"	"	"	"	39	"
0347	1347	"	"	"	"	40	"
0348	1348	"	"	"	"	41	"
0349	1349	"	"	"	"	42	"
0350	1350	"	"	"	"	43	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE VI. Switching characteristics and part numbers - Continued.

Construction: N Part number M3786/15-	Construction: S Part number M3786/15-	Angle of throw	Poles per deck	Number of decks	Number of poles	Position per pole	Switch characteristic N or S
0351	1351	7.5°	1	7	7	44	S
0352	1352	"	"	"	"	45	"
0353	1353	"	"	"	"	46	"
0354	1354	"	"	"	"	47	"
0355	1355	"	"	"	"	48 3/	"
0356	1356	"	"	8	8	24	"
0357	1357	"	"	"	"	25	"
0358	1358	"	"	"	"	26	"
0359	1359	"	"	"	"	27	"
0360	1360	"	"	"	"	28	"
0361	1361	"	"	"	"	29	"
0362	1362	"	"	"	"	30	"
0363	1363	"	"	"	"	31	"
0364	1364	"	"	"	"	32	"
0365	1365	"	"	"	"	33	"
0366	1366	"	"	"	"	34	"
0367	1367	"	"	"	"	35	"
0368	1368	"	"	"	"	36	"
0369	1369	"	"	"	"	37	"
0370	1370	"	"	"	"	38	"
0371	1371	"	"	"	"	39	"
0372	1372	"	"	"	"	40	"
0373	1373	"	"	"	"	41	"
0374	1374	"	"	"	"	42	"
0375	1375	"	"	"	"	43	"
0376	1376	"	"	"	"	44	"
0377	1377	"	"	"	"	45	"
0378	1378	"	"	"	"	46	"
0379	1379	"	"	"	"	47	"
0380	1380	"	"	"	"	48 3/	"
0381	1381	"	"	9	9	24	"
0382	1382	"	"	"	"	25	"
0383	1383	"	"	"	"	26	"
0384	1384	"	"	"	"	27	"
0385	1385	"	"	"	"	28	"
0386	1386	"	"	"	"	29	"
0387	1387	"	"	"	"	30	"
0388	1388	"	"	"	"	31	"
0389	1389	"	"	"	"	32	"
0390	1390	"	"	"	"	33	"
0391	1391	"	"	"	"	34	"
0392	1392	"	"	"	"	35	"
0393	1393	"	"	"	"	36	"
0394	1394	"	"	"	"	37	"
0395	1395	"	"	"	"	38	"
0396	1396	"	"	"	"	39	"
0397	1397	"	"	"	"	40	"
0398	1398	"	"	"	"	41	"
0399	1399	"	"	"	"	42	"
0400	1400	"	"	"	"	43	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE VI. Switching characteristics and part numbers - Continued.

Construction: N Part number M3786/15-	Construction: S Part number M3786/15-	Angle of throw	Poles per deck	Number of decks	Number of poles	Position per pole	Switch characteristic N or S
0401	1401	7.5°	1	9	9	44	S
0402	1402	"	"	"	"	45	"
0403	1403	"	"	"	"	46	"
0404	1404	"	"	"	"	47	"
0405	1405	"	"	"	"	48 3/	"
0406	1406	"	"	10	10	24	"
0407	1407	"	"	"	"	25	"
0408	1408	"	"	"	"	26	"
0409	1409	"	"	"	"	27	"
0410	1410	"	"	"	"	28	"
0411	1411	"	"	"	"	29	"
0412	1412	"	"	"	"	30	"
0413	1413	"	"	"	"	31	"
0414	1414	"	"	"	"	32	"
0415	1415	"	"	"	"	33	"
0416	1416	"	"	"	"	34	"
0417	1417	"	"	"	"	35	"
0418	1418	"	"	"	"	36	"
0419	1419	"	"	"	"	37	"
0420	1420	"	"	"	"	38	"
0421	1421	"	"	"	"	39	"
0422	1422	"	"	"	"	40	"
0423	1423	"	"	"	"	41	"
0424	1424	"	"	"	"	42	"
0425	1425	"	"	"	"	43	"
0426	1426	"	"	"	"	44	"
0427	1427	"	"	"	"	45	"
0428	1428	"	"	"	"	46	"
0429	1429	"	"	"	"	47	"
0430	1430	"	"	"	"	48 3/	"
0431	1431	15°	4	1	4	2	N
0432	1432	"	"	"	"	3	"
0433	1433	"	"	"	"	4	"
0434	1434	"	"	"	"	5	"
0435	1435	"	"	"	"	6 4/	"
0436	1436	"	"	2	8	2	"
0437	1437	"	"	"	"	3	"
0438	1438	"	"	"	"	4	"
0439	1439	"	"	"	"	5	"
0440	1440	"	"	"	"	6 4/	"
0441	1441	"	"	3	12	2	"
0442	1442	"	"	"	"	3	"
0443	1443	"	"	"	"	4	"
0444	1444	"	"	"	"	5	"
0445	1445	"	"	"	"	6 4/	"
0446	1446	"	"	4	16	2	"
0447	1447	"	"	"	"	3	"
0448	1448	"	"	"	"	4	"
0449	1449	"	"	"	"	5	"
0450	1450	"	"	"	"	6 4/	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE VI. Switching characteristics and part numbers - Continued.

Construction: N Part number M3786/15-	Construction: S Part number M3786/15-	Angle of throw	Poles per deck	Number of decks	Number of poles	Position per pole	Switch characteristic N or S
0451	1451	15°	4	5	20	2	N
0452	1452	"	"	"	"	3	"
0453	1453	"	"	"	"	4	"
0454	1454	"	"	"	"	5	"
0455	1455	"	"	"	"	6 4/	"
0455	1456	"	"	6	24	2	"
0457	1457	"	"	"	"	3	"
0458	1458	"	"	"	"	4	"
0459	1459	"	"	"	"	5	"
0460	1460	"	"	"	"	6 4/	"
0461	1461	"	2	1	2	7	"
0462	1462	"	"	"	"	8	"
0463	1463	"	"	"	"	9	"
0464	1464	"	"	"	"	10	"
0465	1465	"	"	"	"	11	"
0466	1466	"	"	"	"	12 5/	"
0467	1467	"	"	2	4	7	"
0468	1468	"	"	"	"	8	"
0469	1469	"	"	"	"	9	"
0470	1470	"	"	"	"	10	"
0471	1471	"	"	"	"	11	"
0472	1472	"	"	"	"	12 5/	"
0473	1473	"	"	3	6	7	"
0474	1474	"	"	"	"	8	"
0475	1475	"	"	"	"	9	"
0476	1476	"	"	"	"	10	"
0477	1477	"	"	"	"	11	"
(F) 0478	1478	"	"	"	"	12 5/	"
0479	1479	"	"	4	8	7	"
0480	1480	"	"	"	"	8	"
0481	1481	"	"	"	"	9	"
0482	1482	"	"	"	"	10	"
0483	1483	"	"	"	"	11	"
0484	1484	"	"	"	"	12 5/	"
0485	1485	"	"	5	10	7	"
0486	1486	"	"	"	"	8	"
0487	1487	"	"	"	"	9	"
0488	1488	"	"	"	"	10	"
0489	1489	"	"	"	"	11	"
0490	1490	"	"	"	"	12 5/	"
0491	1491	"	"	6	12	7	"
0492	1492	"	"	"	"	8	"
0493	1493	"	"	"	"	9	"
0494	1494	"	"	"	"	10	"
0495	1495	"	"	"	"	11	"
0496	1496	"	"	"	"	12 5/	"
0497	1497	"	"	7	14	7	"
0498	1498	"	"	"	"	8	"
0499	1499	"	"	"	"	9	"
0500	1500	"	"	"	"	10	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE VI. Switching characteristics and part number - Continued.

Construction: N Part number M3786/15-	Construction: S Part number M3786/15-	Angle of throw	Poles per deck	Number of decks	Number of poles	Position per pole	Switch characteristic N or S
0501	1501	15°	2	7	14	11	N
0502	1502	"	"	"	"	12 5/	"
0503	1503	"	"	8	16	7	"
0504	1504	"	"	"	"	8	"
0505	1505	"	"	"	"	9	"
(F) 0506	1506	"	"	"	"	10	"
0507	1507	"	"	"	"	11	"
0508	1508	"	"	"	"	12 5/	"
0509	1509	"	"	9	18	7	"
0510	1510	"	"	"	"	8	"
0511	1511	"	"	"	"	9	"
0512	1512	"	"	"	"	10	"
0513	1513	"	"	"	"	11	"
0514	1514	"	"	"	"	12 5/	"
0515	1515	"	"	10	20	7	"
0516	1516	"	"	"	"	8	"
0517	1517	"	"	"	"	9	"
0518	1518	"	"	"	"	10	"
0519	1519	"	"	"	"	11	"
0520	1520	"	"	"	"	12 5/	"
0521	1521	"	1	1	1	13	"
0522	1522	"	"	"	"	14	"
0523	1523	"	"	"	"	15	"
0524	1524	"	"	"	"	16	"
0525	1525	"	"	"	"	17	"
0526	1526	"	"	"	"	18	"
0527	1527	"	"	"	"	19	"
0528	1528	"	"	"	"	20	"
0529	1529	"	"	"	"	21	"
0530	1530	"	"	"	"	22	"
0531	1531	"	"	"	"	23	"
0532	1532	"	"	"	"	24 6/	"
0533	1533	"	"	2	2	13	"
0534	1534	"	"	"	"	14	"
0535	1535	"	"	"	"	15	"
0536	1536	"	"	"	"	16	"
0537	1537	"	"	"	"	17	"
0538	1538	"	"	"	"	18	"
0539	1539	"	"	"	"	19	"
0540	1540	"	"	"	"	20	"
0541	1541	"	"	"	"	21	"
0542	1542	"	"	"	"	22	"
0543	1543	"	"	"	"	23	"
0544	1544	"	"	"	"	24 6/	"
0545	1545	"	"	3	3	13	"
0546	1546	"	"	"	"	14	"
0547	1547	"	"	"	"	15	"
0548	1548	"	"	"	"	16	"
0549	1549	"	"	"	"	17	"
0550	1550	"	"	"	"	18	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE VI. Switching characteristics and part numbers - Continued.

Construction: N Part number M3786/15-	Construction: S Part number M3786/15-	Angle of throw	Poles per deck	Number of decks	Number of poles	Position per pole	Switch characteristic N or S
0551	1551	15°	1	3	3	19	N
0552	1552	"	"	"	"	20	"
0553	1553	"	"	"	"	21	"
0554	1554	"	"	"	"	22	"
0555	1555	"	"	"	"	23	"
0556	1556	"	"	"	"	24 5/	"
0557	1557	"	"	4	4	13	"
0558	1558	"	"	"	"	14	"
0559	1559	"	"	"	"	15	"
0560	1560	"	"	"	"	16	"
0561	1561	"	"	"	"	17	"
0562	1562	"	"	"	"	18	"
0563	1563	"	"	"	"	19	"
0564	1564	"	"	"	"	20	"
0565	1565	"	"	"	"	21	"
0566	1566	"	"	"	"	22	"
0567	1567	"	"	"	"	23	"
0568	1568	"	"	"	"	24 6/	"
0569	1569	"	"	5	5	13	"
0570	1570	"	"	"	"	14	"
0571	1571	"	"	"	"	15	"
0572	1572	"	"	"	"	16	"
0573	1573	"	"	"	"	17	"
0574	1574	"	"	"	"	18	"
0575	1575	"	"	"	"	19	"
0576	1576	"	"	"	"	20	"
0577	1577	"	"	"	"	21	"
0578	1578	"	"	"	"	22	"
0579	1579	"	"	"	"	23	"
0580	1580	"	"	"	"	24 6/	"
0581	1581	"	"	6	6	13	"
0582	1582	"	"	"	"	14	"
0583	1583	"	"	"	"	15	"
0584	1584	"	"	"	"	16	"
0585	1585	"	"	"	"	17	"
0586	1536	"	"	"	"	18	"
0587	1587	"	"	"	"	19	"
0588	1539	"	"	"	"	20	"
0589	1589	"	"	"	"	21	"
0590	1590	"	"	"	"	22	"
0591	1591	"	"	"	"	23	"
0592	1592	"	"	"	"	24 6/	"
0593	1593	"	"	7	7	13	"
0594	1594	"	"	"	"	14	"
0595	1595	"	"	"	"	15	"
0596	1596	"	"	"	"	16	"
0597	1597	"	"	"	"	17	"
0598	1598	"	"	"	"	18	"
0599	1599	"	"	"	"	19	"
0600	1500	"	"	"	"	20	"

See footnotes at end of table.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

TABLE VI. Switching characteristics and part numbers - Continued.

Construction: N Part number M3786/15-	Construction: S Part number M3786/15-	Angle of throw	Poles per deck	Number of decks	Number of poles	Position per pole	Switch characteristic N or S
0601	1601	15°	1	7	7	21	N
0602	1602	"	"	"	"	22	"
0603	1603	"	"	"	"	23	"
0604	1604	"	"	"	"	24 5/	"
0605	1605	"	"	8	8	13	"
0606	1606	"	"	"	"	14	"
0607	1607	"	"	"	"	15	"
0608	1608	"	"	"	"	16	"
0609	1609	"	"	"	"	17	"
0610	1610	"	"	"	"	18	"
0611	1611	"	"	"	"	19	"
0612	1612	"	"	"	"	20	"
0613	1613	"	"	"	"	21	"
0614	1614	"	"	"	"	22	"
0615	1615	"	"	"	"	23	"
0616	1616	"	"	"	"	24 6/	"
0617	1617	"	"	9	9	13	"
0618	1618	"	"	"	"	14	"
0619	1619	"	"	"	"	15	"
0620	1620	"	"	"	"	16	"
0621	1621	"	"	"	"	17	"
0622	1622	"	"	"	"	18	"
0623	1623	"	"	"	"	19	"
0624	1624	"	"	"	"	20	"
0625	1625	"	"	"	"	21	"
0626	1626	"	"	"	"	22	"
0627	1627	"	"	"	"	23	"
0628	1628	"	"	"	"	24 6/	"
0629	1629	"	"	10	10	13	"
0630	1630	"	"	"	"	14	"
0631	1631	"	"	"	"	15	"
0632	1632	"	"	"	"	16	"
0633	1633	"	"	"	"	17	"
0634	1634	"	"	"	"	18	"
0635	1635	"	"	"	"	19	"
0636	1636	"	"	"	"	20	"
0637	1637	"	"	"	"	21	"
0638	1638	"	"	"	"	22	"
0639	1639	"	"	"	"	23	"
0640	1640	"	"	"	"	24 5/	"

1/ May be used for all 2- to 11-position applications using field adjustable stops that are supplied.
2/ May be used for all 2- to 23-position applications using field adjustable stops that are supplied.
3/ May be used for all 2- to 48-position applications using field adjustable stops that are supplied.
4/ May be used for all 2- to 6-position applications using field adjustable stops that are supplied.
5/ May be used for all 2- to 12-position applications using field adjustable stops that are supplied.
6/ May be used for all 2- to 24-position applications using field adjustable stops that are supplied.

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.

Custodians:
Army - ER
Navy - EC
Air Force - 85

Review activities:
Army - MI
Navy - AS, EC, OS
Air Force - 11, 17, 99
DSA - ES

User activities:
Army - AT, AV, ME, SM
Navy - CG, MC
Air Force - 19

Preparing activity:
Air Force - 95

Agent:
DLA - ES

(Project 5930-1338-01)

Source: https://assist.dla.mil -- Downloaded: 2026-10-16T21:36Z
Check the source to verify that this is the current version before use.