

Help Menu

The commands are described under the [Help Menu](#).


Methods of the PlaceBuffer

Methods of the PlaceBuffer

The *PlaceBuffer* provides:

- The *method* [pe](#), [\[X Y\]](#).
- The [Methods of the Material Flow Objects](#).
- The [Methods of All Objects](#).

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.

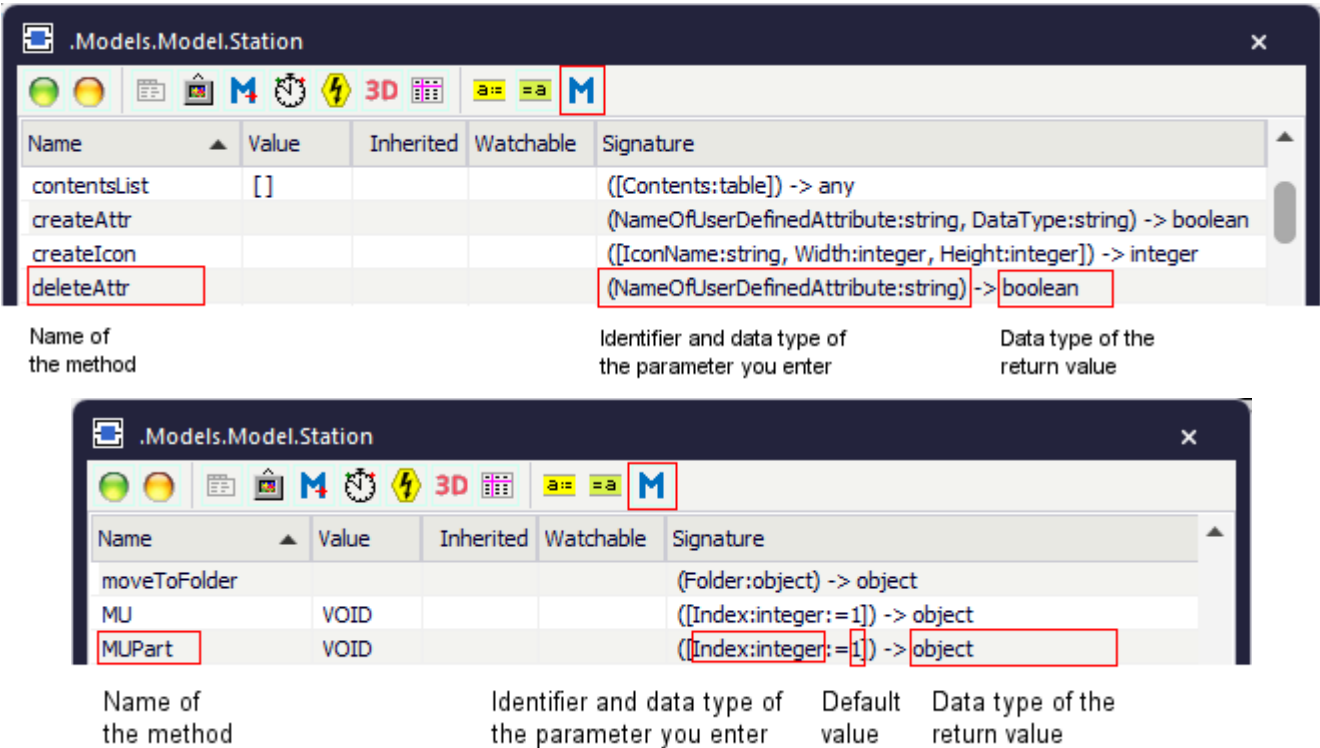

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected [Class \[general description\]](#).
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).

An example of the **Syntax** line of the individual methods might look like this:

```
<Path>.openDialog([CallOpenControl:boolean:=false]) → boolean
```

- The expression *<Path>* designates the path of the object to which the *method* applies.
- The signature of the method, consisting of the identifier and the data type of the parameter, is listed in parentheses. The expression *(Parameter:string)*, for example, designates a parameter of data type *string*. Instead of a constant value, you can also use a variable of the required type or a *method* that returns the required data type.

Note

Make sure to enter the parentheses for expressions within parentheses (...). Not entering them may lead to unexpected results and open the *Debugger*.

Optional parameters are listed within brackets. The expression *[,Parameter:boolean]*, for example, means that you can, but do not have to enter the *boolean* parameter.

If a parameter has a default value, the signature shows the default value after the parameter, *:= false* in the example above.

If the *method* has a return value, the signature shows its data type after the arrow *->*, *→ boolean* in the example above.

pe(1) / [1] [SimTalk] - PlaceBuffer

Sets the designated place (production element) of the *PlaceBuffer* designated by <Path>.

Remarks

The *PlaceBuffer* has several storage places which are arranged in a row one after the other.

Note

If **Sequentially Indexing** is active, we do not support the method *pe*.

Type

Method

Syntax

```
<Path>.pe([Index:integer:=1]) → any  
<Path>[Index:integer] → any
```

Parameter

The optional parameter *Index* of data type *integer* designates the place.

Default Value of the Parameter

The default value is 1.

Return Value

The return value has the data type *any*.

Example

```
@.move(MyPlaceBuffer[2])  
@.move(MyPlaceBuffer.pe(2))
```

See also

[Sequentially Indexing \[check box\]](#)

Read-Only Attributes of the PlaceBuffer

Read-Only Attributes of the PlaceBuffer

The *PlaceBuffer* provides:

- The [_Read-Only Attributes of All Objects](#).
- The [Read-Only Attributes of the Material Flow Objects](#).

You can query the values of the *read-only attributes*, but you cannot set them as *Plant Simulation* computes the value for the point-in-time at which you query it. In most cases a *read-only attribute* corresponds to an unavailable dialog item on one of the tabs of the object, for example on the tab **Statistics**.

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.

Name	Value	Inherited	Watchable	Signature
NumPartsSinceSetup	0			-> integer
NumPred	1			-> integer
NumSucc	3			-> integer

Name of the read-only attribute Current value of the read-only attribute Data type of the return value

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected [Class \[general description\]](#).
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).

To query the value of a *read-only attribute*, you might, for example, type:

```
print MyPlaceBuffer.UUID
```

Attributes of the PlaceBuffer

_Attributes of the PlaceBuffer

The *PlaceBuffer* provides: