

## TypeStatOn [SimTalk]

Activates collecting statistics values of the *Drain* designated by <Path> depending on the type of *MU* (true) or deactivates it (false).

### Type

Attribute

### Syntax

```
<Path>.TypeStatOn:boolean
```

### Assignment Value

You can assign a value of data type *boolean*.

### Example

```
MyDrain.TypeStatOn := false
```

### See also

[Type Dependent Statistics](#)

[typeStatistics \[SimTalk\] - Drain](#)

[typeStatisticsCumulated \[SimTalk\]](#)

## Station

### Station [object]

Use the object *Station* for processing parts on a single processing place. You'll use it for modeling most of your machines.

### Image



## Description


The *Station* receives a single *MU* from its predecessor, **processes** it and moves it on to one of its successors after the set-up time and the processing time has elapsed. If the types of *MUs* are not identical, i.e., if they do not have the same name, the *Station* has to set up to process this new type of *MU*. While a *part* is located on the *Station*, it does not receive any additional *parts* but enters them into its **Blocking List**. It only accepts the blocked *MUs* one after the other and processes them after it is available again.

If the *Station* has several successors, it moves the *MUs* one after the other onto them. If the successor to which the part is to be moved is blocked, meaning it is full or failed, the *Station* does not select another available successor onto which it moves the part. Instead, it does not move the part and thus is **blocked**. It only moves the part after the successor becomes available again and is not blocked any longer, it moves the part and will then be unblocked. You can set a different moving behavior with a *Method*.

### Note

*Plant Simulation* always moves the *MU* as a whole not continually, i.e., as soon as its front, better its booking point, is located on the *Station*, the entire *MU* is located on it.

To show a **tooltip** with information about the *Station*, hover with the mouse over it.

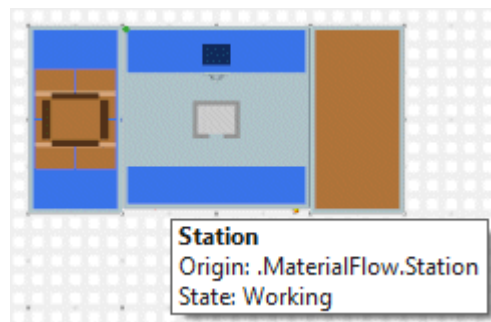


## Show Manipulators

To change the length of the graphic and the anchor points of the object, click **Show Manipulators** on the **Edit** ribbon tab or press **M** on the keyboard.




You can use the manipulators to change the dimensions of the object by editing its position or its scaling.

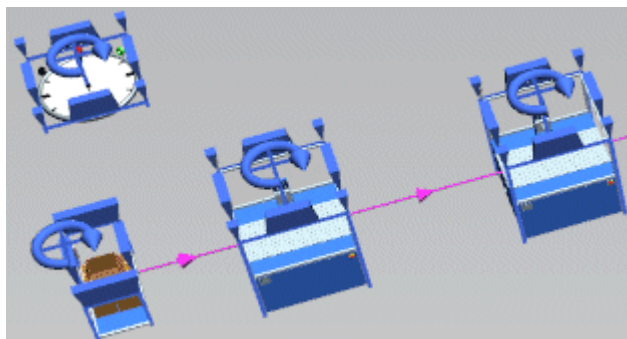

## Add the Object to the Simulation Model

To add the object *Station* to your simulation model, click  **Manage Class Library** > **Basic Objects** > **MaterialFlow** > **Station** on the **Home** ribbon tab.

Compare the sample models: Click the **Window** ribbon tab, click **Start Page** > **Getting Started** > **Example Models** > **Small Examples**. Then, select the respective **Category**, the **Topic**, and the **Example** in the dialog **Examples Collection**, and click **Open Model**.

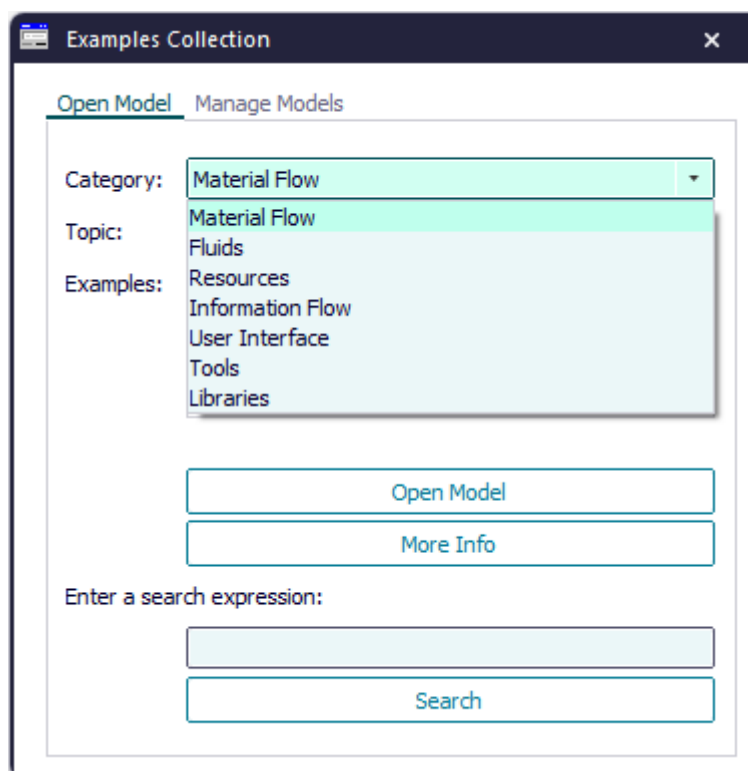

As the *Station* is such a central object in *Plant Simulation*, it figures prominently in a number of topics in the *Step-by-Step Help*.

See also

[Transfer Parts from Station to Station](#)

[Set a Station Up](#)

[Define Processing Times](#)

[Model Failures](#)

## Dialog Box of the Station

### Dialog Box of the Station

Double-click the icon of the *Station* to open its dialog box.

#### Edit Simulation Properties

In the dialog box you can change the **simulation properties** of the object. The shared properties are described under [Dialog Items of the Objects](#).

#### Edit Animation Properties

To edit the **3D properties** of the object in the dialog box [Edit 3D Properties](#):

- Click the button  **Edit 3D Properties** in the lower left corner of the simulation properties dialog box.
- Select the object in the model and press the **spacebar**.

To manipulate the graphic of the object, click [Show Manipulators](#) on the **Edit** ribbon tab or press **M** on the keyboard.

#### Video on YouTube

<https://youtu.be/PQhEriOzVzU?si=HpflhwtUyoiMFPzx&t=22>

## Tab Times

Define **Times** as described under the **Tab Times**.

Select a distribution from the drop-down list and type the values that this distribution requires into the text box. *Plant Simulation* shows the parameters along the upper border of the tab. You can also select a constant time (**Const**).

You can set the type of the distribution and a complete set of parameters with the method [setTypeAndAttr \[SimTalk\]](#).

See also

[Define Processing Times](#)

[Select the Set-Up Time](#)

[Processing Time \[general description\]](#)

[Set-up Time \[general description\]](#)

[Recovery Time \[general description\]](#)

[Recovery Time Starts](#)

[Cycle Time \[general description\]](#)

## Tab Set-Up

Define properties for **setting the object up** as described under the [Tab Set-Up](#).

## Tab Failures

Define **failures** as described under the [Tab Failures](#).

## Tab Controls

Provides controls to modify the built-in behavior of the object.

### Select the Path to an Existing Method

Click the ellipsis button. Navigate to the location of the *Method* in the dialog [Select Object \[for controls\]](#) and click **OK**. This inserts the name of the *Method* into the text box of the **Control**.



Press **F2** in the text box to open the *Method*. Then type in the source code of the **Control**.

Instead of choosing **Select Object**, you can also select the *Method* in a *Frame*, drag it to the text box and drop it there.


### Create a Control That is a Method of the Object

Proceed as follows to create a control as a *user-defined attribute* of data type *Method*:

- Type a meaningful name into the text box and select [Create Control \[context menu\]](#). *Plant Simulation* then inserts `self.Name_you_typed_in_for_the_control`, such as `self.A1Ctrl`.



- Select **Create Control** on the empty text box. *Plant Simulation* then inserts `self.OnBuilt_in_name_of_the_control`, such as `self.OnEntrance`.



Type the source code of this control into the *Method* that opens.

To edit the source code later on:

- Press **F2**.
- Or hold down **Shift** and double-click into the text box.
- Or select **Open Object** on the context menu.
- Or click the tab **User-defined** and double-click the name of the *Method* in the list.



- To delete this control, delete the *user-defined attribute*. If you only delete the name from the text box, the *user-defined attribute* is retained.

See also

[Select Object \[for controls\]](#)

[Entrance Control \[general description\]](#)

[Exit Control \[general description\]](#)

[Pull Control \[general description\]](#)

[Target Control \[Turntable\]](#)

[Shift Calendar \[tab Controls\]](#)

## Tab Exit

Select to which of its successors the object moves the *MU* on the **Tab Exit**.

See also


**Blocking [exit strategy]**

**Strategy [material flow objects]**

## Tab Statistics

**Statistics** is described under the [Tab Statistics](#).

To view [Resource Statistics of Stationary Resources](#) in the [Statistics Report](#), select **View > Show Statistics Report** in the dialog of the object. You can also click the right mouse button in the *Frame* and select [Show Statistics Report](#) or you can press **F6**.

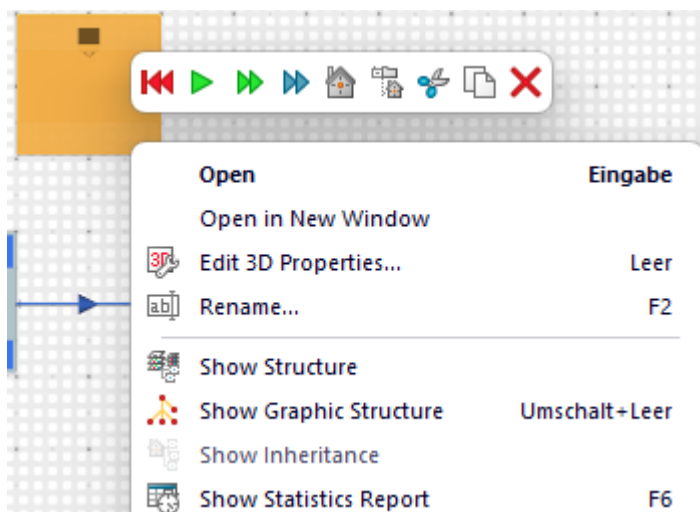

See also

[Statistics Report \[described\]](#)

[Resource Statistics \[check box\]](#)


[Resource Type](#)

## Tab Importer

On the **Tab Importer** you can define services for processing the parts, for setting the station up for a certain type of part, and for repairing the station.

To view **Importer Statistics** in the **Statistics Report**, click the object in the *Frame*, and press **F6** (**Show Statistics Report**), or click **Show Statistics Report** on the **Home** ribbon tab.

You can also click the object in the *Frame* with the right mouse button and select **Show Statistics Report** on the context menu.

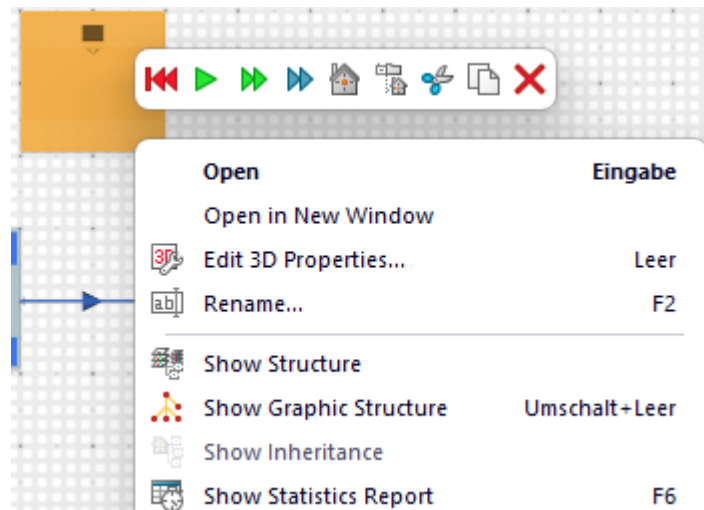

See also

[Processing Importer](#)

[Set-up Importer](#)

[Failure Importer](#)

[Transport Importer](#)

## Tab Energy

Select **energy settings** for the object on the [Tab Energy](#).

## Tab Costs

Select **costs settings** for the object on the [Tab Costs](#).

While the *Station* processes a part costs accrue which result from the sum of the investment costs and the operating costs.

**Note**

The investment costs only accrue during the **Depreciation Period**.

The costs are allocated to the part as **accrued costs**.

If the *Station* is empty, the costs remain with the *Station* as **general costs**.

See also

[CostAnalyzer > How the CostAnalyzer Assigns Costs to Part Types](#)

[CostAnalyzer > Costs Shown in the Costs Report](#)

[Simulate the Accrued Costs of the Machines](#)

## Tab User-defined

Define your own attributes as described under the [Tab User-defined](#).

Navigate Menu

The commands are described under the [Navigate Menu](#).

View Menu

View Menu


The **View Menu** provides commands to access its functions.

|                             |                           |
|-----------------------------|---------------------------|
| Refresh                     | Exporters                 |
| Show Statistics Report      | Services                  |
| Show Attributes and Methods | Unavailable Services      |
| Contents                    | Associated Workplaces     |
| Forward Blocking List       | Associated Lockout Zones  |
| Exit Blocking List          | Associated Shift Calendar |



## Exporters [Station]

Opens a table, which shows the names of all *Exporters* exporting services at the moment.

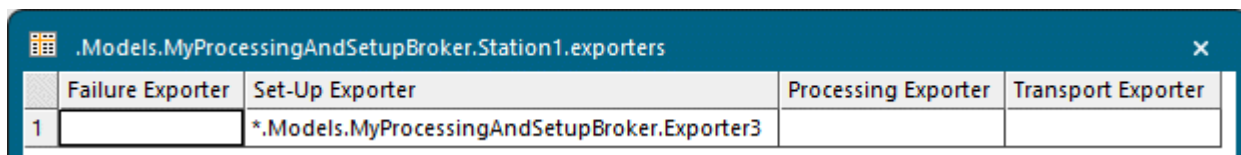


| .Models.MyProcessingAndSetupBroker.Station1.exporters |                  |                                               |                     |                    |
|-------------------------------------------------------|------------------|-----------------------------------------------|---------------------|--------------------|
|                                                       | Failure Exporter | Set-Up Exporter                               | Processing Exporter | Transport Exporter |
| 1                                                     |                  | *.Models.MyProcessingAndSetupBroker.Exporter3 |                     |                    |

See also

[getExporters \[SimTalk\]](#)

## Services [Station]

Opens a table, which shows the names of all imported services. The name of the failure service is identical with the name of the subtable.

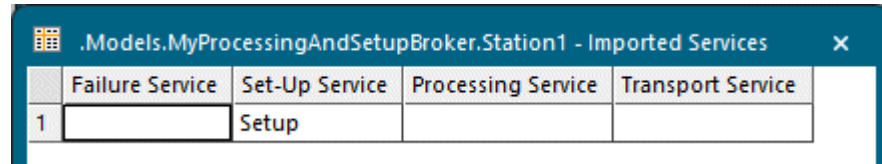


The screenshot shows a table window titled ".Models.MyProcessingAndSetupBroker.Station1 - Imported Services". The table has four columns: "Failure Service", "Set-Up Service", "Processing Service", and "Transport Service". The first row, indexed "1", contains the value "Setup" under the "Set-Up Service" column.

|   | Failure Service | Set-Up Service | Processing Service | Transport Service |
|---|-----------------|----------------|--------------------|-------------------|
| 1 |                 | Setup          |                    |                   |

## Remarks

Double-click the name of the service to open the subtable. Column 1 contains the **Name** of the *Exporter*, the column **Amount** the number of services provided.

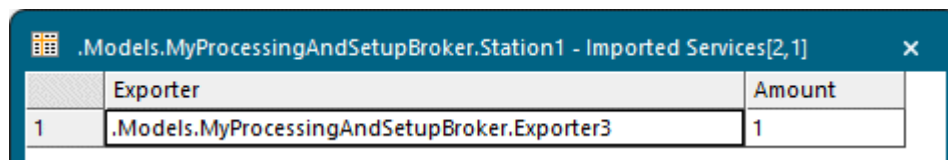

The screenshot shows a subtable window titled ".Models.MyProcessingAndSetupBroker.Station1 - Imported Services[2, 1]". The table has two columns: "Exporter" and "Amount". The first row, indexed "1", contains the value ".Models.MyProcessingAndSetupBroker.Exporter3" under the "Exporter" column and "1" under the "Amount" column.

|   | Exporter                                     | Amount |
|---|----------------------------------------------|--------|
| 1 | .Models.MyProcessingAndSetupBroker.Exporter3 | 1      |

## See also

[getImportedServices \[SimTalk\]](#)


[getServices \[SimTalk\] - importer](#)

[setAlternativeServices \[SimTalk\]](#)

[setServices \[SimTalk\] - importer](#)

## Unavailable Services [Station]


Opens a table, which shows the names of the **Failure Service**, the **Set-up Service**, the **Processing Service**, and the **Transport Service** that is unavailable at the moment.

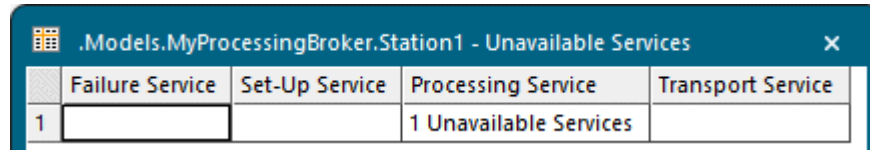

|   | Failure Service | Set-Up Service | Processing Service     | Transport Service |
|---|-----------------|----------------|------------------------|-------------------|
| 1 |                 |                | 1 Unavailable Services |                   |

### Remarks

The table shows the name of the unavailable service white on a red background in the respective cell.

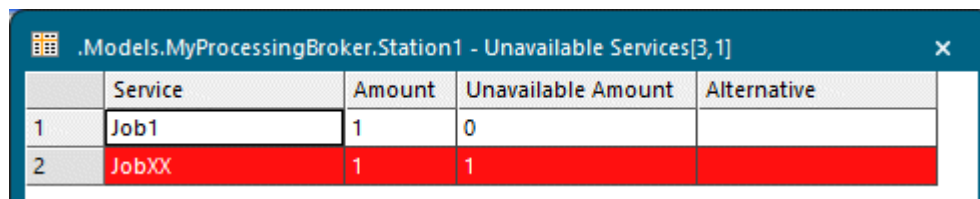

|   | Service | Amount | Unavailable Amount | Alternative |
|---|---------|--------|--------------------|-------------|
| 1 | Job1    | 1      | 0                  |             |
| 2 | JobXX   | 1      | 1                  |             |


Double-click the name of the service to open the subtable. Its columns show the **Name** of the *Exporter*, the **Amount** of services defined, the **Amount** of services missing, and the **Name** of the associated **Alternative**.

### See also

### Start/Stop Simulation [EventDebugger]

## Associated Workplaces [Station]

Opens a list showing the names of all the *Workplaces*, which are assigned to the selected *Station*.

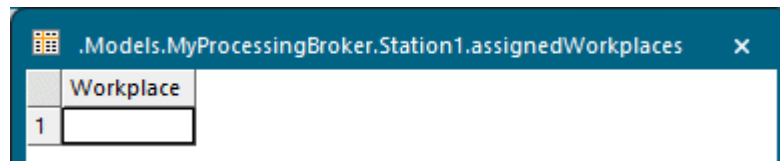

See also

[Workplace](#)

[assignedWorkplaces \[SimTalk\]](#)


[Station \[Workplace\]](#)

## Tools Menu

The commands are described under the [Tools Menu](#).

## Tab Menu

Use the commands of the **Tab** menu to show or hide individual tabs of the selected material flow objects. If you hide tabs that you do not need, *Plant Simulation* opens the dialog faster, and you can change to those tabs faster that you need in your daily work.

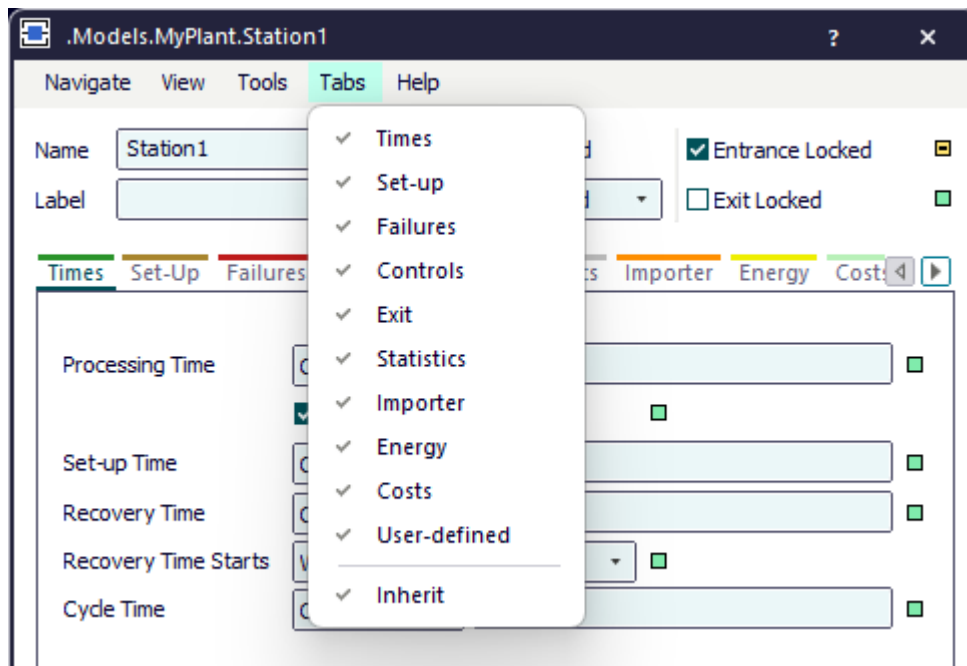

### Remarks

To apply the changed settings, click **OK**, close the dialog, and reopen it

The menu shows a check mark to the left of the displayed tabs.

The command **Inherit** turns inheritance of the displayed or hidden tabs in the dialog off or on.

## Help Menu

The commands are described under the [Help Menu](#).



## Methods of the Station

### Methods of the Station

The *Station* provides:

- The [Methods of All Objects](#).
- The [Methods of the Material Flow Objects](#).

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.

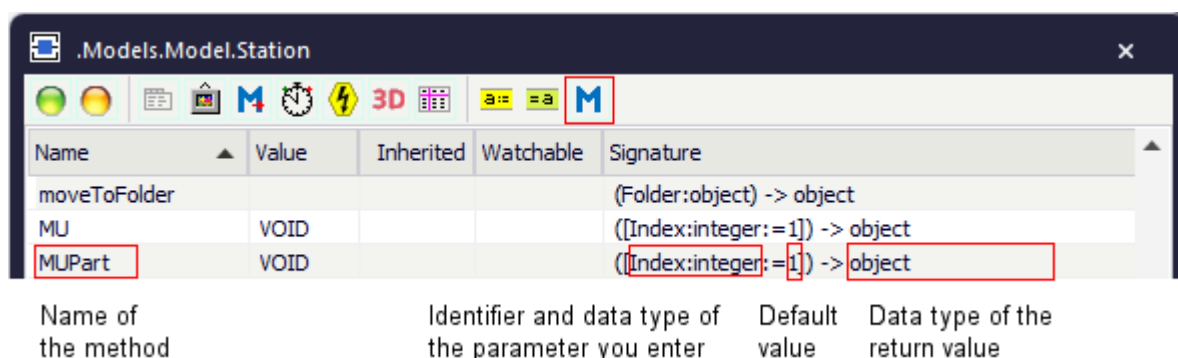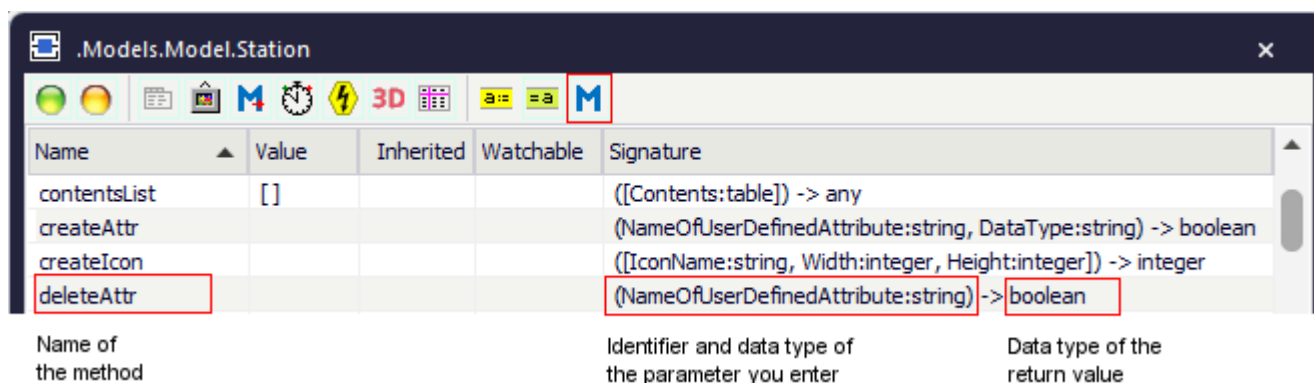

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected [Class \[general description\]](#).
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).