

Return Value

The return value has the data type *length*.

Is -1 if *Plant Simulation* did not find a route.

Example

```
print Track5.getRouteLength(Track26)
```

SimTalk

[Destination \[SimTalk\] - sensors](#)

[RouteWeightingAttr \[SimTalk\] - Transporter](#)

Read-Only Attributes of the Track


Read-Only Attributes of the Track

The *Track* provides:

- The *read-only attribute* [OccupiedLength \[SimTalk\] - Track](#).
- The [_Read-Only Attributes of All Objects](#).
- The [Read-Only Attributes of the Material Flow Objects](#).

You can query the values of the *read-only attributes*, but you cannot set them as *Plant Simulation* computes the value for the point-in-time at which you query it. In most cases a *read-only attribute* corresponds to an unavailable dialog item on one of the tabs of the object, for example on the tab **Statistics**.

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.

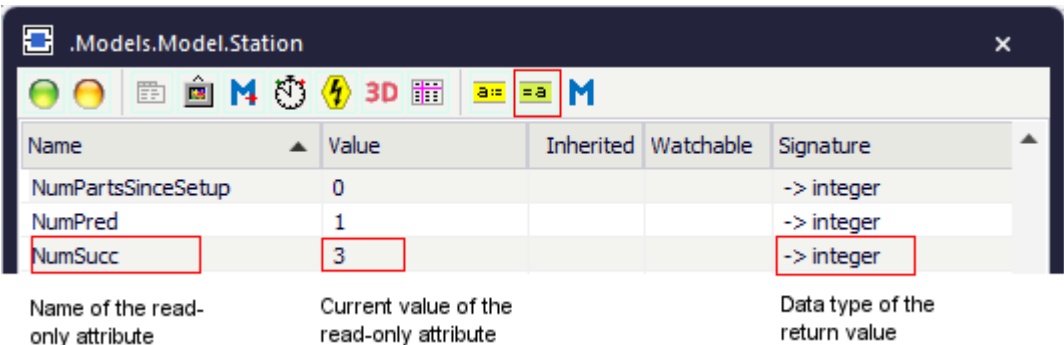

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected [Class \[general description\]](#).
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).

To query the value of a *read-only attribute*, you might, for example, type:

```
print Store.Capacity
```

OccupiedLength [SimTalk] - Track

Returns the part of the entire **Length** of the *Track* designated by <Path>, which is occupied by all *Transporters* located on it.

Remarks

Each *Transporter* located on the *Track* occupies part of the entire length available.

Type

Read-only attribute

Syntax

```
<Path>.OccupiedLength → length
```

Return Value

The return value has the data type *length*.

Example

```
print MyTrack.OccupiedLength
```

See also

[Length \[text box\] - Track](#)

Attributes of the Track

_Attributes of the Track

The *Track* provides:

- The *attributes* listed in the table of contents to the left.
- The [Attributes of All Objects](#).
- The [Attributes of the Material Flow Objects](#).

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.