

### Parameter

The parameter *Attributes* of data type *table* designates the path to a list or a variable of the same data type.

*Plant Simulation* then copies the contents of the passed list to the attribute list of the *Turnplate*.

### Example

```
MyTurnplate.setAttributeList(MyAttributes)
```

### SimTalk

[getAttributeList \[SimTalk\] - Turnplate](#)

See also

[Strategy \[drop-down list\] - Turnplate](#)

[Open List \[Turnplate\]](#)

[Data Held in Tabular Form in Attributes \[material flow objects\]](#)

## Read-Only Attributes of the Turnplate


### \_Read-Only Attributes of the Turnplate

The *Turnplate* provides:

- The *read-only attributes* listed in the table of contents to the left.
- The [\\_Read-Only Attributes of All Objects](#).
- The [Read-Only Attributes of the Material Flow Objects](#).

You can query the values of the *read-only attributes*, but you cannot set them as *Plant Simulation* computes the value for the point-in-time at which you query it. In most cases a *read-only attribute* corresponds to an unavailable dialog item on one of the tabs of the object, for example on the tab **Statistics**.

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.

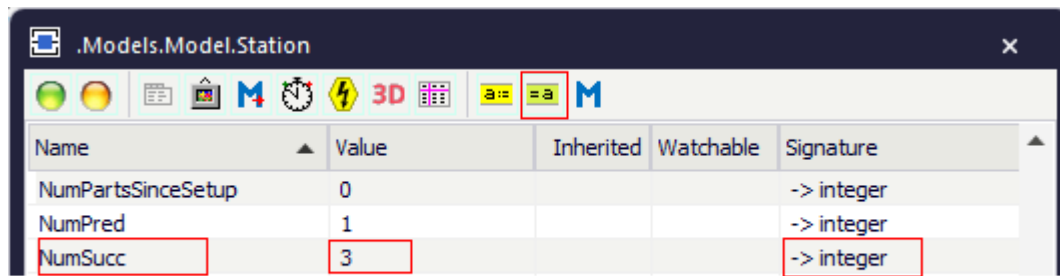

| Name               | Value | Inherited | Watchable | Signature  |
|--------------------|-------|-----------|-----------|------------|
| NumPartsSinceSetup | 0     |           |           | -> integer |
| NumPred            | 1     |           |           | -> integer |
| NumSucc            | 3     |           |           | -> integer |

Name of the read-only attribute      Current value of the read-only attribute      Data type of the return value

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected [Class \[general description\]](#).
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).

To query the value of a *read-only attribute*, you might, for example, type:

```
print Turnplate.StatRotationLoadedPortion
```

## StatRotationLoadedPortion [SimTalk] - Turnplate

Returns the portion of the statistics collection period during which the *Turnplate* designated by <Path> was rotating while a *MU* was located on the plate.

### Syntax

```
<Path>.StatRotationLoadedPortion → real
```

### Return Value

The return value has the data type *real*.

### Example

```
print MyTurnplate.StatRotationLoadedPortion
```

### See also

#### [Tab Statistics \[Turnplate\]](#)

*Statistics report*, [Rotation Time](#)

## StatRotationLoadedTime [SimTalk] - Turnplate

Returns the total time during which the *Turnplate* designated by <Path> was rotating while a *MU* was located on the plate.

### Syntax

```
<Path>.StatRotationLoadedTime → time
```

### Return Value

The return value has the data type *time*.

### Example

```
print MyTurnplate.StatRotationLoadedTime
```

### See also

*Statistics report*, [Rotation Time](#)

## Attributes of the Turnplate

### \_Attributes of the Turnplate

The *Turnplate* provides:

- The *attributes* listed in the table of contents to the left.
- The [Attributes of All Objects](#).
- The [Attributes of the Material Flow Objects](#).

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.