

stopMU [SimTalk]

Stops the *MU* while the *Turntable* designated by <Path> is still rotating.

Remarks

When the rotation is finished, the *MU* automatically moves again.

Use *stopMU* to stop the *MU* before it reaches the end of the table to prevent collisions for example. You will mostly use *stopMU* in a sensor control.

Type

Method

Syntax

```
<Path>.stopMU
```

Example

```
MyTurntable.stopMU
```

Read-Only Attributes of the Turntable


_Read-Only Attributes of the Turntable

The *Turntable* provides:

- The *read-only attributes* listed in the table of contents to the left.
- The [_Read-Only Attributes of All Objects](#).
- The [Read-Only Attributes of the Material Flow Objects](#).

You can query the values of the *read-only attributes*, but you cannot set them as *Plant Simulation* computes the value for the point-in-time at which you query it. In most cases a *read-only attribute* corresponds to an unavailable dialog item on one of the tabs of the object, for example on the tab **Statistics**.

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.

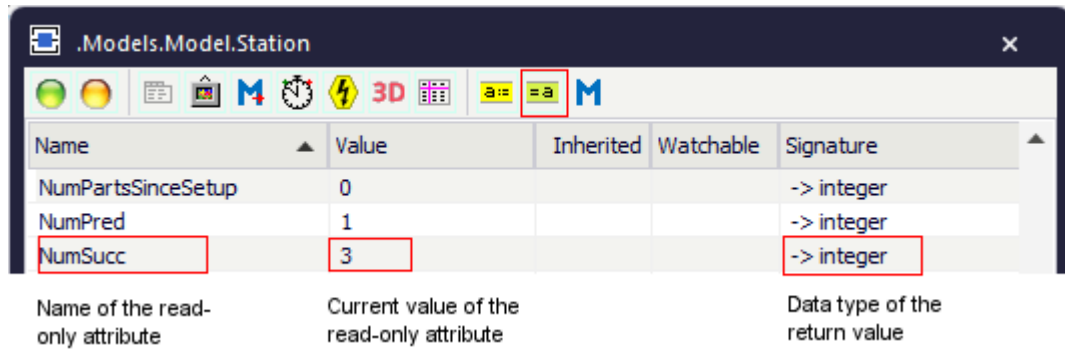

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected [Class \[general description\]](#).
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).

To query the value of a *read-only attribute*, you might, for example, type:

```
print Turntable.StatRotationEmptyPortion
```

CurrentAngle [SimTalk]

Returns the current angle of the *Turntable* designated by <Path>.

Type

Read-only attribute

Syntax

```
<Path>.CurrentAngle → real
```

Return Value

The return value has the data type *real*.

Example

```
print MyTurntable.CurrentAngle // might return 45 for example
```

CurrentDestinationAngle [SimTalk]

Returns the destination angle to which the *Turntable* designated by <Path> rotates at the moment.

Type

Read-only attribute

Syntax

```
<Path>.CurrentDestinationAngle → real
```

Return Value

The return value has the data type *real*.

Example

```
print MyTurntable.CurrentDestinationAngle // might return 74.36 for example
```

StatRotationEmptyPortion [SimTalk] - Turntable

Returns the portion of the statistics collection period during which the *Turntable* designated by <Path> was rotating **empty** without a *MU* being located on the table.

Type

Read-only attribute

Syntax

```
<Path>.StatRotationEmptyPortion → real
```

Return Value

The return value has the data type *real*.

Example

```
print MyTurntable.StatRotationEmptyPortion
```

See also

[Tab Statistics \[Turnplate\]](#)

Statistics report, [Rotation Time](#)

[Empty \[state, material flow objects\]](#)

StatRotationEmptyTime [SimTalk] - Turntable

Returns the total time during which the *Turntable* designated by <Path> was rotating **empty**, i.e., without a *MU* being located on the table.

Type

Read-only Attribute

Syntax

```
<Path>.StatRotationEmptyTime → time
```

Return Value

The return value has the data type *time*.

Example

```
print MyTurntable.StatRotationEmptyTime
```

See also

Statistics report, [Rotation Time](#)

[Empty \[state, material flow objects\]](#)

StatRotationLoadedPortion [SimTalk] - Turntable

Returns the portion of the statistics collection period during which the *Turntable* designated by <Path> was rotating with a *MU* being located on the table.

Type

Read-only attribute

Syntax

```
<Path>.StatRotationEmptyPortion → real
```

Return Value

The return value has the data type *real*.

Example

```
print MyTurntable.StatRotationEmptyPortion
```

See also

[Tab Statistics \[Turnplate\]](#)

Statistics report, [Rotation Time](#)

StatRotationLoadedTime [SimTalk] - Turntable

Returns the total time during which the *Turntable* designated by <Path> was rotating with a *MU* being located on the table.

Type

Read-only attribute

Syntax

```
<Path>.StatRotationLoadedTime → time
```

Return Value

The return value has the data type *time*.

Example

```
print MyTurntable.StatRotationLoadedTime
```

See also

Statistics report, [Rotation Time](#)

Attributes of the Turntable

_Attributes of the Turntable

The *Turntable* provides:

- The *attributes* listed in the table of contents to the left.
- The [Attributes of All Objects](#).
- The [Attributes of the Material Flow Objects](#).

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.