

succLaneNo [SimTalk] - lane A or B

Returns the number of the succeeding lane of the specified lane of the *TwoLaneTrack* designated by <Path>.

Type

Method

Syntax

```
<Path>.A.succLaneNo([LaneNumber:integer]) → integer  
<Path>.B.succLaneNo([LaneNumber:integer]) → integer
```

Parameter

The optional parameter *LaneNumber* of data type *integer* designates the number of the lane of the n-th successor lane of the *TwoLaneTrack*. The objects have to be connected for this to work.

Return Value

The return value has the data type *integer*.

Example

```
if MyTwoLaneTrack.A.succLaneNo = 1  
  print "succeeding lane is lane A"  
end
```

SimTalk

predLaneNo [SimTalk] - lane A or B

Read-Only Attributes of the TwoLaneTrack


_Read-Only Attributes of the TwoLaneTrack

The *TwoLaneTrack* provides:


- The *read-only attributes* listed in the table of contents to the left.
- The [_Read-Only Attributes of All Objects](#).
- The [Read-Only Attributes of the Material Flow Objects](#).

You can query the values of the *read-only attributes*, but you cannot set them as *Plant Simulation* computes the value for the point-in-time at which you query it. In most cases a *read-only attribute* corresponds to an unavailable dialog item on one of the tabs of the object, for example on the tab **Statistics**.

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window **Show Attributes and Methods**. The figure below illustrates the information using the example of the object *Station*.

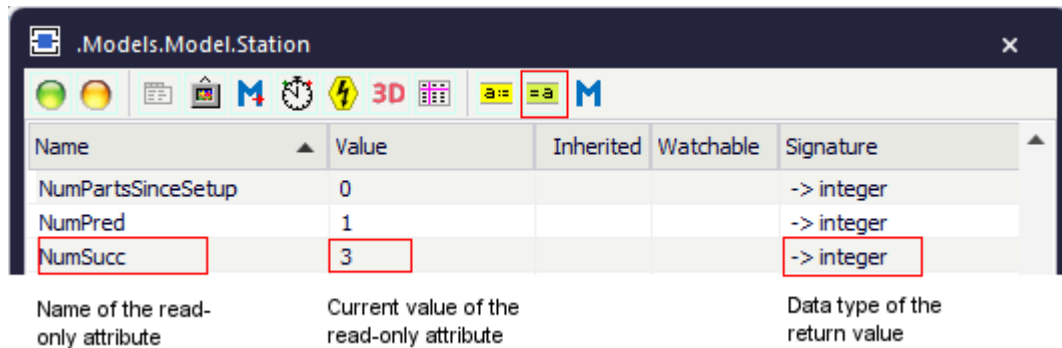

For the *TwoLaneTrack* the dialog shows **A** and **B** for the respective lane, but not the *read-only attributes* proper for these lanes.

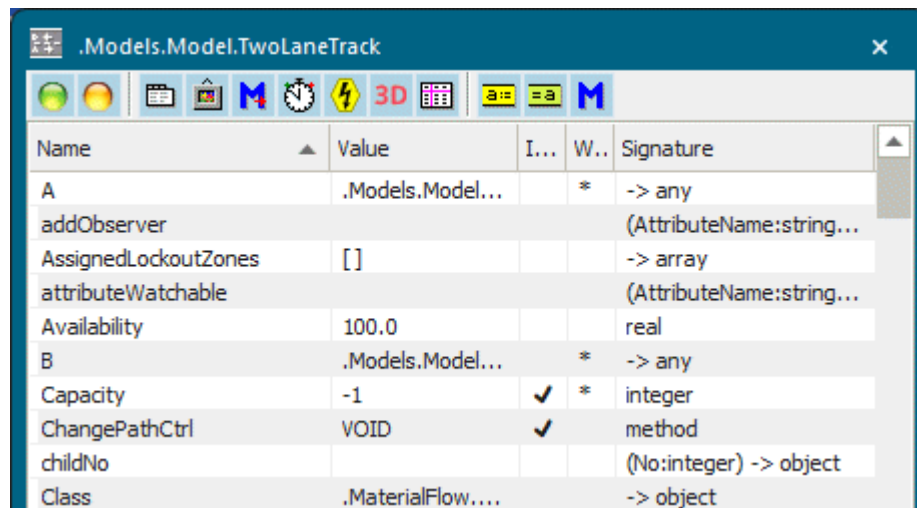

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected **Class** [general description].
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected **Instance** [general description].

To query the value of a *read-only attribute*, you might, for example, type:

```
print TwoLaneTrack.A.NumPred
```

IsLaneA [SimTalk]

Returns if the *Transporter* drives on lane A of the *TwoLaneTrack* designated by <Path> (true) or not (false).

Type

Read-only attribute

Syntax

```
<Path>.A.IsLaneA → boolean
```

Return Value

The return value has the data type *boolean*.

Example

```
print TwoLaneTrack.A.IsLaneA    // returns true if the Transporter drives  
on lane A  
print TwoLaneTrack.A.IsLaneA    // returns false if the Transporter does  
not drive on lane A
```

See also

[Lane A](#)

IsLaneB [SimTalk]

Returns if the *Transporter* drives on lane B of the *TwoLaneTrack* designated by <Path> (true) or not (false).

Type

Read-only attribute

Syntax

```
<Path>.B.IsLaneB → boolean
```

Return Value

The return value has the data type *boolean*.

Example

```
print TwoLaneTrack.B.IsLaneB    // returns true if the Transporter drives  
on lane B  
print TwoLaneTrack.B.IsLaneB    // returns false if the Transporter does  
not drive on lane B
```

See also

Lane B

NumPred [SimTalk] - lane A or B

Returns the number of predecessors of the specified lane of the *TwoLaneTrack* designated by <Path>.

Type

Read-only attribute

Syntax

```
<Path>.A.NumPred → integer  
<Path>.B.NumPred → integer
```

Return Value

The return value has the data type *integer*.

Example

```
for var i := 1 to MyTwoLaneTrack.B.NumPred  
  print MyTwoLaneTrack.B.pred(i) // prints all predecessors  
next
```

SimTalk

NumSucc [SimTalk] - lane A or B

NumSucc [SimTalk] - lane A or B

Returns the number of successors of the specified lane of the *TwoLaneTrack* designated by <Path>.

Type

Read-only attribute

Syntax

```
<Path>.A.NumSucc → integer  
<Path>.B.NumSucc → integer
```

Return Value

The return value has the data type *integer*.

Example

```
if MyTwoLaneTrack.A.NumSucc > 1  
  ... // more than one successor  
end
```

SimTalk

NumPred [SimTalk] - lane A or B

OccupiedLength [SimTalk] - lane A or B

Returns the part of the entire length of the specified lane of the *TwoLaneTrack* designated by <Path> which is occupied by all *Transporters* located on it.

Remarks

Each *Transporter* located on the *TwoLaneTrack* occupies part of the entire available length on the *TwoLaneTrack*.

Type

Read-only attribute

Syntax

```
<Path>.A.OccupiedLength → length  
<Path>.B.OccupiedLength → length
```

Return Value

The return value has the data type *length*.

Example

```
print myTwoLaneTrack.A.OccupiedLength
```

See also

[Length \[text box\] - lane A](#)

[Length \[text box\] - lane B](#)

Attributes of the TwoLaneTrack

_Attributes of the TwoLaneTrack

The *TwoLaneTrack* provides:

- The *attributes* listed in the table of contents to the left.
- The [Attributes of All Objects](#).
- The [Attributes of the Material Flow Objects](#).