

StatAverageTraveledDistance [SimTalk] - AGVPool

Returns the average distance in meters which the AGVs of the AGVPool designated by <Path> traveled.

Type

Read-only attribute

Syntax

```
<Path>.StatAverageTraveledDistance → length
```

Return Value

The return value has the data type *length*.

Example

```
print AGVPool.StatAverageTraveledDistance
```


Attributes of the AGVPool

_Attributes of the AGVPool

The AGVPool provides:

- The *attributes* listed in the table of contents to the left.
- The [Attributes of All Objects](#).

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.

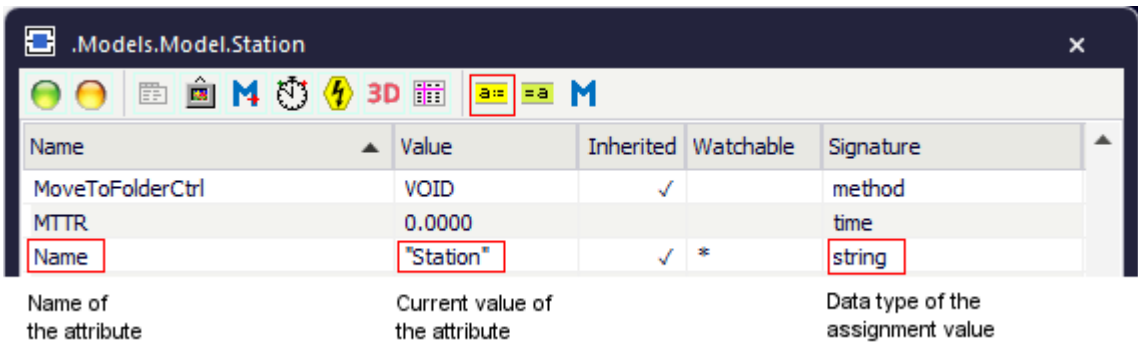

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected [Class \[general description\]](#).
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).

You can set the value of an attribute and you can get its value, either with the check boxes, the text boxes and drop-down lists in the dialog windows or by assigning values to the respective attributes.

- To **set the value** of an attribute, you might, for example, type:

```
MyAGVPool.BrokerPath := mybroker
```

- To **get the value** of an attribute, you might, for example, type:

```
MyAGVPool.AGV := ".UserObjects.MyAGV"
```

AGV [SimTalk]

Sets the AGVs which the *AGVPool* designated by <Path> creates.

Remarks

Note

By default the *Transporter* in the folder **MUs** in the *Class Library* is the AGV. For this reason the methods, attributes, and read-only attributes of the *Transporter* apply to the AGV as well.

Plant Simulation creates the specified *Amount* of *vehicles* during the **init phase** of the simulation run.

Type

Attribute

Syntax

```
<Path>.AGV:path
```

Assignment Value

You can assign a value of data type *path*.

Examples

```
MyAGVPool.AGV := ".UserObjects.MyAGV"
```

```
var AGV : object := AGVPool.Cont
AGV.setRoute([M1,M2,M3,M4])
waituntil AGV.DestinationWasReached
AGV.setRoute([M1,M2,M3,M4])
```

SimTalk

[setRoute \[SimTalk\] - Transporter](#)

[setRouteSegments \[SimTalk\]](#)

[Amount \[SimTalk\] - AGVPool](#)

See also

[AGV \[text box\]](#)

Amount [SimTalk] - AGVPool

Sets the amount of AGVs which the *AGVPool* designated by <Path> creates.

Remarks

Plant Simulation creates the specified **Amount** of **AGVs** during the **init phase** of the simulation run.

Type

Attribute

Syntax

```
<Path>.Amount:integer
```

Assignment Value

You can assign a value of data type *integer*.

Example

```
MyAGVPool.Amount := 2
```

See also

[Amount \[text box\] - AGVPool](#)

[AGV \[SimTalk\]](#)

Marker

Marker

Use the object *Marker* for setting waypoints in your simulation model along which the *Automated Guided Vehicle* drives from the *AGVPool* to its *destination*.

Image

