

getIdleAGV [SimTalk]

Returns an AGV of the AGVPool designated by <Path> for which the attribute *IsIdle* has the value true.

Remarks

getIdleAGV also sets the attribute *IsIdle* of the returned AGV to false. You yourself are responsible to set *IsIdle* to true again if the AGV is to be available again, normally when the AGV has reached the end of the route.

Type

Method

Syntax

```
<Path>.getIdleAGV → object
```

Return Value

The return value has the data type *object*.

VOID if no idle AGV is available.

Example

```
waituntil AGVPool.NumIdleAGVs > 0
var AGV := AGVPool.getIdleAGV
```

SimTalk

[IsIdle \[SimTalk\] - Transporter](#)

[NumIdleAGVs \[SimTalk\]](#)

See also

[Fine-position an AGV](#)

Read-Only Attributes of the AGVPool


_Read-Only Attributes of the AGVPool

The *AGVPool* provides:

- The *read-only attributes* listed in the table of contents to the left.
- The [_Read-Only Attributes of All Objects](#).

You can query the values of the *read-only attributes*, but you cannot set them as *Plant Simulation* computes the value for the point-in-time at which you query it. In most cases a *read-only attribute* corresponds to an unavailable dialog item on one of the tabs of the object, for example on the tab **Statistics**.

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window **Show Attributes and Methods**. The figure below illustrates the information using the example of the object *Station*.

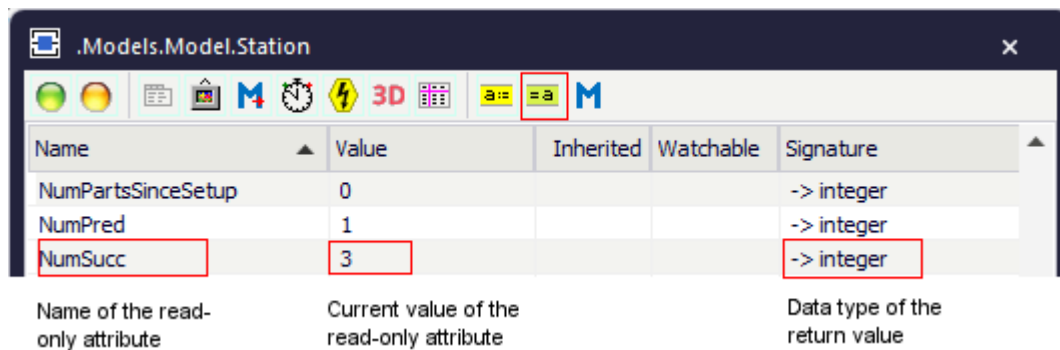

Name	Value	Inherited	Watchable	Signature
NumPartsSinceSetup	0			-> integer
NumPred	1			-> integer
NumSucc	3			-> integer

Name of the read-only attribute Current value of the read-only attribute Data type of the return value

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected [Class \[general description\]](#).
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).

To query the value of a *read-only attribute*, you might, for example, type:

```
print MyAGVPool.StatAverageTraveledDistance
```

NumIdleAGVs [SimTalk]

Returns the number of AGVs of the *AGVPool* designated by <Path> for which the attribute *IsIdle* returned true.

Type

Read-only attribute

Syntax

```
<Path>.NumIdleAGVs → integer
```

Watchable

The read-only attribute is **watchable**.

Return Value

The return value has the data type *integer*.

Example

```
waituntil AGVPool.NumIdleAGVs > 0  
var AGV := AGVPool.getIdleAGV
```

SimTalk

[IsIdle \[SimTalk\] - Transporter](#)

[getIdleAGV \[SimTalk\]](#)

See also

[Fine-position an AGV](#)

Video on YouTube

https://youtu.be/PYXYutlaGOs?si=G_5eRYYGFXUoUrSv&t=36

StatAverageTraveledDistance [SimTalk] - AGVPool

Returns the average distance in meters which the AGVs of the *AGVPool* designated by <Path> traveled.

Type

Read-only attribute

Syntax

```
<Path>.StatAverageTraveledDistance → length
```

Return Value

The return value has the data type *length*.

Example

```
print AGVPool.StatAverageTraveledDistance
```

Attributes of the AGVPool

_Attributes of the AGVPool

The *AGVPool* provides:

- The *attributes* listed in the table of contents to the left.
- The [Attributes of All Objects](#).

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.

Name	Value	Inherited	Watchable	Signature
MoveToFolderCtrl	VOID	✓		method
MTTR	0.0000			time
Name	"Station"	✓	*	string

Name of the attribute Current value of the attribute Data type of the assignment value