

StatStoppedTime [SimTalk]

Returns the total time during which the *LockoutZone* designated by <Path> stopped the processing operations of the assigned stations.

Type

Read-only attribute

Syntax

```
<Path>.StatStoppedTime → time
```

Watchable

The read-only attribute is [watchable](#).

Return Value

The return value has the data type *time*.

Example

```
print MyLockoutZone.StatStoppedTime
```

See also

[Tab Statistics \[LockoutZone\]](#)


Attributes of the LockoutZone

_Attributes of the LockoutZone

The *LockoutZone* provides:

- The *attributes* listed in the table of contents to the left.
- The [Attributes of All Objects](#).

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.

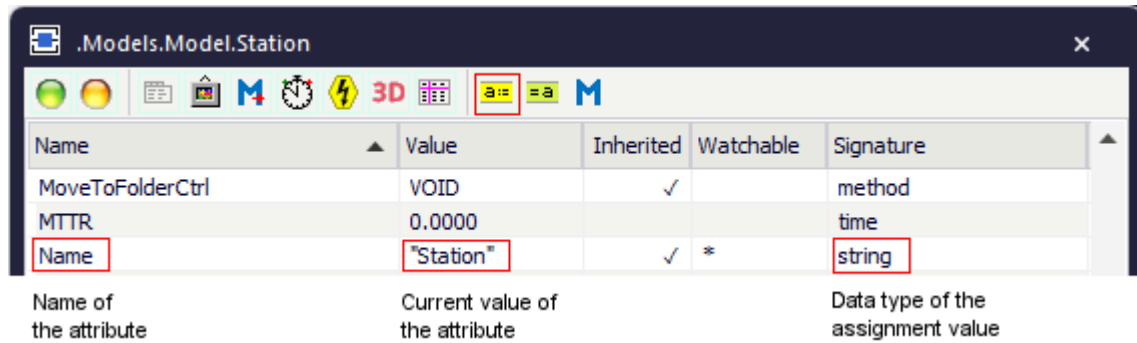

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected [Class \[general description\]](#).
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).

You can set the value of an attribute and you can get its value, either with the check boxes, the text boxes and drop-down lists in the dialog windows or by assigning values to the respective attributes.

- To **set the value** of an attribute, you might, for example, type:

```
MyLockoutZone.StopMode := "stop when service arrives"
```

- To **get the value** of an attribute, you might, for example, type:

```
print MyLockoutZone.StopMode  
posit := Station.Cont.XPos
```

Active [SimTalk] - LockoutZone

Activates the object designated by <Path> (true) or deactivates it (false).

Remarks

It then creates and forwards failures for the assigned objects.

Type

Attribute

Syntax

```
<Path>.Active:boolean
```

Assignment Value

You can assign a value of data type *boolean*.

Example

```
MyLockoutZone.Active := true
```

See also

[Active \[check box\] - LockoutZone](#)

Objects [SimTalk] - LockoutZone

Sets the resource objects which you want to assign to the *LockoutZone* designated by <Path>.

Remarks

The *LockoutZone* also returns these resources.

Type

Attribute

Syntax

```
<Path>.Objects:array
```

Assignment Value

You can assign a value of data type *array* which contains the resources.

Examples

```
var a : object[] := [MyStation1, MyStation2]  
LockoutZone.Objects := a
```

```
print MyLockoutZone.Objects  
// might, for example, return  
[*.Models.MyEnginePlant.Station1, *.Models.MyEnginePlant.Frame,  
*.Models.MyEnginePlant.Station2, *.Models.MyEnginePlant.Station3,  
*.Models.MyEnginePlant.ParallelStation]
```

See also

Tab Objects

ResumeCtrl [SimTalk]

Designates a *Method* object of the object designated by <Path>.

Remarks

Plant Simulation calls the *Method* when all failures of the objects assigned to the *LockoutZone* designated by <Path> were removed and the objects can thus continue processing parts.

Type

Attribute

Syntax

```
<Path>.ResumeCtrl:method
```

Assignment Value

You can assign a value of data type *method*.

Examples

```
MyLockoutZone.ResumeCtrl := &myResumeCtrl
```

```
var row: integer := ReportStopping.ydim
ReportStopping["Last Failed Station",row] := @.name
ReportStopping["End Stopping",row] := eventcontroller.simTime
ReportStopping["Duration",row] := ReportStopping["End Stopping",row] -
ReportStopping["Start Stopping",row]
```

See also

[Resume Control \[LockoutZone\]](#)

StopCtrl [SimTalk]

Designates a *Method* object of the object designated by <Path>.

Remarks

Plant Simulation calls the *Method* when one of the objects assigned to the *LockoutZone* designated by <Path> fails.

The anonymous identifier @ designates the triggering station, the anonymous identifier ? designates the *LockoutZone*.

Type

Attribute

Syntax

```
<Path>.StopCtrl:method
```

Assignment Value

You can assign a value of data type *method*.

Examples

```
MyLockoutZone.StopCtrl := &myStopCtrl
```

```
var row:integer := ReportStopping.ydim + 1  
ReportStopping["First Failed Station",row] := @.name  
ReportStopping["Start Stopping",row] := eventcontroller.simTime
```

See also

[Stop Control \[LockoutZone\]](#)

StopMode [SimTalk]

Sets the **Stop Mode** of the *LockoutZone* designated by <Path>.

Remarks

The *LockoutZone* does not affect the **Recovery Time** and the **Cycle Time** of the stations which it controls. The *LockoutZone* stops these objects and records statistics values for the state **stopped**. If you deactivate the *LockoutZone* while it is in the process of stopping other stations, *Plant Simulation* immediately releases all objects stopped by the *LockoutZone*. When you reset your model, all objects change their state from **stopped** to **operational**.

Type

Attribute

Syntax

```
<Path>.StopMode
```

Watchable

The attribute is **watchable**.

Assignment Value

You can assign a value of data type *string*.

You can specify:

- "Stop immediately" immediately stops the processing operations of all other objects within the *LockoutZone* as soon as one of the objects assigned to the *LockoutZone* fails.

The objects do not fail! Within this period of time additional failures can take place for the assigned stations, several failures of differing objects can thus overlap. The stations only start processing *parts* again after all failures were removed. They only use up the remaining processing time.

- "Stop when Service arrives" only stops the objects assigned to the *LockoutZone* when the services, which the failed station requested, are assigned.

Depending on your modeling situation this can be at a different point in time. If you modeled *Footpaths* on which the *Worker* walks to the station, *Plant Simulation* considers the *Worker* as received once he has reached the station. For *Exporters/Workers* who can be beamed, the service is considered to be received once the *Broker* has assigned the service. This matches the behavior of the **Receive Control**.

Example

```
MyLockoutZone.StopMode := "Stop when Service arrives"
```

SimTalk

[Stopped \[SimTalk\] - LockoutZone](#)

See also

[Stop Mode \[drop-down list\]](#)

[Stopped \[state, material flow objects\]](#)

Stopped [SimTalk] - LockoutZone

Sets if the *LockoutZone* designated by <Path> is stopped (`true`) or if it is not stopped (`false`).

Remarks

Stopped means that all of the processing operations of the objects, which the *LockoutZone* controls, come to a halt.

Syntax

<Path>.Stopped

Watchable

The attribute is **watchable**.

Assignment Value

You can assign a value of data type *boolean*.

Example

```
MyLockoutZone.Stopped := true
```

Information Flow Objects

Information Flow Objects

Plant Simulation provides the **information flow objects** to supply the simulation with production data, including the programming tools *Method* and *Variable*.

