

Help Menu

The commands are described under the [Help Menu](#).


Methods of the LockoutZone

Methods of the LockoutZone

The *LockoutZone* provides:

- The *method* [addObject \[SimTalk\] - LockoutZone](#).
- The [Methods of All Objects](#).

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.

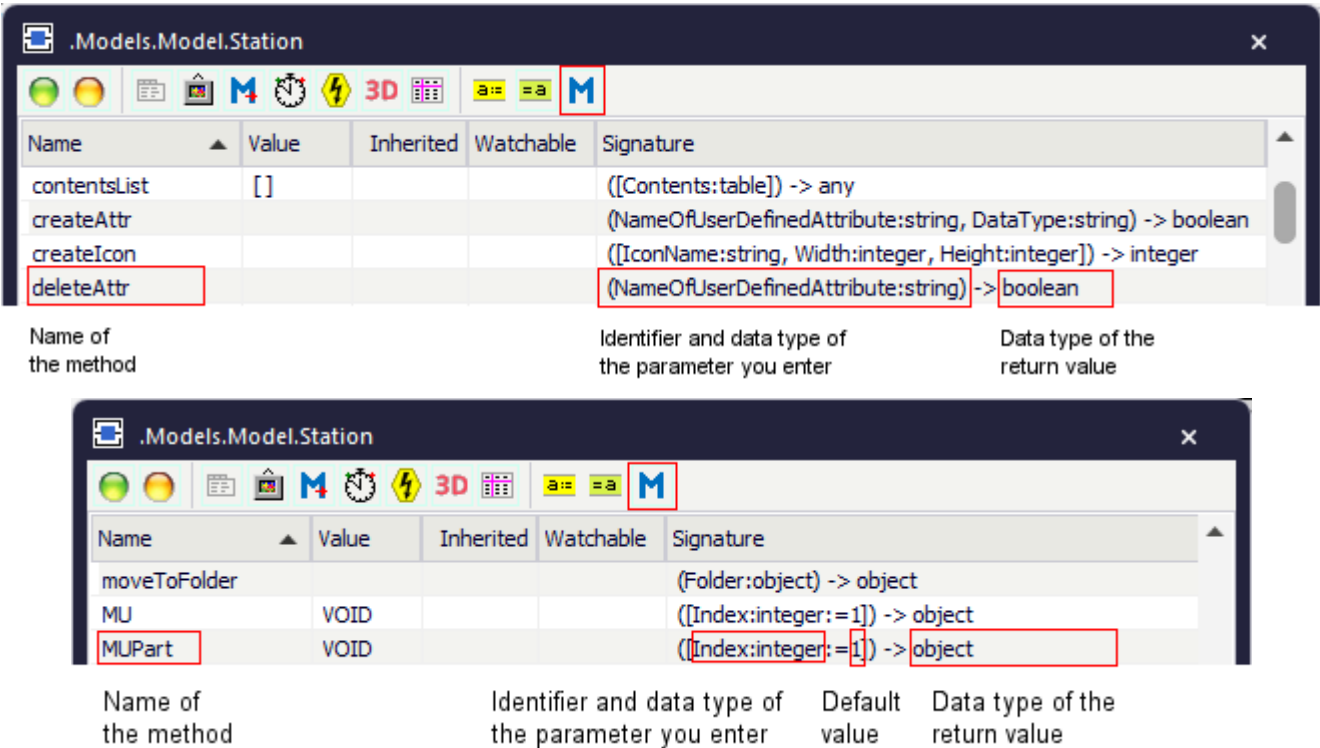

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected [Class \[general description\]](#).
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).

An example of the **Syntax** line of the individual methods might look like this:

```
<Path>.openDialog([CallOpenControl:boolean:=false]) → boolean
```

- The expression *<Path>* designates the path of the object to which the *method* applies.
- The signature of the method, consisting of the identifier and the data type of the parameter, is listed in parentheses. The expression *(Parameter:string)*, for example, designates a parameter of data type *string*. Instead of a constant value, you can also use a variable of the required type or a *method* that returns the required data type.

Note

Make sure to enter the parentheses for expressions within parentheses (...). Not entering them may lead to unexpected results and open the *Debugger*.

Optional parameters are listed within brackets. The expression *[,Parameter:boolean]*, for example, means that you can, but do not have to enter the *boolean* parameter.

If a parameter has a default value, the signature shows the default value after the parameter, *:= false* in the example above.

If the *method* has a return value, the signature shows its data type after the arrow *->*, *→ boolean* in the example above.

addObject [SimTalk] - LockoutZone

Adds a single object to the *LockoutZone* designated by <Path>.

Type

Method

Syntax

```
<Path>.addObject(NameOfObject:path) → boolean
```

Parameter

The parameter *NameOfObject* of data type *path* designates the name of the object you want to add.

Return Value

The return value has the data type *boolean*.

Example

```
MyLockoutZone.addObject(MyParallelStation)
```

SimTalk

[Objects \[SimTalk\] - LockoutZone](#)

See also

[Tab Objects](#)

Read-Only Attributes of the LockoutZone

Read-Only Attributes of the LockoutZone

The *LockoutZone* provides:

- The *read-only attributes* listed in the table of contents to the left.
- The [_Read-Only Attributes of All Objects](#).

You can query the values of the *read-only attributes*, but you cannot set them as *Plant Simulation* computes the value for the point-in-time at which you query it. In most cases a *read-only attribute*