

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window **Show Attributes and Methods**. The figure below illustrates the information using the example of the object *Station*.

| Name               | Value | Inherited | Watchable | Signature  |
|--------------------|-------|-----------|-----------|------------|
| NumPartsSinceSetup | 0     |           |           | -> integer |
| NumPred            | 1     |           |           | -> integer |
| NumSucc            | 3     |           |           | -> integer |

Name of the read-only attribute      Current value of the read-only attribute      Data type of the return value

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected **Class** [general description].
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected **Instance** [general description].

To query the value of a *read-only attribute*, you might, for example, type:

```
print MyMarker.UUID
```


## Attributes of the Marker

### \_Attributes of the Marker

The *Marker* provides:

- The *attributes* listed in the table of contents to the left.
- The **Attributes of All Objects**.

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window **Show Attributes and Methods**. The figure below illustrates the information using the example of the object *Station*.

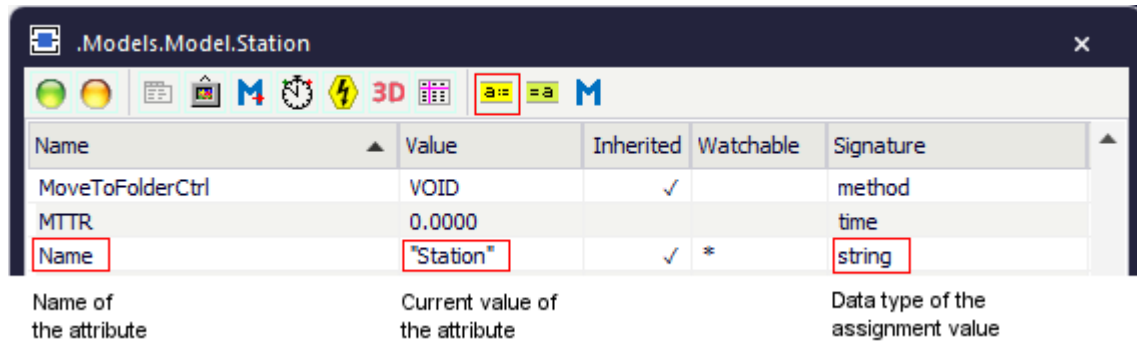

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected [Class \[general description\]](#).
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).

You can set the value of an attribute and you can get its value, either with the check boxes, the text boxes and drop-down lists in the dialog windows or by assigning values to the respective attributes.

- To **set the value** of an attribute, you might, for example, type:

```
MyMarker.UseRotationOfMarker := true
```

- To **get the value** of an attribute, you might, for example, type:

```
print MyMarker.UseRotationOfMarker
```

## ArrivalCtrl [SimTalk]

Designates a *Method* object of the object designated by <Path>.

### Remarks

*Plant Simulation* runs the **Arrival Control** as soon as the *Transporter* driving freely within the area arrives at the *Marker* designated by <Path>.

For an **omnidirectional** *Marker* *Plant Simulation* runs the *control* once the *Transporter* driving freely within the area arrives at the half-way point of the curvature/fillet at the *Marker*.

If you did not specify a *Method*, the value of the attribute is VOID.

### Type

Attribute

### Syntax

```
<Path>.ArrivalCtrl:method
```

### Assignment Value

You can assign a value of data type *method*.

### Example

```
MyMarker.ArrivalCtrl := &myMethod
```

### See also

[Arrival Control \[Marker\]](#)

## UseRotationOfMarker [SimTalk]

Sets if the AGV uses the rotation of the *Marker* designated by <Path> when driving to its destination (true) or not (false).

### Type

Attribute

### Syntax

```
<Path>.UseRotationOfMarker: boolean
```

### Assignment Value

You can assign a value of data type *boolean*.

### Example

```
MyMarker.UseRotationOfMarker := true
```

### See also

[Amount \[text box\] - AGVPool](#)

## ShiftCalendar

### ShiftCalendar [object]

Use the object *ShiftCalendar* for modeling the shift system and organize the shift work performed in your plant.

### Image



### Description

You can define as many shifts in your simulation model as you need. A shift pauses one or several machines in your model, by setting the boolean attributes *Pause* and *Unplanned* of the respective material flow objects to true.