

You can query the values of the *read-only attributes*, but you cannot set them as *Plant Simulation* computes the value for the point-in-time at which you query it. In most cases a *read-only attribute* corresponds to an unavailable dialog item on one of the tabs of the object, for example on the tab **Statistics**.

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window **Show Attributes and Methods**. The figure below illustrates the information using the example of the object *Station*.

Name	Value	Inherited	Watchable	Signature
NumPartsSinceSetup	0			-> integer
NumPred	1			-> integer
NumSucc	3			-> integer

Name of the read-only attribute Current value of the read-only attribute Data type of the return value

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected [Class \[general description\]](#).
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).

To query the value of a *read-only attribute*, you might, for example, type:

```
print MyCostAnalyzer.UUID
```


Attributes of the CostAnalyzer

Attributes of the CostAnalyzer

The *CostAnalyzer* provides:

- The *attribute* **CollectData**.
- The **Attributes of All Objects**.

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window **Show Attributes and Methods**. The figure below illustrates the information using the example of the object *Station*.

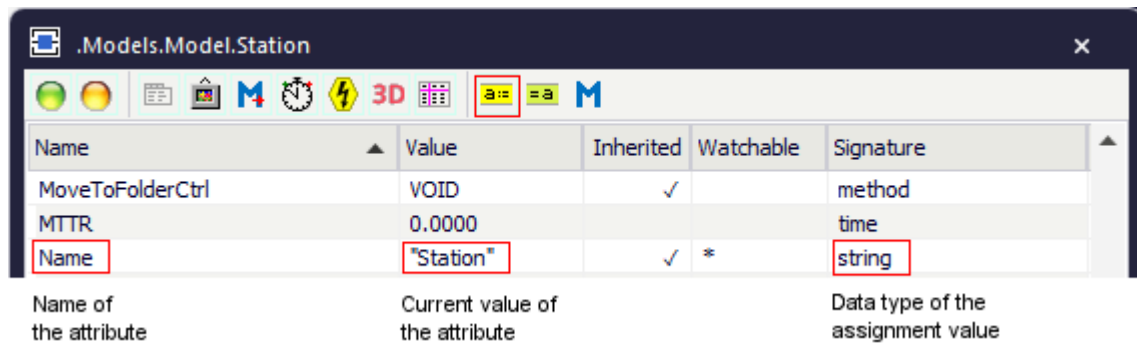

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected **Class** [general description].
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected **Instance** [general description].

You can set the value of an attribute and you can get its value, either with the check boxes, the text boxes and drop-down lists in the dialog windows or by assigning values to the respective attributes.

- To **set the value** of an attribute, you might, for example, type:

```
MyCostAnalyzer.CollectData := false
```

- To **get the value** of an attribute, you might, for example, type:

```
MyCostAnalyzer.CollectData  
posit := Station.Cont.XPos
```

CollectData [SimTalk] - CostAnalyzer

Sets if the *CostAnalyzer* designated by <Path> collects data (`true`) or does not collect data (`false`).

Type

Attribute

Syntax

```
<Path>.CollectData: boolean
```

Assignment Value

You can assign a value of data type *boolean*.

Example

```
MyCostAnalyzer.CollectData := true
```

See also

[Collect Data \[check box\] - CostAnalyzer](#)

HtmlReport

HtmlReport [object]

Use the object *HtmlReport* for presenting current data and results of the simulation run in a report that you can share with co-workers and customers.

Image



Description

You can save the *HtmlReport* as an .htm file and open this file in an HTML-Browser, such as *Microsoft Edge*, *Firefox*, *Google Chrome*, etc. *Plant Simulation* is not required to open the *HtmlReport* in an external Browser, meaning that the *HtmlReport* can be displayed on any computer on which an HTML-Browser is installed.