

Help Menu

The commands are described under the [Help Menu](#).

Methods of the CostAnalyzer

_Methods of the CostAnalyzer

The *CostAnalyzer* provides;

- The *methods* listed in the table of contents to the left.
- The [Methods of All Objects](#).

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.

Name	Value	Inherited	Watchable	Signature
contentsList	[]			([Contents:table]) -> any
createAttr				(NameOfUserDefinedAttribute:string, DataType:string) -> boolean
createIcon				(IconName:string, Width:integer, Height:integer) -> integer
deleteAttr				(NameOfUserDefinedAttribute:string) -> boolean

Name of the method Identifier and data type of the parameter you enter Data type of the return value

Name	Value	Inherited	Watchable	Signature
moveToFolder				(Folder:object) -> object
MU	VOID			([Index:integer:=1]) -> object
MUPart	VOID			([Index:integer:=1]) -> object

Name of the method Identifier and data type of the parameter you enter Default value Data type of the return value

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected [Class \[general description\]](#).
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).

An example of the **Syntax** line of the individual methods might look like this:

```
<Path>.openDialog([CallOpenControl:boolean:=false]) → boolean
```

- The expression *<Path>* designates the path of the object to which the *method* applies.
- The signature of the method, consisting of the identifier and the data type of the parameter, is listed in parentheses. The expression *(Parameter:string)*, for example, designates a parameter of data type *string*. Instead of a constant value, you can also use a variable of the required type or a *method* that returns the required data type.

Note

Make sure to enter the parentheses for expressions within parentheses (...). Not entering them may lead to unexpected results and open the *Debugger*.


Optional parameters are listed within brackets. The expression *[,Parameter:boolean]*, for example, means that you can, but do not have to enter the *boolean* parameter.

If a parameter has a default value, the signature shows the default value after the parameter, `:= false` in the example above.

If the *method* has a return value, the signature shows its data type after the arrow `->`, `→ boolean` in the example above.

getInvestmentCostsTable [SimTalk]

Returns the **Investment costs** table which the *CostAnalyzer* designated by <Path> computed.

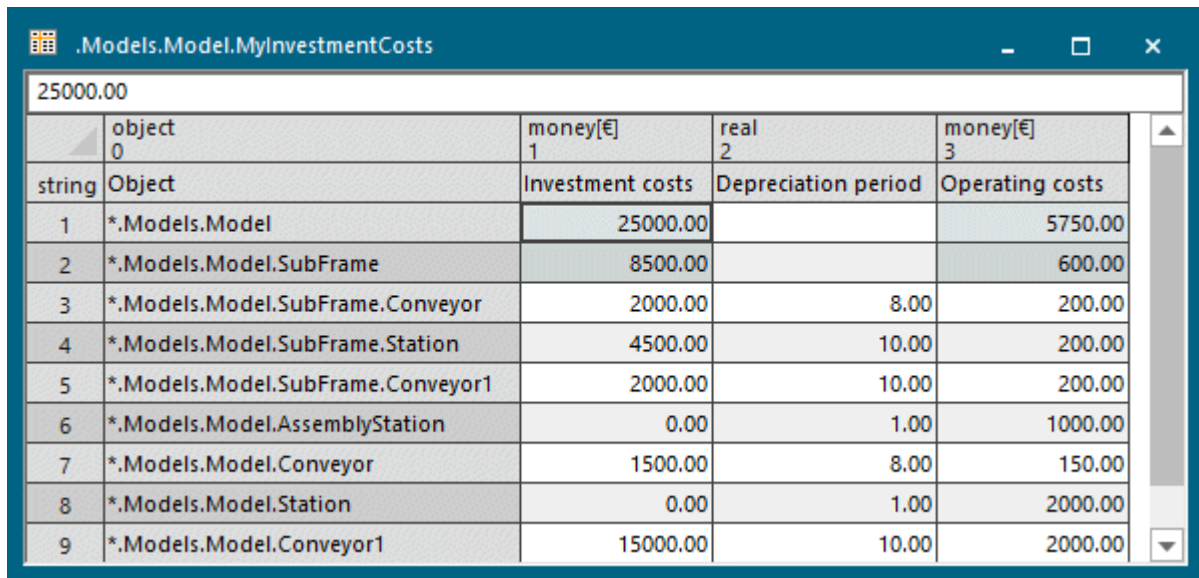

	object 0	money[€] 1	real 2	money[€] 3
string	Object	Investment costs	Depreciation period	Operating costs
1	*,Models.Model	25000.00		5750.00
2	*,Models.Model.SubFrame	8500.00		600.00
3	*,Models.Model.SubFrame.Conveyor	2000.00	8.00	200.00
4	*,Models.Model.SubFrame.Station	4500.00	10.00	200.00
5	*,Models.Model.SubFrame.Conveyor1	2000.00	10.00	200.00
6	*,Models.Model.AssemblyStation	0.00	1.00	1000.00
7	*,Models.Model.Conveyor	1500.00	8.00	150.00
8	*,Models.Model.Station	0.00	1.00	2000.00
9	*,Models.Model.Conveyor1	15000.00	10.00	2000.00

Type

Method

Syntax

```
<Path>.getInvestmentCostsTable → table
```

Return Value

The return value has the data type *table*.

Example

```
CostAnalyzer.getInvestmentCostsTable.openDialog
// open the table as a dialog
```

SimTalk

[putInvestmentCostsIntoTable \[SimTalk\]](#)


See also

[Investment Costs \[button\]](#)

Costs Shown in the Costs Report

getPieceCostsTable [SimTalk]

Returns the **Piece costs** table which the *CostAnalyzer* designated by <Path> computed.

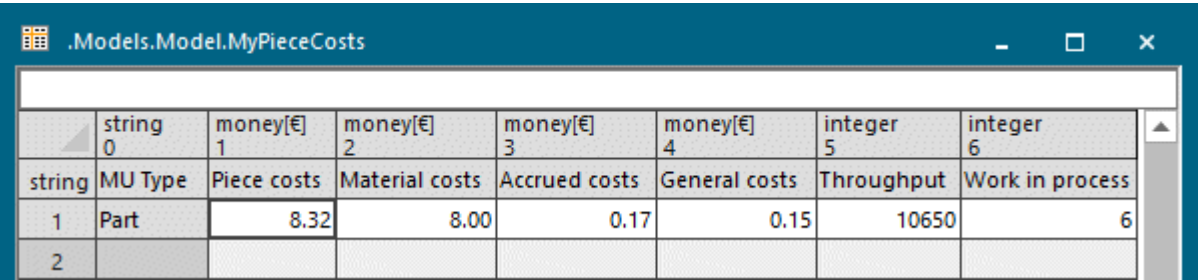

	string 0	money[€] 1	money[€] 2	money[€] 3	money[€] 4	integer 5	integer 6
	string MU Type	Piece costs	Material costs	Accrued costs	General costs	Throughput	Work in process
1	Part	8.32	8.00	0.17	0.15	10650	6
2							

Type

Method

Syntax

```
<Path>.getPieceCostsTable → table
```

Return Value

The return value has the data type *table*.

Example

```
CostAnalyzer.getPieceCostsTable.openDialog
// open the table as a dialog
```

SimTalk

[putPieceCostsIntoTable \[SimTalk\]](#)

See also


[Costs Shown in the Costs Report](#)

[Piece Costs \[button\]](#)

putInvestmentCostsIntoTable [SimTalk]

Writes the **Investment costs**, the **Depreciation period**, and the **Operating costs**, which the *CostAnalyzer* designated by <Path> computed, into the specified *DataTable*.

For our example the table looks like this:

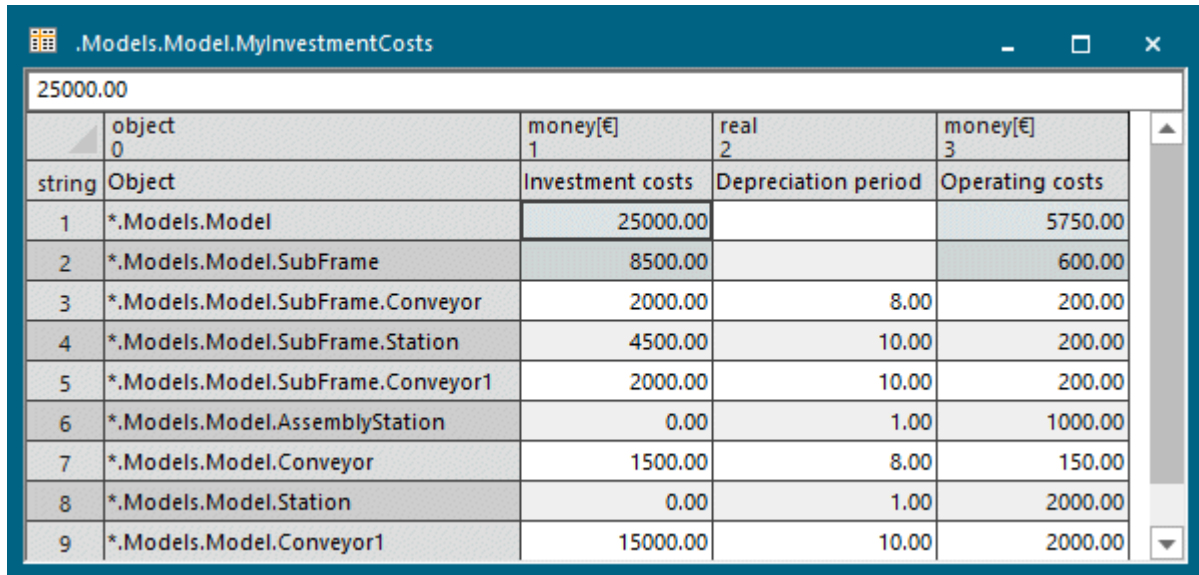

	object 0	money[€] 1	real 2	money[€] 3
string	Object	Investment costs	Depreciation period	Operating costs
1	*,Models.Model	25000.00		5750.00
2	*,Models.Model.SubFrame	8500.00		600.00
3	*,Models.Model.SubFrame.Conveyor	2000.00	8.00	200.00
4	*,Models.Model.SubFrame.Station	4500.00	10.00	200.00
5	*,Models.Model.SubFrame.Conveyor1	2000.00	10.00	200.00
6	*,Models.Model.AssemblyStation	0.00	1.00	1000.00
7	*,Models.Model.Conveyor	1500.00	8.00	150.00
8	*,Models.Model.Station	0.00	1.00	2000.00
9	*,Models.Model.Conveyor1	15000.00	10.00	2000.00

Type

Method

Syntax

```
<Path>.putInvestmentCostsIntoTable(DataTable:table)
```

Parameter

The parameter *DataTable* of data type *table* designates the *DataTable* into which *Plant Simulation* writes the investment costs.

Example

```
CostAnalyzer.putInvestmentCostsIntoTable(MyInvestmentCosts)
```

SimTalk

getInvestmentCostsTable [SimTalk]

See also

[Costs Shown in the Costs Report](#)

putPieceCostsIntoTable [SimTalk]

Writes the **Piece costs**, which the *CostAnalyzer* designated by <Path> computed, into the specified *DataTable*.

	string 0	money[€] 1	money[€] 2	money[€] 3	money[€] 4	integer 5	integer 6
	MU Type	Piece costs	Material costs	Accrued costs	General costs	Throughput	Work in process
1	Part	8.32	8.00	0.17	0.15	10650	6
2							

Type

Method

Syntax

```
<Path>.putPieceCostsIntoTable(DataTable:table)
```

Parameter

The parameter *DataTable* of data type *table* designates the *DataTable* into which *Plant Simulation* writes the piece costs.

Example

```
CostAnalyzer.putPieceCostsIntoTable(MyPieceCosts)
```

SimTalk

[getPieceCostsTable \[SimTalk\]](#)

See also

[Costs Shown in the Costs Report](#)

Read-Only Attributes of the CostAnalyzer

Read-Only Attributes of the CostAnalyzer

The *CostAnalyzer* provides the [_Read-Only Attributes of All Objects](#).