

## updateUserDialog [SimTalk]

Updates the contents of the *Dialog* designated by <Path>.

### Remarks

The *Dialog* then shows features that you changed in tables defining the items, or shows new or changed pictures and icons of the items.

### Type

Method

### Syntax

```
<Path>.updateUserDialog
```

### Example

```
MyDialog.updateUserDialog
```


## Read-Only Attributes of the Dialog

### Read-Only Attributes of the Dialog

The *Dialog* provides the [\\_Read-Only Attributes of All Objects](#).

You can query the values of the *read-only attributes*, but you cannot set them as *Plant Simulation* computes the value for the point-in-time at which you query it. In most cases a *read-only attribute* corresponds to an unavailable dialog item on one of the tabs of the object, for example on the tab **Statistics**.

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.

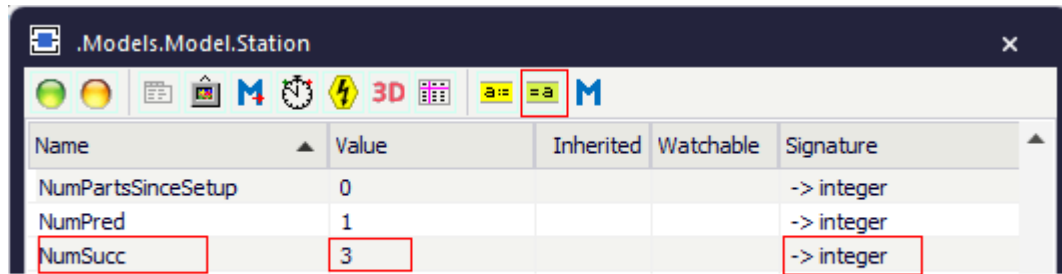

| Name               | Value | Inherited | Watchable | Signature  |
|--------------------|-------|-----------|-----------|------------|
| NumPartsSinceSetup | 0     |           |           | -> integer |
| NumPred            | 1     |           |           | -> integer |
| NumSucc            | 3     |           |           | -> integer |

Name of the read-only attribute      Current value of the read-only attribute      Data type of the return value

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected [Class \[general description\]](#).
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).

To query the value of a *read-only attribute*, you might, for example, type:

```
print MyDialog.UUID
```


## Attributes of the Dialog

### \_Attributes of the Dialog

The *Dialog* provides:

- The *attributes* listed in the table of contents to the left.
- The [Attributes of All Objects](#).

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.

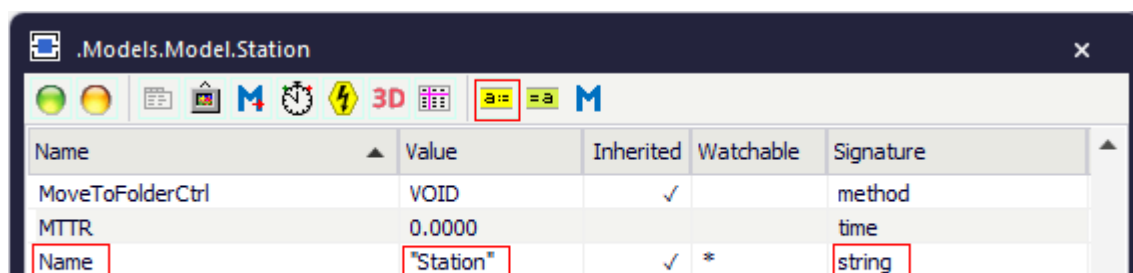

| Name             | Value     | Inherited | Watchable | Signature |
|------------------|-----------|-----------|-----------|-----------|
| MoveToFolderCtrl | VOID      | ✓         |           | method    |
| MTTR             | 0.0000    |           |           | time      |
| Name             | "Station" | ✓         | *         | string    |

Name of the attribute      Current value of the attribute      Data type of the assignment value