

update [SimTalk] - Display

Updates the value that the *Display* designated by <Path> shows after a certain time has elapsed.

Remarks

update is only useful in conjunction with **Sample** mode. You can use the method *update* to force the *Display* to display a current value, for example after you changed the input value.

To be compatible with previous versions of *Plant Simulation*, you can specify the parameter *Time* of data type *time*.

Method

Type

Method

Syntax

```
<Path>.update
```

Example

```
MyDisplay.update
```

See also

[Interval \[text box\] - Display](#)

Read-Only Attributes of the Display

_Read-Only Attributes of the Display

The *Display* provides:

- The *read-only attributes* listed in the table of contents to the left.
- The [_Read-Only Attributes of All Objects](#).

You can query the values of the *read-only attributes*, but you cannot set them as *Plant Simulation* computes the value for the point-in-time at which you query it. In most cases a *read-only attribute* corresponds to an unavailable dialog item on one of the tabs of the object, for example on the tab **Statistics**.

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window **Show Attributes and Methods**. The figure below illustrates the information using the example of the object *Station*.

Name	Value	Inherited	Watchable	Signature
NumPartsSinceSetup	0			-> integer
NumPred	1			-> integer
NumSucc	3			-> integer

Name of the read-only attribute Current value of the read-only attribute Data type of the return value

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected **Class** [general description].
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected **Instance** [general description].

To query the value of a *read-only attribute*, you might, for example, type:

```
print MyDisplay.GetMaximum
```

GetAverage [SimTalk]

Returns the average value of the values that the *Display* designated by <Path> recorded.

Type

Read-only attribute

Syntax

```
<Path>.GetAverage → real
```

Return Value

The return value has the data type *real*.

Example

```
print MyDisplay.GetAverage
```

GetMaximum [SimTalk]

Returns the maximum value of the range of values that the *Display* designated by <Path> shows.

Remarks

Only use *GetMaximum* for **Watch Mode**.

In **Sample Mode** *Plant Simulation* only updates the value if **MUs and States**  is activated and the *Frame*, in which the *Display* is inserted, is open.

Type

Read-only attribute

Syntax

```
<Path>.GetMaximum → real
```

Return Value

The return value has the data type *real*.

Example

```
print MyDisplay.GetMaximum
```

SimTalk

[GetMinimum \[SimTalk\]](#)

[resetMinMax \[SimTalk\]](#)

See also

[Maximum \[Display\]](#)

[Mode \[drop-down list\] - Display](#)

[MUs and States \[Home ribbon\]](#)

GetMinimum [SimTalk]

Returns the minimum value of the range of values that the *Display* designated by <Path> shows.

Remarks

Only use *GetMinimum* for **Watch Mode**.

In **Sample Mode** *Plant Simulation* only updates the value if **MUs and States**  is activated and the *Frame*, in which the *Display* is inserted, is open.

Type

Read-only attribute

Syntax

```
<Path>.GetMinimum → real
```

Return Value

The return value has the data type *real*.

Example

```
print MyDisplay.GetMinimum
```

SimTalk

[GetMaximum \[SimTalk\]](#)

[resetMinMax \[SimTalk\]](#)

See also

[Minimum \[Display\]](#)

[Mode \[drop-down list\] - Display](#)

[MUs and States \[Home ribbon\]](#)

GetStandardDeviation [SimTalk]

Returns the standard deviation of the values that the *Display* designated by <Path> recorded.

Type

Read-only attribute

Syntax

```
<Path>.GetStandardDeviation → real
```

Return Value

The return value has the data type *real*.

Example

```
print MyDisplay.GetStandardDeviation
```


Attributes of the Display

_Attributes of the Display

The *Display* provides:

- The *attributes* listed in the table of contents to the left.
- The [Attributes of All Objects](#).

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.

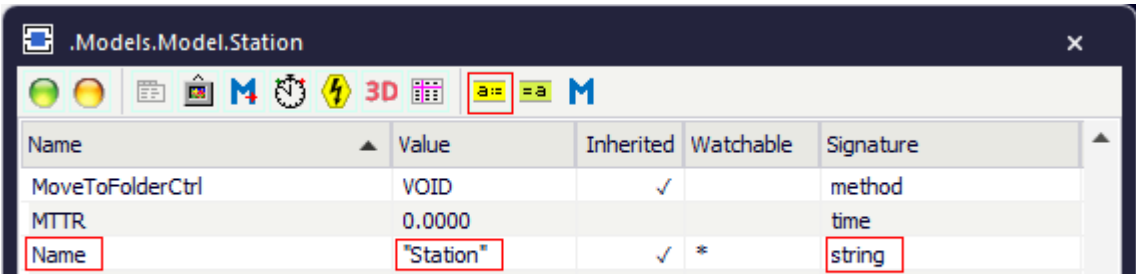

Name	Value	Inherited	Watchable	Signature
MoveToFolderCtrl	VOID	✓		method
MTTR	0.0000			time
Name	"Station"	✓	*	string

Name of the attribute Current value of the attribute Data type of the assignment value