

- The expression *<Path>* designates the path of the object to which the *method* applies.
- The signature of the method, consisting of the identifier and the data type of the parameter, is listed in parentheses. The expression *(Parameter:string)*, for example, designates a parameter of data type *string*. Instead of a constant value, you can also use a variable of the required type or a *method* that returns the required data type.

Note

Make sure to enter the parentheses for expressions within parentheses (...). Not entering them may lead to unexpected results and open the *Debugger*.

Optional parameters are listed within brackets. The expression *[,Parameter:boolean]*, for example, means that you can, but do not have to enter the *boolean* parameter.

If a parameter has a default value, the signature shows the default value after the parameter, *:= false* in the example above.

If the *method* has a return value, the signature shows its data type after the arrow *->*, *-> boolean* in the example above.

Read-Only Attributes of the DropDownList

Read-Only Attributes of the DropDownList

The *DropDownList* provides the [_Read-Only Attributes of All Objects](#).

You can query the values of the *read-only attributes*, but you cannot set them as *Plant Simulation* computes the value for the point-in-time at which you query it. In most cases a *read-only attribute* corresponds to an unavailable dialog item on one of the tabs of the object, for example on the tab **Statistics**.

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.



Name	Value	Inherited	Watchable	Signature
NumPartsSinceSetup	0			-> integer
NumPred	1			-> integer
NumSucc	3			-> integer

Name of the read-only attribute Current value of the read-only attribute Data type of the return value

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected [Class \[general description\]](#).

- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).

To query the value of a *read-only attribute*, you might, for example, type:

```
print MyDropDownList.UUID
```


Attributes of the DropDownList

_Attributes of the DropDownList

The *DropDownList* provides:

- The *attributes* listed in the table of contents to the left.
- The [Attributes of All Objects](#).

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.

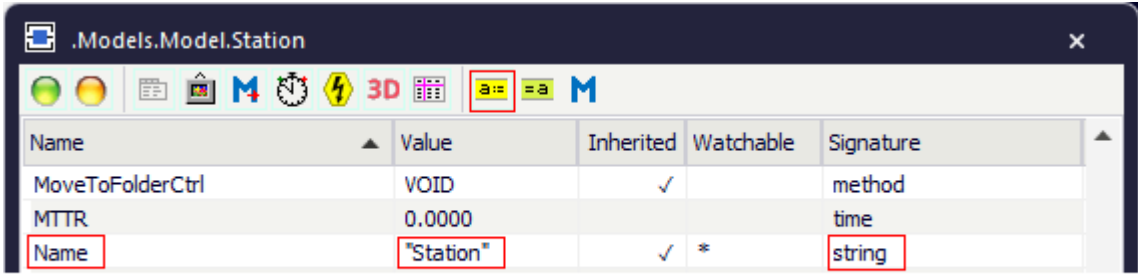

Name	Value	Inherited	Watchable	Signature
MoveToFolderCtrl	VOID	✓		method
MTTR	0.0000			time
Name	"Station"	✓	*	string

Name of the attribute Current value of the attribute Data type of the assignment value

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected [Class \[general description\]](#).
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).

You can set the value of an attribute and you can get its value, either with the check boxes, the text boxes and drop-down lists in the dialog windows or by assigning values to the respective attributes.

- To **set the value** of an attribute, you might, for example, type:

```
MyDropDownList.UseIcon := false
```