

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.

Name	Value	Inherited	Watchable	Signature
NumPartsSinceSetup	0			-> integer
NumPred	1			-> integer
NumSucc	3			-> integer

Name of the read-only attribute Current value of the read-only attribute Data type of the return value

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected [Class \[general description\]](#).
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).

To query the value of a *read-only attribute*, you might, for example, type:

```
print MyHtmlReport.UUID
```


Attributes of the HtmlReport

_Attributes of the HtmlReport

The *HtmlReport* provides:

- The *attributes* listed in the table of contents to the left.
- The [Attributes of All Objects](#).

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.

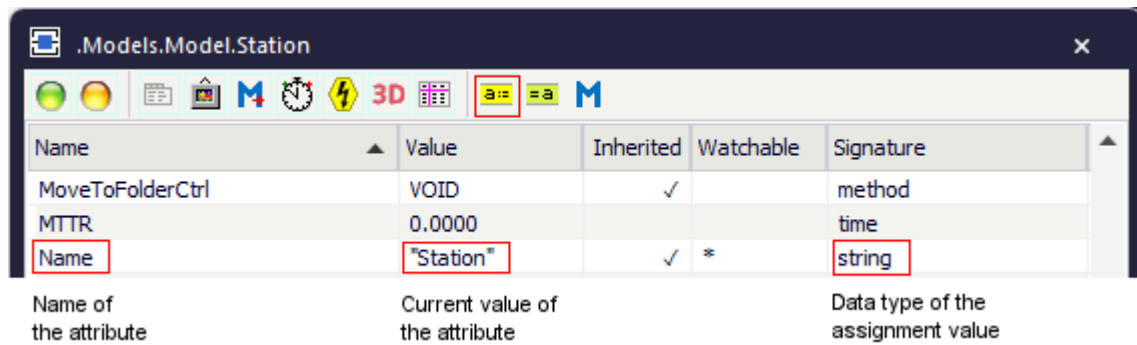

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected [Class \[general description\]](#).
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).

You can set the value of an attribute and you can get its value, either with the check boxes, the text boxes and drop-down lists in the dialog windows or by assigning values to the respective attributes.

- To **set the value** of an attribute, you might, for example, type:

```
MyReport.TocLevels := 3
```

- To **get the value** of an attribute, you might, for example, type:

```
print MyReport.TocLevel
```

Content [SimTalk] - HtmlReport

Sets the **Content** which the *HtmlReport* designated by <Path> displays.

Type

Attribute

Syntax

```
<Path>.Content:string
```

Assignment Value

You can assign a value of data type *string*.

Example

```
HtmlReport.Content := "[!self, Header, *]\n# General Information\n[Receiving, \"Statistics of the Source named 'Receiving' and the station\nnamed 'MyStation'\\"]\n[MyStation]\nCreated on [=day(sysdate)].[=month(sysdate)].[=year(sysdate)+1900]"
```

See also

[Tab Content \[HtmlReport\]](#)

IsShown [SimTalk] - HtmlReport

Sets if the *HtmlReport* designated by <Path> is displayed in the *Frame window* into which it is inserted (true) or not (false).

Type

Method

Syntax

```
<Path>.IsShown: boolean
```

Assignment Value

You can assign a value of data type *boolean*.

Example

```
MyReport.IsShown := true
```

See also

[Show Report](#)

TocLevels [SimTalk]

Sets the number of levels of the table of contents which the *HtmlReport* designated by <Path> shows.

Type

Attribute

Syntax

```
<Path>.TocLevels:integer
```

Assignment Value

You can assign a value of data type *integer*.

Specify a value between 1 and 4.

If you specify a value greater than 4, *Plant Simulation* treats this value as 4.

Example

```
MyReport.TocLevels := 4
```

See also

[Study the HtmlReport](#)

WindowHeight [SimTalk]

Sets the height in pixels with which *Plant Simulation* opens the display window of the *HtmlReport* designated by <Path>.

Syntax

```
<Path>.WindowHeight:integer
```

Assignment Value

You can assign a value of data type *integer*.

Example

```
MyHtmlReport.WindowHeight := 600 // pixels
```

SimTalk

[WindowHeight \[SimTalk\]](#)

[WindowWidth \[SimTalk\]](#)

See also

[Show Report](#)

WindowWidth [SimTalk]

Sets the width in pixels with which *Plant Simulation* opens the display window of the *HtmlReport* designated by <Path>.

Syntax

```
<Path>.WindowWidth:integer
```

Assignment Value

You can assign a value of data type *integer*.

Example

```
MyHtmlReport.WindowWidth := 800 // pixels
```

SimTalk

[WindowWidth \[SimTalk\]](#)

[WindowHeight \[SimTalk\]](#)

See also

[Show Report](#)

Dialog

Dialog [object]

Use the object *Dialog* for designing a dialog box for an object which is similar to the built-in dialog boxes.

Image



Description

With the object *Dialog* you can:

- Provide the user with a simple user interface for complex simulation models other users work with. This way you can ask the user to type in information which *Plant Simulation* needs to carry out a task.