

TimeScale [SimTalk]

Sets the time scale of the *GanttChart* designated by <Path>. *Plant Simulation* applies this value when opening the *GanttChart*.

Remarks

The unit of the time scale is logical pixels per second. For a time scale of 0.5 *Plant Simulation* shows a Gantt event with a duration of 60 seconds with a bar of a length of 30 logical pixels.

Type

Attribute

Syntax

```
<Path>.TimeScale:integer
```

Assignment Value

You can assign a value of data type *real*.

Specify 0 to use the default time scaling.

Example

```
MyGanttChart.TimeScale := 2.5
```

See also

[Show Chart \[button\]](#) - *GanttChart*

SankeyDiagram

SankeyDiagram [object]

Use the object *SankeyDiagram* for visualizing the *Sankey flows* of parts, the *Sankey flows* of *Workers*, who walk freely within the area or walk on *FootPaths*, and the *Sankey flows* of *AGVs* driving freely within the area of the model.

Image



Description

To show *Sankey flows* of **class objects**, drag the classes *Part*, *Container*, *Worker*, *WorkerPool*, *Transporter*, or *AGVPool* from the *Class Library* over the picture of the *SankeyDiagram* and drop it there.

To show *Sankey flows* of **individual instances** of *Part*, *Container*, *Worker*, *WorkerPool*, *Transporter*, or *AGVPool*, type the name of this instance into the cell of the list on the tab **Objects**, for example `.MUS.Part:3`.

To show a **tooltip** with information about the *SankeyDiagram*, hover with the mouse over it.

To change the length of the graphic and the anchor points of the *SankeyDiagram*, click **Show**

Manipulators  on the **Edit** ribbon tab or press **M** on the keyboard.

Add the Object to the Simulation Model

To add the object *SankeyDiagram* to your simulation model, click  **Manage Class Library** > **Basic Objects** > **UserInterface** > **SankeyDiagram** on the **Home** ribbon tab.

See also

[Show Part Flows in a SankeyDiagram](#)

[Show AGV Flows in a SankeyDiagram](#)

[Display a SankeyDiagram](#) in the HtmlReport

[AGV \[text box\]](#)

Dialog Box of the SankeyDiagram

Dialog Box of the SankeyDiagram

Double-click the icon of the *SankeyDiagram* to open its dialog box.

Edit Simulation Properties

In the dialog box you can change the **simulation properties** of the object. The shared properties are described under [Dialog Items of the Objects](#).

Edit Animation Properties

To edit the **3D properties** of the object in the dialog box [Edit 3D Properties](#):

- Click the button  **Edit 3D Properties** in the lower left corner of the simulation properties dialog box.
- Select the object in the model and press the **spacebar**.

To manipulate the graphic of the object, click **Show Manipulators** on the **Edit** ribbon tab or press **M** on the keyboard.

See also

[Show Diagram](#)

[Collect Data \[check box\] - SankeyDiagram](#)


Show Diagram

To show the *Sankey flows* in the *Frame*, click **Show Diagram**. To hide the *Sankey flows*, click **Hide Diagram**.




Remarks

Instead, you can also select the context menu command **Show/Hide**.

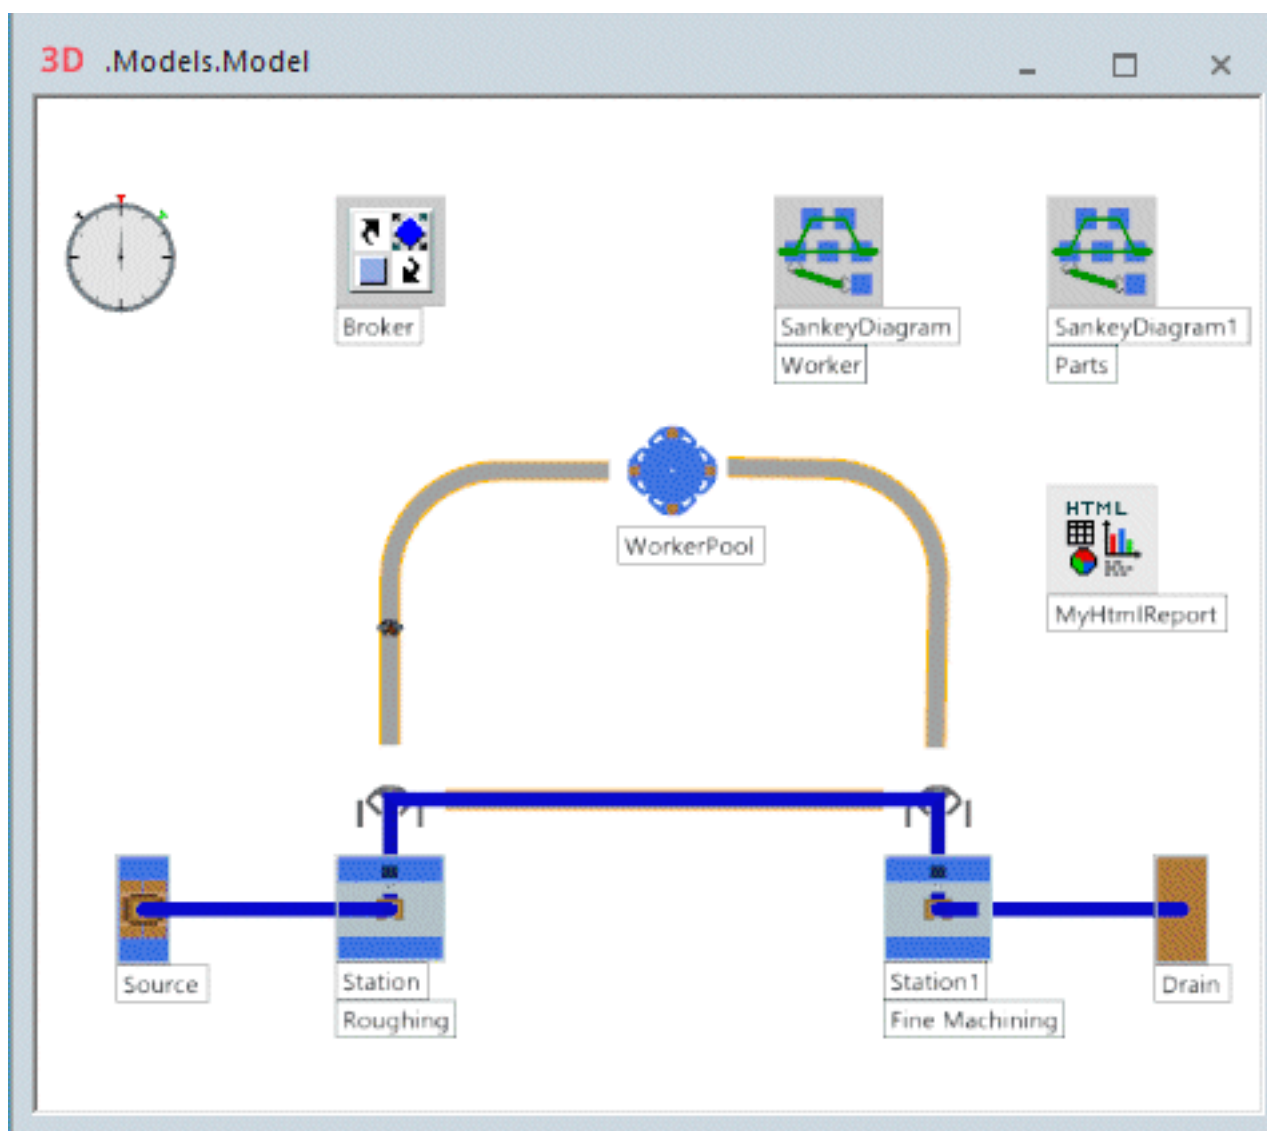

Click **Update** to update the displayed *Sankey flows* with the current values

Show Diagram

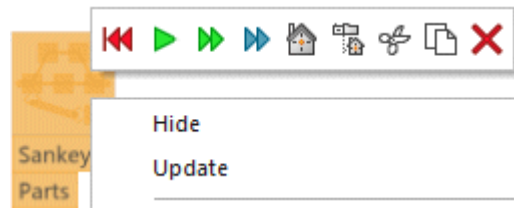

SimTalk

[IsShown \[SimTalk\] - SankeyDiagram](#)

See also

[Update \[in Frame\]](#)

Collect Data [check box] - SankeyDiagram

To make the *SankeyDiagram* collect data, select this check box. To deactivate the collection of data, clear the check box.

☒ Collect Data ☐

SimTalk

CollectData [SimTalk] - SankeyDiagram

Tab Attributes

Tab Attributes

The tab **Attributes** provides the settings, which the object offers.

The settings are listed in the table of contents to the left.

The shared properties are described under the [Tab Attributes](#).

Maximum Width [SankeyDiagram]

Type the maximum width of the *Sankey* flows into the text box, which visualize the paths of *parts* and *Workers* in the *Frame*.

Maximum Width  m

SimTalk

MaximumWidth [SimTalk]

Color [SankeyDiagram]

Select the color of the *Sankey* flows which visualize the paths of the *parts* and *Workers* in the *Frame*.

Color



SimTalk

Color [SimTalk] - SankeyDiagram


Tab Objects

Objects

On the tab **Objects** you can assign **Objects** to the *SankeyDiagram* for which it is to display *Sankey flows*.

Objects [SankeyDiagram]

To show the *Sankey flows* for class objects, drag parts classes (*Part*, *Container*, *Transporter*), *Worker* classes, or *WorkerPool* classes from the *Class Library* over the respective cell in the list and drop it there.

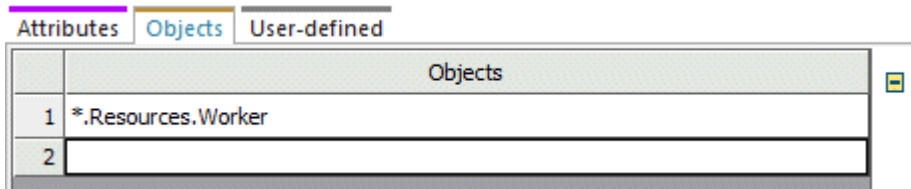

Remarks

To show *Sankey flows* of individual parts (*Part*, *Container*, *Transporter*), *Worker instances*, or *WorkerPool instances*, type their names into the respective cells of the list, for example `.MUS.Part:3`.

Note

If inheritance of the objects on the tab is activated, the *SankeyDiagram* replaces the default object class with the class which you set with drag-and-drop.

This does, for example, make switching the *SankeyDiagram* from *parts* to *Workers* easy.

SimTalk

Objects [SimTalk] - SankeyDiagram

Tab User-defined

Define your own attributes as described under the [Tab User-defined](#).

Navigate Menu

The commands are described under the [Navigate Menu](#).

View Menu

The commands are described under the [View Menu](#).

SimTalk

[updateDialog \[SimTalk\]](#)

Tools Menu

The **Tools Menu** provides commands to access its functions.

[Edit Controls](#)

[Edit Observers](#)

See also

[Tools Menu \[general description\]](#)

Help Menu

The commands are described under the [Help Menu](#).

Methods of the SankeyDiagram

_Methods of the SankeyDiagram

The *SankeyDiagram* provides the methods listed in the table of contents for accessing it.

The *SankeyDiagram* provides:

- The *methods* listed in the table of contents to the left.
- The [Methods of All Objects](#).

To view all of the *methods*, *read-only attributes*, and *attributes* of the object, open the window [Show Attributes and Methods](#). The figure below illustrates the information using the example of the object *Station*.

Figure 1: Methods of .Models.Model.Station (Top Screenshot)

Name	Value	Inherited	Watchable	Signature
contentsList	[]			((Contents:table]) -> any
createAttr				(NameOfUserDefinedAttribute:string, DataType:string) -> boolean
createIcon				([IconName:string, Width:integer, Height:integer]) -> integer
deleteAttr				(NameOfUserDefinedAttribute:string) -> boolean

Labels for Figure 1:

- Name of the method
- Identifier and data type of the parameter you enter
- Data type of the return value

Figure 2: Methods of .Models.Model.Station (Bottom Screenshot)

Name	Value	Inherited	Watchable	Signature
moveToFolder				(Folder:object) -> object
MU	VOID			((Index:integer:=1)) -> object
MUPart	VOID			((Index:integer:=1)) -> object

Labels for Figure 2:

- Name of the method
- Identifier and data type of the parameter you enter
- Default value
- Data type of the return value

- Select **Show Attributes and Methods** on the context menu of the **Class Library** to show the *methods*, *read-only attributes*, and *attributes* of the selected [Class \[general description\]](#).
- Press the **F8** key or click **Show Attributes and Methods** on the **Home** ribbon tab of the *Frame* into which you inserted an instance to show the *methods*, *read-only attributes*, and *attributes* of the selected [Instance \[general description\]](#).