

[Factory Walls Settings](#)

[_Stairs Attributes](#)

[Box](#)

Accessing Properties of Graphic Shapes

Accessing Properties of Graphic Shapes

SimTalk provides the *attributes* listed in the table of contents to the left for setting properties of **Graphic Shapes**.

See also

[Insert Shape](#)

[_Accessing Methods of Graphic Shapes](#)

[_Accessing Attributes of Graphic Shapes](#)

Board Material Attributes

[_Board Material Attributes](#)

The *Board Material* of the **Rack** provides the attributes listed in the table of contents to the left.

See also

[Rack](#)

[Rack Settings](#)

[createRack \[SimTalk\]](#)

[_Rack Attributes](#)

[_3D.getGraphic \[SimTalk\]](#)

BoardMaterialActive [SimTalk]

Activates (true) or deactivates (false) the material of the boards of the rack designated by <Path>.

Remarks

You cannot assign *BoardMaterialActive* when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Assigning the attribute deactivates graphic inheritance.

Type

Attribute

Syntax

```
<Path>.BoardMaterialActive:boolean
```

Assignment Value

You can assign a value of data type *boolean*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [4]).BoardMaterialActive := true
```

See also

Rack > Rack Settings	BoardMaterialEmissiveColor [SimTalk]
createRack [SimTalk]	BoardMaterialShininess [SimTalk]
_Rack Attributes	BoardMaterialSpecularColor [SimTalk]
BoardMaterialAmbientColor [SimTalk]	BoardMaterialTransparency [SimTalk]
BoardMaterialDiffuseColor [SimTalk]	_3D.getGraphic [SimTalk]

BoardMaterialAmbientColor [SimTalk]

Sets the ambient color of the board material of the rack designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (MaterialActive := true).

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

Type

Attribute

Syntax

```
<Path>.BoardMaterialAmbientColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).BoardMaterialAmbientColor :=  
makeRGBValue(255,0,0)
```

See also

Rack > Rack Settings	BoardMaterialEmissiveColor [SimTalk]
createRack [SimTalk]	BoardMaterialShininess [SimTalk]
_Rack Attributes	BoardMaterialSpecularColor [SimTalk]
BoardMaterialAmbientColor [SimTalk]	BoardMaterialTransparency [SimTalk]
BoardMaterialDiffuseColor [SimTalk]	_3D.getGraphic [SimTalk]

BoardMaterialDiffuseColor [SimTalk]

Sets the diffuse color of the board material of the rack designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (MaterialActive := true).

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

Type

Attribute

Syntax

```
<Path>.BoardMaterialDiffuseColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).BoardMaterialDiffuseColor := makeRGBValue(255,0,0)
```

See also

Rack > Rack Settings	BoardMaterialEmissiveColor [SimTalk]
createRack [SimTalk]	BoardMaterialShininess [SimTalk]
_Rack Attributes	BoardMaterialSpecularColor [SimTalk]
BoardMaterialAmbientColor [SimTalk]	BoardMaterialTransparency [SimTalk]
BoardMaterialDiffuseColor [SimTalk]	_3D.getGraphic [SimTalk]

BoardMaterialEmissiveColor [SimTalk]

Sets the emissive color of the board material of the rack designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (MaterialActive := true).

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

Type

Attribute

Syntax

```
<Path>.BoardMaterialEmissiveColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).BoardMaterialEmissiveColor :=  
makeRGBValue(255,0,0)
```

See also

Rack > Rack Settings	BoardMaterialEmissiveColor [SimTalk]
createRack [SimTalk]	BoardMaterialShininess [SimTalk]
_Rack Attributes	BoardMaterialSpecularColor [SimTalk]
BoardMaterialAmbientColor [SimTalk]	BoardMaterialTransparency [SimTalk]
BoardMaterialDiffuseColor [SimTalk]	_3D.getGraphic [SimTalk]

BoardMaterialShininess [SimTalk]

Sets the shininess of the board material of the rack designated by <Path>.

Remarks

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.BoardMaterialShininess:real
```

Assignment Value

You can assign a value of data type *real* between 0 and 1.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).BoardMaterialShininess := 0.5
```

See also

Rack > Rack Settings	BoardMaterialEmissiveColor [SimTalk]
createRack [SimTalk]	BoardMaterialShininess [SimTalk]
_Rack Attributes	BoardMaterialSpecularColor [SimTalk]
BoardMaterialAmbientColor [SimTalk]	BoardMaterialTransparency [SimTalk]
BoardMaterialDiffuseColor [SimTalk]	_3D.getGraphic [SimTalk]

BoardMaterialSpecularColor [SimTalk]

Sets the specular color of the board material of the rack designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (MaterialActive := true).

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

Type

Attribute

Syntax

```
<Path>.BoardMaterialSpecularColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).BoardMaterialSpecularColor :=  
makeRGBValue(255,0,0)
```

See also

Rack > Rack Settings	BoardMaterialEmissiveColor [SimTalk]
createRack [SimTalk]	BoardMaterialShininess [SimTalk]
_Rack Attributes	BoardMaterialSpecularColor [SimTalk]
BoardMaterialAmbientColor [SimTalk]	BoardMaterialTransparency [SimTalk]
BoardMaterialDiffuseColor [SimTalk]	_3D.getGraphic [SimTalk]

BoardMaterialTransparency [SimTalk]

Sets the transparency of the board material of the rack designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (MaterialActive := true).

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

Type

Attribute

Syntax

```
<Path>.BoardMaterialTransparency:real
```

Assignment Value

You can assign a value of data type *real* between 0 and 1.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).BoardMaterialTransparency := 0.6
```

See also

Rack > Rack Settings	BoardMaterialEmissiveColor [SimTalk]
createRack [SimTalk]	BoardMaterialShininess [SimTalk]
_Rack Attributes	BoardMaterialSpecularColor [SimTalk]
BoardMaterialAmbientColor [SimTalk]	BoardMaterialTransparency [SimTalk]
BoardMaterialDiffuseColor [SimTalk]	_3D.getGraphic [SimTalk]

Border Line Material Attributes

Border Line Material Attributes

You can set the *Border Line Material* around the platform of the **Mezzanine** with the attributes listed in the table of contents to the left.

See also

[Mezzanine](#)

[createMezzanine \[SimTalk\]](#)

BorderLineMaterialActive [SimTalk]

Activates (`true`) or deactivates (`false`) the borderline material of the platform of the mezzanine designated by `<Path>`.

Remarks

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Assigning the attribute deactivates graphic inheritance.

Type

Attribute

Syntax

```
<Path>.BorderLineMaterialActive:boolean
```

Assignment Value

You can assign a value of data type *boolean*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).BorderLineMaterialActive := true
```

See also

[Insert Shape > Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

[BorderLineMaterialAmbientColor \[SimTalk\]](#)

[BorderLineMaterialDiffuseColor \[SimTalk\]](#)

[BorderLineMaterialEmissiveColor \[SimTalk\]](#)

[BorderLineMaterialShininess \[SimTalk\]](#)

BorderLineMaterialActive [SimTalk]

BorderLineMaterialSpecularColor [SimTalk]

BorderLineMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

BorderLineMaterialAmbientColor [SimTalk]

Sets the ambient color of the borderline material of the platform of the mezzanine designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.BorderLineMaterialAmbientColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco",  
[5]).BorderLineMaterialAmbientColor := makeRGBValue(255,0,0)
```

See also

[Insert Shape](#) > [Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

[BorderLineMaterialActive \[SimTalk\]](#)

[BorderLineMaterialDiffuseColor \[SimTalk\]](#)

BorderLineMaterialAmbientColor [SimTalk]

BorderLineMaterialEmissiveColor [SimTalk]

BorderLineMaterialShininess [SimTalk]

BorderLineMaterialSpecularColor [SimTalk]

BorderLineMaterialTransparency [SimTalk]

BorderLineMaterialDiffuseColor [SimTalk]

Sets the diffuse color of the borderline material around the platform of the mezzanine designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.BorderLineMaterialDiffuseColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco",  
[5]).BorderLineMaterialDiffuseColor := makeRGBValue(255,0,0)
```

See also

[Insert Shape](#) > [Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

[BorderLineMaterialActive \[SimTalk\]](#)

BorderLineMaterialDiffuseColor [SimTalk]

BorderLineMaterialAmbientColor [SimTalk]

BorderLineMaterialEmissiveColor [SimTalk]

BorderLineMaterialShininess [SimTalk]

BorderLineMaterialSpecularColor [SimTalk]

BorderLineMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

BorderLineMaterialEmissiveColor [SimTalk]

Sets the emissive color of the borderline material of the platform of the mezzanine designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.BorderLineMaterialEmissiveColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco",  
[5]).BorderLineMaterialEmissiveColor := makeRGBValue(255,0,0)
```

See also

[Insert Shape](#) > [Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

[BorderLineMaterialActive \[SimTalk\]](#)

[BorderLineMaterialAmbientColor \[SimTalk\]](#)

BorderLineMaterialEmissiveColor [SimTalk]

BorderLineMaterialDiffuseColor [SimTalk]

BorderLineMaterialShininess [SimTalk]

BorderLineMaterialSpecularColor [SimTalk]

BorderLineMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

BorderLineMaterialShininess [SimTalk]

Sets the shininess of the borderline material of the platform of the mezzanine designated by <Path>.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.BorderLineMaterialShininess:real
```

Assignment Value

You can assign a value of data type *real* between 0 and 1.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).BorderLineMaterialShininess :=  
0.7
```

See also

[Insert Shape > Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

[BorderLineMaterialActive \[SimTalk\]](#)

[BorderLineMaterialAmbientColor \[SimTalk\]](#)

[BorderLineMaterialDiffuseColor \[SimTalk\]](#)

[BorderLineMaterialShininess \[SimTalk\]](#)

BorderLineMaterialShininess [SimTalk]

BorderLineMaterialSpecularColor [SimTalk]

BorderLineMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

BorderLineMaterialSpecularColor [SimTalk]

Sets the specular color of the borderline material of the platform of the mezzanine designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.BorderLineMaterialSpecularColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco",  
[5]).BorderLineMaterialSpecularColor := makeRGBValue(255,0,0)
```

See also

[Insert Shape](#) > [Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

[BorderLineMaterialActive \[SimTalk\]](#)

[BorderLineMaterialAmbientColor \[SimTalk\]](#)

BorderLineMaterialSpecularColor [SimTalk]

BorderLineMaterialDiffuseColor [SimTalk]

BorderLineMaterialEmissiveColor [SimTalk]

BorderLineMaterialShininess [SimTalk]

BorderLineMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

BorderLineMaterialTransparency [SimTalk]

Sets the transparency of the borderline material of the platform of the mezzanine designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.BorderLineMaterialTransparency:real
```

Assignment Value

You can assign a value of data type *real* between 0 and 1.

Example

```
.Models.MyModel._3D.getGraphic("deco",  
[5]).BorderLineMaterialTransparency := 0.4
```

See also

[Insert Shape > Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

[BorderLineMaterialActive \[SimTalk\]](#)

[BorderLineMaterialAmbientColor \[SimTalk\]](#)

[BorderLineMaterialDiffuseColor \[SimTalk\]](#)

[BorderLineMaterialEmissiveColor \[SimTalk\]](#)

[BorderLineMaterialShininess \[SimTalk\]](#)

[BorderLineMaterialSpecularColor \[SimTalk\]](#)

[_3D.getGraphic \[SimTalk\]](#)

Dimensioning Attributes

_Dimensioning Attributes

Dimensionings provide the attributes listed in the table of contents to the left.

See also

[createDimensioning \[SimTalk\]](#)

[Dimensioning](#)

DimensioningSpace [SimTalk]

Sets the dimensioning space of the graphic designated by <Path>.

Type

Attribute

Syntax

```
<Path>.DimensioningSpace:string
```

Assignment Value

You can assign a value of data type *string*.

You can specify "X Axis", "Y Axis", "Z Axis", or "XY plane".

Example

```
.Models.Model2._3D.getGraphic("deco", [2]).DimensioningSpace := "XY plane"
.Models.Model2._3D.getGraphic("deco", [2]).MeasuringPoint1 := [2,2,2]
.Models.Model2._3D.getGraphic("deco", [2]).MeasuringPoint2 := [3,4,5]
.Models.Model2._3D.getGraphic("deco", [2]).TextPosition := [6,6,6]

print .Models.Model2._3D.getGraphic("deco", [2]).MeasuredLength
// returns 2.23606797749979m
```

See also

Insert Shape > Dimensioning	MeasuringPoint2 [SimTalk]
createDimensioning [SimTalk]	TextPosition [SimTalk]
MeasuredLength [SimTalk]	getGraphic
MeasuringPoint1 [SimTalk]	

MeasuredLength [SimTalk]

Returns the length of the graphic designated by <Path>.

Remarks

The measuring text shows this length.

Type

Read-only attribute

Syntax

```
<Path>.MeasuredLength -> length
```

Return Value

The return value has the data type *length*.

Example

```
.Models.Model2._3D.getGraphic("deco", [2]).DimensioningSpace := "XY plane"
.Models.Model2._3D.getGraphic("deco", [2]).MeasuringPoint1 := [2,2,2]
.Models.Model2._3D.getGraphic("deco", [2]).MeasuringPoint2 := [3,4,5]
.Models.Model2._3D.getGraphic("deco", [2]).TextPosition := [6,6,6]

print .Models.Model2._3D.getGraphic("deco", [2]).MeasuredLength
// returns 2.23606797749979m
```

See also

Insert Shape > Dimensioning	MeasuringPoint2 [SimTalk]
createDimensioning [SimTalk]	TextPosition [SimTalk]
DimensioningSpace [SimTalk]	_3D.getGraphic [SimTalk]
MeasuringPoint1 [SimTalk]	

MeasuringPoint1 [SimTalk]

Sets the first measuring point of the graphic designated by <Path>.

Type

Attribute

Syntax

```
<Path>.MeasuringPoint1:length[3]
```

Assignment Value

You can assign an *array* of data type *length* with three values.

The values designate the **X-Position**, the **Y-Position**, and the **Z-Position** of the measuring point.

Example

```
.Models.Model2._3D.getGraphic("deco", [2]).DimensioningSpace := "XY plane"
.Models.Model2._3D.getGraphic("deco", [2]).MeasuringPoint1 := [2,2,2]
.Models.Model2._3D.getGraphic("deco", [2]).MeasuringPoint2 := [3,4,5]
.Models.Model2._3D.getGraphic("deco", [2]).TextPosition := [6,6,6]

print .Models.Model2._3D.getGraphic("deco", [2]).MeasuredLength
// returns 2.23606797749979m
```

See also

Insert Shape > Dimensioning	MeasuringPoint2 [SimTalk]
createDimensioning [SimTalk]	TextPosition [SimTalk]
DimensioningSpace [SimTalk]	_3D.getGraphic [SimTalk]
MeasuredLength [SimTalk]	

MeasuringPoint2 [SimTalk]

Sets the second measuring point of the graphic designated by <Path>.

Type

Attribute

Syntax

```
<Path>.MeasuringPoint2:length[3]
```

Assignment Value

You can assign an *array* of data type *length* with three values.

The values designate the **X-Position**, the **Y-Position**, and the **Z-Position** of the measuring point.

Example

```
.Models.Model2._3D.getGraphic("deco", [2]).DimensioningSpace := "XY plane"
.Models.Model2._3D.getGraphic("deco", [2]).MeasuringPoint1 := [2,2,2]
.Models.Model2._3D.getGraphic("deco", [2]).MeasuringPoint2 := [3,4,5]
.Models.Model2._3D.getGraphic("deco", [2]).TextPosition := [6,6,6]

print .Models.Model2._3D.getGraphic("deco", [2]).MeasuredLength
// returns 2.23606797749979m
```

See also

Insert Shape > Dimensioning	MeasuringPoint1 [SimTalk]
createDimensioning [SimTalk]	TextPosition [SimTalk]
DimensioningSpace [SimTalk]	_3D.getGraphic [SimTalk]
MeasuredLength [SimTalk]	

TextPosition [SimTalk]

Sets the position of the caption of the dimensionings of the graphic designated by <Path>.

Type

Attribute

Syntax

```
<Path>.TextPosition:length[3]
```

Assignment Value

You can assign an *array* of data type *length* with three values.

The values designate the **X-Position**, the **Y-Position**, and the **Z-Position** of the measuring point.

Example

```
.Models.Model2._3D.getGraphic("deco", [2]).TextPosition := [6,6,6]
```

See also

Insert Shape > Dimensioning	MeasuringPoint1 [SimTalk]
createDimensioning [SimTalk]	MeasuringPoint2 [SimTalk]
MeasuredLength [SimTalk]	_3D.getGraphic [SimTalk]

Factory Walls Attributes

_Factory Walls Attributes

You can set the properties of the **Factory Walls** with the attributes listed in the table of contents to the left.

See also

[Insert Shape > Factory Walls](#)

[Factory Walls Settings](#)

[createFactoryWalls \[SimTalk\]](#)

_Accessing Attributes of Graphic Shapes

WallElementWidth [SimTalk]

Sets the width of an entire individual element of the factory walls designated by <Path>.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.WallElementWidth: length
```

Assignment Value

You can assign a value of data type *length*.

Example

```
MyStation.getGraphic("default").createFactoryWalls([11,40,3],
42cm).WallElementWidth := 150cm
print MyStation.getGraphic("default").createFactoryWalls([11,40,3],
42cm).WallElementWidth
```

See also

[Insert Shape > Factory Walls](#)

[Factory Walls Settings](#)

[createFactoryWalls \[SimTalk\]](#)

[_3D.getGraphic \[SimTalk\]](#)

Fence Attributes

_Fence Attributes

The **Fence** provides the attributes listed in the table of contents to the left.

See also

[Insert Shape > Fence](#)

[Fence Settings](#)

[createFence \[SimTalk\]](#)

FenceElementWidth [SimTalk]

Sets the width of an entire individual element of the fence designated by <Path>.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.FenceElementWidth: length
```

Assignment Value

You can assign a value of data type *length*.

Example

```
MyStation.getGraphic("default").createFence([3,4,1], true,  
false).FenceElementWidth := 90cm  
print MyStation.getGraphic("default").createFence([3,4,1], true,  
false).FenceElementWidth
```

See also

[Insert Shape](#) > [Fence](#)

Fence Settings

[createFence \[SimTalk\]](#)

[_3D.getGraphic \[SimTalk\]](#)

MeshActive [SimTalk]

Activates (`true`) or deactivates (`false`) a wire mesh between the fence posts of the fence designated by `<Path>`.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.MeshActive: boolean
```

Assignment Value

You can assign a value of data type *boolean*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).MeshActive := true
```

See also

[Insert Shape > Fence](#)

[Fence Settings](#)

[createFence \[SimTalk\]](#)

[_3D.getGraphic \[SimTalk\]](#)

PanActive [SimTalk]

Activates (`true`) or deactivates (`false`) glass or acrylic glass panes between the fence posts of the fence designated by `<Path>`

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.PanActive: boolean
```

Assignment Value

You can assign a value of data type *boolean*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).PanActive := true
```

See also

[Insert Shape > Fence](#)

[Fence Settings](#)

[createFence \[SimTalk\]](#)

[_3D.getGraphic \[SimTalk\]](#)

Floor Material Attributes

_Floor Material Attributes

You can set the *Floor Material* of the platform of the **Mezzanine** with the attributes listed in the table of contents to the left.

See also

[Insert Shape](#) > [Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

FloorMaterialActive [SimTalk]

Activates (`true`) or deactivates (`false`) the floor material of the platform of the mezzanine designated by `<Path>`.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.FloorMaterialActive:boolean
```

Assignment Value

You can assign a value of data type *boolean*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).FloorMaterialActive := true
```

See also

[Insert Shape > Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

[FloorMaterialAmbientColor \[SimTalk\]](#)

[FloorMaterialDiffuseColor \[SimTalk\]](#)

[FloorMaterialEmissiveColor \[SimTalk\]](#)

[FloorMaterialShininess \[SimTalk\]](#)

FloorMaterialActive [SimTalk]

FloorMaterialSpecularColor [SimTalk]

FloorMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

FloorMaterialAmbientColor [SimTalk]

Sets the ambient color of the floor material of the platform of the mezzanine designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Note

You can only access *FloorMaterialAmbientColor* if the material is active.

Type

Attribute

Syntax

```
<Path>.FloorMaterialAmbientColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).FloorMaterialAmbientColor :=  
makeRGBValue(255,0,0)
```

See also

[Insert Shape > Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

FloorMaterialAmbientColor [SimTalk]

FloorMaterialActive [SimTalk]

FloorMaterialDiffuseColor [SimTalk]

FloorMaterialEmissiveColor [SimTalk]

FloorMaterialShininess [SimTalk]

FloorMaterialSpecularColor [SimTalk]

FloorMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

FloorMaterialDiffuseColor [SimTalk]

Sets the diffuse color of the floor material of the platform of the mezzanine designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access *FloorMaterialDiffuseColor* if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.FloorMaterialDiffuseColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).FloorMaterialDiffuseColor :=  
makeRGBValue(255,0,0)
```

See also

[Insert Shape > Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

[FloorMaterialActive \[SimTalk\]](#)

FloorMaterialDiffuseColor [SimTalk]

FloorMaterialAmbientColor [SimTalk]

FloorMaterialEmissiveColor [SimTalk]

FloorMaterialShininess [SimTalk]

FloorMaterialSpecularColor [SimTalk]

FloorMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

FloorMaterialEmissiveColor [SimTalk]

Sets the emissive color of the floor material of the platform of the mezzanine designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.FloorMaterialEmissiveColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).FloorMaterialEmissiveColor :=  
makeRGBValue(255,0,0)
```

See also

[Insert Shape > Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

[FloorMaterialActive \[SimTalk\]](#)

FloorMaterialEmissiveColor [SimTalk]

FloorMaterialAmbientColor [SimTalk]

FloorMaterialDiffuseColor [SimTalk]

FloorMaterialShininess [SimTalk]

FloorMaterialSpecularColor [SimTalk]

FloorMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

FloorMaterialShininess [SimTalk]

Sets the shininess of the floor material of the platform of the mezzanine designated by <Path>.

Remarks

You can only access *FloorMaterialShininess* if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.FloorMaterialShininess:real
```

Assignment Value

You can assign a value of data type *real* between 0 and 1.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).FloorMaterialShininess := 0.2
```

See also

[Insert Shape](#) > [Mezzanine](#)

Mezzanine Settings

[createMezzanine \[SimTalk\]](#)

[FloorMaterialActive \[SimTalk\]](#)

[FloorMaterialAmbientColor \[SimTalk\]](#)

[FloorMaterialDiffuseColor \[SimTalk\]](#)

[FloorMaterialEmissiveColor \[SimTalk\]](#)

FloorMaterialShininess [SimTalk]

FloorMaterialSpecularColor [SimTalk]

FloorMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

FloorMaterialSpecularColor [SimTalk]

Sets the specular color of the floor material of the platform of the mezzanine designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access *FloorMaterialSpecularColor* if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.FloorMaterialSpecularColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).FloorMaterialSpecularColor :=  
makeRGBValue(255,0,0)
```

See also

[Insert Shape > Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

[FloorMaterialActive \[SimTalk\]](#)

FloorMaterialSpecularColor [SimTalk]

FloorMaterialAmbientColor [SimTalk]

FloorMaterialDiffuseColor [SimTalk]

FloorMaterialEmissiveColor [SimTalk]

FloorMaterialShininess [SimTalk]

FloorMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

FloorMaterialTransparency [SimTalk]

Sets the transparency of the floor material of the platform of the mezzanine designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access *FloorMaterialTransparency* if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.FloorMaterialTransparency:real
```

Assignment Value

You can assign a value of data type *real* between 0 and 1.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).FloorMaterialTransparency := 0.5
```

See also

[Insert Shape](#) > [Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

[FloorMaterialActive \[SimTalk\]](#)

[FloorMaterialAmbientColor \[SimTalk\]](#)

[FloorMaterialDiffuseColor \[SimTalk\]](#)

[FloorMaterialEmissiveColor \[SimTalk\]](#)

[FloorMaterialShininess \[SimTalk\]](#)

[FloorMaterialSpecularColor \[SimTalk\]](#)

[_3D.getGraphic \[SimTalk\]](#)

Frame Material Attributes

_Frame Material Attributes

You can set the *Frame Material* of the *Factory Walls* with the attributes listed in the table of contents to the left.

See also

[Insert Shape > Factory Walls](#)

[Mezzanine Settings](#)

[_Accessing Attributes of Graphic Shapes](#)

FrameMaterialActive [SimTalk]

Activates (`true`) or deactivates (`false`) the frame material of the factory walls designated by `<Path>`.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.FrameMaterialActive: boolean
```

Assignment Value

You can assign a value of data type *boolean*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).FrameMaterialActive := true
```

See also

[Insert Shape > Factory Walls](#)

[Factory Walls Settings](#)

[createFactoryWalls \[SimTalk\]](#)

[FrameMaterialAmbientColor \[SimTalk\]](#)

[FrameMaterialDiffuseColor \[SimTalk\]](#)

[FrameMaterialEmissiveColor \[SimTalk\]](#)

[FrameMaterialShininess \[SimTalk\]](#)

[FrameMaterialSpecularColor \[SimTalk\]](#)

FrameMaterialActive [SimTalk]

FrameMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

FrameMaterialAmbientColor [SimTalk]

Sets the ambient color of the frame material of the factory walls designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access *FrameMaterialAmbientColor* if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.FrameMaterialAmbientColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).FrameMaterialAmbientColor :=  
makeRGBValue(255,0,0)
```

See also

[Insert Shape > Factory Walls](#)

[Factory Walls Settings](#)

[createFactoryWalls \[SimTalk\]](#)

[FrameMaterialActive \[SimTalk\]](#)

FrameMaterialAmbientColor [SimTalk]

FrameMaterialDiffuseColor [SimTalk]

FrameMaterialEmissiveColor [SimTalk]

FrameMaterialShininess [SimTalk]

FrameMaterialSpecularColor [SimTalk]

FrameMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

FrameMaterialDiffuseColor [SimTalk]

Sets the diffuse color of the frame material of the factory walls designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access *FrameMaterialDiffuseColor* if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.FrameMaterialDiffuseColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).FrameMaterialDiffuseColor :=  
makeRGBValue(255,0,0)
```

See also

[Insert Shape > Factory Walls](#)

[Factory Walls Settings](#)

[createFactoryWalls \[SimTalk\]](#)

[FrameMaterialActive \[SimTalk\]](#)

FrameMaterialDiffuseColor [SimTalk]

FrameMaterialAmbientColor [SimTalk]

FrameMaterialEmissiveColor [SimTalk]

FrameMaterialShininess [SimTalk]

FrameMaterialSpecularColor [SimTalk]

FrameMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

FrameMaterialEmissiveColor [SimTalk]

Sets the emissive color of the frame material of the factory walls designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access *FrameMaterialEmissiveColor* if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.FrameMaterialEmissiveColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).FrameMaterialEmissiveColor :=  
makeRGBValue(255,0,0)
```

See also

[Insert Shape > Factory Walls](#)

[Factory Walls Settings](#)

[createFactoryWalls \[SimTalk\]](#)

[FrameMaterialActive \[SimTalk\]](#)

FrameMaterialEmissiveColor [SimTalk]

FrameMaterialAmbientColor [SimTalk]

FrameMaterialDiffuseColor [SimTalk]

FrameMaterialShininess [SimTalk]

FrameMaterialSpecularColor [SimTalk]

FrameMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

FrameMaterialShininess [SimTalk]

Sets the shininess of the frame material of the factory walls designated by <Path>.

Remarks

You can only access *FrameMaterialShininess* if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.FrameMaterialShininess:real
```

Assignment Value

You can assign a value of data type *real* between 0 and 1.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).FrameMaterialShininess := 0.9
```

See also

[Insert Shape > Factory Walls](#)

[Factory Walls Settings](#)

[createFactoryWalls \[SimTalk\]](#)

[FrameMaterialActive \[SimTalk\]](#)

[FrameMaterialAmbientColor \[SimTalk\]](#)

[FrameMaterialDiffuseColor \[SimTalk\]](#)

[FrameMaterialEmissiveColor \[SimTalk\]](#)

FrameMaterialShininess [SimTalk]

FrameMaterialSpecularColor [SimTalk]

FrameMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

FrameMaterialSpecularColor [SimTalk]

Sets the specular color of the frame material of the factory walls designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access *FrameMaterialSpecularColor* if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Title

Attribute

Syntax

```
<Path>.FrameMaterialSpecularColor:integer
```

Assignment Value

You can assign a value of data type *real*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).FrameMaterialSpecularColor :=  
makeRGBValue(255,0,0)
```

See also

[Insert Shape > Factory Walls](#)

[Factory Walls Settings](#)

[createFactoryWalls \[SimTalk\]](#)

[FrameMaterialActive \[SimTalk\]](#)

FrameMaterialSpecularColor [SimTalk]

FrameMaterialAmbientColor [SimTalk]

FrameMaterialDiffuseColor [SimTalk]

FrameMaterialEmissiveColor [SimTalk]

FrameMaterialShininess [SimTalk]

FrameMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

FrameMaterialTransparency [SimTalk]

Sets the transparency of the frame material of the factory walls designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access *FrameMaterialTransparency* if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Title

Attribute

Syntax

```
<Path>.FrameMaterialTransparency:real
```

Assignment Value

You can assign a value of data type *real* between 0 and 1.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).FrameMaterialTransparency := 0.7
```

See also

[Insert Shape > Factory Walls](#)

[Factory Walls Settings](#)

[createFactoryWalls \[SimTalk\]](#)

[FrameMaterialActive \[SimTalk\]](#)

[FrameMaterialAmbientColor \[SimTalk\]](#)

[FrameMaterialDiffuseColor \[SimTalk\]](#)

[FrameMaterialEmissiveColor \[SimTalk\]](#)

[FrameMaterialShininess \[SimTalk\]](#)

[FrameMaterialSpecularColor \[SimTalk\]](#)

[_3D.getGraphic \[SimTalk\]](#)

Mesh Material Attributes

[_Mesh Material Attributes](#)

You can set the *Mesh Material* with the attributes listed in the table of contents to the left.

See also

[Insert Shape > Fence](#)

[Insert Shape > Fence > Fence Settings](#)

[createFence \[SimTalk\]](#)

MeshMaterialActive [SimTalk]

Activates (`true`) or deactivates (`false`) the mesh material of the fence designated by `<Path>`.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.MeshMaterialActive:boolean
```

Assignment Value

You can assign a value of data type *boolean*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).MeshMaterialActive := true
```

See also

[Insert Shape > Fence](#)

[Fence Settings](#)

[createFence \[SimTalk\]](#)

[MeshMaterialAmbientColor \[SimTalk\]](#)

[MeshMaterialDiffuseColor \[SimTalk\]](#)

[MeshMaterialEmissiveColor \[SimTalk\]](#)

[MeshMaterialShininess \[SimTalk\]](#)

[MeshMaterialSpecularColor \[SimTalk\]](#)

MeshMaterialActive [SimTalk]

MeshMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

MeshMaterialAmbientColor [SimTalk]

Sets the ambient color of the mesh material of the fence designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.MeshMaterialAmbientColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).MeshMaterialAmbientColor :=  
makeRGBValue(255,0,0)
```

See also

[Insert Shape > Fence](#)

[Fence Settings](#)

[createFence \[SimTalk\]](#)

[MeshMaterialActive \[SimTalk\]](#)

MeshMaterialAmbientColor [SimTalk]

MeshMaterialDiffuseColor [SimTalk]

MeshMaterialEmissiveColor [SimTalk]

MeshMaterialShininess [SimTalk]

MeshMaterialSpecularColor [SimTalk]

MeshMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

MeshMaterialDiffuseColor [SimTalk]

Sets the diffuse color of the mesh material of the fence designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.MeshMaterialDiffuseColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).MeshMaterialDiffuseColor :=  
makeRGBValue(255,0,0)
```

See also

[Insert Shape > Fence](#)

[Fence Settings](#)

[createFence \[SimTalk\]](#)

[MeshMaterialActive \[SimTalk\]](#)

MeshMaterialDiffuseColor [SimTalk]

WallMaterialAmbientColor [SimTalk]

MeshMaterialEmissiveColor [SimTalk]

MeshMaterialShininess [SimTalk]

MeshMaterialSpecularColor [SimTalk]

MeshMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

MeshMaterialEmissiveColor [SimTalk]

Sets the emissive color of the mesh material of the fence designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.MeshMaterialEmissiveColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).MeshMaterialEmissiveColor :=  
makeRGBValue(255,0,0)
```

See also

[Insert Shape > Fence](#)

[Fence Settings](#)

[createFence \[SimTalk\]](#)

[MeshMaterialActive \[SimTalk\]](#)

MeshMaterialEmissiveColor [SimTalk]

WallMaterialAmbientColor [SimTalk]

MeshMaterialDiffuseColor [SimTalk]

MeshMaterialShininess [SimTalk]

MeshMaterialSpecularColor [SimTalk]

MeshMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

MeshMaterialShininess [SimTalk]

Sets the shininess of the mesh material of the fence designated by <Path>.

Remarks

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.MeshMaterialShininess:real
```

Assignment Value

You can assign a value of data type *real* between 0 and 1.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).MeshMaterialShininess := 0.9
```

See also

[Insert Shape > Fence](#)

Fence Settings

[createFence \[SimTalk\]](#)

[MeshMaterialActive \[SimTalk\]](#)

[WallMaterialAmbientColor \[SimTalk\]](#)

[MeshMaterialDiffuseColor \[SimTalk\]](#)

[MeshMaterialEmissiveColor \[SimTalk\]](#)

MeshMaterialShininess [SimTalk]

MeshMaterialSpecularColor [SimTalk]

MeshMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

MeshMaterialSpecularColor [SimTalk]

Sets the specular color of the mesh material of the fence designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.MeshMaterialSpecularColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).MeshMaterialSpecularColor :=  
makeRGBValue(255,0,0)
```

See also

[Insert Shape > Fence](#)

[Fence Settings](#)

[createFence \[SimTalk\]](#)

[MeshMaterialActive \[SimTalk\]](#)

MeshMaterialSpecularColor [SimTalk]

WallMaterialAmbientColor [SimTalk]

MeshMaterialDiffuseColor [SimTalk]

MeshMaterialEmissiveColor [SimTalk]

MeshMaterialShininess [SimTalk]

MeshMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

MeshMaterialTransparency [SimTalk]

Sets the transparency of the mesh material of the fence designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.MeshMaterialTransparency:real
```

Assignment Value

You can assign a value of data type *real* between 0 and 1.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).MeshMaterialTransparency := 0.9
```

See also

[Insert Shape > Fence](#)

[Fence Settings](#)

[createFence \[SimTalk\]](#)

[MeshMaterialActive \[SimTalk\]](#)

[MeshMaterialAmbientColor \[SimTalk\]](#)

[MeshMaterialDiffuseColor \[SimTalk\]](#)

[MeshMaterialEmissiveColor \[SimTalk\]](#)

[MeshMaterialShininess \[SimTalk\]](#)

[MeshMaterialSpecularColor \[SimTalk\]](#)

[_3D.getGraphic \[SimTalk\]](#)

Mezzanine Attributes

[_Mezzanine Attributes](#)

You can set the properties of the **Mezzanine** with the attributes listed in the table of contents to the left.

See also

[Insert Shape > Mezzanine](#)

[Mezzanine Settings](#)

[_Accessing Attributes of Graphic Shapes](#)

BorderLineActive [SimTalk]

Activates (`true`) or deactivates (`false`) the border line around the platform of the mezzanine designated by `<Path>`.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.BorderLineActive: boolean
```

Assignment Value

You can assign a value of data type *boolean*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).BorderLineActive := true
```

See also

[Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

[_3D.getGraphic \[SimTalk\]](#)

FloorThickness [SimTalk]

Sets the floor thickness of the platform of the mezzanine designated by <Path>.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.FloorThickness:length
```

Assignment Value

You can assign a value of data type *length*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [7]).FloorThickness := 0.05
```

See also

[Insert Shape](#) > [Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

[_3D.getGraphic \[SimTalk\]](#)

PostDiameter [SimTalk] - mezzanine

Sets the diameter of the posts on which the platform of the mezzanine designated by <Path> rests.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.PostDiameter : length
```

Assignment Value

You can assign a value of data type *length*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [7]).PostDiameter := 0.25
```

See also

[Insert Shape > Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

[_3D.getGraphic \[SimTalk\]](#)

RailingsActive [SimTalk]

Activates (`true`) or deactivates (`false`) railings around the platform of the mezzanine designated by `<Path>`.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.RailingsActive:boolean
```

Assignment Value

You can assign a value of data type *boolean*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).RailingsActive := true
```

See also

[Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

[_3D.getGraphic \[SimTalk\]](#)

RailingSegmentWidth [SimTalk]

Sets the width of the individual segments of the railing of the mezzanine designated by <Path>. The segment width is the distance between the individual posts that hold the railing.

Remarks

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

You can only access the attribute if the railing is active.

Assigning the attribute deactivates graphic inheritance.

Type

Attribute

Syntax

```
<Path>.RailingSegmentWidth: length
```

Assignment Value

You can assign an *array* of data type *length*.

Example

```
MyFrame._3D.getGraphic("deco", [2]).RailingSegmentWidth := 1.2
```

See also

[Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

[_Mezzanine Attributes](#)

[_3D.getGraphic \[SimTalk\]](#)

Pane Material Attributes

[_Pane Material Attributes](#)

You can set the *Pane Material* of the **Factory Walls** and the **Fence** with the attributes listed in the table of contents to the left.

[See also](#)

[Factory Walls](#)

[Factory Walls Settings](#)

[createFactoryWalls \[SimTalk\]](#)

[_Factory Walls Attributes](#)

[Fence](#)

[Fence Settings](#)

[createFence \[SimTalk\]](#)

[_Factory Walls Attributes](#)

[_3D.getGraphic \[SimTalk\]](#)

[InternalGraphicType \[SimTalk\]](#)

PaneMaterialActive [SimTalk]

Activates (true) or deactivates (false) the material of the glass or acrylic glass panes of the **Factory Walls** or the **Fence** designated by <Path>.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.PaneMaterialActive:boolean
```

Assignment Value

You can assign a value of data type *boolean*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [4]).PaneMaterialActive := true
```

See also

Factory Walls > Factory Walls Settings	PaneMaterialAmbientColor [SimTalk]
createFactoryWalls [SimTalk]	PaneMaterialDiffuseColor [SimTalk]
_Factory Walls Attributes	PaneMaterialEmissiveColor [SimTalk]
Fence > Fence Settings	PaneMaterialShininess [SimTalk]
createFence [SimTalk]	PaneMaterialSpecularColor [SimTalk]
_Factory Walls Attributes	PaneMaterialTransparency [SimTalk]
_3D.getGraphic [SimTalk]	

PaneMaterialAmbientColor [SimTalk]

Sets the ambient color of the material of the glass or acrylic glass panes of the **Factory Walls** or the **Fence** designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Syntax

```
<Path>.PaneMaterialAmbientColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).PaneMaterialAmbientColor := makeRGBValue(255,0,0)
```

See also

Factory Walls > Factory Walls Settings	RailingMaterialActive [SimTalk]
createFactoryWalls [SimTalk]	PaneMaterialDiffuseColor [SimTalk]
_Factory Walls Attributes	PaneMaterialEmissiveColor [SimTalk]
Fence > Fence Settings	PaneMaterialShininess [SimTalk]
createFence [SimTalk]	PaneMaterialSpecularColor [SimTalk]
_Factory Walls Attributes	PaneMaterialTransparency [SimTalk]
_3D.getGraphic [SimTalk]	

PaneMaterialDiffuseColor [SimTalk]

Sets the diffuse color of the material of the glass or acrylic glass panes of the **Factory Walls** or the **Fence** designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.PaneMaterialDiffuseColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).PaneMaterialDiffuseColor :=  
makeRGBValue(255,0,0)
```

See also

Factory Walls > Factory Walls Settings	PaneMaterialActive [SimTalk]
createFactoryWalls [SimTalk]	PaneMaterialAmbientColor [SimTalk]
_Factory Walls Attributes	PaneMaterialEmissiveColor [SimTalk]
Fence > Fence Settings	PaneMaterialShininess [SimTalk]

createFence [SimTalk]	PaneMaterialSpecularColor [SimTalk]
_Factory Walls Attributes	PaneMaterialTransparency [SimTalk]
_3D.getGraphic [SimTalk]	

PaneMaterialEmissiveColor [SimTalk]

Sets the emissive color of the material of the glass or acrylic glass panes of the **Factory Walls** or the **Fence** designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.PaneMaterialEmissiveColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.Mode1._3D.getGraphic("deco", [5]).PaneMaterialEmissiveColor :=  
makeRGBValue(0,255,0)
```

See also

Factory Walls > Factory Walls Settings	PaneMaterialActive [SimTalk]
createFactoryWalls [SimTalk]	PaneMaterialAmbientColor [SimTalk]
_Factory Walls Attributes	PaneMaterialDiffuseColor [SimTalk]
Fence > Fence Settings	PaneMaterialShininess [SimTalk]

createFence [SimTalk]	PaneMaterialSpecularColor [SimTalk]
_Factory Walls Attributes	PaneMaterialTransparency [SimTalk]
_3D.getGraphic [SimTalk]	

PaneMaterialShininess [SimTalk]

Sets the shininess of the material of the glass or acrylic glass panes of the **Factory Walls** or the **Fence** designated by <Path>.

Remarks

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.PaneMaterialShininess:real
```

Assignment Value

You can assign a value of data type *real*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).PaneMaterialShininess := 0.8
```

See also

Factory Walls > Factory Walls Settings	PaneMaterialActive [SimTalk]
createFactoryWalls [SimTalk]	PaneMaterialAmbientColor [SimTalk]
_Factory Walls Attributes	PaneMaterialDiffuseColor [SimTalk]
Fence > Fence Settings	PaneMaterialEmissiveColor [SimTalk]
createFence [SimTalk]	PaneMaterialSpecularColor [SimTalk]
_Factory Walls Attributes	PaneMaterialTransparency [SimTalk]
_3D.getGraphic [SimTalk]	

PaneMaterialSpecularColor [SimTalk]

Sets the specular color of the material of the glass or acrylic glass panes of the **Factory Walls** or the **Fence** designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.PaneMaterialSpecularColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).PaneMaterialSpecularColor :=  
makeRGBValue(255,0,0)
```

See also

Factory Walls > Factory Walls Settings	PaneMaterialActive [SimTalk]
createFactoryWalls [SimTalk]	PaneMaterialAmbientColor [SimTalk]
_Factory Walls Attributes	PaneMaterialDiffuseColor [SimTalk]
Fence > Fence Settings	PaneMaterialEmissiveColor [SimTalk]

createFence [SimTalk]	PaneMaterialShininess [SimTalk]
_Factory Walls Attributes	PaneMaterialTransparency [SimTalk]
_3D.getGraphic [SimTalk]	

PaneMaterialTransparency [SimTalk]

Sets the transparency of the material of the glass or acrylic glass panes of the **Factory Walls** or the **Fence** designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.PaneMaterialTransparency:real
```

Assignment Value

You can assign a value of data type *real* between 0 and 1.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).PaneMaterialTransparency := 0.5
```

See also

Factory Walls > Factory Walls Settings	PaneMaterialActive [SimTalk]
createFactoryWalls [SimTalk]	PaneMaterialAmbientColor [SimTalk]
_Factory Walls Attributes	PaneMaterialDiffuseColor [SimTalk]
Fence > Fence Settings	PaneMaterialEmissiveColor [SimTalk]
createFence [SimTalk]	PaneMaterialShininess [SimTalk]

_Factory Walls Attributes	PaneMaterialSpecularColor [SimTalk]
_3D.getGraphic [SimTalk]	

Post Material Attributes

_Post Material Attributes

You can set the *Post Material* of the **Fence**, the **Mezzanine**, and the **Rack** with the attributes listed in the table of contents to the left.

Note

The attributes are available for graphics of type **Fence**, **Mezzanine**, and **Rack**, compare *InternalGraphicType*.

SimTalk

[InternalGraphicType \[SimTalk\]](#)

See also

Fence > Fence Settings	_Mezzanine Attributes
createFence [SimTalk]	Rack > Rack Settings
_Factory Walls Attributes	createRack [SimTalk]
Mezzanine > Mezzanine Settings	_Rack Attributes
createMezzanine [SimTalk]	_3D.getGraphic [SimTalk]

PostMaterialActive [SimTalk]

Activates (true) or deactivates (false) the material of the posts of the fence, the mezzanine, or of the rack designated by <Path>.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.PostMaterialActive:boolean
```

Assignment Value

You can assign a value of data type *boolean*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [4]).PostMaterialActive := true
```

See also

Fence > Fence Settings	_Rack Attributes
createFence [SimTalk]	_3D.getGraphic [SimTalk]
_Factory Walls Attributes	PostMaterialAmbientColor [SimTalk]
Mezzanine > Mezzanine Settings	PostMaterialDiffuseColor [SimTalk]
createMezzanine [SimTalk]	PostMaterialEmissiveColor [SimTalk]
_Mezzanine Attributes	PostMaterialShininess [SimTalk]
Rack > Rack Settings	PostMaterialSpecularColor [SimTalk]
createRack [SimTalk]	PostMaterialTransparency [SimTalk]

PostMaterialAmbientColor [SimTalk]

Sets the ambient color of the post material of the fence, the mezzanine, or of the rack designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (MaterialActive := true).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.PostMaterialAmbientColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).PostMaterialAmbientColor := makeRGBValue(255,0,0)
```

See also

Fence > Fence Settings	_Rack Attributes
createFence [SimTalk]	_3D.getGraphic [SimTalk]
_Factory Walls Attributes	PostMaterialAmbientColor [SimTalk]
Mezzanine > Mezzanine Settings	PostMaterialDiffuseColor [SimTalk]

createMezzanine [SimTalk]	PostMaterialEmissiveColor [SimTalk]
_Mezzanine Attributes	PostMaterialShininess [SimTalk]
Rack > Rack Settings	PostMaterialSpecularColor [SimTalk]
createRack [SimTalk]	PostMaterialTransparency [SimTalk]

PostMaterialDiffuseColor [SimTalk]

Sets the diffuse color of the post material of the fence, the mezzanine, or of the rack designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (MaterialActive := true).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.PostMaterialDiffuseColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).PostMaterialDiffuseColor :=  
makeRGBValue(255,0,0)
```

See also

Fence > Fence Settings	_Rack Attributes
createFence [SimTalk]	_3D.getGraphic [SimTalk]
_Factory Walls Attributes	PostMaterialAmbientColor [SimTalk]
Mezzanine > Mezzanine Settings	PostMaterialDiffuseColor [SimTalk]
createMezzanine [SimTalk]	PostMaterialEmissiveColor [SimTalk]

_Mezzanine Attributes	PostMaterialShininess [SimTalk]
Rack > Rack Settings	PostMaterialSpecularColor [SimTalk]
createRack [SimTalk]	PostMaterialTransparency [SimTalk]

PostMaterialEmissiveColor [SimTalk]

Sets the emissive color of the post material of the fence, the mezzanine, or of the rack designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (MaterialActive := true).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.PostMaterialEmissiveColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).PostMaterialEmissiveColor := makeRGBValue(255,0,0)
```

See also

Fence > Fence Settings	_Rack Attributes
createFence [SimTalk]	_3D.getGraphic [SimTalk]
_Factory Walls Attributes	PostMaterialAmbientColor [SimTalk]
Mezzanine > Mezzanine Settings	PostMaterialDiffuseColor [SimTalk]

createMezzanine [SimTalk]	PostMaterialEmissiveColor [SimTalk]
_Mezzanine Attributes	PostMaterialShininess [SimTalk]
Rack > Rack Settings	PostMaterialSpecularColor [SimTalk]
createRack [SimTalk]	PostMaterialTransparency [SimTalk]

PostMaterialShininess [SimTalk]

Sets the shininess of the post material of the fence, the mezzanine, or of the rack designated by <Path>.

Remarks

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.PostMaterialShininess:real
```

Assignment Value

You can assign a value of data type *real* between 0 and 1.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).PostMaterialShininess := 0.6
```

See also

Fence > Fence Settings	_Rack Attributes
createFence [SimTalk]	_3D.getGraphic [SimTalk]
_Factory Walls Attributes	PostMaterialAmbientColor [SimTalk]
Mezzanine > Mezzanine Settings	PostMaterialDiffuseColor [SimTalk]
createMezzanine [SimTalk]	PostMaterialEmissiveColor [SimTalk]
_Mezzanine Attributes	PostMaterialShininess [SimTalk]
Rack > Rack Settings	PostMaterialSpecularColor [SimTalk]
createRack [SimTalk]	PostMaterialTransparency [SimTalk]

PostMaterialSpecularColor [SimTalk]

Sets the specular color of the post material of the fence, the mezzanine, or of the rack designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (MaterialActive := true).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.PostMaterialSpecularColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).PostMaterialSpecularColor := makeRGBValue(255,0,0)
```

See also

Fence > Fence Settings	_Rack Attributes
createFence [SimTalk]	_3D.getGraphic [SimTalk]
_Factory Walls Attributes	PostMaterialAmbientColor [SimTalk]
Mezzanine > Mezzanine Settings	PostMaterialDiffuseColor [SimTalk]

createMezzanine [SimTalk]	PostMaterialEmissiveColor [SimTalk]
_Mezzanine Attributes	PostMaterialShininess [SimTalk]
Rack > Rack Settings	PostMaterialSpecularColor [SimTalk]
createRack [SimTalk]	PostMaterialTransparency [SimTalk]

PostMaterialTransparency [SimTalk]

Sets the transparency of the post material of the fence, the mezzanine, or of the rack designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (MaterialActive := true).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.PostMaterialTransparency:real
```

Assignment Value

You can assign a value of data type *real* between 0 and 1.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).PostMaterialTransparency := 0.6
```

See also

Fence > Fence Settings	_Rack Attributes
createFence [SimTalk]	_3D.getGraphic [SimTalk]
_Factory Walls Attributes	PostMaterialAmbientColor [SimTalk]
Mezzanine > Mezzanine Settings	PostMaterialDiffuseColor [SimTalk]
createMezzanine [SimTalk]	PostMaterialEmissiveColor [SimTalk]
_Mezzanine Attributes	PostMaterialShininess [SimTalk]

Rack > Rack Settings	PostMaterialSpecularColor [SimTalk]
createRack [SimTalk]	PostMaterialTransparency [SimTalk]

Profile Material Attributes

_Profile Material Attributes

You can set the *Profile Material* of the *Fence* with the attributes listed in the table of contents to the left.

See also

[Insert Shape > Fence](#)

[createFence \[SimTalk\]](#)

ProfileMaterialActive [SimTalk]

Activates (`true`) or deactivates (`false`) the profile material of the fence designated by `<Path>`.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.ProfileMaterialActive:boolean
```

Assignment Value

You can assign a value of data type *boolean*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).ProfileMaterialActive := true
```

See also

[Insert Shape > Fence](#)

Fence Settings

[createFence \[SimTalk\]](#)

[ProfileMaterialAmbientColor \[SimTalk\]](#)

[ProfileMaterialDiffuseColor \[SimTalk\]](#)

[ProfileMaterialEmissiveColor \[SimTalk\]](#)

[ProfileMaterialShininess \[SimTalk\]](#)

[ProfileMaterialSpecularColor \[SimTalk\]](#)

ProfileMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

ProfileMaterialAmbientColor [SimTalk]

Sets the ambient color of the profile material of the fence designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.ProfileMaterialAmbientColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).ProfileMaterialAmbientColor :=  
makeRGBValue(255,0,0)
```

See also

[Insert Shape > Fence](#)

[Fence Settings](#)

[createFence \[SimTalk\]](#)

[ProfileMaterialActive \[SimTalk\]](#)

ProfileMaterialDiffuseColor [SimTalk]

ProfileMaterialEmissiveColor [SimTalk]

ProfileMaterialShininess [SimTalk]

ProfileMaterialSpecularColor [SimTalk]

ProfileMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

ProfileMaterialDiffuseColor [SimTalk]

Sets the diffuse color of the profile material of the fence designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.ProfileMaterialDiffuseColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).ProfileMaterialDiffuseColor :=  
makeRGBValue(255,0,0)
```

See also

[Insert Shape > Fence](#)

[Fence Settings](#)

[createFence \[SimTalk\]](#)

[ProfileMaterialActive \[SimTalk\]](#)

ProfileMaterialAmbientColor [SimTalk]

ProfileMaterialEmissiveColor [SimTalk]

ProfileMaterialShininess [SimTalk]

ProfileMaterialSpecularColor [SimTalk]

ProfileMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

ProfileMaterialEmissiveColor [SimTalk]

Sets the emissive color of the profile material of the fence designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.ProfileMaterialEmissiveColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).ProfileMaterialEmissiveColor :=  
makeRGBValue(255,0,0)
```

See also

[Insert Shape > Fence](#)

[Fence Settings](#)

[createFence \[SimTalk\]](#)

[ProfileMaterialActive \[SimTalk\]](#)

ProfileMaterialAmbientColor [SimTalk]

ProfileMaterialDiffuseColor [SimTalk]

ProfileMaterialShininess [SimTalk]

ProfileMaterialSpecularColor [SimTalk]

ProfileMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

ProfileMaterialShininess [SimTalk]

Sets the shininess of the profile material of the fence designated by <Path>.

Remarks

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.ProfileMaterialShininess:real
```

Assignment Value

You can assign a value of data type *real* between 0 and 1.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).ProfileMaterialShininess := 0.7
```

See also

[Insert Shape > Fence](#)

Fence Settings

[createFence \[SimTalk\]](#)

[ProfileMaterialActive \[SimTalk\]](#)

[ProfileMaterialAmbientColor \[SimTalk\]](#)

[ProfileMaterialDiffuseColor \[SimTalk\]](#)

[ProfileMaterialShininess \[SimTalk\]](#)

ProfileMaterialSpecularColor [SimTalk]

ProfileMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

ProfileMaterialSpecularColor [SimTalk]

Sets the specular color of the profile material of the fence designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.ProfileMaterialSpecularColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).ProfileMaterialSpecularColor :=  
makeRGBValue(255,0,0)
```

See also

[Insert Shape > Fence](#)

[Fence Settings](#)

[createFence \[SimTalk\]](#)

[ProfileMaterialActive \[SimTalk\]](#)

ProfileMaterialAmbientColor [SimTalk]

ProfileMaterialDiffuseColor [SimTalk]

ProfileMaterialShininess [SimTalk]

ProfileMaterialShininess [SimTalk]

ProfileMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

ProfileMaterialTransparency [SimTalk]

Sets the transparency of the profile material of the fence designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.ProfileMaterialTransparency:real
```

Assignment Value

You can assign a value of data type *real* between 0 and 1.

Example

```
.Models.MyModel._3D.getGraphic("deco", [4]).ProfileMaterialTransparency := 0.9
```

See also

[Insert Shape > Fence](#)

[Fence Settings](#)

[createFence \[SimTalk\]](#)

[ProfileMaterialActive \[SimTalk\]](#)

[ProfileMaterialAmbientColor \[SimTalk\]](#)

[ProfileMaterialDiffuseColor \[SimTalk\]](#)

[ProfileMaterialShininess \[SimTalk\]](#)

[ProfileMaterialShininess \[SimTalk\]](#)

[ProfileMaterialSpecularColor \[SimTalk\]](#)

[_3D.getGraphic \[SimTalk\]](#)

Rack Attributes

[_Rack Attributes](#)

You can set the properties of the **Rack** with the attributes listed in the table of contents to the left.

See also

[Rack](#)

[Rack Settings](#)

[createRack \[SimTalk\]](#)

[_Rack Attributes](#)

[_3D.getGraphic \[SimTalk\]](#)

BayDepth [SimTalk]

Sets the depth of a single storage bay of the rack designated by <Path>.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Note

The attribute *BayDepth* indirectly also sets the depth of the entire rack.

Type

Attribute

Syntax

```
<Path>.BayDepth: length
```

Assignment Value

You can assign a value of data type *length*.

Example

```
MyFrame._3D.getGraphic("deco", [8]).BayDepth := 1.5
```

See also

[Rack > Rack Settings](#)

[createRack \[SimTalk\]](#)

[_Rack Attributes](#)

[_3D.getGraphic \[SimTalk\]](#)

BaySize [SimTalk]

Sets the size of a single storage bay of the rack designated by <Path> in the **XZ-dimension**.

Remarks

The value for X or [0] returns the first value and the value for Y or [1] returns the second value although the orientation in the X/Z-direction is defined from the point of view of the rack.

When you assign values to the attribute, the existing capacity does not change and the overall dimensions of the storage bay, i.e., the values of the attribute *Dimensions* are changed as well.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.BaySize:length[2]
```

Assignment Value

You can assign an *array* of data type *length* with two values.

Example

```
MyFrame._3D.getGraphic("deco", [8]).BaySize := [2, 2.5]
```

See also

[Dimensions \[SimTalk\] - graphic](#)

[Rack > Rack Settings](#)

[createRack \[SimTalk\]](#)

[_Rack Attributes](#)

[_3D.getGraphic \[SimTalk\]](#)

BoardDepth [SimTalk]

Sets the depth of a board of the rack designated by <Path>.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.BoardDepth: length
```

Assignment Value

You can assign an *array* of data type *length*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [8]).BoardDepth := 1.5
```

See also

[Rack > Rack Settings](#)

[createRack \[SimTalk\]](#)

[_Rack Attributes](#)

[_3D.getGraphic \[SimTalk\]](#)

BoardThickness [SimTalk]

Sets the thickness of a board of the rack designated by <Path>.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Note

The *BoardThickness* is not part of the height of the rack.

Type

Attribute

Syntax

```
<Path>.BoardThickness: length
```

Assignment Value

You can assign a value of data type *length*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [8]).BoardThickness := 0.025
```

See also

[Rack > Rack Settings](#)

[createRack \[SimTalk\]](#)

[_Rack Attributes](#)

[_3D.getGraphic \[SimTalk\]](#)

Capacity [SimTalk] - rack

Sets the number of storage bays per board and the number of boards of the rack designated by <Path> in the **XZ-Dimension**.

Remarks

You can specify the storage bays per board in the X-direction (.X/[0]) and the number of boards in the Y-direction (.Y/[1]).

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.Capacity:integer[2]
```

Watchable

The attribute is **watchable**.

Assignment Value

You can assign an *array* of data type *integer* with two values.

Example

```
.Models.MyModel._3D.getGraphic("deco", [8]).Capacity := [4, 4]
```

See also

[Rack > Rack Settings](#)

[createRack \[SimTalk\]](#)

[_Rack Attributes](#)

[_3D.getGraphic \[SimTalk\]](#)

GroundClearance [SimTalk]

Sets the **Ground Clearance** of the rack designated by <Path>.

Remarks



The **Ground Clearance** is the distance between the lower edge of the lowest shelf and the floor on which the rack stands.


Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Note

This setting only applies for the **Store Types > Rack with round/square posts (dynamic)**.

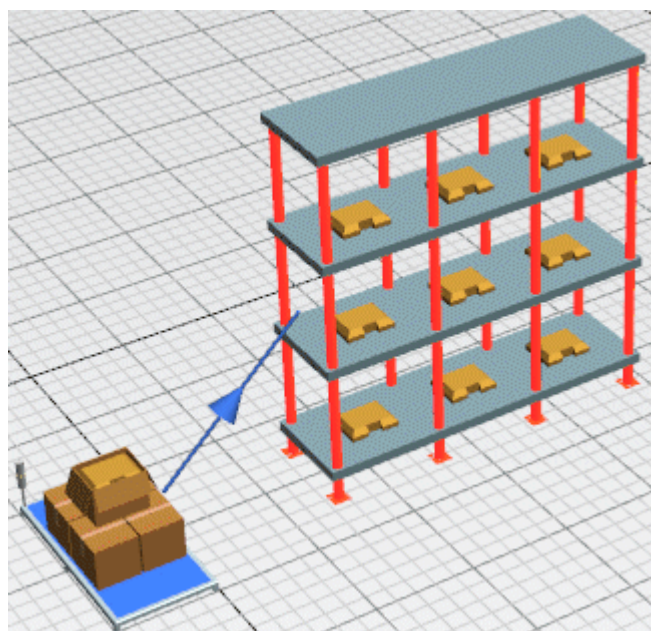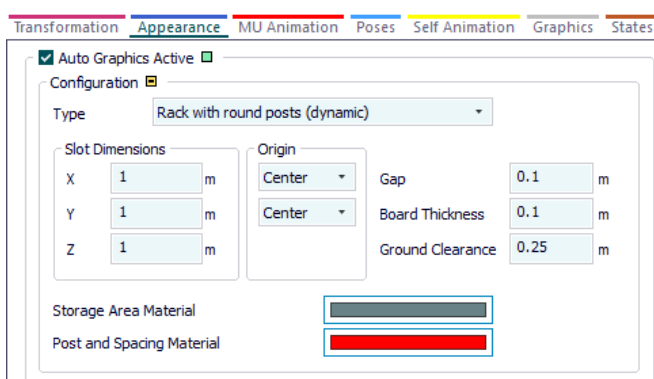

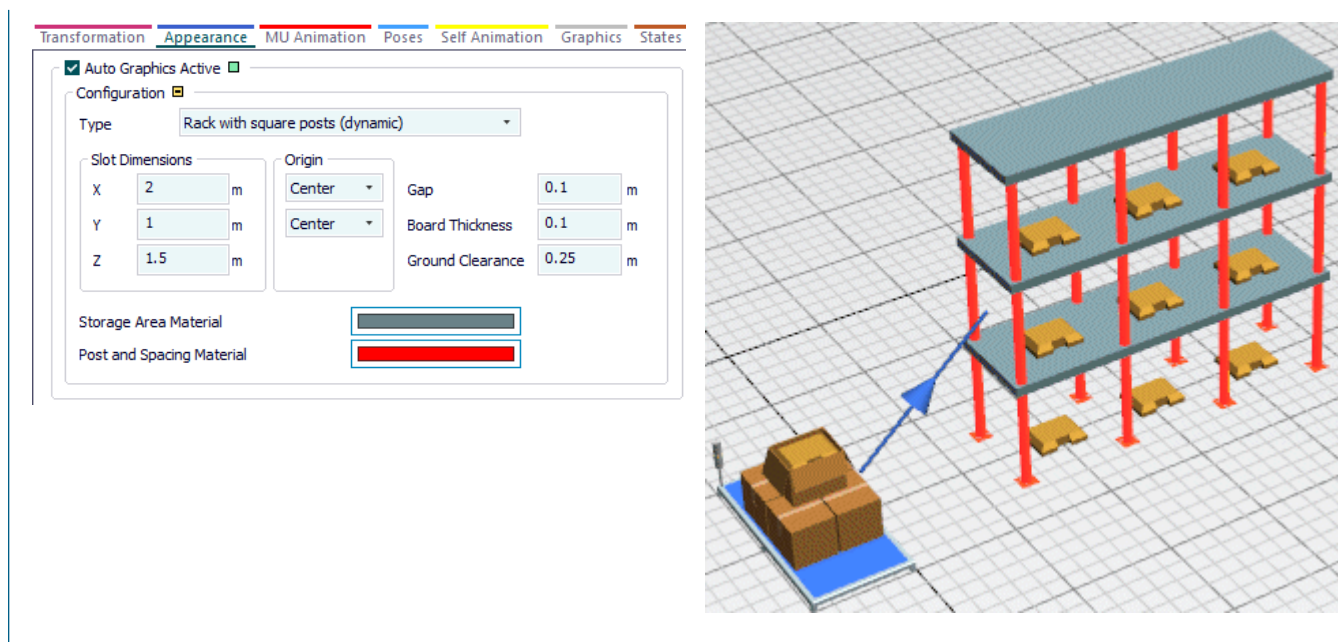

Type

Attribute

Syntax

```
<Path>.GroundClearance: length
```

Assignment Value

You can assign a value of data type *length* which sets the ground clearance.

Specify `void` to use the default ground clearance.

Specify `0` so that the lowest shelf rests flat on the floor.

Example

```
Store3._3D.StoreType := "Rack with round posts (dynamic)"
Store3._3D.Gap := 0.1
Store3._3D.FloorThickness := 0.15
Store3._3D.GroundClearance := 0.3
```

See also

[Appearance of the Store](#) > [Ground Clearance](#)

MinimalStructure [SimTalk]

Sets if the rack designated by <Path> will be optimized for performance (`true`) or for post-processing capability (`false`).

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.MinimalStructure:boolean
```

Assignment Value

You can assign an *array* of data type *boolean*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [8]).MinimalStructure := true
```

See also

[Rack > Rack Settings](#)

[createRack \[SimTalk\]](#)

[_Rack Attributes](#)

[_3D.getGraphic \[SimTalk\]](#)

PostDiameter [SimTalk] - rack

Sets the diameter of the posts the rack designated by <Path>.

Remarks

You can only access the attribute when the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.PostDiameter:length
```

Assignment Value

You can assign a value of data type *length*.

Example

```
MyFrame._3D.getGraphic("deco", [8]).PostDiameter := 0.25
```

See also

[Rack > Rack Settings](#)

[createRack \[SimTalk\]](#)

[_3D.getGraphic \[SimTalk\]](#)

SquarePosts [SimTalk]

Sets if the posts the rack designated by <Path> are square (`true`) or round (`false`).

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.SquarePosts: boolean
```

Assignment Value

You can assign an *array* of data type *boolean*.

Example

```
MyFrame._3D.getGraphic("deco", [8]).SquarePosts := true
```

See also

[Rack > Rack Settings](#)

[createRack \[SimTalk\]](#)

[_3D.getGraphic \[SimTalk\]](#)

Railing Material Attributes

_Railing Material Attributes

You can set the material of the railing around the platform of the **Mezzanine** with the attributes listed in the table of contents to the left.

Note

The railing material does not affect the handrails of the *mezzanine*.

See also

[Insert Shape > Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

RailingMaterialActive [SimTalk]

Activates (`true`) or deactivates (`false`) the material of the railing around the platform of the mezzanine designated by `<Path>`.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Note

The railing material does not affect the handrails of the *mezzanine*.

Type

Attribute

Syntax

```
<Path>.RailingMaterialActive:boolean
```

Assignment Value

You can assign a value of data type *boolean*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).RailingMaterialActive := true
```

See also

[Insert Shape](#) > [Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

[RailingMaterialAmbientColor \[SimTalk\]](#)

[RailingMaterialDiffuseColor \[SimTalk\]](#)

RailingMaterialActive [SimTalk]

RailingMaterialEmissiveColor [SimTalk]

RailingMaterialShininess [SimTalk]

RailingMaterialSpecularColor [SimTalk]

RailingMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

RailingMaterialAmbientColor [SimTalk]

Sets the ambient color of the material of the railing around the platform of the mezzanine designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Note

The railing material does not affect the handrails of the *mezzanine*.

Type

Attribute

Syntax

```
<Path>.RailingMaterialAmbientColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).RailingMaterialAmbientColor :=  
makeRGBValue(255,0,0)
```

See also

[Insert Shape](#) > [Mezzanine](#)

RailingMaterialAmbientColor [SimTalk]

Mezzanine Settings

createMezzanine [SimTalk]

RailingMaterialActive [SimTalk]

RailingMaterialDiffuseColor [SimTalk]

RailingMaterialEmissiveColor [SimTalk]

RailingMaterialShininess [SimTalk]

RailingMaterialSpecularColor [SimTalk]

RailingMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

RailingMaterialDiffuseColor [SimTalk]

Sets the diffuse color of the material of the railing around the platform of the mezzanine designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Note

The railing material does not affect the handrails of the *mezzanine*.

Type

Attribute

Syntax

```
<Path>.RailingMaterialDiffuseColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).RailingMaterialDiffuseColor :=  
makeRGBValue(255, 0, 0)
```

See also

[Insert Shape](#) > [Mezzanine](#)

RailingMaterialDiffuseColor [SimTalk]

Mezzanine Settings

createMezzanine [SimTalk]

RailingMaterialActive [SimTalk]

RailingMaterialAmbientColor [SimTalk]

RailingMaterialEmissiveColor [SimTalk]

RailingMaterialShininess [SimTalk]

RailingMaterialSpecularColor [SimTalk]

RailingMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

RailingMaterialEmissiveColor [SimTalk]

Sets the emissive color of the material of the railing around the platform of the mezzanine designated by `<Path>`.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Note

The railing material does not affect the handrails of the *mezzanine*.

Type

Attribute

Syntax

```
<Path>.RailingMaterialEmissiveColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).RailingMaterialEmissiveColor :=  
makeRGBValue(255, 0, 0)
```

See also

[Insert Shape > Mezzanine](#)

Mezzanine Settings

`createMezzanine` [SimTalk]

`RailingMaterialActive` [SimTalk]

`RailingMaterialAmbientColor` [SimTalk]

`RailingMaterialDiffuseColor` [SimTalk]

`RailingMaterialShininess` [SimTalk]

`RailingMaterialSpecularColor` [SimTalk]

`RailingMaterialTransparency` [SimTalk]

`_3D.getGraphic` [SimTalk]

RailingMaterialShininess [SimTalk]

Sets the shininess of the material of the railing around the platform of the mezzanine designated by <Path>.

Remarks

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Note

The railing material does not affect the handrails of the *mezzanine*.

Type

Attribute

Syntax

```
<Path>.RailingMaterialShininess:real
```

Assignment Value

You can assign a value of data type *real* between 0 and 1.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).RailingMaterialShininess := 0.9
```

See also

[Insert Shape > Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

[RailingMaterialActive \[SimTalk\]](#)

RailingMaterialShininess [SimTalk]

RailingMaterialAmbientColor [SimTalk]

RailingMaterialDiffuseColor [SimTalk]

RailingMaterialEmissiveColor [SimTalk]

RailingMaterialSpecularColor [SimTalk]

RailingMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

RailingMaterialSpecularColor [SimTalk]

Sets the specular color of the material of the railing around the platform of the mezzanine designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.RailingMaterialSpecularColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).RailingMaterialSpecularColor :=  
makeRGBValue(255, 0, 0)
```

See also

[Insert Shape](#) > [Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

[RailingMaterialActive \[SimTalk\]](#)

RailingMaterialSpecularColor [SimTalk]

RailingMaterialAmbientColor [SimTalk]

RailingMaterialDiffuseColor [SimTalk]

RailingMaterialEmissiveColor [SimTalk]

RailingMaterialShininess [SimTalk]

RailingMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

RailingMaterialTransparency [SimTalk]

Sets the transparency of the material of the railing around the platform of the mezzanine designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Note

The railing material does not affect the handrails of the *mezzanine*.

Type

Attribute

Syntax

```
<Path>.RailingMaterialTransparency:real
```

Assignment Value

You can assign a value of data type *integer*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).RailingMaterialTransparency :=  
0.9
```

See also

[Insert Shape](#) > [Mezzanine](#)

[Mezzanine Settings](#)

[createMezzanine \[SimTalk\]](#)

[RailingMaterialActive \[SimTalk\]](#)

[RailingMaterialAmbientColor \[SimTalk\]](#)

[RailingMaterialDiffuseColor \[SimTalk\]](#)

[RailingMaterialEmissiveColor \[SimTalk\]](#)

[RailingMaterialShininess \[SimTalk\]](#)

[RailingMaterialSpecularColor \[SimTalk\]](#)

[_3D.getGraphic \[SimTalk\]](#)

Stairs Attributes

[_Stairs Attributes](#)

You can set the properties of the **Stairs** with the attributes listed in the table of contents to the left.

See also

[Stairs > Stairs Settings](#)

[createRack \[SimTalk\]](#)

[_Stairs Attributes](#)

[_3D.getGraphic \[SimTalk\]](#)

Rise [SimTalk]

Sets the height of the *staircase* designated by <Path>.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Note

The attribute is available for graphics of type **Stairs**, compare *InternalGraphicType*.

Type

Attribute

Syntax

```
<Path>.Rise: length
```

Assignment Value

You can assign an *array* of data type *length*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [3]).Rise := 3.5
```

See also

[InternalGraphicType \[SimTalk\]](#)

[Stairs > Stairs Settings](#)

[createRack \[SimTalk\]](#)

[_Stairs Attributes](#)

[_3D.getGraphic \[SimTalk\]](#)

Run [SimTalk]

Returns the depth the *staircase* designated by <Path>.

Type

Attribute

Syntax

```
<Path>.Run → length
```

Return Value

The return value has the data type *length*.

Example

```
print .Models.MyModel._3D.getGraphic("deco", [3]).Run
```

See also

[Stairs](#) > [Stairs Settings](#)

[_3D.getGraphic \[SimTalk\]](#)

[_Stairs Attributes](#)

[createRack \[SimTalk\]](#)

TreadWidth [SimTalk]

Sets the width of the treads of the *staircase* designated by <Path>.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Note

TreadWidth is available for graphics of type **Stairs**, compare *InternalGraphicType*.

Type

Attribute

Syntax

```
<Path>.TreadWidth: length
```

Assignment Value

You can assign an *array* of data type *length*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [3]).TreadWidth := 4
```

See also

[InternalGraphicType \[SimTalk\]](#)

[Stairs > Stairs Settings](#)

[createRack \[SimTalk\]](#)

[_Stairs Attributes](#)

[_3D.getGraphic \[SimTalk\]](#)

Stringer Material Attributes

_Stringer Material Attributes

You can set the *Stringer Material* of the **Stairs** with the attributes listed in the table of contents to the left.

Remarks

Note

The attributes are available for graphics of type **Stairs**, compare *InternalGraphicType*.

Note

The stringer material does not affect the handrails of the *staircase*.

SimTalk

[InternalGraphicType \[SimTalk\]](#)

[createStairs \[SimTalk\]](#)

[_3D.getGraphic \[SimTalk\]](#)

See also

[Stairs > Stairs Settings](#)

[_Stairs Attributes](#)

StringerMaterialActive [SimTalk]

Activates (`true`) or deactivates (`false`) the material of the stringers of the staircase designated by `<Path>`.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Note

The stringer material does not affect the handrails of the *staircase*.

Type

Attribute

Syntax

```
<Path>.StringerMaterialActive:boolean
```

Assignment Value

You can assign a value of data type *boolean*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [4]).StringerMaterialActive := true
```

See also

Stairs > Stairs Settings	StringerMaterialEmissiveColor [SimTalk]
createRack [SimTalk]	StringerMaterialShininess [SimTalk]
_Stairs Attributes	StringerMaterialSpecularColor [SimTalk]
StringerMaterialAmbientColor [SimTalk]	StringerMaterialTransparency [SimTalk]
StringerMaterialDiffuseColor [SimTalk]	_3D.getGraphic [SimTalk]

StringerMaterialAmbientColor [SimTalk]

Sets the ambient color of the material of the stringers of the staircase designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Note

The stringer material does not affect the handrails of the *staircase*.

Type

Attribute

Syntax

<Path>.StringerMaterialAmbientColor:integer

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method `makeRGBValue`.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).StringerMaterialAmbientColor := makeRGBValue(255, 0, 0)
```

See also

Stairs > Stairs Settings	StringerMaterialEmissiveColor [SimTalk]
createRack [SimTalk]	StringerMaterialShininess [SimTalk]

_Stairs Attributes	StringerMaterialSpecularColor [SimTalk]
StringerMaterialAmbientColor [SimTalk]	StringerMaterialTransparency [SimTalk]
StringerMaterialDiffuseColor [SimTalk]	3D.getGraphic

StringerMaterialDiffuseColor [SimTalk]

Sets the diffuse color of the material of the stringers of the staircase designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Note

The stringer material does not affect the handrails of the *staircase*.

Type

Attribute

Syntax

```
<Path>.StringerMaterialDiffuseColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).StringerMaterialDiffuseColor := makeRGBValue(255, 0, 0)
```

See also

Stairs > Stairs Settings	StringerMaterialEmissiveColor [SimTalk]
createRack [SimTalk]	StringerMaterialShininess [SimTalk]

_Stairs Attributes	StringerMaterialSpecularColor [SimTalk]
StringerMaterialAmbientColor [SimTalk]	StringerMaterialTransparency [SimTalk]
StringerMaterialDiffuseColor [SimTalk]	_3D.getGraphic [SimTalk]

StringerMaterialEmissiveColor [SimTalk]

Sets the emissive color of the material of the stringers of the staircase designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Note

The stringer material does not affect the handrails of the *staircase*.

Type

Attribute

Syntax

```
<Path>.StringerMaterialEmissiveColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method `makeRGBValue`.

Example

```
.Models.MyModel._3D.getGraphic("deco",  
[5]).StringerMaterialEmissiveColor := makeRGBValue(255,0,0)
```

See also

Stairs > Stairs Settings	StringerMaterialDiffuseColor
createRack [SimTalk]	StringerMaterialShininess [SimTalk]

_Stairs Attributes	StringerMaterialSpecularColor [SimTalk]
StringerMaterialActive [SimTalk]	StringerMaterialTransparency [SimTalk]
StringerMaterialAmbientColor [SimTalk]	_3D.getGraphic [SimTalk]

StringerMaterialShininess [SimTalk]

Sets the shininess of the material of the stringers of the staircase designated by <Path>.

Remarks

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Note

The stringer material does not affect the handrails of the *staircase*.

Type

Attribute

Syntax

<Path>.StringerMaterialShininess:real

Assignment Value

You can assign a value of data type *real* between 0 and 1.

Example

.Models.MyModel._3D.getGraphic("deco", [5]).StringerMaterialShininess := 0.5

See also

Stairs > Stairs Settings	StringerMaterialDiffuseColor [SimTalk]
createRack [SimTalk]	StringerMaterialEmissiveColor [SimTalk]
_Stairs Attributes	StringerMaterialSpecularColor [SimTalk]
StringerMaterialActive [SimTalk]	StringerMaterialTransparency [SimTalk]
StringerMaterialAmbientColor [SimTalk]	_3D.getGraphic [SimTalk]

StringerMaterialSpecularColor [SimTalk]

Sets the specular color of the material of the stringers of the staircase designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (MaterialActive := true).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Note

The stringer material does not affect the handrails of the *staircase*.

Type

Attribute

Syntax

```
<Path>.StringerMaterialSpecularColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco",  
[5]).StringerMaterialSpecularColor := makeRGBValue(255,0,0)
```

See also

Stairs > Stairs Settings	StringerMaterialDiffuseColor [SimTalk]
createRack [SimTalk]	StringerMaterialEmissiveColor [SimTalk]

_Stairs Attributes	StringerMaterialShininess [SimTalk]
StringerMaterialActive [SimTalk]	StringerMaterialTransparency [SimTalk]
StringerMaterialAmbientColor [SimTalk]	_3D.getGraphic [SimTalk]

StringerMaterialTransparency [SimTalk]

Sets the transparency of the material of the stringers of the staircase designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (MaterialActive := true).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Note

The stringer material does not affect the handrails of the *staircase*.

Type

Attribute

Syntax

```
<Path>.StringerMaterialTransparency:real
```

Assignment Value

You can assign a value of data type *real* between 0 and 1.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).StringerMaterialTransparency := 0.5
```

See also

Stairs > Stairs Settings	StringerMaterialDiffuseColor [SimTalk]
createRack [SimTalk]	StringerMaterialEmissiveColor [SimTalk]
_Stairs Attributes	StringerMaterialShininess [SimTalk]

StringerMaterialActive [SimTalk]	StringerMaterialSpecularColor [SimTalk]
StringerMaterialAmbientColor [SimTalk]	_3D.getGraphic [SimTalk]

Tread Material Attributes

_Tread Material Attributes

You can set the *Tread Material* of the **Stairs** with the attributes listed in the table of contents to the left.

Note

The attributes are available for graphics of type **Stairs**, compare [InternalGraphicType \[SimTalk\]](#).

See also

[Stairs > Stairs Settings](#)

[createRack \[SimTalk\]](#)

[_Stairs Attributes](#)

[_3D.getGraphic \[SimTalk\]](#)

TreadMaterialActive [SimTalk]

Activates (true) or deactivates (false) the material of the treads of the staircase designated by <Path>.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.TreadMaterialActive:boolean
```

Assignment Value

You can assign a value of data type *boolean*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [4]).TreadMaterialActive := true
```

See also

Stairs > Stairs Settings	TreadMaterialEmissiveColor [SimTalk]
createRack [SimTalk]	TreadMaterialShininess [SimTalk]
_Stairs Attributes	TreadMaterialSpecularColor [SimTalk]
TreadMaterialAmbientColor [SimTalk]	TreadMaterialTransparency [SimTalk]
TreadMaterialDiffuseColor [SimTalk]	_3D.getGraphic [SimTalk]

TreadMaterialAmbientColor [SimTalk]

Sets the ambient color of the material of the treads of the staircase designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (MaterialActive := true).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.TreadMaterialAmbientColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).TreadMaterialAmbientColor :=  
makeRGBValue(255,0,0)
```

See also

Stairs > Stairs Settings	TreadMaterialEmissiveColor [SimTalk]
createRack [SimTalk]	TreadMaterialShininess [SimTalk]
_Stairs Attributes	TreadMaterialSpecularColor [SimTalk]
TreadMaterialActive [SimTalk]	TreadMaterialTransparency [SimTalk]
TreadMaterialDiffuseColor [SimTalk]	_3D.getGraphic [SimTalk]

TreadMaterialDiffuseColor [SimTalk]

Sets the diffuse color of the material of the treads of the staircase designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (MaterialActive := true).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.TreadMaterialDiffuseColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).TreadMaterialDiffuseColor :=  
makeRGBValue(255,0,0)
```

See also

Stairs > Stairs Settings	TreadMaterialEmissiveColor [SimTalk]
createRack [SimTalk]	TreadMaterialShininess [SimTalk]
_Stairs Attributes	TreadMaterialSpecularColor [SimTalk]
TreadMaterialActive [SimTalk]	TreadMaterialTransparency [SimTalk]
TreadMaterialAmbientColor [SimTalk]	_3D.getGraphic [SimTalk]

TreadMaterialEmissiveColor [SimTalk]

Sets the emissive color of the material of the treads of the staircase designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (MaterialActive := true).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.TreadMaterialEmissiveColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).TreadMaterialEmissiveColor := makeRGBValue(255,0,0)
```

See also

Stairs > Stairs Settings	TreadMaterialDiffuseColor [SimTalk]
createRack [SimTalk]	TreadMaterialShininess [SimTalk]
_Stairs Attributes	TreadMaterialSpecularColor [SimTalk]
TreadMaterialActive [SimTalk]	TreadMaterialTransparency [SimTalk]
TreadMaterialAmbientColor [SimTalk]	_3D.getGraphic [SimTalk]

TreadMaterialShininess [SimTalk]

Sets the shininess of the material of the treads of the staircase designated by <Path>.

Remarks

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.TreadMaterialShininess:real
```

Assignment Value

You can assign a value of data type *real* between 0 and 1.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).TreadMaterialShininess := 0.5
```

See also

Stairs > Stairs Settings	TreadMaterialDiffuseColor [SimTalk]
createRack [SimTalk]	TreadMaterialEmissiveColor [SimTalk]
_Stairs Attributes	TreadMaterialSpecularColor [SimTalk]
TreadMaterialActive [SimTalk]	TreadMaterialTransparency [SimTalk]
TreadMaterialAmbientColor [SimTalk]	_3D.getGraphic [SimTalk]

TreadMaterialSpecularColor [SimTalk]

Sets the specular color of the material of the treads of the staircase designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (MaterialActive := true).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.TreadMaterialSpecularColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).TreadMaterialSpecularColor := makeRGBValue(255,0,0)
```

See also

Stairs > Stairs Settings	TreadMaterialDiffuseColor [SimTalk]
createRack [SimTalk]	TreadMaterialEmissiveColor [SimTalk]
_Stairs Attributes	TreadMaterialShininess [SimTalk]
TreadMaterialActive [SimTalk]	TreadMaterialTransparency [SimTalk]
TreadMaterialAmbientColor [SimTalk]	_3D.getGraphic [SimTalk]

TreadMaterialTransparency [SimTalk]

Sets the transparency of the material of the treads of the staircase designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.TreadMaterialTransparency:real
```

Assignment Value

You can assign a value of data type *real* between 0 and 1.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).TreadMaterialTransparency := 0.5
```

See also

Stairs > Stairs Settings	TreadMaterialDiffuseColor [SimTalk]
createRack [SimTalk]	TreadMaterialEmissiveColor [SimTalk]
_Stairs Attributes	TreadMaterialShininess [SimTalk]
TreadMaterialActive [SimTalk]	TreadMaterialSpecularColor [SimTalk]
TreadMaterialAmbientColor [SimTalk]	_3D.getGraphic [SimTalk]

Wall Material Attributes

_Wall Material Attributes

You can set the *Wall Material* of the **Factory Walls** with the attributes listed in the table of contents to the left.

See also

[Insert Shape](#) > [Factory Walls](#) > [Factory Walls Settings](#)

[createFactoryWalls \[SimTalk\]](#)

WallMaterialActive [SimTalk]

Activates (`true`) or deactivates (`false`) the wall material of the factory walls designated by `<Path>`.

Remarks

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.WallMaterialActive:boolean
```

Assignment Value

You can assign a value of data type *boolean*.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).WallMaterialActive := true
```

See also

[Insert Shape > Factory Walls](#)

[Factory Walls Settings](#)

[createFactoryWalls \[SimTalk\]](#)

[WallMaterialAmbientColor \[SimTalk\]](#)

[WallMaterialDiffuseColor \[SimTalk\]](#)

[WallMaterialEmissiveColor \[SimTalk\]](#)

[WallMaterialShininess \[SimTalk\]](#)

[WallMaterialSpecularColor \[SimTalk\]](#)

WallMaterialActive [SimTalk]

WallMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

WallMaterialAmbientColor [SimTalk]

Sets the ambient color of the wall material of the factory walls designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.WallMaterialAmbientColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).WallMaterialAmbientColor :=  
makeRGBValue(255,0,0)
```

See also

[Insert Shape > Factory Walls](#)

[Factory Walls Settings](#)

[createFactoryWalls \[SimTalk\]](#)

[WallMaterialActive \[SimTalk\]](#)

WallMaterialAmbientColor [SimTalk]

WallMaterialDiffuseColor [SimTalk]

WallMaterialEmissiveColor [SimTalk]

WallMaterialShininess [SimTalk]

WallMaterialSpecularColor [SimTalk]

WallMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

WallMaterialDiffuseColor [SimTalk]

Sets the diffuse color of the wall material of the factory walls designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.WallMaterialDiffuseColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).WallMaterialDiffuseColor :=  
makeRGBValue(255,0,0)
```

See also

[Insert Shape > Factory Walls](#)

[Factory Walls Settings](#)

[createFactoryWalls \[SimTalk\]](#)

[WallMaterialActive \[SimTalk\]](#)

WallMaterialDiffuseColor [SimTalk]

WallMaterialAmbientColor [SimTalk]

WallMaterialEmissiveColor [SimTalk]

WallMaterialShininess [SimTalk]

WallMaterialSpecularColor [SimTalk]

WallMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

WallMaterialEmissiveColor [SimTalk]

Sets the emissive color of the wall material of the factory walls designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (`MaterialActive := true`).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.WallMaterialEmissiveColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).WallMaterialEmissiveColor :=  
makeRGBValue(255,0,0)
```

See also

[Insert Shape > Factory Walls](#)

[Factory Walls Settings](#)

[createFactoryWalls \[SimTalk\]](#)

[WallMaterialActive \[SimTalk\]](#)

WallMaterialEmissiveColor [SimTalk]

WallMaterialAmbientColor [SimTalk]

WallMaterialDiffuseColor [SimTalk]

WallMaterialShininess [SimTalk]

WallMaterialSpecularColor [SimTalk]

WallMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

WallMaterialShininess [SimTalk]

Sets the shininess of the wall material of the factory walls designated by <Path>.

Remarks

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.WallMaterialShininess:real
```

Assignment Value

You can assign a value of data type *real* between 0 and 1.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).WallMaterialShininess := 0.9
```

See also

[Insert Shape > Factory Walls](#)

[Factory Walls Settings](#)

[createFactoryWalls \[SimTalk\]](#)

[WallMaterialActive \[SimTalk\]](#)

[WallMaterialAmbientColor \[SimTalk\]](#)

[WallMaterialDiffuseColor \[SimTalk\]](#)

[WallMaterialEmissiveColor \[SimTalk\]](#)

WallMaterialShininess [SimTalk]

WallMaterialSpecularColor [SimTalk]

WallMaterialTransparency [SimTalk]

_3D.getGraphic [SimTalk]

WallMaterialSpecularColor [SimTalk]

Sets the specular color of the wall material of the factory walls designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (MaterialActive := true).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.WallMaterialSpecularColor:integer
```

Assignment Value

You can assign a value of data type *integer*.

You will usually set the color with the method [makeRGBValue \[SimTalk\]](#).

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).WallMaterialSpecularColor := makeRGBValue(255,0,0)
```

See also

Insert Shape > Factory Walls > Factory Walls Settings	WallMaterialEmissiveColor [SimTalk]
createFactoryWalls [SimTalk]	WallMaterialShininess [SimTalk]
WallMaterialActive [SimTalk]	WallMaterialTransparency [SimTalk]

WallMaterialAmbientColor [SimTalk]	_3D.getGraphic [SimTalk]
WallMaterialDiffuseColor [SimTalk]	

WallMaterialTransparency [SimTalk]

Sets the transparency of the wall material of the factory walls designated by <Path>.

Remarks

When assigning a value to the attribute, we automatically set the material to active (MaterialActive := true).

You can only access the attribute if the material is active.

Assigning the attribute deactivates graphic inheritance.

You cannot assign the attribute when the graphic is an automatically generated graphic group or when the graphic is located in an automatically generated graphic group.

Type

Attribute

Syntax

```
<Path>.WallMaterialTransparency:real
```

Assignment Value

You can assign a value of data type *real* between 0 and 1.

Example

```
.Models.MyModel._3D.getGraphic("deco", [5]).WallMaterialTransparency := 0.9
```

See also

Insert Shape > Factory Walls > Factory Walls Settings	WallMaterialEmissiveColor [SimTalk]
createFactoryWalls [SimTalk]	WallMaterialShininess [SimTalk]
WallMaterialActive [SimTalk]	WallMaterialSpecularColor [SimTalk]
WallMaterialAmbientColor [SimTalk]	_3D.getGraphic [SimTalk]
WallMaterialDiffuseColor [SimTalk]	