


Outdated SimTalk Names

Previous versions of *Plant Simulation* provided a number of *SimTalk* attributes, *SimTalk* read-only attributes and *SimTalk* methods, which the current version does not support any longer.

Below we list the outdated names of *SimTalk* attributes, *SimTalk* read-only attributes and *SimTalk* methods and of the attributes, read-only attributes, and methods that replace them in alphabetical order.

The command **Find Outdated Functions** on the tab **Debugger** finds all outdated functions in your model and shows them in a window.

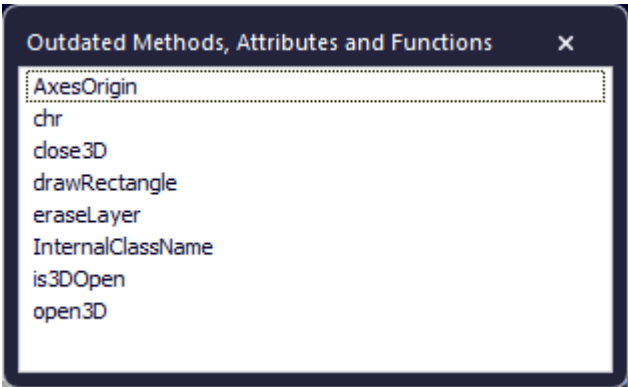

Plant Simulation shows outdated functions in the source code in this color **toLower**.

Outdated English	Replaced by	Outdated German
__checkForLicense	checkForLicense [SimTalk]	__checkForLicense
__setRandomSeedCounter	setRandomSeedCounter [SimTalk]	__setRandomSeedCounter
Active	ServerSocket [SimTalk]	Aktiv
Active (Chart, GanttChart, SankeyDiagram)	IsShown [SimTalk] - Chart	Aktiv
ActReceiver	no longer supported, EventController	AktEmpfaenger/ AktEmpfänger
animIcon	animation [SimTalk]	animIcon
animMU	animation [SimTalk]	animBE
AttributType	AttributeType [SimTalk] - material flow objects	AttributType
AutoFormat	no longer supported, Sorter	AutoFormat

Outdated English	Replaced by	Outdated German
Available	Failed [SimTalk] - material flow objects, Pause [SimTalk] - material flow objects, Unplanned [SimTalk] - material flow objects	Verfuegbar/Verfügbar
BarMode	DisplayType [SimTalk]	BalkenModus
BatChargeCnt	StatBatChargeCount [SimTalk]	BatAnzLaden
BatChargeStat	StatBatChargePortion [SimTalk]	BatLadeStat
blockingPercentage	StatBlockingPortion [SimTalk]	blockiertAnteil
BlockTimeStat	no longer supported, MUs	Blockzeitstat
BookPnt	BookPntLRelative [SimTalk]	BuchPkt
BookPntH	BookPntHRelative [SimTalk]	BuchPktH
BookPntL	BookPntLRelative [SimTalk]	BuchPktL
BookPntW	BookPntWRelative [SimTalk]	BuchPktW
BreakCtrl	PauseCtrl [SimTalk]	BreakCtrl
BumpCtrl	CollisionCtrl [SimTalk] - Transporter	BumpCtrl
Bumped	Collided [SimTalk]	Bumped
ChannelID	no longer supported	KanalID
closeFile	no longer supported	schliesseDatei
columnwise	no longer supported	Spaltenorientiert
commonFormat	setCommonFormat [SimTalk] setCommonFormatData [SimTalk] - DataTable	gemeinsamesFormat
connect3DViewer	no longer supported	verbinde3DViewer
ConnectTo3D	no longer supported	Mit3DVerbinden
continue	Stopped [SimTalk] - MUs := false	fahren
copyToClipboard	no longer supported	kopiereInZwischenablage
create	createNestedList [SimTalk] - local variable	create
createAttribute	createAttr [SimTalk]	createAttribute
createBuildingBlock	derive [SimTalk] duplicate [SimTalk]	erzeugeBaustein

Outdated English	Replaced by	Outdated German
createObject	derive [SimTalk] duplicate [SimTalk]	erzeugeObjekt
creationTable	getWorkersToCreateTableRow [SimTalk] - WorkerPool	erzeugungsTabelle
Ctrl	Control [SimTalk] - sensors	Ctrl
CurAmount	CurrentAmount [SimTalk] - Mixer	CurAmount
CurrImg	no longer supported	CurrImg
cutRow	remove [SimTalk] - DataList	cutRow
deleteAttribute	deleteAttr [SimTalk]	deleteAttribute
deleteBuildingBlock	deleteObject [SimTalk]	vernichteBaustein
deleteBreakpoint	no longer supported, EventController	vernichteHaltepunkt
DeleteMUsOnReset	no longer supported, EventController	BEsBeimResetLöschen
DestList	FwDestList [SimTalk]	Zielliste
DisplayMode	DisplayType [SimTalk]	Typ
DisplayText	Text [SimTalk] - Comment	Anzeige
DismantleList	DismantleTable [SimTalk]	DemontageListe
DistancelsBelowLimit	DistanceObjectBelowLimit [SimTalk]	AbstandUnterschritten
drawLineSegment	no longer supported	zeichneLinienAbschnitt
emptyPercentage	StatEmptyPortion [SimTalk]	leerAnteil
EntryAutoFormat	no longer supported, FlowControl	AutoFormatEingang
entryOpen	EntranceOpen [SimTalk] - material flow objects	entryOpen
EvaluationInterface	no longer supported, GAOptimization	BewertungsSchnittstelle
executeSilentOld	executeSilent [SimTalk]	executeSilentOld
ExitAutoFormat	no longer supported, FlowControl	AutoFormatAusgang
ExitForNextEnteringMU	ExitForMU [SimTalk]	AusgangFürEintretendesBE
exitSimple	exitApplication [SimTalk]	beendeSimple
ExitStrategyPercentageList	ExitStrategyPercentageValues [SimTalk] - material flow objects	AusgangsStrategieProzentListe

Outdated English	Replaced by	Outdated German
ExitStrategyRandomPercentageList	ExitStrategyPercentageValues [SimTalk] - material flow objects	AusgangsStrategieZufallProzentListe
ExitStrategySequenceList	ExitStrategySequence [SimTalk]	AusgangsStrategieReihenfolgeListe
exportData	no longer supported, Plotter	exportiereWerte
exp	no longer supported, Exporter, Worker	exp
Expression	Path [SimTalk] - Source	Ausdruck
externCall	no longer supported	externCall
F3DBlock3DUpdate	no longer supported	F3DBlock3DUpdate
FailImporterActive	FailImp. Active [SimTalk] - importer	StoerImporterAktiv/ StörlImporterAktiv
failPercentage	StatFailPortion [SimTalk]	stoerungsAnteil
failRelToWorkTime	Failures.<NameOfFailureProfile>. Mode [SimTalk] - failure profile	FehlerArbeitszeitbezogen
FaultTimeStat	StatFailTimePortion [SimTalk]	Gestoertzeitstat
FileCursor	no longer supported	DateiZeiger
freeEntry	EntranceFree [SimTalk]	freeEntry
generationTable	creationTable [SimTalk] - Source	generationTable
GenerationTableActive	creationTable [SimTalk] - Source	GenerationTableActive
getAdministeredExporters	AdministeredExporters [SimTalk]	getAdministeredExporters
getAttributeList	getAttributeList [SimTalk] - Converter setAttributeList [SimTalk] - Converter	getAttributeList
getBreakpointCondition	no longer supported, EventController	holeHaltepunktBedingung
getBreakpointReceiver	no longer supported, EventController	holeHaltepunktEmpfaenger/ holeHaltepunktEmpfänger
getBreakpointSender	no longer supported, EventController	holeHaltepunktSender
getBreakpointStartTime	no longer supported, EventController	holeHaltepunktStartZeit
getBreakpointStopTime	no longer supported, EventController	holeHaltepunktStopZeit
getBreakpointTraceFile	no longer supported, EventController	holeHaltepunktTraceFile
getBreakpointType	no longer supported, EventController	holeHaltepunktTyp
getBValue	getColor [SimTalk]	holeBWert

Outdated English	Replaced by	Outdated German
getRValue		holeRWert
getGValue		holeGWert
getColumnNumber	getColumnNo [SimTalk]	holeSpaltenNr
getCreationTable	getWorkersToCreateTable [SimTalk]	holeErzeugungstabelle
getCurrlcon	no longer supported	getCurrlcon
getCurrlconNo	no longer supported	getCurrlconNo
getCursor	CursorX [SimTalk] CursorY [SimTalk]	holeZeiger
getCursorX	CursorX [SimTalk]	getCursorX
getCursorY	CursorY [SimTalk]	getCursorY
getData	no longer supported, Dialog	holeDaten
getFileCursor	no longer supported	holeDateiZeiger
getFileName	FileName [SimTalk] - FileInterface	holeDateiName
getFormatData	copyFormatTo [SimTalk]	holeFormatDaten
getItems	Items [SimTalk] - DropDownList	holeEinträge
getListIndex	getIndex [SimTalk]	holeListIndex
getLoadedExternal	getLoadedLibrary [SimTalk]	getLoadedExternal
getLocalTime	sysDate [SimTalk]	getLocalTime
getLockoutZoneList	AssignedLockoutzones [SimTalk]	holeSchutzbereichListe
getMaxDepthOfCalls	no longer supported	holeMaxAufruftiefe
getMaxNumberOfCallChains	no longer supported	holeMaxAnzAufrufketten
getMaxSuspendedMethods	no longer supported	holeMaxSuspendierteMethoden
getObjects	Objects [SimTalk] - LockoutZone	holeObjekte
getPopIndex	no longer supported	holePopIndex
getRouteToDestination	getRoute [SimTalk] - Transporter	holeRouteZuZiel
getRowNumber	getRowNo [SimTalk]	holeZeilenNr
getServices	Services [SimTalk] - Worker	holeDienste

Outdated English	Replaced by	Outdated German
getSupportedServices	SupportedServices [SimTalk]	holeUnterstützteDienste
getTabIndex	getIndex [SimTalk]	holeRegisterkartenIndex
getTriggerList	Trigger [SimTalk]	holeTriggerListe
getValue	value [SimTalk] - TimeSequence	holeWert
getValue [Python]	get [SimTalk]	getValue [Python]
getWorkerCreationTable	getWorkersToCreateTableRow [SimTalk] - WorkerPool	holeWerkerErzeugungstabelle
graphicsMode	ChartType [SimTalk]	Grafikmodus
gridlines	getAnnotations [SimTalk] setAnnotations [SimTalk]	Gitterlinien
Height	ObjectHeight [SimTalk] - Button	Höhe
hideLockBBL	no longer supported	hideLockBBL
homeDrivingTime	StatHomeDrivingTime [SimTalk]	Heimfahrzeit
HTMLHelp	no longer supported	HTMLHelp
IconAngle	no longer supported	BildWinkel
IconRotation	no longer supported	BildDrehung
ImporterActive	Imp.Active [SimTalk] - importer	ImporterAktiv
ImportTable	no longer supported, XMLInterface	ImportTabelle
inactive	Pause [SimTalk] - material flow objects	inactive
increment	+==Operator in SimTalk	inkrementiere
indexXDim	XDimIndex [SimTalk]	indexXDim
indexYDim	YDimIndex [SimTalk]	indexYDim
InheritHasInitValue	inheritAttribute [SimTalk] - user-defined attribute getAttribute [SimTalk] - user-defined attribute setAttribute [SimTalk] - user-defined attribute	ErbeHatAnfangsWert
InheritInitValue	inheritAttribute [SimTalk] - user-defined attribute	ErbeAnfangsWert

Outdated English	Replaced by	Outdated German
	getAttribute [SimTalk] - user-defined attribute setAttribute [SimTalk] - user-defined attribute	
inheritPos	inheritAttribute [SimTalk] - object("Coordinate3D")	inheritPos
inheritPosition	inheritAttribute [SimTalk] - object("Coordinate3D") _3D.inheritAttribute [SimTalk]	erbePosition
inheritSizeAndOrientation	inheritAttribute [SimTalk] - object _3D.inheritAttribute [SimTalk]	erbeGrößeUndAusrichtung
InheritsProgram	getAttribute [SimTalk] - object	ErbtProgramm
InheritValue, user-defined attribute	inheritAttribute [SimTalk] - user-defined attribute getAttribute [SimTalk] - user-defined attribute setAttribute [SimTalk] - user-defined attribute	erbeWert
InheritValue, Variable	Variable.inheritAttribute [SimTalk] - object("Value")	erbeWert
InitVal	InitValue [SimTalk] - Variable	InitVal
InternalClassName	InternalClassType [SimTalk]	InternalClassName
Interval	Distance [SimTalk]	Intervall
IntTimeStat	no longer supported	UbzeitStat
is64BitApplication	no longer supported	is64BitApplication
ItemID	TargetFolder [SimTalk]	ElementID
lineSeparator	no longer supported	zeilenTrennzeichen
list	table for the Empirical Distributions	liste
loadExternal	no longer supported	loadExternal
markers	no longer supported	Markierungen

Outdated English	Replaced by	Outdated German
MatrixLoadBay	LoadBayType [SimTalk]	MatrixladeFlaeche
maxNumMU	StatMaxNumMU [SimTalk] - MUs	maxAnzahlBes
methcall	executeIn [SimTalk]	methaufr
mirrorHorizontally	no longer supported	spiegelnHorizontal
mirrorVertically	no longer supported	spiegelnVertikal
ModifyStructure	LockStructure [SimTalk]	StrukturAendern/ StrukturÄndern
move	no longer supported, PickAndPlace-Robot	umlagern
MovingAcceleration	CurrentAcceleration [SimTalk] - Conveyor	Bewegungsbeschl
MovingSpeed	CurrentSpeed [SimTalk] - Conveyor	Bewegungsgeschw
MU	Alpha [SimTalk] , Gamma distribution, Weibull distribution	MU
newCallChain	executeNewCallChain [SimTalk]	neueAufrufkette
numAttributes	NumAttr [SimTalk]	numAttributes
numIn	StatNumIn [SimTalk] - material flow objects	anzahlEin
numOut	StatNumOut [SimTalk] - material flow objects	anzahlAus
open3DWindow	_3D.openWindow [SimTalk]	öffne3DFenster
openURLInMainWindow	no longer supported	openURLInMainWindow
orderEmptyTime	StatOrderEmptyTime [SimTalk]	AuftragLeerZeit
orderOccTime	StatOrderOccTime [SimTalk]	AuftragBelegtZeit
paste	insertList [SimTalk]	einfuegeListe
pasteColumn	insertColumn [SimTalk]	einfuegenSpalte/ einfuegeSpalte
pasteRow	insertRow [SimTalk]	einfuegenZeile
PauseTimeStat	StatPauseTimePortion [SimTalk]	PausenzeitStat
pausingPercentage	StatPausingPortion [SimTalk]	pausenAnteil
ProductionTimeStat	StatProductionTimePortion [SimTalk]	Produktionszeitstat
promptMessage	messageBox [SimTalk]	promptMessage
putRouteToDestinationIntoTable	setRoute [SimTalk] - Transporter	setzeRouteZuZiellnTabelle

Outdated English	Replaced by	Outdated German
read	[row] [SimTalk]	lesen
readFileRow	readFile [SimTalk] - lists	leseDateiZeile
relativeOccupation	StatRelativeOccupation [SimTalk] - material flow objects	relativeBelegung
relativeOccupationIR	StatRelativeOccupationIR [SimTalk] - material flow objects	relativeBelegungUB
resetClipboard	no longer supported	zwischenablageRücksetzen
resetInitBox	no longer supported	resetInitBox
Retardation	Deceleration [SimTalk] - Conveyor	Verzoeigerung
Sampler	Mode [SimTalk] - Chart	Sampler
scaling	_3D.Scale [SimTalk]	Skalierung
Selected	_3D.Selected [SimTalk]	Selektiert
SeedReset	no longer supported	SeedReset
SegmentsTable	no longer supported	SegmenteTabelle
sendMessage	_3D.Selected [SimTalk]	sendeNachricht
set3DRotation	_3D.Rotation [SimTalk]	setze3DRotation
setActive	endPause [SimTalk] - material flow objects	arbeiten
setAnimationRefreshRate	no longer supported	setAnimationRefreshRate
setBreakpointCondition	no longer supported, EventController	setzeHaltepunktBedingung
setBreakpointReceiver	no longer supported, EventController	setzeHaltepunktEmpfänger
setBreakpointSender	no longer supported, EventController	setzeHaltepunktSender
setBreakpointStartTime	no longer supported, EventController	setzeHaltepunktStartZeit
setBreakpointStopTime	no longer supported, EventController	setzeHaltepunktStopZeit
setBreakpointTraceFile	no longer supported, EventController	setzeHaltepunktTraceFile
setBreakpointType	no longer supported, EventController	setzeHaltepunktTyp
setCreationTable	setWorkersToCreateTable [SimTalk]	setzeErzeugungstabelle
setCurrIcon	no longer supported	setzeBild
setDim	no longer supported	setzeDim
setFileCursor	no longer supported	setzeDateiZeiger

Outdated English	Replaced by	Outdated German
setFileName	FileName [SimTalk] - FileInterface	setzeDateiName
setFormatData	copyFormatTo [SimTalk]	setzeFormatDaten
setInactive	startPause [SimTalk] - material flow objects	setInactive
setItems	Items [SimTalk] - DropDownList	setzeEinträge
setLabelFont	LabelFont [SimTalk]	setzeSchriftAchsen
setListIndex	setIndex [SimTalk]	setzeListIndex
setListText	setList [SimTalk]	setzeListText
setName [user-defined attribute]	Name [SimTalk] - general description Name [SimTalk] - failure profile	setzeName
setObjects	Objects [SimTalk] - LockoutZone	setzeObjekte
setParam	setTypeAndAttr [SimTalk]	setzeParam
setPopIndex	no longer supported	setzePopIndex
setPopText	no longer supported	setzePopText
setRGB	setColor [SimTalk]	setzeRGB
setServices	Services [SimTalk] - Worker	setzeDienste
setSubtitleFont	SubtitleFont [SimTalk]	setzeSchriftUntertitel
setSupportedServices	SupportedServices [SimTalk]	setzeUnterstützteDienste
setTabIndex	setIndex [SimTalk]	setzeRegisterkartenIndex
setTableFont	TableFont [SimTalk]	setzeSchriftTabelle
setTabText	setList [SimTalk]	setzeRegisterkartenText
setText	setCaption [SimTalk]	setzeText
setTitleFont	TitleFont [SimTalk]	setzeSchriftÜberschrift
setTriggerList	Trigger [SimTalk]	setzeTriggerListe
Setup	ResSetup [SimTalk] - material flow objects	Ruestet
SetUpAlways	no longer supported	ImmerRüsten
SetupImp	_Attributes of the Importer	RuestImp
setupPercentage	StatSetUpPortion [SimTalk]	ruestAnteil
SetUpTimeStat	StatSetUpTimePortion [SimTalk]	Ruestzeitstat

Outdated English	Replaced by	Outdated German
setValue	Value [SimTalk] - Checkbox	setzeWert
setValue [Python]	set [SimTalk]	setValue [Python]
setWorkerCreationTable	creationTable [SimTalk] - Source	setzeWerkerErzeugungsTabelle
SHGetFolderPath	SHGetKnownFolderPath [SimTalk]	SHGetFolderPath
ShowStandardMenus	no longer supported	ZeigeStandardmenues/ ZeigeStandardmenüs
ShowToolbar	no longer supported	ZeigeSymbolleiste
simpleHome	no longer supported	simpleHome
SmartAnimation	no longer supported	SmartAnimation
Start	LowerBound	Start
Speed	no longer supported, EventController	Geschwindigkeit
startWithoutAnimation	start [SimTalk] - EventController	startOhneAnimation
StatBlockingExpCount	no longer supported	StatBlockiertExpAnzahl
StatBlockingExpDelta	no longer supported	StatBlockiertExpDelta
StatBlockingExpMu	no longer supported	StatBlockiertExpMu
StatBlockingExpPortion	no longer supported	StatBlockiertExpAnteil
StatBlockingExpTime	no longer supported	StatBlockiertExpZeit
StateFailed	Failed [SimTalk] - Frame	StatusGestört
StatePause	Pause [SimTalk] - Frame	StatusPause
StatExporterWorkingPortion	StatExporterOperationalPortion [SimTalk]	StatExporterArbeitendAnteil
StatExporterWorkingTime	StatExporterOperationalTime [SimTalk]	StatExporterArbeitendZeit
StatisticsOn	ProdStatOn [SimTalk]	StatistikAn
StatStoppedDurationDelta	StatStoppedDelta [SimTalk] - material flow objects	StatStoppedDurationDelta
StatStoppedDurationMu	StatStoppedMu [SimTalk] - material flow objects	StatStoppedDurationMu
StatStoppedDurationSum	StatStoppedTime [SimTalk]	StatStoppedDurationSum
StatWaitingExpCount	StatExporterUnplannedCount [SimTalk]	StatWarteExpAnzahl
StatWaitingExpDelta	StatExporterUnplannedDelta [SimTalk]	StatWarteExpDelta

Outdated English	Replaced by	Outdated German
StatWaitingExpMu	StatExporterUnplannedMu [SimTalk]	StatWarteExpMu
StatWaitingExpPortion	StatExporterUnplannedPortion [SimTalk]	StatWarteExpAnteil
StatWaitingExpTime	StatExporterUnplannedTime [SimTalk]	StatWarteExpZeit
stDev	standardDeviation [SimTalk]	stAbw
stDevAttr	standardDeviationAttr [SimTalk]	stAbwAttr
stop	Stopped [SimTalk] - material flow objects	anhalten
Stop	UpperBound [SimTalk] - distribution parameter	Stop
StorageTimeStat	StatStorageTimePortion [SimTalk]	LagerzeitStat
TransportTimeStat	StatTransportTimePortion [SimTalk]	Transportzeitstat
unloadExternal	no longer supported	unloadExternal
update3D	_3D. {updateAll,updateNew,updateMovables,updateConnections,updatePositions}	update3D
UseActiveWorkspace	ImportMode [SimTalk]	ActiveWorkspaceVerwenden
v	Speed [SimTalk] - Turnplate	v
Val	Value [SimTalk] - Checkbox	Val
version	applicationVersion [SimTalk]	version
waitingPercentage	StatWaitingPortion [SimTalk]	warteAnteil
WaitTimeStat	StatWaitTimePortion [SimTalk]	WartezeitStat
Width	ObjectWidth [SimTalk] - Button	Breite
WorkersCanBeam	WorkersTravelMode [SimTalk]	WerkerKönnenBeamten
workingPercentage	StatWorkingPortion [SimTalk]	arbeitsAnteil
WorkTimeStat	StatWorkTimePortion [SimTalk]	Bearbeitzeitstat
writeString	write [SimTalk] - FileInterface	writeString
YPosOrigin3D	no longer supported	YPosUrsprung3D
z_exp	Distribution Functions, z_functions (Negexp [distribution], z_negexp [SimTalk])	z_exp
ZPos	Coordinate3D [SimTalk] - general description	Zpos

Outdated English	Replaced by	Outdated German
_3D.acceptRotation	no longer supported	_3D.übernehmeDrehung
_3D.acceptScale	no longer supported	_3D.übernehmeSkalierung
_3D.activateMaterialWithColor	no longer supported	_3D.aktiviereMaterialMitFarbe
_3D.addGraphicTransformation	_3D.getGraphic [SimTalk]addGraphicTransformation [SimTalk]	_3D.fügeGrafiktransformationHin zu 3D.fuegeGrafiktransformationHin zu
_3D.AutoGraphicsAmbientColor	_3D.MaterialAmbientColor [SimTalk]	_3D.Autografikumgebungslicht
_3D.AutoGraphicsDiffuseColor	_3D.MaterialDiffuseColor [SimTalk]	3D.AutografikDiffuseFarbe
_3D.AutoGraphicsEmissiveColor	_3D.MaterialEmissiveColor [SimTalk]	_3D.AutografikSelbstleuchtendeFarbe
_3D.AutoGraphicsOverride2D	MaterialActive [SimTalk]	_3D.AutografikMaterialStatt2D
_3D.AutoGraphicsShininess	_3D.MaterialShininess [SimTalk]	3D.Autografikglanz
_3D.AutoGraphicsSpecularColor	_3D.MaterialSpecularColor [SimTalk]	_3D.AutografikGlänzendeFarbe
_3D.AutoGraphicsTransparency	_3D.MaterialTransparency [SimTalk]	_3D.Autografiktransparenz
_3D.BoardDepth	BayDepth [SimTalk]	_3D.Brettiefe
_3D.cancelRedirection	_3D.AnimationObject [SimTalk]	_3D.hebeUmleitungAuf
_3D.ChildrenSelection	no longer supported	_3D.Kinderselektion
_3D.closeAllWindows	closeAllWindows [SimTalk]	_3D.schließeAlleFenster
_3D.connectLengths	no longer supported	_3D.verbindeLängen
_3D.connectPositions	no longer supported	_3D.verbindePositionen
_3D.connectPositionsAndRotations	no longer supported	_3D.verbindePositionenUndDrehungen
_3D.countGraphics	_3D.getGraphic [SimTalk].NumGraphics [SimTalk]	_3D.zähleGrafiken
_3D.createBox	createBox [SimTalk]	_3D.erzeugeKasten
_3D.createCone	createConeFrustum [SimTalk]	_3D.erzeugeKegel

Outdated English	Replaced by	Outdated German
_3D.createConeFrustum	createConeFrustum [SimTalk]	_3D.erzeugeKegelstumpf
_3D.createCuboid	createCuboid [SimTalk]	_3D.erzeugeQuader
_3D.createCylinder	createConeFrustum [SimTalk]	_3D.erzeugeZylinder
_3D.createIndexedFaceSet	createIndexedFaceSet [SimTalk]	_3D.erzeugeFlächengrafik
_3D.createIndexedLineSet	createIndexedLineSet [SimTalk]	3D.erzeugeDrahtgitter
_3D.createMissingViewerObjects	no longer supported	_3D.erstelleFehlendeViewerobjekte
_3D.createPicture	createPicture [SimTalk]	_3D.erzeugeBild
_3D.createSphere	createSphere [SimTalk]	_3D.erzeugeKugel
_3D.createText	createText [SimTalk]	_3D.erzeugeText
_3D.createTiledPlate	createTiledPlate [SimTalk]	_3D.erzeugeGekacheltePlatte
_3D.CurvePrecision	no longer supported	_3D.Kurvengenauigkeit
_3D.deleteGraphic	_3D.getGraphic [SimTalk].deleteGraphic [SimTalk]	_3D.vernichteGrafik
_3D.deletePlainGraphics	_3D.deleteGraphicGroupContent [SimTalk]	_3D.vernichteReineGrafiken
_3D.disconnectLengths	no longer supported	_3D.trenneLängenverbindung
_3D.disconnectPositions	no longer supported	_3D.trennePositionsverbindung
_3D.disconnectPositionsAndRotations	no longer supported	_3D.trennePositionsUndDrehungsverbindung
3D.disconnectRotations	no longer supported	_3D.trenneDrehungsverbindung
_3D.EstimatedBlockAnimationTime	_3D.CameraAnimations.AnimationTimeBlock [SimTalk] _3D.SelfAnimations.AnimationTimeBlock [SimTalk]	_3D.VoraussichtlicheBlockanimationszeit
_3D.EstimatedTotalAnimationTime	_3D.SelfAnimations.AnimationTimeTotal [SimTalk] _3D.CameraAnimations.AnimationTimeTotal [SimTalk]	_3D.VoraussichtlicheGesamtanimationszeit
_3D.ExtPolycurve	_3D.getExtSegments [SimTalk]	_3D.ExtPolykurve

Outdated English	Replaced by	Outdated German
	_3D.setExtSegments [SimTalk]	
_3D.exportAsBitmap	_3D.exportModelingViewBitmap [SimTalk] _3D.exportPlanningViewBitmap [SimTalk]	_3D.exportiereAlsBitmap
_3D.ExtSpline	no longer supported	_3D.ExtSpline
_3D.flattenGraph	_3D.getGraphic [SimTalk].optimizeByStructureFlattening [SimTalk]	_3D.vereinfacheGrafik
_3D.generateEllipse	F3DgenerateEllipse [SimTalk]	_3D.erzeugeEllipse
_3D.generateHollowEllipse	F3DgenerateHollowEllipse [SimTalk]	_3D.erzeugeHohleEllipse
_3D.generateHollowRectangle	F3DgenerateHollowRectangle [SimTalk]	_3D.erzeugeHohlesRechteck
_3D.generateRectangle	F3DgenerateRectangle [SimTalk]	_3D.erzeugeRechteck
_3D.getAnimationPoint	_3D.getMUAnimationPosition [SimTalk]	_3D.holeAnimationspunkt
_3D.getGraphicIndex	_3D.getGraphic [SimTalk].Index [SimTalk] - graphic in 3D	_3D.holeGrafikindex
_3D.getGraphicName	_3D.getGraphic [SimTalk].Name [SimTalk] - graphic	_3D.holeGrafiknamen
_3D.getGraphicPosition	_3D.getGraphic [SimTalk].Position [SimTalk] - graphic	_3D.holeGrafikPosition
_3D.getGraphicRotation	_3D.getGraphic [SimTalk].Rotation [SimTalk] - graphic	_3D.holeGrafikdrehung
_3D.getGraphicScale	_3D.getGraphic [SimTalk].Scale [SimTalk] - graphic	_3D.holeGrafikskalierung
_3D.GridVisibleInNewWindows	no longer supported	_3D.RasterSichtbarInNeuenFenstern
3D.groupGraphics	groupGraphics [SimTalk]	_3D.gruppiereGrafiken

Outdated English	Replaced by	Outdated German
_3D.hideGraphicGroup	Visible [SimTalk] - graphic group	_3D.blendeGrafikgruppeAus
_3D.HideInRepresentationOfLocation	_3D.ExcludeFromShowContentOfLocation [SimTalk]	_3D.BlendeInDarstellungDesStandortsAus
_3D.importGeometry	_3D.getGraphic [SimTalk].importGraphics [SimTalk]	_3D.importiereGeometrie
_3D.importGraphics	_3D.getGraphic [SimTalk].importGraphics [SimTalk]	_3D.InterneGraphiken
_3D.InheritGraphicVisibilities	_3D.inheritAttribute [SimTalk]	_3D.ErbeGrafiksichtbarkeiten
_3D.InsertMode	no longer supported	_3D.Einfügemodus
_3D.InternalGraphics	_3D.InternalGraphicGroups [SimTalk]	_3D.InterneGraphiken
_3D.isGraphicGroupGenerated	Generated [SimTalk] - graphic group	_3D.istGrafikgruppeGeneriert
_3D.isGraphicGroupInternal	Internal [SimTalk] - graphic group	_3D.setzeGrafikgruppeIntern
_3D.isGraphicGroupLocked	Locked [SimTalk] - graphic group	_3D.istGrafikgruppeGesperrt
_3D.isGraphicGroupVisible	Visible [SimTalk] - graphic group	_3D.istGrafikgruppeSichtbar
_3D.LastViewpoint	no longer supported	_3D.LetzteAnsicht
_3D.Length	no longer supported	_3D.Länge
_3D.Location	Location [SimTalk] - material flow objects	_3D.Standort
_3D.LockedGraphics	_3D.LockedGraphicGroups [SimTalk]	_3D.GespernteGraphiken
_3D.lockGraphicGroup	Locked [SimTalk] - graphic group	_3D.sperreGrafikgruppe
_3D.makeAnimatableObject	_3D.getGraphic [SimTalk].makeAnimatableObject [SimTalk]	_3D.erstelleAnimierbaresObjekt
_3D.MaterialAmbientColor	_3D.getGraphic [SimTalk].MaterialAmbientColor [SimTalk]	_3D.MaterialumUmgebungsfarbe

Outdated English	Replaced by	Outdated German
_3D.MaterialSpecularCoor	_3D.getGraphic [SimTalk].MaterialSpecularColor [SimTalk]	_3D.MaterialGlänzendeFarbe
_.3D.MUAnimationAreaCenter	_3D.MUAnimationAreaRelativeCenter [SimTalk]	_3D.BEAnimationsflächenzentrum
_.3D.MUAnimationAreaSize	_3D.MUAnimationAreaRelativeSize [SimTalk]	_3D.BEAnimationsflächengröße
_3D.MUAnimations.<AnimationPathName>.getPositionAt	_3D.MUAnimations.<AnimationPathName>.getMUAnimationPosition [SimTalk]	_3D.BEAnimationen.<Animationspfadname>.holePositionBei
_3D.optimizeByPruningTinyGraphics	_3D.getGraphic [SimTalk].optimizeByPruningTinyGraphics [SimTalk]	_3D.optimiereDurchKleinstgrafikenLöschen
_3D.optimizeByStructureFlattening	_3D.getGraphic [SimTalk].optimizeByStructureFlattening [SimTalk]	_3D.optimiereDurchStrukturverflachung
_3D.optimizeByVisibilityFilter	_3D.getGraphic [SimTalk].optimizeByVisibilityFilter [SimTalk]	_3D.optimiereDurchSichtbarkeitsfilter
_3D.optimizeGraphic	_3D.getGraphic [SimTalk].optimizeByPruningTinyGraphics [SimTalk] _3D.getGraphic [SimTalk].optimizeByVisibilityFilter [SimTalk] _3D.getGraphic [SimTalk].optimizeByVisibilityFilter [SimTalk]	_3D.optimiereGrafik
_3D.pauseAnimation	_3D.CameraAnimations.pause [SimTalk] _3D.SelfAnimations.pause [SimTalk]	3D.pausiereAnimation
_3D.playAnimation	_3D.SelfAnimations.play [SimTalk] _3D.CameraAnimations.play [SimTalk]	_3D.spieleAnimationAb

Outdated English	Replaced by	Outdated German
_3D.PointCloudRotationAngle	_3D.PointCloudRotation [SimTalk]	_3D.Punktwolkendrehwinkel
_3D.pruneTinyGraphics	_3D.getGraphic [SimTalk].optimizeByPruningTinyGraphics [SimTalk]	_3D.bereinigeKleinstgrafiken
_3D.redirectTo	_3D.AnimationObject [SimTalk]	_3D.leiteUmZu
_3D.RelRotation	Rotation	_3D.RelDrehung
_3D.removeGraphicMaterial	_3D.getGraphic [SimTalk].MaterialDiffuseColor [SimTalk] , etc.	_3D.entferneGrafikmaterial
_3D.renameGraphicGroup	Name [SimTalk] - graphic	_3D.benenneGrafikgruppeUm
_3D.Representation	_3D.ShowContent [SimTalk]	_3D.Darstellung
_3D.resetAnimation	_3D.CameraAnimations.resetAnimation [SimTalk] _3D.SelfAnimations.resetAnimation [SimTalk]	_3D.setzeAnimationZurück
_3D.Selection	no longer supported	_3D.Auswahl
_3D.SelectionMode	no longer supported	_3D.Auswahlmodus
_3D.setGraphicMaterial	_3D.getGraphic [SimTalk].MaterialDiffuseColor [SimTalk] , etc.	_3D.setzeGrafikmaterial
_3D.setGraphicGroupExternal	External [SimTalk] - graphic group	_3D.setzeGrafikgruppeExtern
_3D.setGraphicGroupInternal	Internal [SimTalk] - graphic group	_3D.setzeGrafikgruppeIntern
_3D.setGraphicName	_3D.getGraphic [SimTalk].Name [SimTalk] - graphic	_3D.setzeGrafiknamen
_3D.setGraphicPosition	_3D.getGraphic [SimTalk].Position [SimTalk] - graphic	_3D.setzeGrafikposition
_3D.setGraphicRotation	_3D.getGraphic [SimTalk].Rotation [SimTalk] - graphic	_3D.setzeGrafikdrehung

Outdated English	Replaced by	Outdated German
_3D.setGraphicScale	_3D.getGraphic [SimTalk].Scale [SimTalk] - graphic	_3D.setzeGrafikskalierung
_3D.setGraphicTransformation	no longer supported	_3D.setzeGrafiktransformation
_3D.setGraphicTransformationMatrix	_3D.getGraphic [SimTalk].TransformationMatrix [SimTalk]	_3D.setzeGrafiktransformationsmatrix
_3D.showGraphicGroup	Visible [SimTalk] - graphic group	_3D.zeigeGrafikgruppe
_3D.ShowPlainGraphics	no longer supported	_3D.ReineGrafikenAnzeigen
_3D.startAnimation	_3D.CameraAnimations.play [SimTalk] _3D.SelfAnimations.play [SimTalk]	_3D.starteAnimation
_3D.unlockGraphicGroup	Locked [SimTalk] - graphic group	_3D.entsperreGrafikgruppe
3D.StatesVertical	_3D.StatesOrientation [SimTalk]	_3D.ZuständeVertikal
_3D.ungroupGraphic	ungroupGraphic [SimTalk]	_3D.hebeGruppierungAuf
_3D.updateAll	no longer supported	_3D.aktualisiereAlles
_3D.updateConnectors	no longer supported	_3D.aktualisiereKanten
_3D.updateMUs	no longer supported	_3D.aktualisiereBEs
_3D.updatePositions	no longer supported	_3D.aktualisierePositionen
_3D.VisibleGraphics	_3D.VisibleGraphicGroups [SimTalk]	_3D.SichtbareGraphiken

See also

[Colors for Syntax Highlighting](#)

[No Longer Supported SimTalk Names of the 2D Visualization](#)