COMPONENTS

FU05J–01

w/ EGR System

Vacuum Hose
Intake Pipe
◆ Gasket
◆ Gasket

w/o EGR System

Vacuum Hose
Intake Pipe
Vacuum Hose
Vacuum Hose
◆ Gasket

EGR Pipe

◆ Gasket

Oil Filler Cap

No.2 Cylinder Head Cover

No.1 Cylinder Head Cover

Intake Pipe Stay

◆ Gasket

Timing Belt

Vacuum Hose

Timing Belt Tensioner

No.1 Flange

Clamp

Seal Washer

Timing Belt Cover

No.2 Flange

No.2 Camshaft Timing Pulley

B05408

No.3 Nozzle Leakage Pipe

◆ O–Ring

137 (1,400, 101)

Clamp

Injection Pipe

24.5 (250, 18)

Clamp

Clamp

No.3 Cylinder Block Insulator

Clamp

No.1 Cylinder Block Insulator

Clamp

No.1 Injection Pump Insulator

Injection Pump Stay Bracket

39 (398, 29)
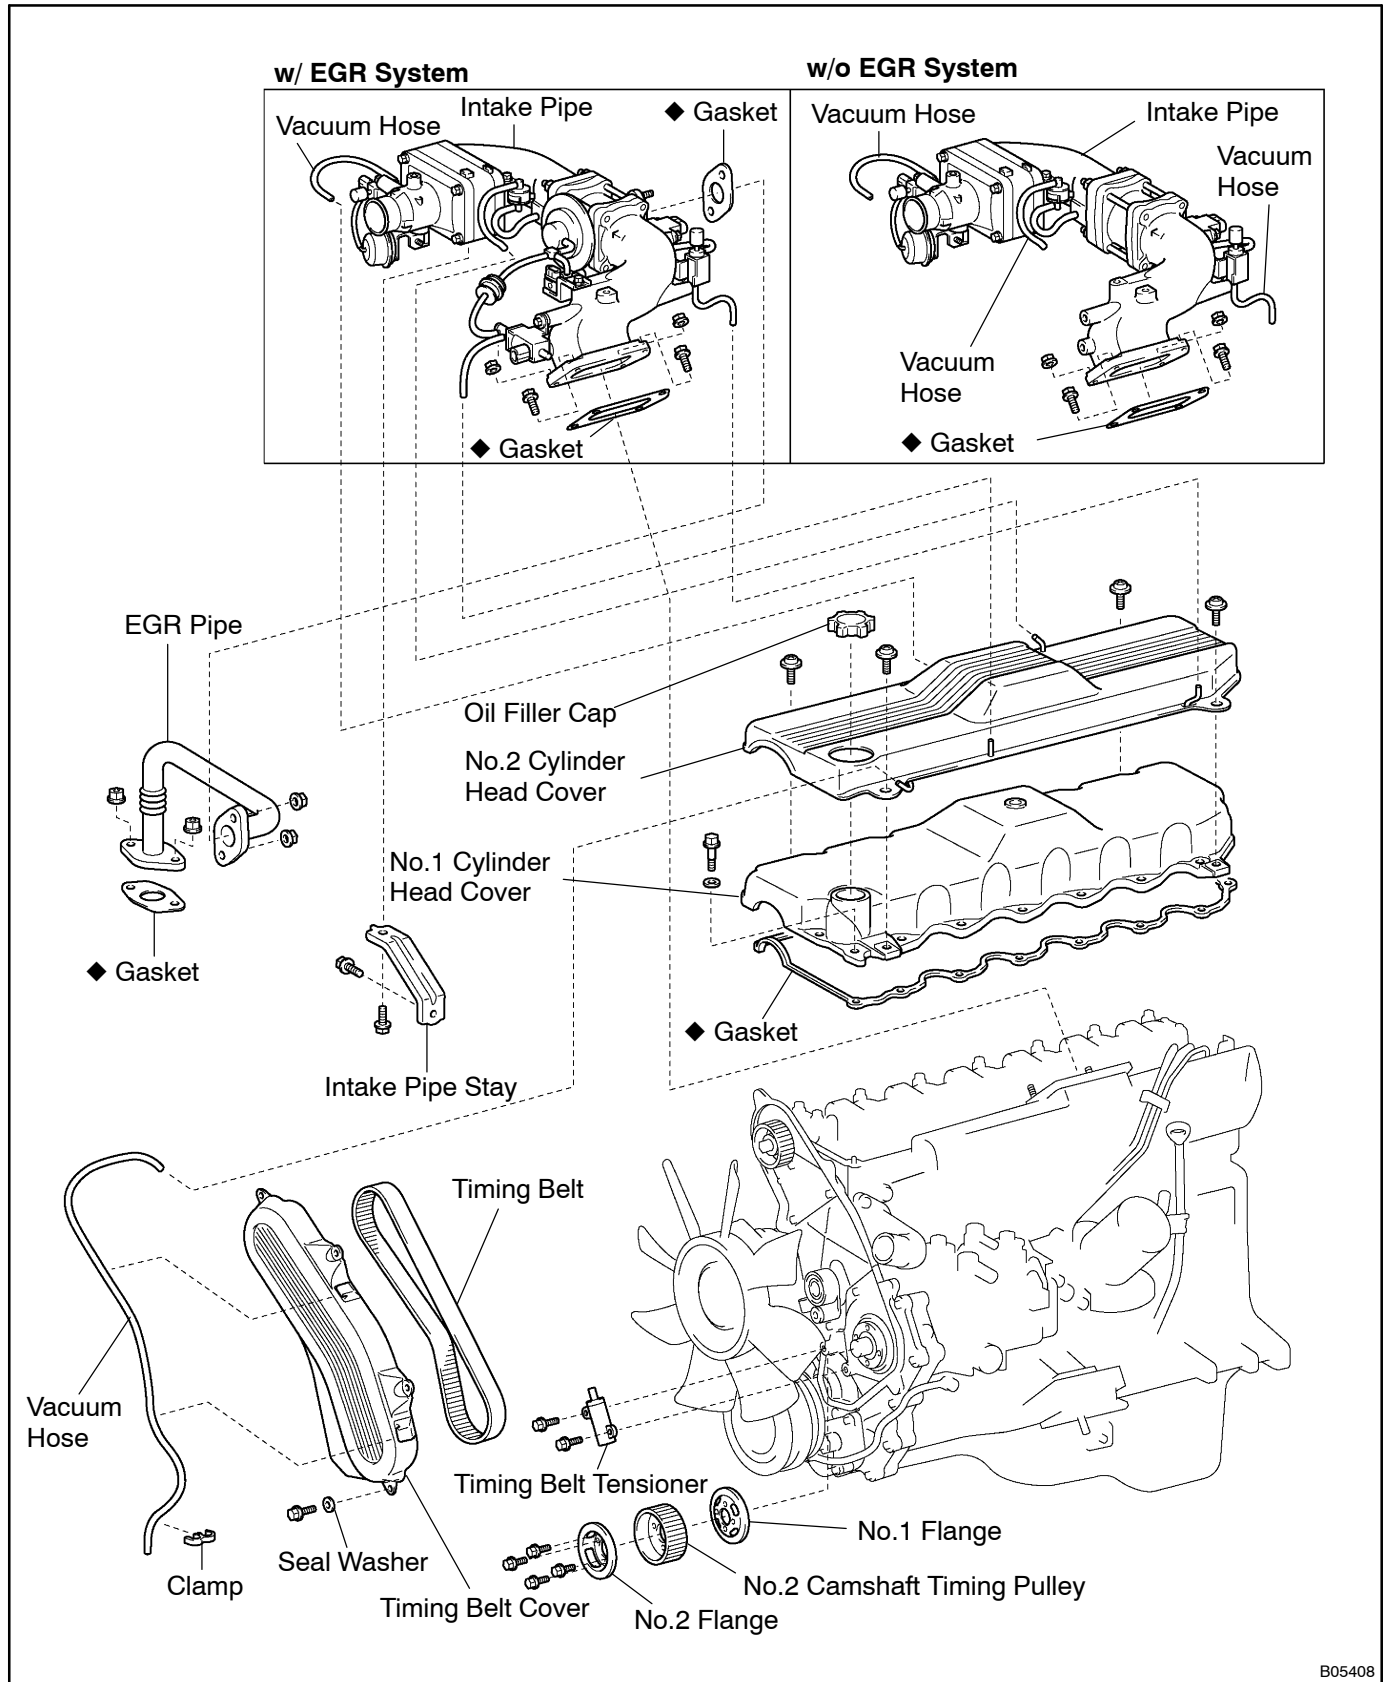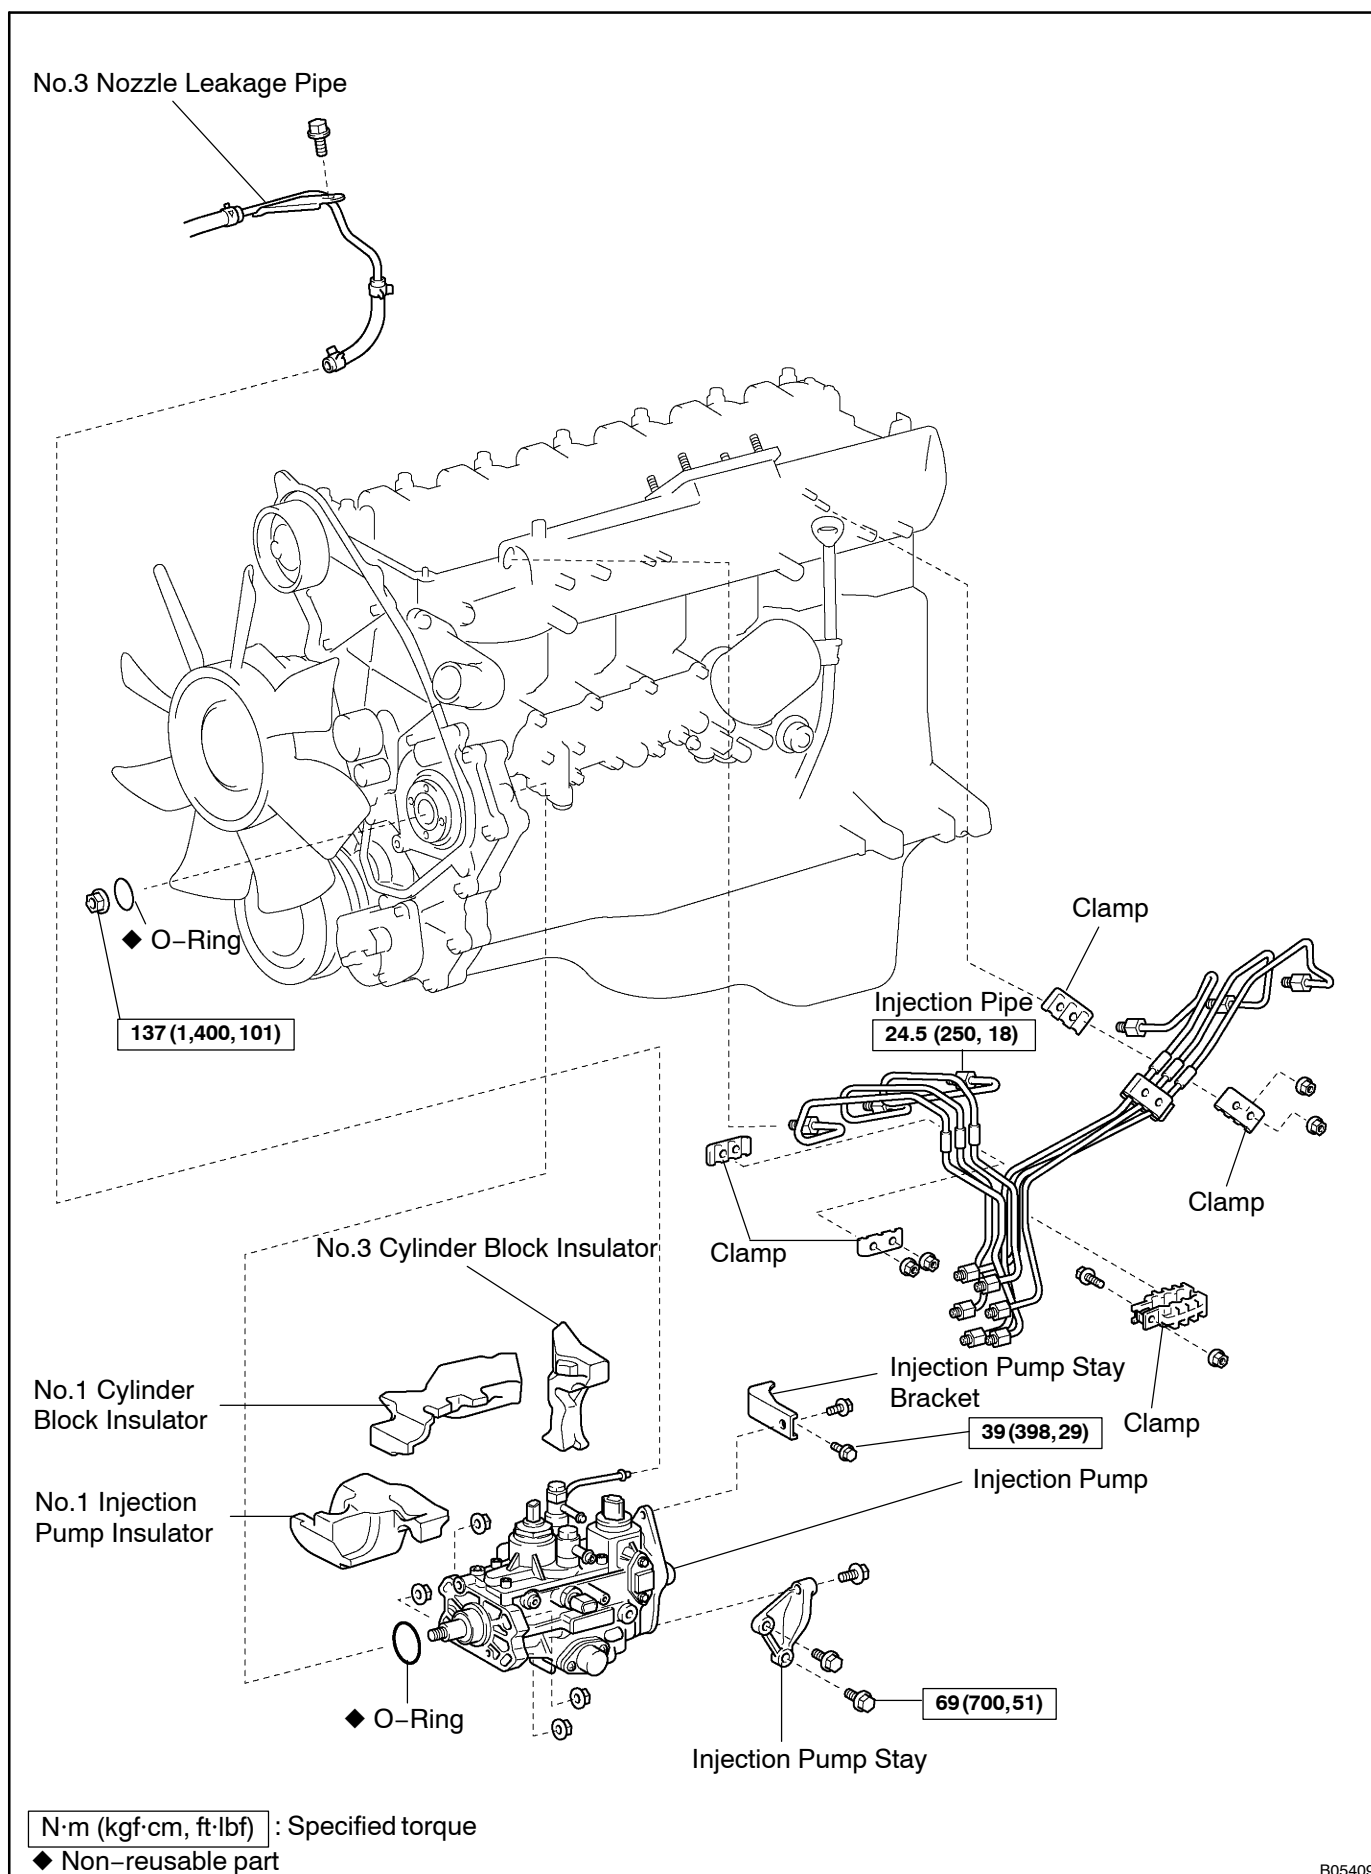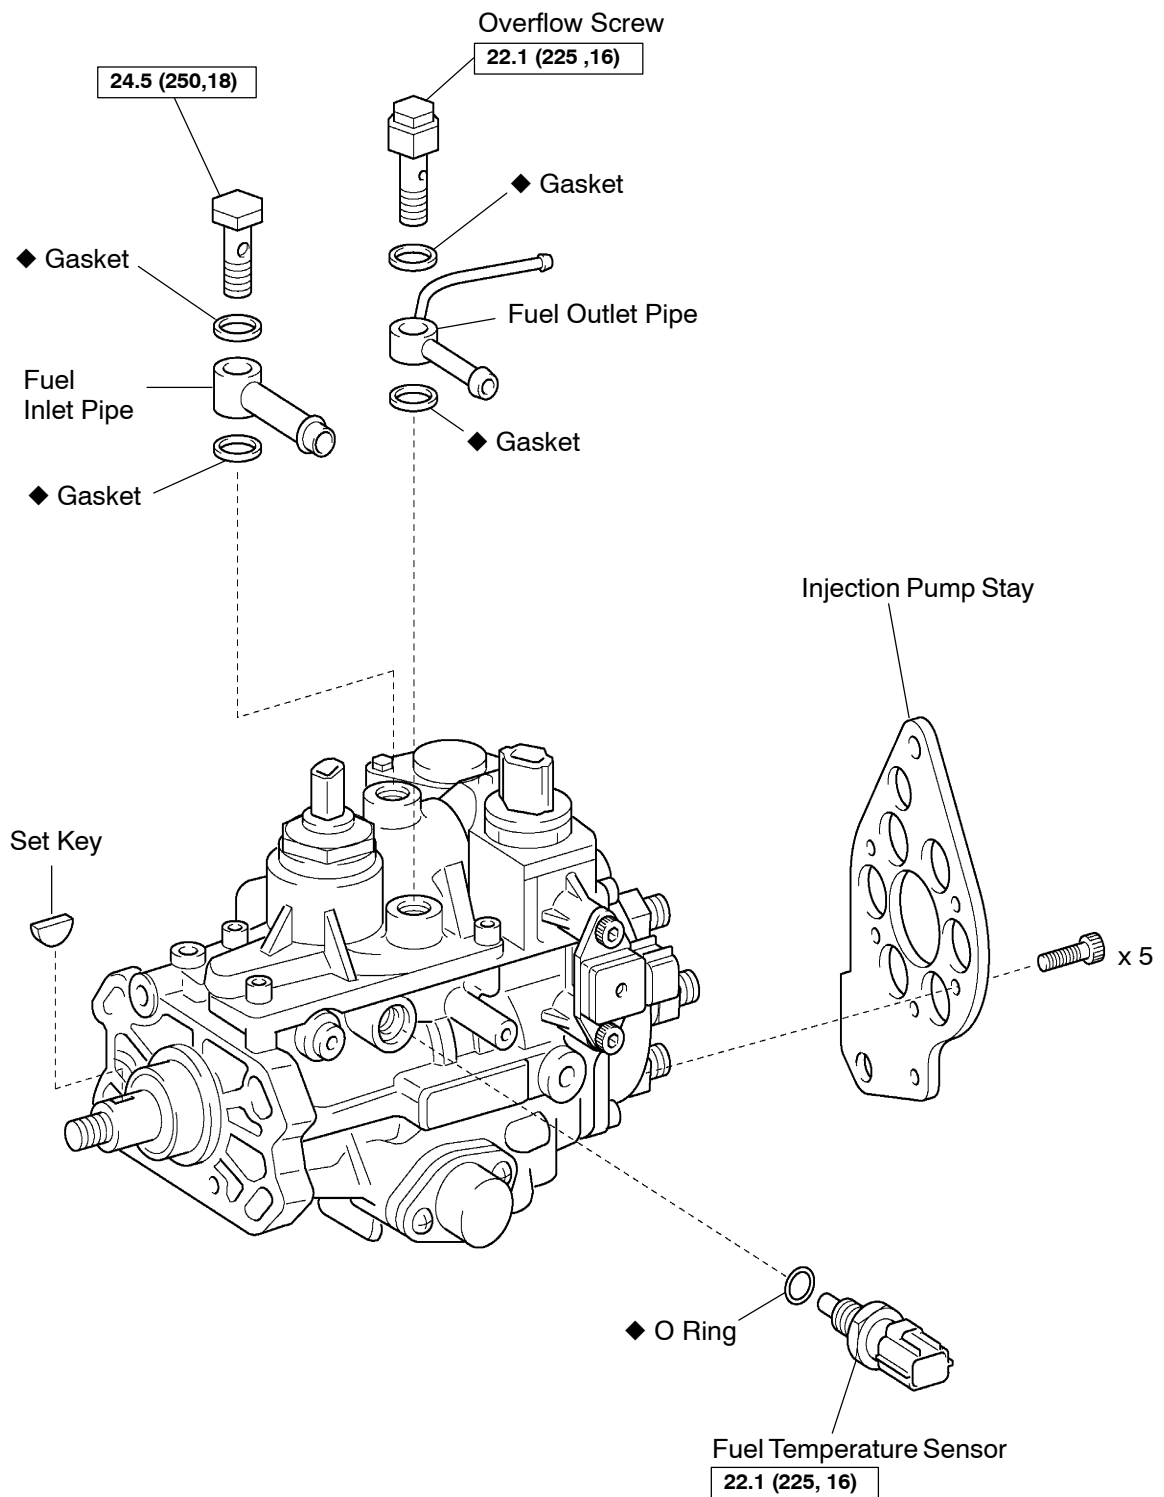
Injection Pump

◆ O–Ring

69 (700, 51)

Injection Pump Stay

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

B05409

1HZ, 1HD–T, 1HD–FTE ENGINE (RM617E)

Overflow Screw
22.1 (225 ,16)

24.5 (250,18)

◆ Gasket

◆ Gasket

Fuel Outlet Pipe

Fuel
Inlet Pipe

◆ Gasket

◆ Gasket

Injection Pump Stay

Set Key

x 5

◆ O Ring

Fuel Temperature Sensor
22.1 (225, 16)

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

B05410