
Position of Parts in Instrument Panel

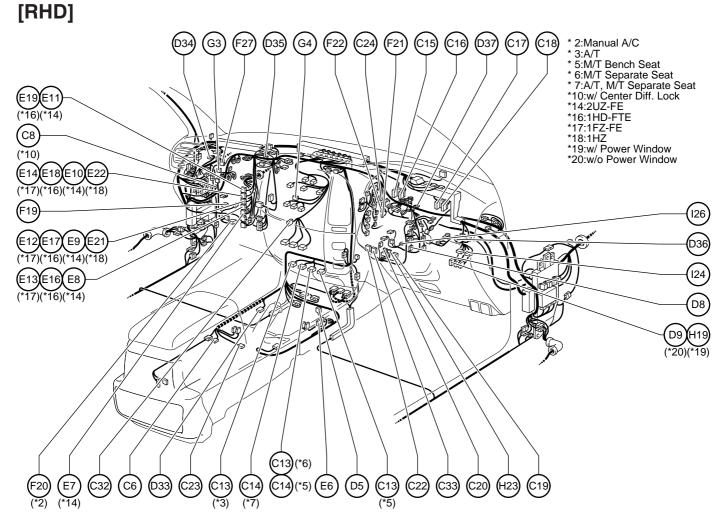

- 6 CD Automatic Changer
- Center Diff. Lock Control Relay
- Cigarette Lighter
- 14 Cigarette Lighter Illumination
- Combination Meter
- 16 17 Combination Meter Combination Meter
- 18 Combination Meter
- C 19 C 20 C 22 Combination SW
- Combination SW
- Combination SW Cooler Box
- 23 24 32
- Cruise Control Clutch SW Center Cluster Integration Panel
- Combination SW
- D 5 Damping Mode Select SW and Height Control SW
- D D 8 DLC3
- 9 Door Lock Control SW
- Deceleration Sensor Diode (Front Fog No.2) Diode (Viscous Heater1) Diode (Viscous Heater2) D 33 D 34
- D 36
- D 37 Double Lock Control Relay
- ECT Pattern Select SW
- Engine and ECT ECU 7 Ε Engine ECU
- Engine and ECT ECU
- **Engine ECU**
- Engine and ECT ECU Engine ECU
- Engine and ECT ECU **Engine ECU**

- E 11 Engine and ECT ECU Engine ECU
- Engine and ECT ECU
- Engine ECU
- Engine and ECT ECU Engine ECU
- E 14 Engine and ECT ECU
 - Engine ECU
- E 16 Engine and ECT ECU Engine ECU
- E 17 Engine and ECT ECU
- Engine ECU E 18
- Engine and ECT ECU Engine ECU
- Engine and ECT ECU Engine ECU
- E 21 Emission Control ECU
- E 22 Emission Control ECU
- Front Blower Motor
- F 20 Front Blower Resistor
- Front/Rear Diff. Lock Control SW
- Fuel Tank Changeover SW
- F 27 Front/Rear Diff. Lock Control ECU
- 3 Glove Box Light G
- G Gateway ECŬ
- Headlight Beam Level Control SW
- Headlight Cleaner SW
- Idle-Up SW Ignition SW 26