
## ☐ : Location of Connector Joining Wire Harness and Wire Harness

## [LHD: Swing Type]

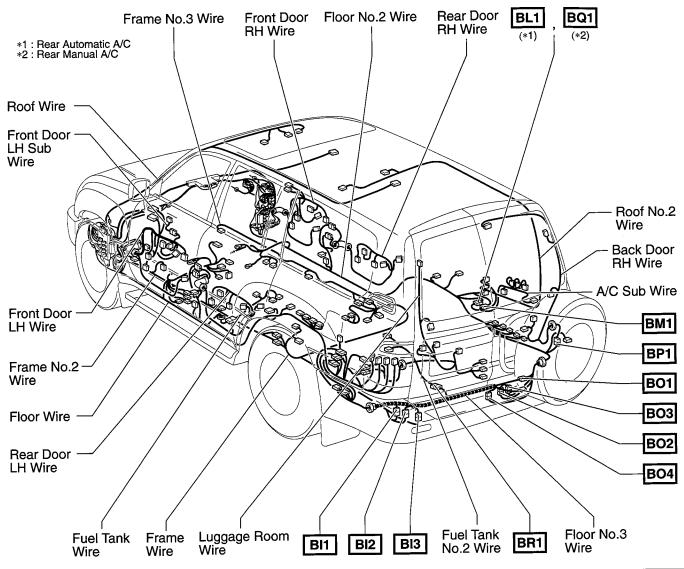

Code	Joining Wire Harness and Wire Harness (Connector Location)
BI1	Frame Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember)
Bl2	
BI3	
BL1	Roof No.2 Wire and Floor No.2 Wire (Right Side Rear Quarter Panel)
BM1	Floor No.2 Wire and A/C Sub Wire (Right Side Rear Quarter Panel)
BO1	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BO2	
BO3	
BO4	
BP1	Back Door RH Wire and Floor No.2 Wire (Back Door RH)
BQ1	Floor No.2 Wire and Roof No.2 Wire (Right Side Rear Quarter Panel)
BR1	Fuel Tank No.2 Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember)