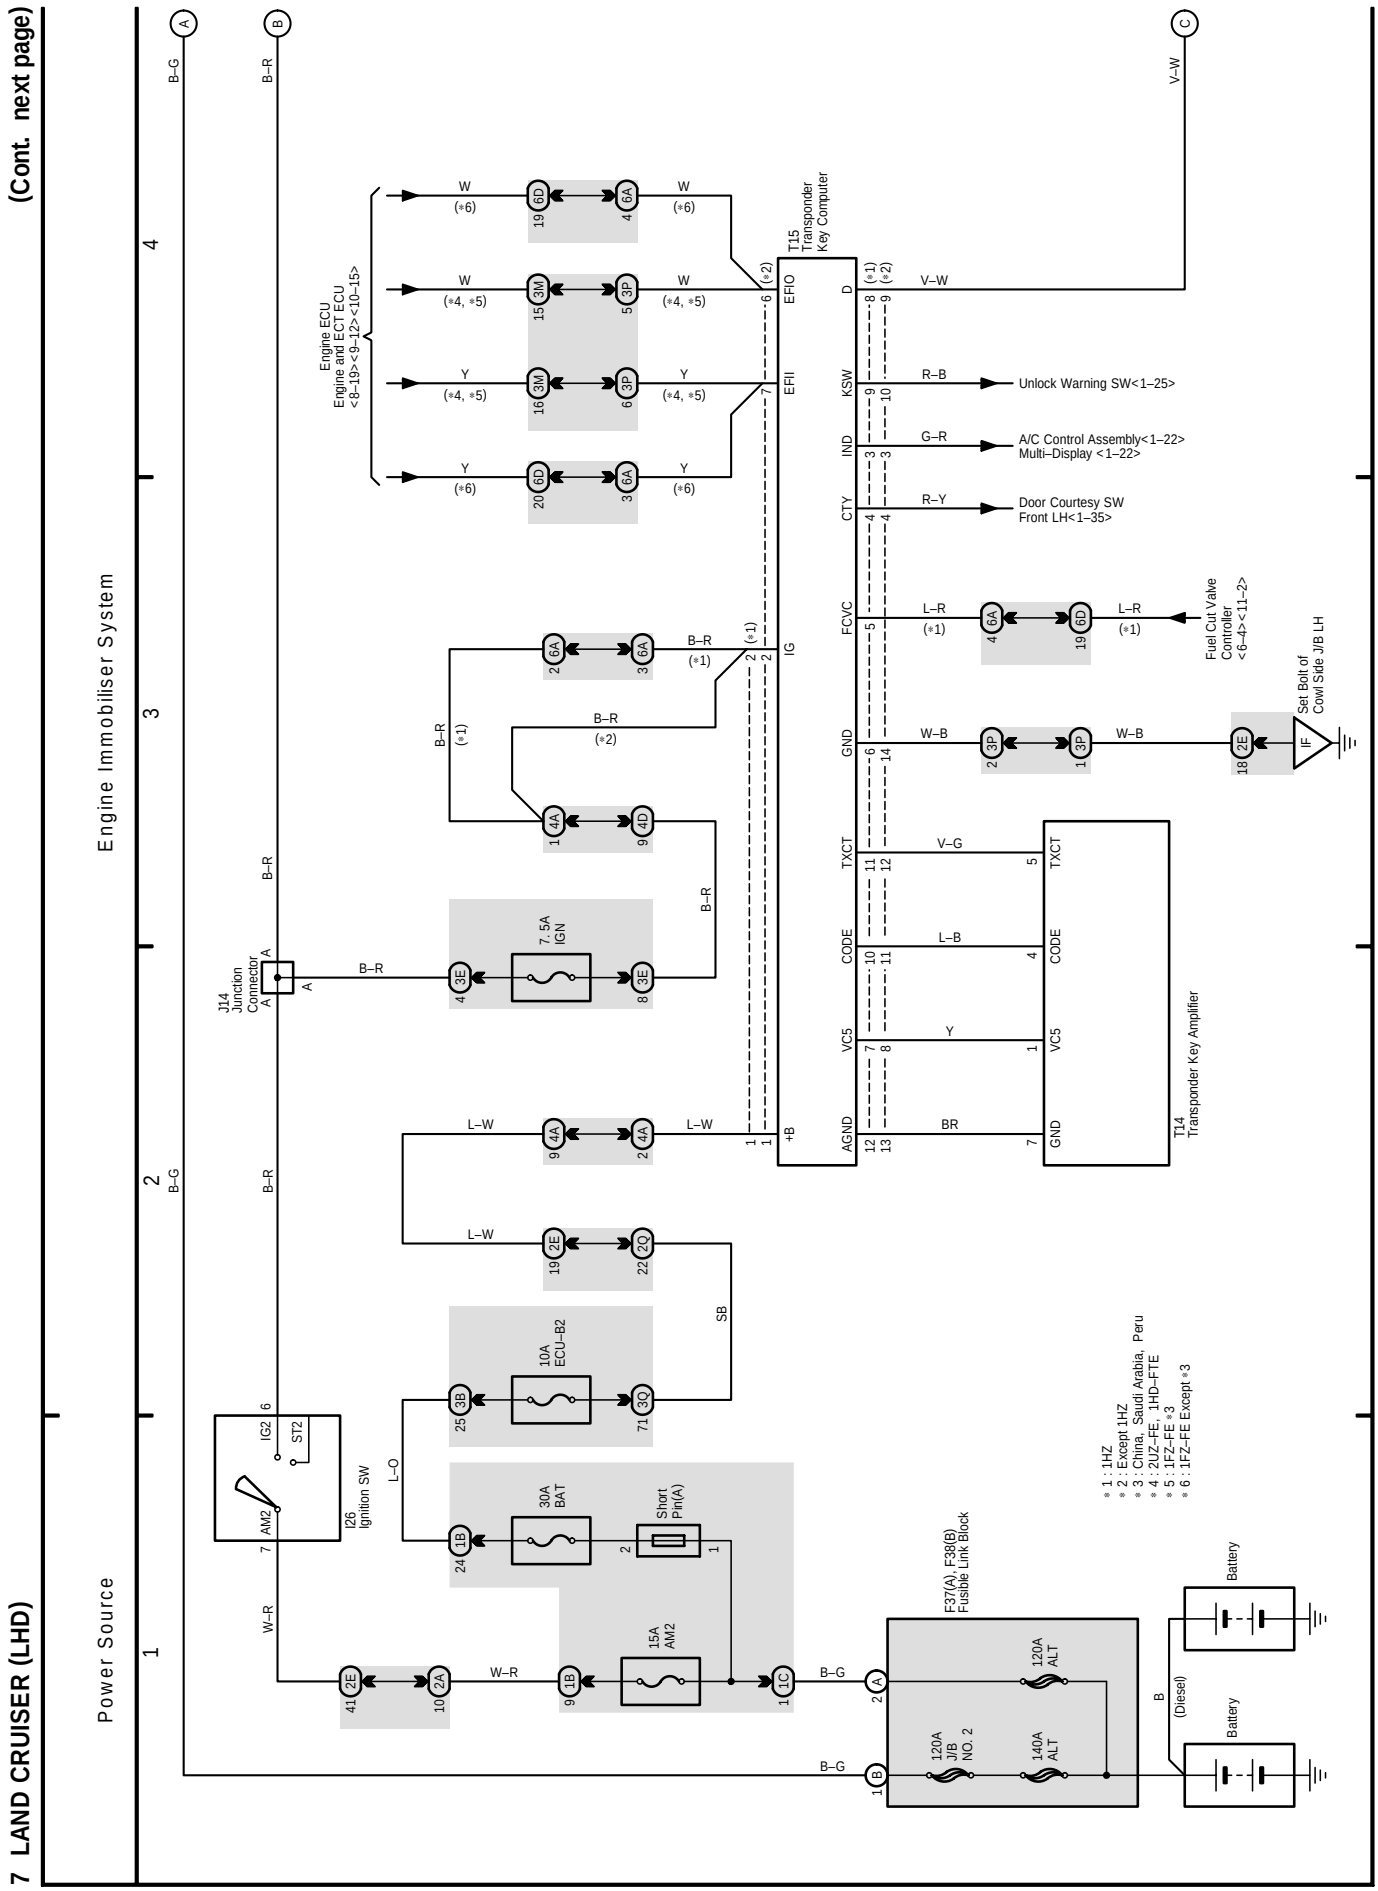
7 LAND CRUISER (LHD)
(Cont. next page)
Power Source
Engine Immobiliser System
Engine ECU
Engine and ECT ECU
<8–19><9–12><10–15>
T15
Transponder
Key Computer
EFIO
EFII
IG
+B
D
KSW
IND
CTY
FCVC
GND
TXCT
CODE
VC5
AGND
Unlock Warning SW<1–25>
A/C Control Assembly<1–22>
Multi–Display <1–22>
Door Courtesy SW
Front LH<1–35>
Fuel Cut Valve
Controller
<6–4><11–2>
Set Bolt of
Cowl Side J/B LH
IF
T14
Transponder Key Amplifier
J14
Junction
Connector
7.5A
IGN
10A
ECU–B2
30A
BAT
Short
Pin(A)
15A
AM2
I26
Ignition SW
IG2
ST2
AM2
F37(A), F38(B)
Fusible Link Block
120A
J/B
NO. 2
120A
ALT
140A
ALT
Battery
Battery
B
(Diesel)
* 1 : 1HZ
* 2 : Except 1HZ
* 3 : China, Saudi Arabia, Peru
* 4 : 2UZ–FE, 1HD–FTE
* 5 : 1FZ–FE *3
* 6 : 1FZ–FE Except *3

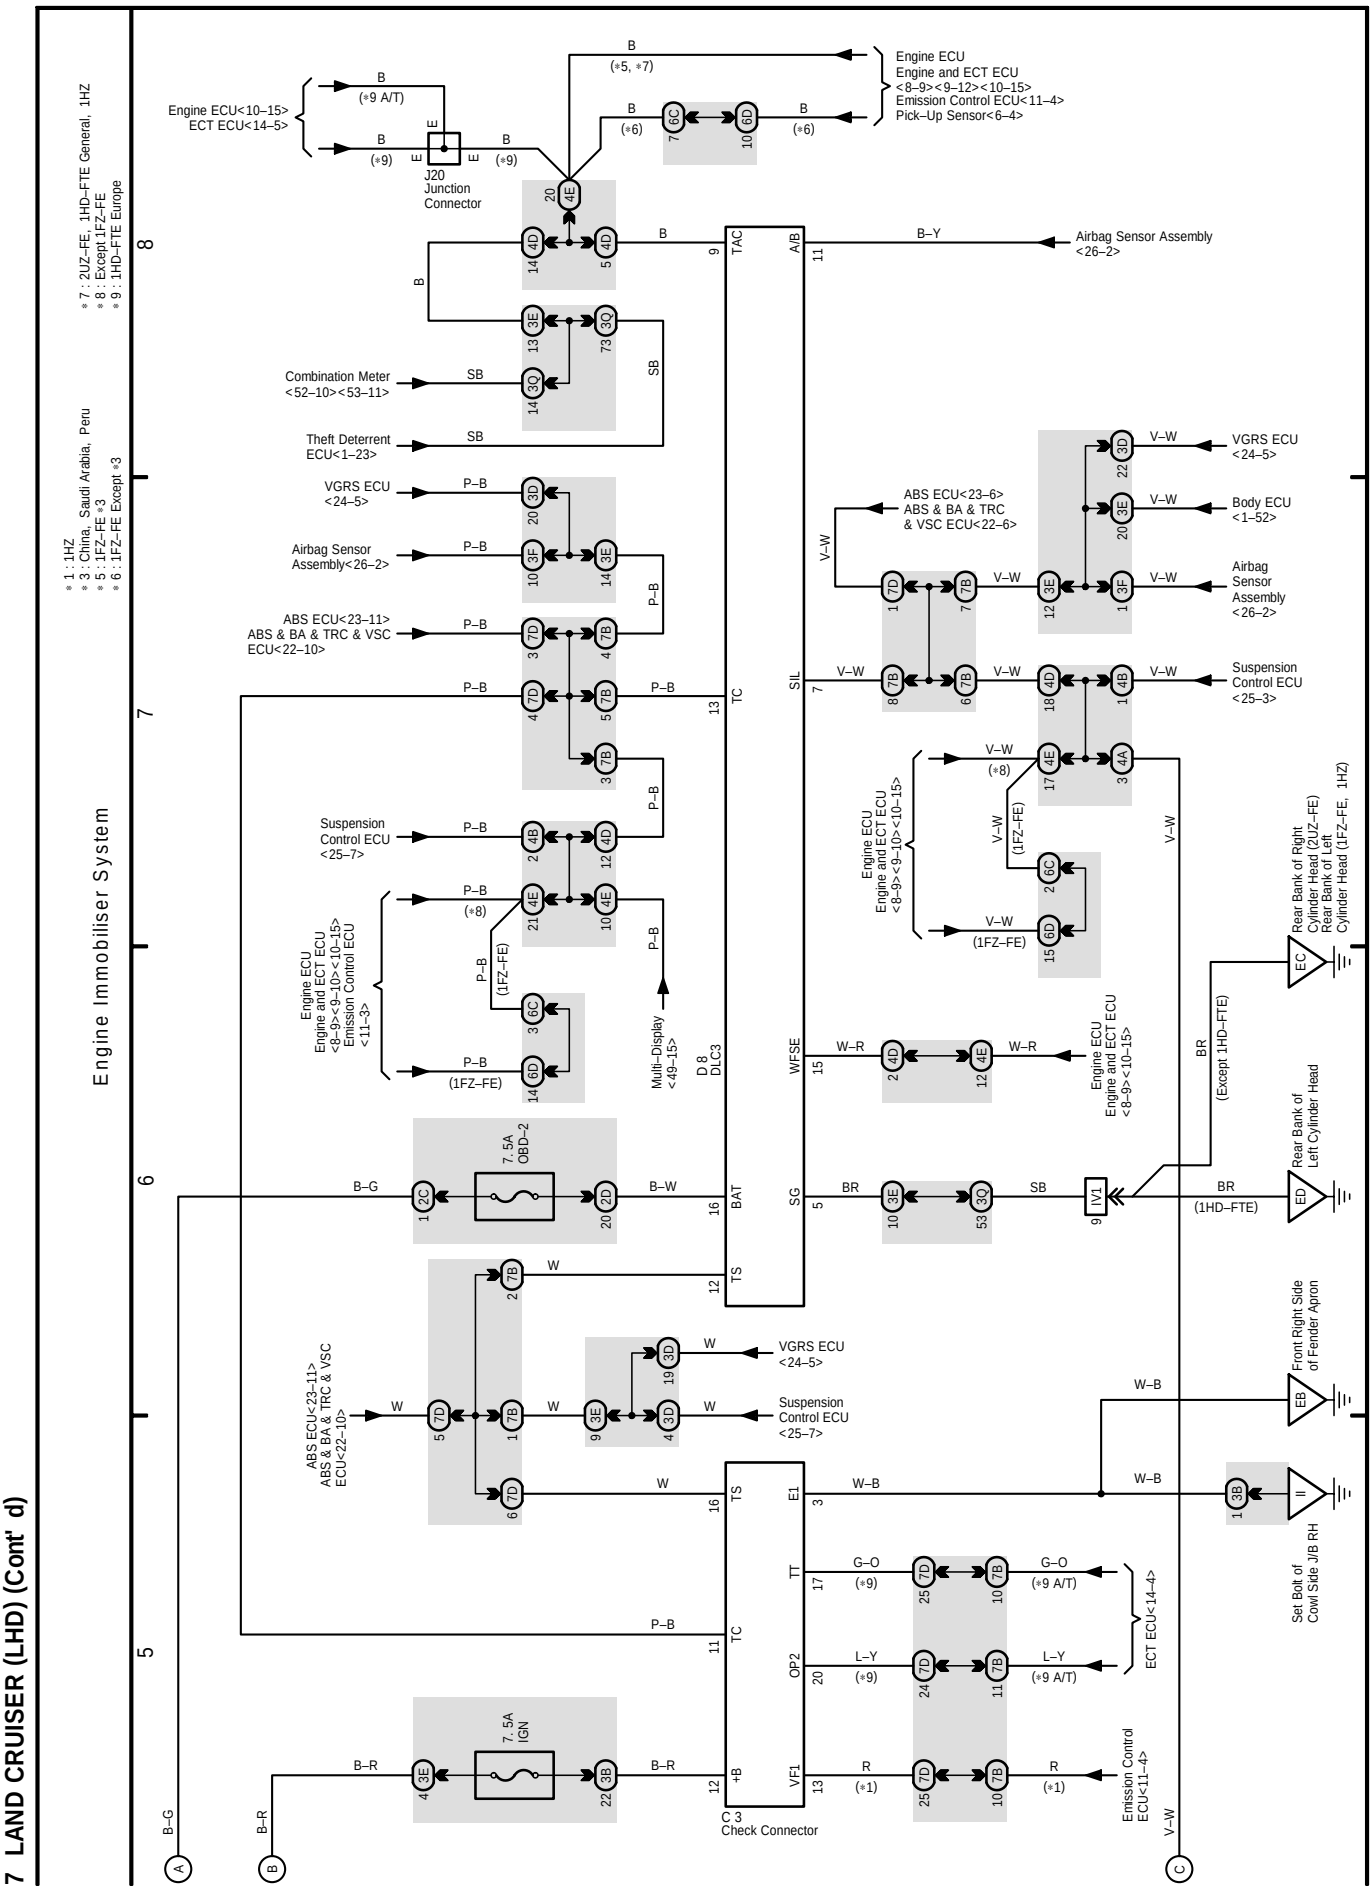
7 LAND CRUISER (LHD) (Cont' d)
Engine Immobiliser System
* 1 : 1HZ
* 3 : China, Saudi Arabia, Peru
* 5 : 1FZ–FE *3
* 6 : 1FZ–FE Except *3
* 7 : 2UZ–FE, 1HD–FTE General, 1HZ
* 8 : Except 1FZ–FE
* 9 : 1HD–FTE Europe
Engine ECU<10–15>
ECT ECU<14–5>
J20
Junction
Connector
Engine ECU
Engine and ECT ECU
<8–9><9–12><10–15>
Emission Control ECU<11–4>
Pick–Up Sensor<6–4>
Airbag Sensor Assembly
<26–2>
Combination Meter
<52–10><53–11>
Theft Deterrent
ECU<1–23>
VGRS ECU
<24–5>
Airbag Sensor
Assembly<26–2>
ABS ECU<23–11>
ABS & BA & TRC & VSC
ECU<22–10>
Suspension
Control ECU
<25–7>
Engine ECU
Engine and ECT ECU
<8–9><9–10><10–15>
Emission Control ECU
<11–3>
Multi–Display
<49–15>
D 8
DLC3
7. 5A
OBD–2
7. 5A
IGN
C 3
Check Connector
ABS ECU<23–6>
ABS & BA & TRC
& VSC ECU<22–6>
Body ECU
<1–52>
Suspension
Control ECU
<25–3>
Rear Bank of Right
Cylinder Head (2UZ–FE)
Rear Bank of Left
Cylinder Head (1FZ–FE, 1HZ)
Rear Bank of
Left Cylinder Head
Front Right Side
of Fender Apron
Set Bolt of
Cowl Side J/B RH
ECT ECU<14–4>
Emission Control
ECU<11–4>