
Position of Parts in Instrument Panel

[LHD 1]

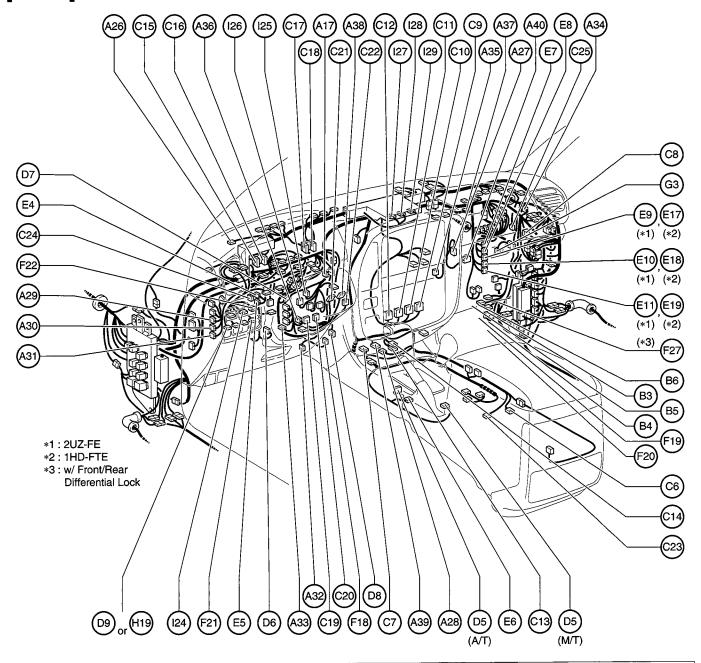

Code	English	Deutsch
A 17 A 26 A 27 A 28 A 30 A 31 A 32 A 33 A 34 A 35 A 36 A 37 A 38 A 39 A 40	Accel Position Sensor A/C Solar Sensor A/C Thermistor ABS Deceleration Sensor ABS ECU ABS ECU ABS ECU Accelerator Pedal SW AHC Main Relay Air Inlet Control Servo Motor Air Mix Control Servo Motor Air Vent Mode Control Servo Motor Airbag Squib (Front Passenger Airbag Assembly) Airbag Squib (Steering Wheel Pad) Ashtray Illumination Auto Antenna Control Relay	Gaspedalpositionssensor A/C-Sonnensensor A/C-Thermistor ABS-Verzögerungssensor ABS-ECU ABS-ECU ABS-ECU Gaspedalschalter AHC-Hauptrelais Luftzufuhrservomotor Luftmischstellmotor Belüftungssteuerungsservomotor Airbag-Zündladung (Beifahrerairbag) Airbag-Zündladung (Lenkradpolster) Aschenbecherbeleuchtung Antennensteuerrelais