
Position of Parts in Body

[LHD : Swing Type]

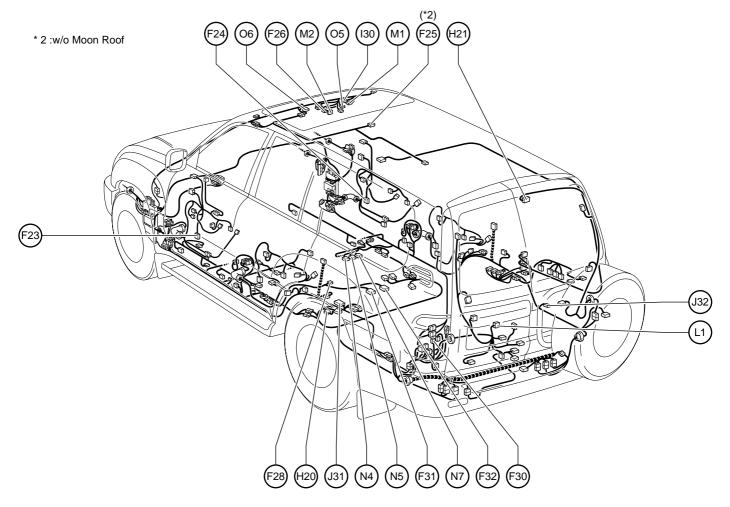

- F23 Front Door Speaker LH
- F24 Front Door Speaker RH
- F25 Front Interior Light
- F26 Front Personal Light
- F28 Fuel Pump Fuel Sender
- F30 Fuel Pump Select Relay
- F31 Fuel Solenoid Valve 1
- F32 Fuel Solenoid Valve 2
- H20 Height Control Sensor Rear
- H21 High Mounted Stop Light
- I 30 Inner Mirror

- J 31 Junction Connector
- J 32 Junction Connector
- L 1 License Plate Light
- M 1 Moon Roof Control ECU
- M 2 Moon Roof Control SW
- N 4 Navigation ECU
- N 5 Navigation ECU
- N 7 Navigation ECU
- O 5 Overhead J/B
- O 6 Overhead J/B