

FI0E0-01

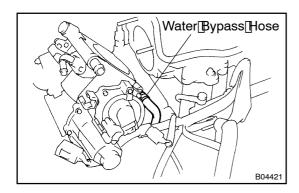

## INSTALLATION

- 1. INSTALL THROTTLE BODY
- (a) Connect[he[water[bypass[hose]]o[]he[manifold[]hermostat[pn[]he[]hrottle[body.

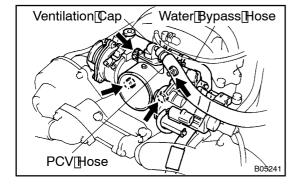

(b) Installamew@asketand@he@hrottlepodywith@he@bolts and phuts.

Torque: 18[N·m[185[kgf·cm, 13[ft·lbf)

- (c) Install the ventilation cap.
- (d) Connect[the[water[bypass[hose[and[PCV[hose[to[the throttle]body.
- (e) ☐ Connect the connectors and wire:
  - □ Throttle position sensor connector
  - Throttle control motor connector
  - Accelerator pedal position sensor connector
  - Accelerator pedal position sensor wire to 2 clamps on wire prackets
- 2. CONNECT\_ACCELERATOR\_CABLE\_TO\_THROUTLE BODY
- 3. INSTALL INTAKE AIR CONNECTOR
- 4. | FILL WITH ENGINE COOLANT (See page CO-2)
- 5. START ENGINE AND CHECK FOR ENGINE COOLANT LEAKS
- 6. INSTALL V-BANK COVER