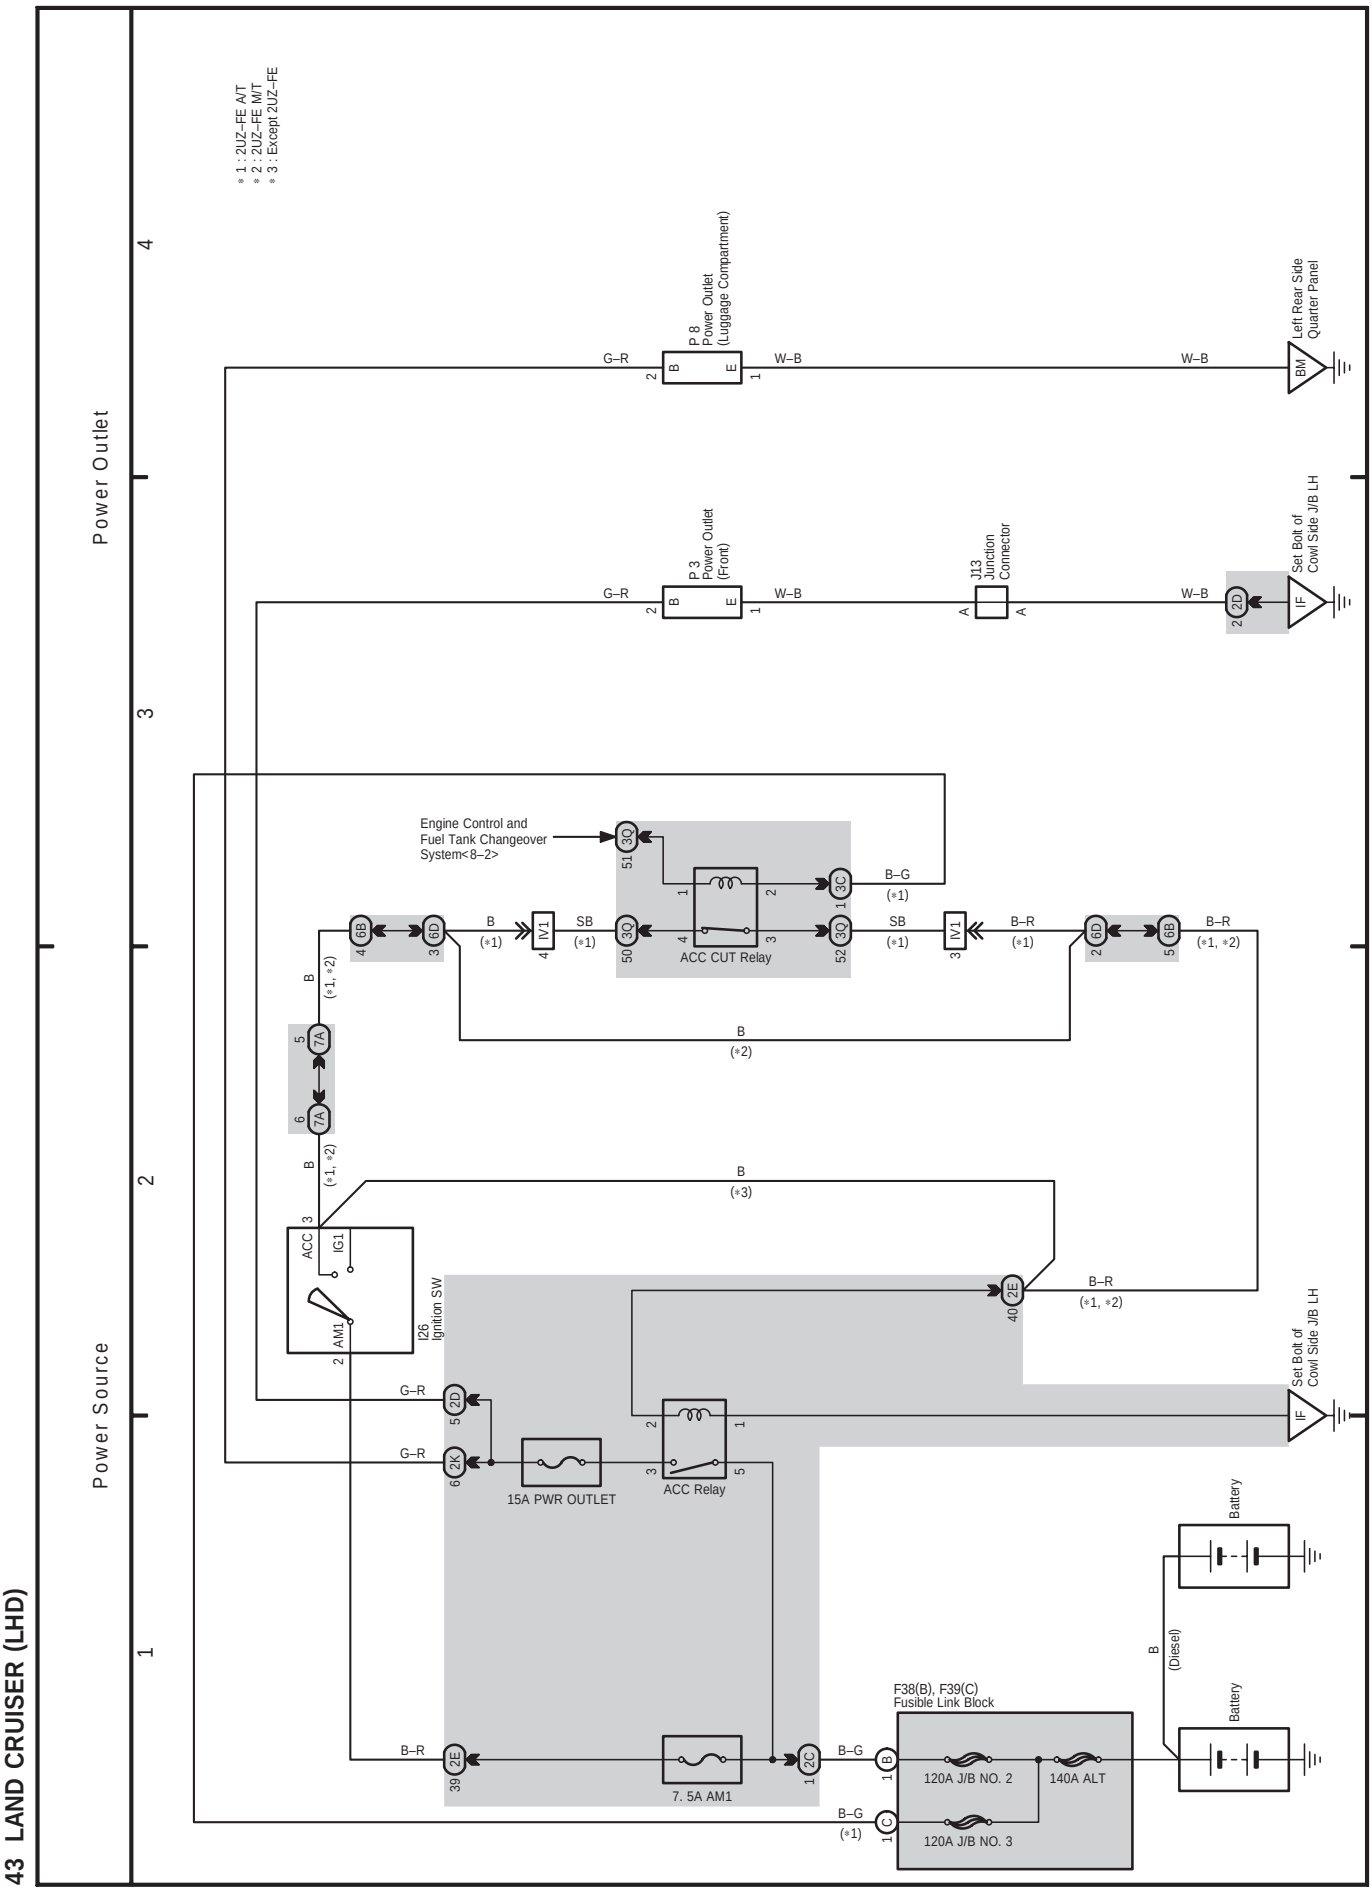
43 LAND CRUISER (LHD)
Power Source
Power Outlet
1
2
3
4
* 1 : 2UZ–FE A/T
* 2 : 2UZ–FE M/T
* 3 : Except 2UZ–FE
P 8
Power Outlet
(Luggage Compartment)
Left Rear Side
Quarter Panel
P 3
Power Outlet
(Front)
J13
Junction
Connector
Set Bolt of
Cowl Side J/B LH
Engine Control and
Fuel Tank Changeover
System<8–2>
ACC CUT Relay
I26
Ignition SW
ACC
IG1
AM1
15A PWR OUTLET
ACC Relay
7. 5A AM1
F38(B), F39(C)
Fusible Link Block
120A J/B NO. 2
140A ALT
120A J/B NO. 3
Battery
Battery
G–R
W–B
B–G
B–R
B
SB
(*1)
(*2)
(*3)
(*1, *2)
(Diesel)