
☐ : Location of Connector Joining Wire Harness and Wire Harness

[RHD]

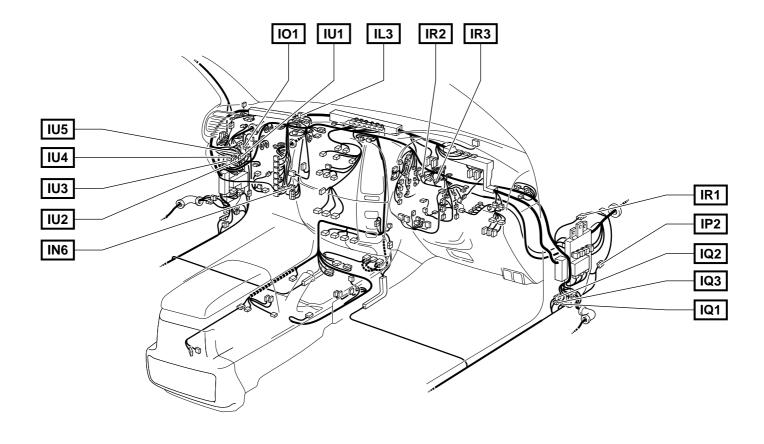

Code	Joining Wire Harness and Wire Harness (Connector Location)
IL3	Instrument Panel Integration Wire and Computer Wire (Instrument Panel Center)
IN6	Engine Wire and Dash Wire (Behind the Glove Box)
IO1	Instrument Panel Integration Wire and Lamp Wire (Behind the Glove Box)
IP2	Engine Room No.2 Wire and Floor No.2 Wire (Right Kick Panel)
IQ1	Dash Wire and Floor No.2 Wire (Right Kick Panel)
IQ2	
IQ3	
IR1	Engine Room No.2 Wire and Dash Wire (Right Kick Panel)
IR2	
IR3	
IU1	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU2	
IU3	
IU4	
IU5	