
☐ : Location of Connector Joining Wire Harness and Wire Harness

[RHD]

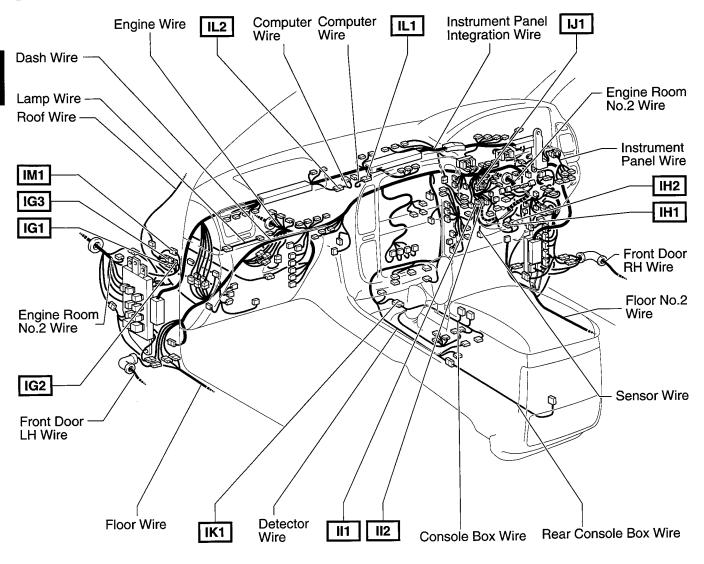

| Code | Joining Wire Harness and Wire Harness (Connector Location) |
|------|-------------------------------------------------------------------------------|
| IG1 | Engine Room No.2 Wire and Dash Wire (Behind the Glove Box) |
| IG2 | |
| IG3 | |
| IH1 | Instrument Panel Integration Wire and Column Wire (Near the Steering Column) |
| IH2 | |
| li1 | Dash Wire and Column Wire (Near the Steering Column) |
| II2 | Column Wire and Dash Wire (Near the Steering Column) |
| IJ1 | Dash Wire and Detector Wire (Near the Steering Column) |
| IK1 | Console Box Wire and Dash Wire (Left Side of Front Console) |
| IL1 | Instrument Panel Integration Wire and Computer Wire (Instrument Panel Center) |
| IL2 | |
| IM1 | Engine Roon No.2 Wire and Dash Wire (Behind the Glove Box) |