INPUT SHAFT
COMPONENTS

TR05L–01

◆ Snap Ring

Input Shaft

◆ Front Ball Bearing

◆ Snap Ring

Rear Ball Bearing
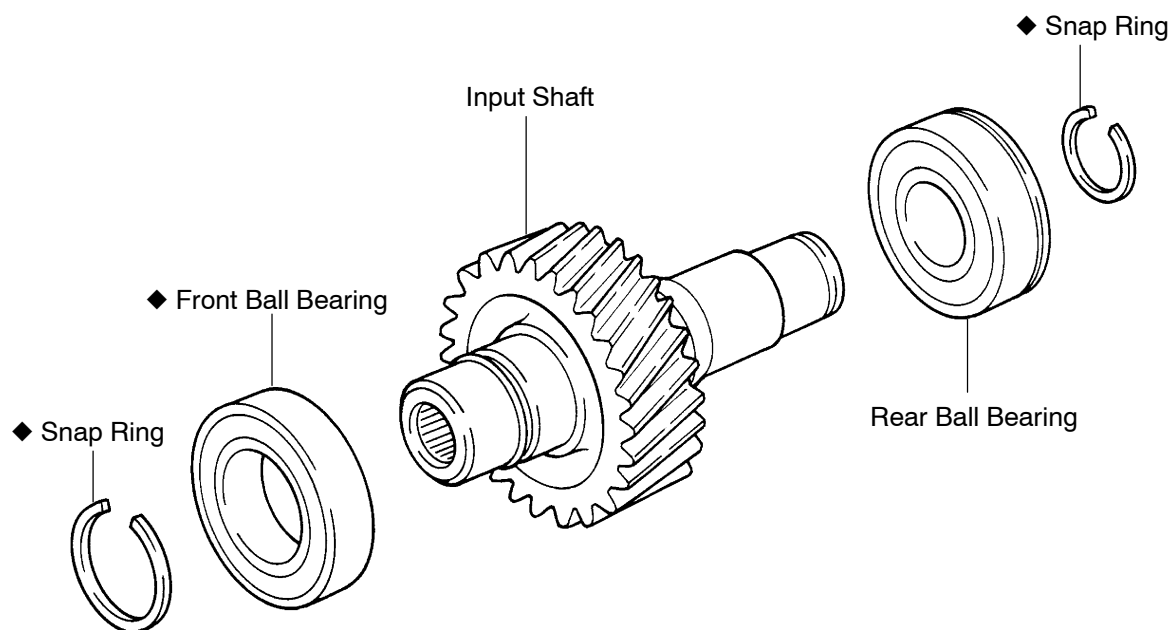
◆ Non–reusable part

D02654