
☐ : Location of Connector Joining Wire Harness and Wire Harness

[LHD]

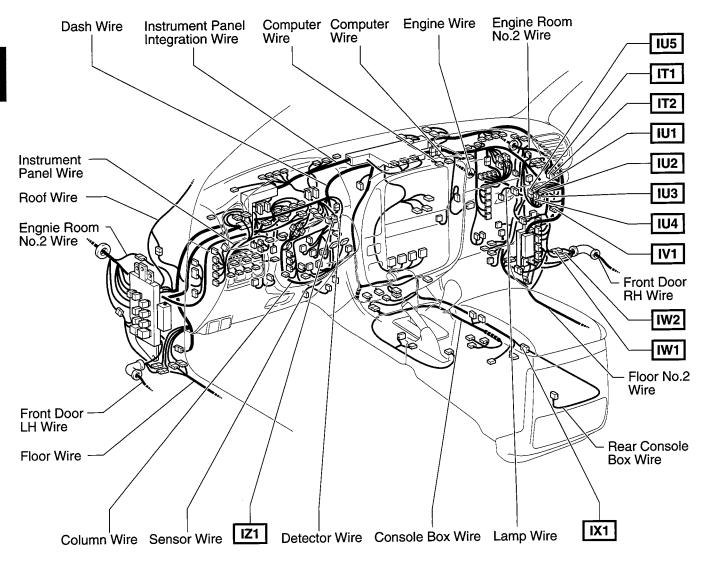

Code	Joining Wire Harness and Wire Harness (Connector Location)
IT1	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)
IT2	
IU1	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU2	
IU3	
IU4	
IU5	
IV1	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
IW1	Front Door RH Wire and Dash Wire (Right Kick Panel)
IW2	
IX1	Rear Console Box Wire and Dash Wire (Left Side of Rear Console)
IZ1	Dash Wire and Sensor Wire (Behind the Combination Meter)