
## **Position of Parts in Instrument Panel**

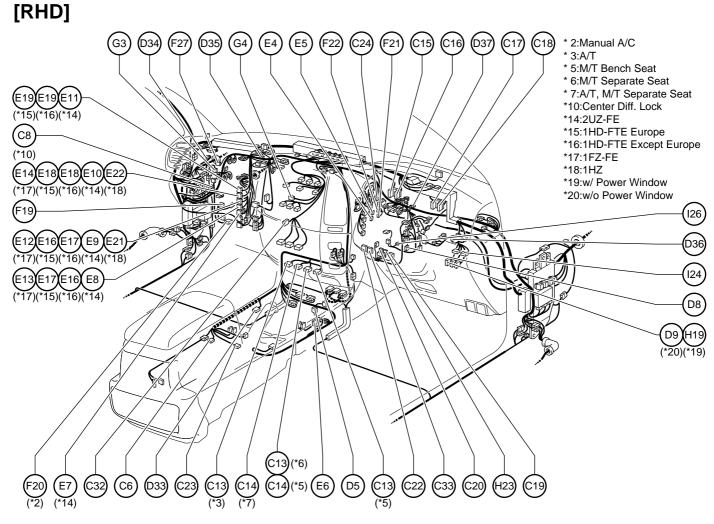

- 6 CD Automatic Changer
- Center Diff. Lock Control Relay
- Cigarette Lighter
- 14 Cigarette Lighter Illumination
- Combination Meter
- 16 17 Combination Meter
- Combination Meter
- 18 Combination Meter
- 19 Combination SW Combination SW
- 22 Combination SW
- Cooler Box
- 23 24 32
- Cruise Control Clutch SW Center Cluster Integration Panel
- Combination SW
- D 5 Damping Mode Select SW and Height Control SW
- 8 D
- DLC3 Door Lock Control SW
- D 33 Ď 34
- Deceleration Sensor Diode (Front Fog No.2) Diode (Viscous Heater1) Diode (Viscous Heater2)
- D 37 Double Lock Control Relay
- 4 ECT ECU
- ECT ECU ECT Pattern Select SW
- Engine and ECT ECU
- Engine ECU
- Engine and ECT ECU
- Engine ECU
  Engine and ECT ECU
- Engine ECU Engine and ECT ECU Engine ECU

- E 11 Engine and ECT ECU Engine ECU
- Engine and ECT ECU
- Engine ECU Engine and ECT ECU
- Engine ECU
- E 14 Engine and ECT ECU
- Engine ECU E 16 Engine and ECT ECU
- **Engine ECU**
- E 17 Engine and ECT ECU
- Engine ECU
- Engine and ECT ECU Engine ECU E 18
- Engine and ECT ECU Engine ECU
- E 21 Emission Control ECU
- E 22 Emission Control ECU
- Front Blower Motor
- F 20 Front Blower Resistor
- Front/Rear Diff. Lock Control SW
- Fuel Tank Changeover SW
- Front/Rear Diff. Lock Control ECU
- G G 3 Glove Box Light
- Gateway ECŬ
- Headlight Beam Level Control SW
- Headlight Cleaner SW
- Idle-Up SW
- 26 Ignition SW