
## ☐ : Location of Connector Joining Wire Harness and Wire Harness

## [LHD]

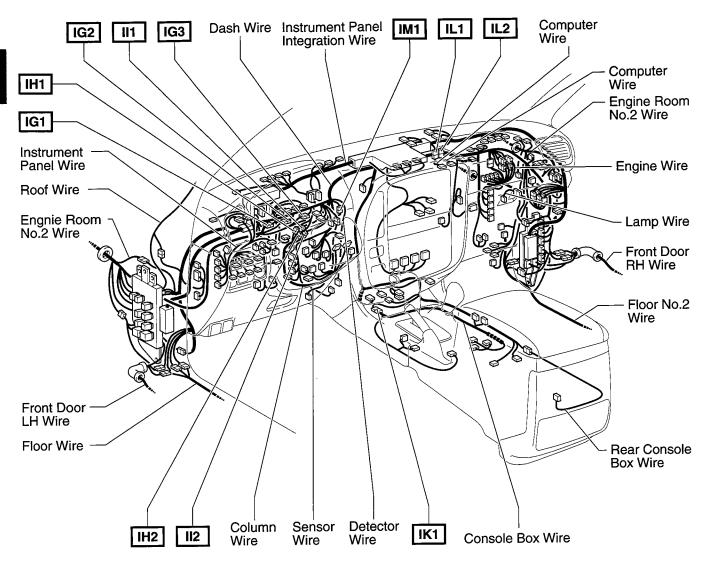

| Code | Joining Wire Harness and Wire Harness (Connector Location)                    |
|------|---|
| IG1  | Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)            |
| IG2  |   |
| IG3  |   |
| IH1  | Instrument Panel Integration Wire and Column Wire (Near the Steering Column)  |
| IH2  |   |
| II1  | Dash Wire and Column Wire (Near the Steering Column)                          |
| 112  | Column Wire and Dash Wire (Near the Steering Column)                          |
| IK1  | Console Box Wire and Dash Wire (Left Side of Front Console)                   |
| IL1  | Instrument Panel Integration Wire and Computer Wire (Instrument Panel Center) |
| IL2  |   |
| IM1  | Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)                    |