
DIAZ6-01


## **Stop Light Switch Circuit**

## **CIRCUIT DESCRIPTION**

This circuit sends a stop light switch ON or OFF signal to ECU.

## **WIRING DIAGRAM**

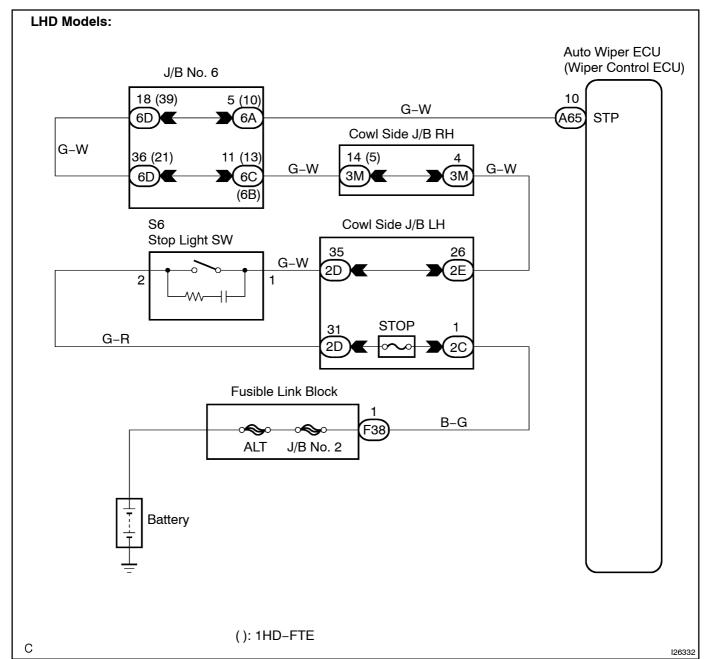

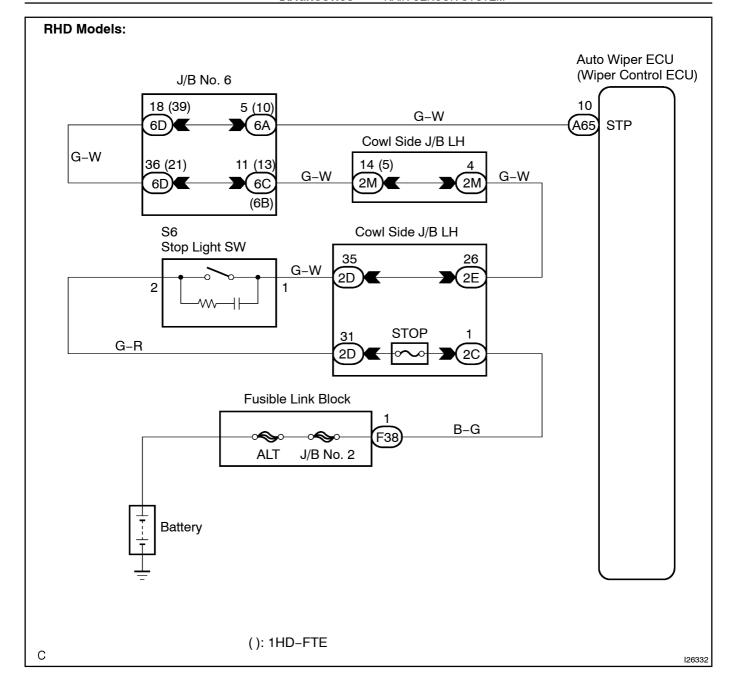

## INSPECTION PROCEDURE

1 Check[stop[light[switch]]

NG□

Replace[stop[]ight[switch.

OK

2 Check[wire[harness[between[stop[]ight[switch[and[wiper[control[ECU[[See[]page IN-38].

NG

Repair or replace wire harness.

OK

Proceed next circuit inspection shown on problem[symptom[table.[See[page[DI-930]